LEGAL INFORMATION

Copyright © 2013 ZTE CORPORATION. All rights reserved.

No part of this publication may be guoted, reproduced, translated or used in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation.

Notice

ZTE Corporation reserves the right to make modifications on print errors or update specifications in this guide without prior notice.

We offer self-service for our smart terminal device users. Please visit the ZTE official website (at www. zte.com.cn) for more information on self-service and supported product models. Information on the website takes precedence.

Disclaimer

ZTE Corporation expressly disclaims any liability for faults and damages caused by unauthorized modifications of the software Images and screenshots used in this guide may differ

from the actual product. Content in this guide may differ from the actual product or software



1

ZTE V987

WCDMA/GSM Mobile Phone

Quick Start Guide

NOTE: Your home screen extends beyond the initial screen, providing more space for shortcuts, widgets, and folders. Simply swipe left or right to see the extended home screens.

Opening Applications

- 1. Touch the Home Key if the current screen is not the home screen.
- 2. Touch
- 3. Slide left or right on the screen and touch an app to open it.

Adding Shortcuts or Widgets

- Touch the Home Key > ----
- 2. If you want to add a widget, touch WIDGETS.
- 3. Touch and hold a widget or an app icon and drag it to the home screen.

Removing Shortcuts or Widgets

1. Touch and hold a widget or shortcut on the home screen.

2. Drag it to 📋 to remove it.

Organizing Shortcuts With Folders

1. Touch and hold a shortcut on the home screen.

2

- 2. Drag the shortcut icon over another and release your finger. A new folder is created and both shortcuts are added into the folder.
- 3. If needed, drag more shortcuts and drop them into the folder.

Applying New Wallpapers

- You can set the wallpaper for the home screen.
- 1. Touch the Home Key > Menu Key > Wallpaper.
- 2. Select a wallpaper source from Gallery, Live Wallpapers, Video Wallpaper, or Wallpapers and touch the image or animation you want to use as the wallpaper.
- 3. Touch Set wallpaper

Checking the Phone Status

The status bar at the top of the screen displays phone and service status with various icons. Below are some of the icons and their meanings.

· · · · · · · · · · · · · · · · · · ·							
.11	Signal strength	X	No signal				
	Mobile data in use	\rightarrow	Flight mode				
Ŋ	Ringer off	*	Bluetooth on				
Di	Vibrate mode	((t-	Connected to a Wi-Fi network				
	Battery full	:)	New SMS / New MMS				

9

Trademarks

Version No. : R1.0

Edition Time : 20130401

(I) Alarm set

snot

() ()

Portable Wi-Fi hot-

Setting Ringtone and Sounds

3. Select the ringtone you want to use.

Setting Ringtone or Notification Sound

1. Touch the Home Key > - > Settings > Audio

2. Touch Voice call ringtone, Video call ringtone or

1. Touch the Home Key > - > Settings > Audio

2. Scroll to the SYSEM section and check the sounds

To adjust call volume, press the Volume Key while on

1. Touch the Home Key > - Settings > Audio

2. Drag the sliders to adjust the volume for the

10

ringtone and notification volume, and the alarm

a call. To adjust other volumes, follow the steps below.

profiles > General > Volumes.

you want to hear or uncheck those you do not

USB tethering is on

profiles > General

Default notification

Setting System Sounds

profiles > General.

Adjusting Volumes


4 Touch OK

need

Manual No. : 079584505557

ZTE and the ZTE logos are trademarks of the ZTE Corporation. Google and Android are trademarks of Google, Inc. The Bluetooth® trademark and logos are owned by the Bluetooth SIG, Inc. and any use of such trademarks by ZTE Corporation is under license. The microSD logo Mices is a trademark of the SD Card Association. Other trademarks and trade names are the property of their respective owners.

Getting to Know Your Phone

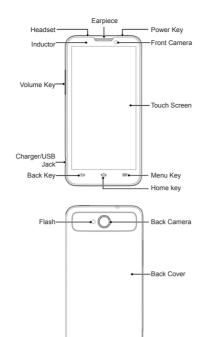

Power Kev

- Press and hold to power on, select phone modes.
- reboot, turn on/off airplane mode, or power off. Press to turn off or on the screen display.

Home Kev

- · Touch to return to the home screen from any application or screen
- · Touch and hold to see recently used applications.

Menu Key

Touch to get the options for the current screen.

Back Kev Touch to go to the previous screen.

Volume Up/Volume Down

Press or hold to turn the volume up or down.

Starting Up

Switch off your phone before installing or replacing the battery or the SIM card. The microSD card is optional and can be installed and removed while the phone is turned on. Unmount the microSD card before removing

1 Place your finger in the slot of the back cover to lift and remove the cover.



SIM slot 1

- Touch the 📞 icon below the keypad to place the

NOTE: To call a contact, touch the Home Key > [> and touch a contact or a number.

2. In the dialer tab 📞 , enter the phone number

with the on-screen keypad. Touch X to delete

Adding Contacts

incorrect diaits.

3.

call

Making a Call

1. Touch the Home Key >

Creating a New Contact

- 1. Touch the Home Key > > II and touch the all contacts tab 👤
- 2. Touch 🖳
- 3 Store the contact to SIM/Phone. Enter the contact name, phone numbers, Touch DONE to save the contact.

Importing Contacts in Batches

- 1. Touch the Home Key > P > I
- 2. Touch the Menu Key > Import/export.
- 3. Select SIM card, phone, or phone storage.
- Touch Next. 4.
- 5. If prompted, select an account in which to save the contacts
- For importing from the SIM card, touch all the SIM contacts you want to import and touch OK.

12

- ACCOUNT

volume. 3. Touch OK to save. New Email

sage

Μ

New Gmail mes-

TIP: Press and hold the Power Key and then touch to enable the silent mode, touch 💭 to enable the vibration mode, or touch 🚺 to disable the silent mode.

Setting a Screen Lock

Sneaker

You can protect your phone by creating a screen lock. When enabled, you need to draw a pattern, or enter a numeric PIN or password to unlock the phone's screen and kevs.

- 1. Touch the Home Key > Menu Key > System settings > Security > Screen lock.
- 2. Touch None, Press, Pattern, PIN or Password.
 - Touch Press to enable unlock with a 'touch and hold' gesture. You can unlock the screen by touching and holding R at the center of the display.
 - Touch Pattern to create a pattern that you must draw to unlock the screen.
 - Touch PIN or Password to set a numeric PIN or a password you must enter to unlock your screen.

Checking Voicemail

- 1. Touch the Home Key > 🕔
- 2. In the dialer tab 📞 , touch and hold 1 🔤 3. Select a SIM card.
- 4. If prompted, enter your voicemail password.
- 5. Follow the voice prompts to listen to and manage your voicemail messages.

11

- ments

Setting Up Email Accounts

Setting Up Gmail

- COUNT

account.

2. Hold the SIM card with its cut corner oriented as shown and slip it into the card holder



Caution: Install your WCDMA or GSM SIM card into

Install your GSM SIM card into SIM slot 2.

3. Hold your microSD card with the metal contacts facing down and slide it into the microSD card slot.



4. Align the connectors on the phone and the battery and slide the battery into the compartment. Then gently press the battery down until it is secured.



Sending a Message

1. Touch I in the home screen and select Messaging, then touch 💻

2. Enter the recipient(s) and message text. If you want to send an MMS, add subject and attach-

Touch be to send the message.

1. Touch I in the home screen and select Gmail.

NOTE: If another Gmail account is already set up, touch the Menu Key > Settings > ADD AC-

2. Touch Existing to sign in to your existing Google Account. If you have no Google Accounts, touch New to create one.

3. Follow the instructions on the screen to set up the

Setting Up Email

1. Touch I in the home screen and select Email.

NOTE: If another email account is already set up, touch the Menu Key > Account settings > ADD

2. Enter the email address and password.

3. Touch Next and follow the onscreen instructions.

5. Press the cover gently back into place until you hear a click.

Charging the Battery

1. Connect the adapter to the charging jack. Ensure that the adapter is inserted with the correct orientation. Do not force the connector into the charging iack



- 2. Connect the charger to a standard AC power outlet.
- 3. Disconnect the charger when the battery is fully charged.

Powering On/Off Your Phone

Make sure the battery is charged before powering on.

- · Press and hold the Power Key to turn on your phone
- To turn it off, press and hold the **Power Key** to open the options menu. Touch Power off > OK.

Getting to Know the Home Screen

The home screen is the starting point for your phone's applications, functions, and menus. You can customize your home screen by adding application shortcuts, folders, widgets, and more.

7

Connecting With a Bluetooth Headset

- 1. Turn on the Bluetooth headset and switch it to pairing mode. Refer to the headset's user guide for more information.
- 2. Touch I in the home screen and select Settings > Bluetooth.
- 3. Slide the ON/OFF switch if Bluetooth is off. When Bluetooth is on, the **B** icon appears in the status har

NOTE: Your phone automatically scans for and displays the IDs of all available Bluetooth devices in range. You could touch SEARCH FOR DEVIC-ES if you wanted to scan again.

- 4. Touch the ID of the headset, or any other device you want to pair with your phone. Enter a passcode if prompted.
- 5. If necessary, touch the ID of the paired headset to connect with it. Once connected, the 🛐 icon in the status bar turns blue

TIP: Touch the ID again to end the connection.

Installing Apps From the Google Play Store

There are tens of thousands of games and applications in the Google Play Store for you to download and install. You can send feedback or comments on an application

Before you begin, make sure that you have signed in to your Google account.

NOTE: The content you can access in the Play Store depends on your region and your service provider

- 1. Touch the Home Key > Play Store. The first time you launch Play Store, accept the
- Google Play Terms of Service. 2. Find the apps you need either by category or by touching 🔍
- 3. Touch the app to see detailed description.
- 4. Touch Install (free apps) or the price (paid apps). If the app is not free, you need to sign in to your Google Wallet account and select a payment method

CAUTION: Once installed, some apps can access many functions or a significant amount of your personal data. The Play Store will show you what the app can access. Touch Accept & download (free apps) or Accept & buy (paid apps) to proceed, or touch the Back Key to cancel.

5. Wait for the app to be downloaded and installed automatically. Payment needs to be authorized before paid apps start downloading.

The app is successfully installed when the F icon appears in the status bar. You can find the new app after touching the Home Key >

Taking a Photo

1. Touch I in the home screen and select Camera. 2. Aim the camera at the subject and make any necessary adjustment.



Number	er Function					
1	Capture a photo.					
2	Change the camera settings.					
3	View photos and videos you have cap- tured.					
4	Switch between the front camera and the back camera.					
5	Switch the flash.					

3. Touch the area where you want the camera to focus. Green brackets appear around the focused area

16

Do not use hand-held while driving

Small parts may cause a choking hazard

This device may produce a loud sound

To prevent possible hearing damage, do

not listen at high volume levels for long

Keep away from pacemakers and other

Avoid any contact with liquid, keep it dry

Avoid contact with magnetic media

Avoid Extreme Temperatures

personal medical devices

Do not use while re-fuelling

Do not dispose of it in a fire

Select the camera mode.

4. Lightly touch the button 5

Product Safety Information

ration of 15 mm

ing light

periods

6

Ð

(Fill)

÷Q:

9

8

৸ৠ

Ů

Managing the Phone Storage

Deleting Old Messages

You can manually delete old messages to free up some storage space. You may also set up auto deletion of the oldest messages when the limits are reached.


15

- 1. From the home screen, touch **H** > Messaging.
- 2. Touch the Menu Key > Settings > General. 3. Check Delete old messages to enable auto dele-
- 4. Touch Text message limit or Multimedia message limit to set the maximum limit.
- 5. Touch Set.

Clearing Browser's Local Content

- 1. From the home screen, touch Browser. 2. Touch the Menu Key > Settings > Privacy & security
- 3. Touch Clear cache, Clear history, and Clear all cookie data.

22

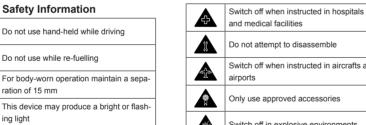

Recording a Video

essarv adjustment.

0

tured

Number

1

2

1. Touch I in the home screen and select Camera.

Aim the camera at the subject and make any nec-

Function

View photos and videos you have cap-

Start or stop recording a video.

3. Touch to start and to stop recording.

Switch off when instructed in aircrafts and Only use approved accessories * Switch off in explosive environments

17

Do not rely on this device for emergency communications

Playing Music

- 1. Touch I in the home screen and select Music. 2. Touch a category, such as Artists or Albums, to
- find the song you want to play. 3. Touch the song to play it back.



Number	Function		
1	Touch to return to the library.		
2	2 Album artwork. 3 Song and artist names.		
3			
4	Playback control. Skip songs, pause and resume playback. Drag the progress bar to jump to any part of the song.		
5	Touch to see the current playlist (queue), Shuffle, or Repeat.		

18

shall serve as a formal declaration that the ZTE V987

manufactured by ZTE CORPORATION is in compliance

with the Directive 2002/95/EC of the European Parlia-

ment - RoHS (Restriction of Hazardous Substances)

The ZTE V987 manufactured by ZTE CORPORATION

Declaration of RoHS Compliance

with respect to the following substances:

4. Hexavalent Chromium (Cr (VI))

5. Polybrominated biphenyls (PBBs)

6. Polybrominated diphenyl ethers (PBDEs)

meets the requirements of EU 2002/95/EC.

1. Lead (Pb)

2. Mercury (Hg)

3. Cadmium (Cd)

Connecting to PC

2.

You can connect your phone to a computer with a USB cable and transfer music, pictures, and other files in either direction. Your device stores these files in internal storage or on a removable microSD card

- 1. Touch and hold the status bar across the top of the screen and flick down.
- Touch Ψ (Connected as [current connection model).
- Choose one of the following options: ▶ USB storage: XP recommended. Lets you transfer files between your computer and
- your Android device. Media device (MTP): Lets you transfer me-• dia files on Windows, or using Android File
- Transfer on Mac.(See www.android.com/filetransfer) Camera (PTP): Lets you transfer photos us-
- ing camera software, and transfer any files on computers that don't support MTP.
- Charge only: Stop all USB fuctions. Lets you speed up USB charging and decrease power consumption
- Built-in CD-ROM: Show a virtual CD-ROM containing some useful software.
- To disconnect the device from the computer, simply unplug the USB cable when you're finished.

19

- Names.
- 2. Select a SIM card.

Disposal of Your Old Appliance

When this crossed-out wheeled bin symbol is attached to a product, it means the product is covered by the European Directive 2002/96/EC.

All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities. The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health

directive, please send an e-mail to weee@zte.com.cn

regardless of age and health.

For this product's recycling information based on WEEE

26

23

24

SAR



Connecting to the Internet

Connecting via Wi-Fi

1. Touch the Home Key > Menu Key > System settings > Wi-Fi.

2. Slide the ON/OFF switch if Wi-Fi is off.

- Your phone automatically searches for Wi-Fi networks in range and displays their names and security settings. Your phone also connects to previously linked networks when they are in range. 3. Touch a network name to connect to it.
 - If the network is secured, enter a password or other credentials. (Ask your network administrator for details.)

Connecting via Mobile Network

To connect to the Internet via mobile network you can use the default Access Point Names (APN). If you want to add a new APN, please contact the service provider to get the necessary information. Do not change the default settings unless instructed by the service provider. Otherwise the service might stop working.

1. Touch the Home Key > Menu Key > System settings > More > Mobile networks > Access Point

3. Touch the Menu Key > New APN.

4. Touch each item to enter the information you get from your service provider.

5. Touch the Menu Key > Save to complete.

20

Your mobile device is a radio transmitter and receiver It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons,

The guidelines use a unit of measurement known as Specific Absorption Rate, or SAR. The SAR limit for mobile devices is 2 W/kg and the highest SAR value for this device when tested was 0.212 W/kg. As mobile devices offer a range of functions, they can be used in other positions, such as on the body.

As SAR is measured utilizing the device's highest transmitting power, the actual SAR of this device while operating is typically below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum power required to communicate with the network.

Extending Battery Life

There are several things you can do to make your batterv last longer

- Turn on Wi-Fi, Bluetooth, GPS, mobile data, autosvnc only when you need to.
- Lower the screen brightness
- · Use Bluetooth tethering or USB tethering (when you have a cable) instead of portable Wi-Fi hotspot to share your phone's data service.
- From the home screen, touch Settings > Apps and close the apps you do not need but still run in the background.
- From the home screen, touch -> Settings > Audio profiles > General and uncheck Vibrate on touch.

Freeing Up Memory Space

Use Apps to free up memory space and optimize system speed

- 1. From the home screen, touch -> Settings > Apps
- 2. Touch the app and touch the Stop button next to the application you do not need.

This equ in:	ipment n	AT	BE		
CY	CZ	DK	EE	FI	FR
DE	GR	HU	IE	IT	LV
LT	LU	MT	NL	PL	PT
SK	SI	ES	SE	GB	IS
LI	NO	СН	BG	RO	TR