



**Grand Era (ZTE V9800)**  
**LTE/WCDMA/GSM Mobile Phone**  
**User Manual**

# LEGAL INFORMATION

**Copyright © 2012 ZTE CORPORATION.**

**All rights reserved.**

No part of this publication may be quoted, reproduced, translated or used in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation.

ZTE Corporation reserves the right to make modifications on print errors or update specifications in this guide without prior notice.

The Bluetooth® trademark and logos are owned by the Bluetooth SIG, Inc. and any use of such trademarks by ZTE Corporation is under license. Other trademarks and trade names are the property of their respective owners.

## **Disclaimer**

ZTE Corporation expressly disclaims any liability for faults and damages caused by unauthorized modifications of the software.

We offer self-service for our smart terminal device users. Please visit ZTE official website (at [www.zte.com.cn](http://www.zte.com.cn)) for more information on self-service and supported product models. Information subject to the website.



is a trademark of SRS Labs, Inc.

SRS TruMedia technology is incorporated under license from SRS Labs, Inc. SRS TruMedia™, a feature-rich audio solution tuned specifically for mobile devices, provides a cinema-like surround headphone performance with deep, rich bass.

**Version No.:** R1.0

**Edition Time :** 2012.07.10

# Contents

<b>LEGAL INFORMATION .....</b>	<b>2</b>
<b>Getting Started.....</b>	<b>9</b>
Your Phone at a Glance.....	9
Knowing the Keys .....	9
Installing the SIM Card and microSD Card.....	10
Charging the Battery.....	11
Powering On/Off .....	12
Restarting the Phone.....	12
Setting Up for the First Time .....	12
Locking/Unlocking the Screen and Keys .....	12
Using the Touch Screen.....	13
Getting to Know the Home Screen .....	14
<b>Personalizing .....</b>	<b>15</b>
Changing the System Language .....	15
Setting the Date and Time .....	15
Changing Ringtone and Notification Sound.....	15
Adjusting Volumes .....	15
Applying New Wallpapers.....	16
Changing Screen Brightness.....	16
Protecting Your Phone With Screen Locks.....	16
Protecting Your Phone With Encryption.....	17
<b>Knowing the Basics .....</b>	<b>19</b>
Monitoring the Phone Status .....	19
Managing Notifications .....	19
Managing Shortcuts and Widgets.....	21
Organizing With Folders .....	21
Rearranging the Favorites Tray .....	22
Entering Text.....	22
Editing Text .....	26
Opening and Switching apps.....	27

<b>Connecting to Networks and Devices .....</b>	<b>28</b>
Connecting to Mobile Networks.....	28
Connecting to Wi-Fi .....	29
Using Wi-Fi Direct.....	30
Connecting to Bluetooth Devices .....	31
Connecting to Your Computer via USB .....	33
Sharing Your Mobile Data Connection.....	34
Connecting to Virtual Private Networks .....	36
<b>Phone Calls .....</b>	<b>37</b>
Placing and Ending Calls.....	37
Answering or Rejecting Calls.....	37
Working With the Call Log .....	38
Calling Your Contacts .....	39
Checking Voicemail .....	39
Using Options During a Call .....	40
Managing Multi-party Calls .....	40
Adjusting Your Call Settings .....	41
<b>People.....</b>	<b>44</b>
Opening Your Contact List.....	44
Adding a New Contact.....	44
Setting Up Your Own Profile .....	44
Importing, Exporting, and Sharing Contacts.....	45
Working With Favorite Contacts .....	46
Working With Groups.....	46
Searching for a Contact.....	47
Editing Contacts .....	48
<b>Accounts .....</b>	<b>50</b>
Adding or Removing Accounts .....	50
Configuring Account Sync .....	51
<b>Email.....</b>	<b>52</b>
Set Up the First Email Account.....	52
Checking Your Emails.....	52
Responding to an Email .....	53

Writing and Sending an Email .....	54
Adding Signature to Your Emails .....	54
Adding and Editing Email Accounts .....	55
Changing General Email Settings .....	55
<b>Gmail™ .....</b>	<b>56</b>
Opening Your Gmail Inbox.....	56
Switching Accounts.....	56
Writing and Sending a Message.....	56
Adding Signature to Your Gmail Messages .....	57
Replying to or Forwarding a Message .....	57
Working With Received Attachments.....	57
Searching for Messages .....	58
Working With Labels.....	58
Changing Gmail Settings .....	59
<b>Messages .....</b>	<b>60</b>
Opening the Messages Screen .....	60
Sending a Text Message .....	60
Sending a Multimedia Message .....	60
Replying to a Message .....	61
Forwarding a Message .....	61
Viewing Details About a Message .....	61
Deleting Messages or Threads.....	62
Changing Message Settings.....	62
<b>Calendar .....</b>	<b>63</b>
Viewing Your Calendars and Events.....	63
Creating an Event.....	64
Editing or Deleting an Event .....	65
Changing Calendar Settings.....	65
<b>Google Talk .....</b>	<b>66</b>
Signing In to See Your Friends .....	66
Adding a Friend .....	66
Changing Your Online Status .....	66
Chatting With Friends .....	67


Changing Google Talk Settings .....	67
<b>Google+ .....</b>	<b>68</b>
Organizing Your Contacts .....	68
Getting Updates .....	68
Chatting With Contacts .....	69
Checking Photos .....	69
Checking and Managing Your Profile .....	69
<b>Browser .....</b>	<b>70</b>
Opening the Browser .....	70
Working With an Opened Page .....	71
Using Multiple Browser Windows .....	72
Downloading Files .....	72
Using Bookmarks .....	72
Changing Browser Settings .....	73
<b>Maps, Navigation, Local, and Latitude .....</b>	<b>74</b>
Activating Location Services .....	74
Getting Your Location .....	74
Searching for a Location .....	74
Getting Directions to Your Destination .....	75
Searching for Local Places .....	75
Sharing Location .....	76
<b>Google Search, Voice Search, and Voice Actions .....</b>	<b>77</b>
Searching With Text .....	77
Searching by Speaking .....	77
Using Voice Actions .....	77
Changing Search and Voice Search Settings .....	77
<b>Camera .....</b>	<b>78</b>
Capturing a Photo .....	78
Customize Camera Settings .....	79
Capturing a Panoramic Photo .....	79
Recording a Video .....	80
Customizing Camcorder Settings .....	81

<b>Gallery .....</b>	<b>82</b>
Opening Gallery.....	82
Working With Albums.....	82
Working With Pictures .....	83
Working With Videos .....	84
<b>Music .....</b>	<b>85</b>
Copying Music Files to Your Phone.....	85
Viewing Your Music Library.....	85
Playing Music .....	86
Managing Playlists.....	87
<b>Play Music .....</b>	<b>88</b>
Playing Your Music .....	88
Managing Playlists.....	89
<b>Videos.....</b>	<b>91</b>
Opening the Video Library .....	91
Playing and Control Videos .....	91
Managing Video Files .....	91
<b>FM Radio .....</b>	<b>92</b>
Scanning and Saving Channels .....	92
Listening to FM Radio.....	92
Adding a Radio Station to Favorites .....	92
Other Options and Settings .....	93
<b>Sound Recorder.....</b>	<b>94</b>
Recording a Voice Memo .....	94
Playing a Voice Memo .....	94
<b>More Apps .....</b>	<b>95</b>
Alarm .....	95
Calculator .....	95
Chrome.....	95
File Manager.....	96
Full Share .....	96
Mi-POP .....	97


News and Weather .....	97
Note pad .....	97
Software Update .....	98
Task Manager .....	98
Timer.....	98
World Time.....	98
YouTube.....	98
<b>Play Store .....</b>	<b>99</b>
Browsing and Searching for Apps .....	99
Downloading and Installing Apps.....	99
Managing Your Downloads .....	99
<b>Settings .....</b>	<b>101</b>
Wireless and Networks .....	101
Device.....	102
Personal .....	103
System.....	105
<b>Troubleshooting .....</b>	<b>106</b>
<b>For Your Safety .....</b>	<b>109</b>
General Safety.....	109
Radio Frequency (RF) Exposure .....	109
Distraction.....	111
Product Handling .....	111
Electrical Safety .....	114
Radio Frequency Interference .....	115
Explosive Environments .....	116
<b>Declaration of RoHS Compliance .....</b>	<b>117</b>
<b>Disposal of Your Old Appliance .....</b>	<b>118</b>
<b>EC DECLARATION OF CONFORMITY .....</b>	<b>119</b>

# Getting Started

## Your Phone at a Glance

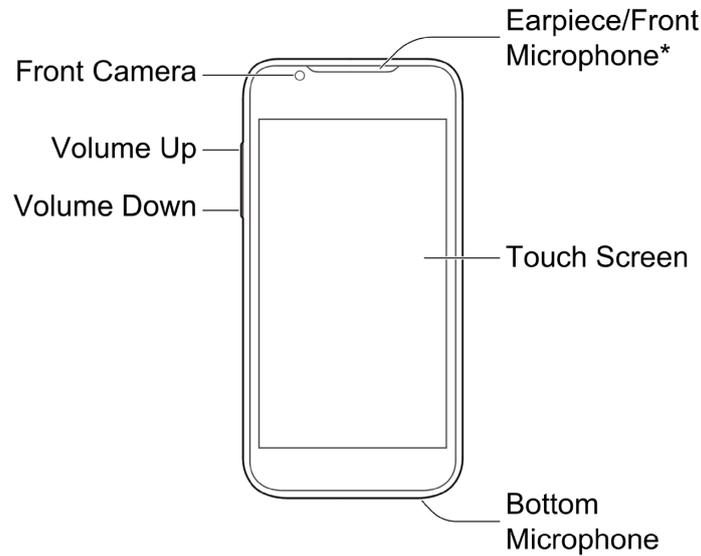

\*Active only when you use the speakerphone feature.

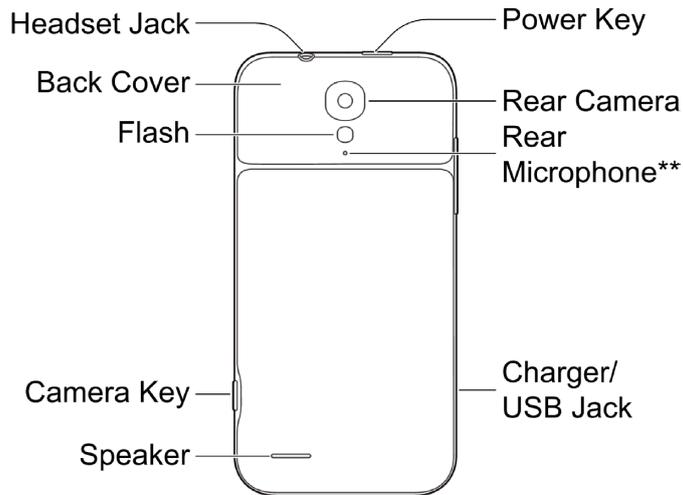

\*\*Used during phone calls to offset ambient noise.

## Knowing the Keys


Key	Function
Power Key	<ul style="list-style-type: none"><li>• Press and hold to turn on or off airplane mode, enable silent mode, vibration mode or sound, or to power off.</li><li>• Press and hold for about 8 seconds to restart the phone.</li><li>• Press to switch your phone to Sleep mode.</li><li>• Press to wake up your phone.</li></ul>

Key		Function
Volume Up / Volume Down		Press or hold to turn the volume up or down.
Camera Key		<ul style="list-style-type: none"> <li>Fully press to open the Camera app from any other screen.</li> <li>Fully press in the Camera app to take a picture, or start/end video recording.</li> <li>Lightly press before taking a picture to focus at the center of the picture.</li> </ul>
On-screen Keys		Touch to return to the Home screen from any application or screen.
		Touch to go to the previous screen.
		Touch to see recently used apps.


## Installing the SIM Card and microSD Card

Switch off your phone before installing or replacing the SIM card. The microSD card is optional and can be installed and removed while the phone is turned on. [Unmount the microSD card](#) before removing it.


1. Remove the back cover.

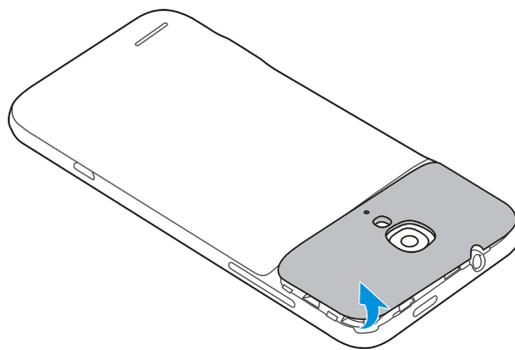

2. Hold the SIM card with the cut corner oriented as shown and slip it into the card holder.

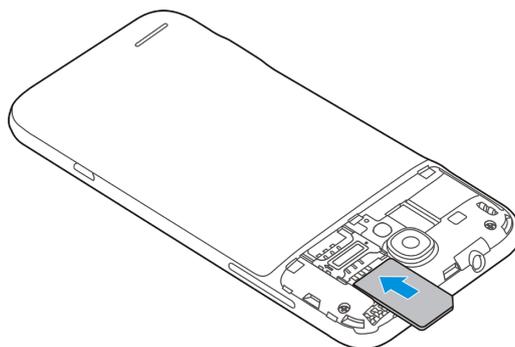

3. Hold your microSD card with the metal contacts facing down and slide it in.

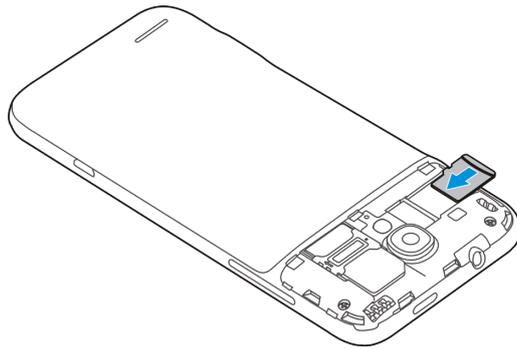

**NOTE:** microSD logo  is a trademark of the SD Card Association.


4. Press the cover gently back into place until you hear a click.

## Charging the Battery

When you first get your new phone you'll need to charge the battery.

**CAUTION:** Do not change the built-in rechargeable battery in your phone by yourself. The battery can only be changed by ZTE or ZTE authorised service provider.

1. Connect the adapter to the charger jack. Ensure that the adapter is inserted with the correct orientation. Do not force the connector into the charger jack.

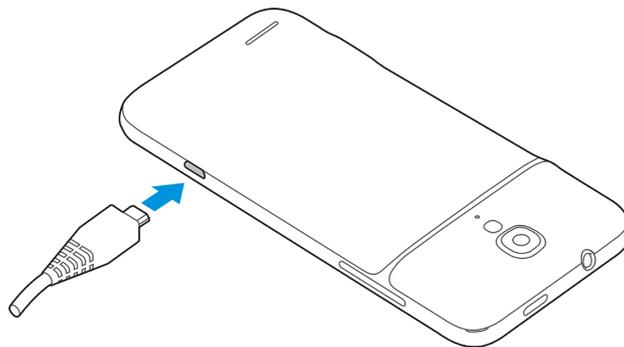

2. Connect the charger to a standard AC wall outlet.
3. Disconnect the charger when the battery is fully charged.

### How much charge have you got?

If the battery is low, there will be a pop-up message on the screen. As you charge your phone, the screen will tell you the exact battery level each time you wake up your phone.

If the phone is on, you'll see a charging icon, such as  or  , appear on the status bar.

## Powering On/Off

Make sure the SIM card is in your phone and the battery is charged.

- Press and hold the **Power Key** to turn on your phone.
- To turn it off, press and hold the **Power Key** to open the options menu. Touch **Power off** and then touch **OK**.

## Restarting the Phone

If you ever encounter any problem while using the phone, try pressing and holding the **Power Key** for about 8 seconds to restart the phone.

## Setting Up for the First Time

When you first power on your phone after you purchase it or reset it to factory settings (see [Settings - Personal - Backup and Reset](#)), you need to do some settings before using it.

1. Touch the language field to select the language you want to use and then touch **Start**.
2. Set the date, time, and time zone, or use date and time data provided by the network. Then touch **Next**.
3. Touch **Get an account** to create a Google Account or touch **Sign in** to sign in to your account.  
You can also touch **Not now** to set up an account later.
4. Configure the Google location options and touch **Next**.
5. Enter your name which the phone uses to personalize some apps and touch **Next**.
6. You will be prompted to accept the terms of Google service. Touch **Next** to continue.
7. Touch **Finish** to complete the setup.

**NOTE:** If the SIM is not installed, the phone would prompt you to connect to a Wi-Fi network before asking you to sign in to a Google Account.

## Locking/Unlocking the Screen and Keys

Your phone allows you to quickly lock the screen and keys when not in use and to turn the screen back on and unlock it when you need.

**To lock the screen and keys:**

To immediately turn the screen off and lock the keys, press the **Power Key**.

**NOTE:** To save battery power, the phone automatically turns off the screen after a certain period of time when you leave it idle. You will still be able to receive messages and calls while the phone screen is off.

**To unlock the screen and keys:**

1. Press the **Power Key** to turn the screen on.
2. Touch and hold  at the center of the screen.

**NOTE:** If you have set an unlock pattern, PIN or password for your phone (see chapter [Personalizing - Protecting Your Phone With Screen Locks](#)), you'll need to draw the pattern or enter the PIN/password to unlock your screen.


## Using the Touch Screen

Your phone's touch screen lets you control actions through a variety of touch gestures.

- Touch  
When you want to type using the onscreen keyboard, select items onscreen such as application and settings icons, or press onscreen buttons, simply touch them with your finger.
- Touch and Hold  
To open the available options for an item (for example, a message or link in a Web page), touch and hold the item.
- Swipe or Slide  
To swipe or slide means to quickly drag your finger vertically or horizontally across the screen.
- Drag  
To drag, press and hold your finger with some pressure before you start to move your finger. While dragging, do not release your finger until you have reached the target position.
- Pinch  
In some apps (such as Maps, Browser, and Gallery), you can zoom in and out by placing two fingers on the screen at once and pinching them together (to zoom out) or spreading them apart (to zoom in).
- Rotate the screen  
For most screens, you can automatically change the screen orientation from portrait to landscape by turning the phone sideways.

## Getting to Know the Home Screen

The home screen is the starting point for your phone's applications, functions, and menus. You can customize your home screen by adding application icons, shortcuts, folders, widgets, and more. Your home screen extends beyond the initial screen. Swipe the screen left or right to display additional screens.

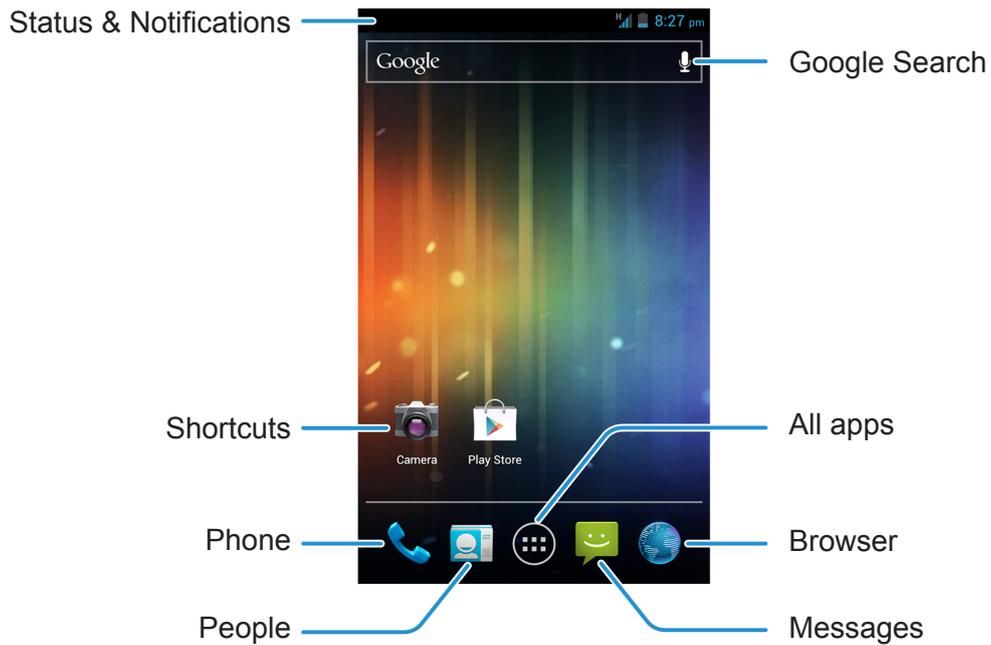

# Personalizing

## Changing the System Language

1. Touch  >  > **Settings** > **Language & input** > **Language**.
2. Select the language you need.

## Setting the Date and Time

1. Touch  >  > **Settings** > **Date & time**.
2. Clear the **Automatic date & time** and **Automatic time zone** check boxes if you want to set the date, time and time zone by yourself.
3. Set the date, time, time zone, and date/time format.

## Changing Ringtone and Notification Sound

You can customize the default ringtone for incoming calls and default notification sound quickly.

1. Touch  >  > **Settings** > **Sound**.
2. Touch **Phone ringtone** or **Default notification**.
3. Scroll through the ringtone list and select the ringtone you want to use.
4. Touch **OK**.

**TIP:** See chapter [People - Editing Contacts - Set a Ringtone for a Contact](#) for how to assign a special ringtone to an individual contact.

## Adjusting Volumes

1. Touch  >  > **Settings** > **Sound** > **Volumes**.
2. Adjust the volume for music, video, games, and other media, the ringtone and notification volume, and the alarm volume.
3. Touch **OK** to save.

**TIP:** You can adjust the media volume when a media application is in use by pressing the **Volume Keys**. If no media application is active, press the **Volume Keys** to adjust ringtone volume (or the earpiece volume during a call).

**To enable the silent or vibration mode:**

You can set the phone to the silent or vibration mode by using one of the following methods.

- Press and hold the **Power Key** and then touch  to enable the silent mode, touch  to enable the vibration mode, or touch  to disable the silent mode.
- Press the **Volume Keys** down when no media application is active. When the  icon appears in the status bar, the phone is set to the vibration mode. When the  icon appears in the status bar, the phone is in the silent mode.
- Touch  >  > **Settings** > **Sound** > **Silent mode**, and touch **Off, Vibrate** or **Mute**.

## Applying New Wallpapers

You can set the wallpaper for the Home Screen.

1. Touch  >  > **Settings** > **Display** > **Wallpaper**.
2. Select a wallpaper source from **Gallery**, **Live Wallpapers**, or **Wallpapers** and choose the image or animation you want to use as the wallpaper. Some cropping may be needed for **Gallery** images.
3. Touch **DONE** at the top of the screen (for Gallery images) or **Set wallpaper**.

## Changing Screen Brightness

1. Touch  >  > **Settings** > **Display** > **Brightness**.
2. Tick the **Automatic brightness** box to make the phone adjust the screen brightness automatically, or clear the tick box to adjust the brightness manually.
3. Touch **OK**.

## Protecting Your Phone With Screen Locks

You can protect your phone by creating a screen lock. When enabled, you need to draw a pattern or enter a numeric PIN or password to unlock the phone's screen and keys.

1. Touch  >  > **Settings** > **Security**.
2. Touch **Screen lock**.
3. Touch **Pattern**, **PIN** or **Password**.
  - ▶ If you touch **Pattern**, you're guided to create a pattern you must draw to unlock the screen. The first time you do this, a short tutorial about creating an unlock pattern appears. Then you're prompted to draw and redraw your own pattern.
  - ▶ If you touch **PIN** or **Password**, you're prompted to set a numeric PIN or a password you must enter to unlock your screen.

The next time you turn on your phone or wake up the screen, you must draw your unlock pattern or enter your PIN or password to unlock it.

**IMPORTANT:** Screen lock options are listed in the approximate order of the strength of their security, starting with **None** and **Long press**, which provide no security. Pattern provides minimal security, although it can be more convenient than the stronger options.

## Protecting Your Phone With Encryption

You can encrypt all the data on your phone: Google Accounts, application data, music and other media, downloaded information, and so on. If you do, you must enter a numeric PIN or password each time you power on your phone.

**WARNING!** Encryption is irreversible. The only way to revert to an unencrypted phone is to perform a factory data reset, which erases all your data.

Encryption provides additional protection in case your phone is stolen, and may be required or recommended in some organizations. Consult your system administrator before turning it on. In many cases the PIN or password you set for encryption is controlled by the system administrator.

Before turning on encryption, prepare as follows:

1. Set a lock screen PIN or password.
2. Charge the battery.
3. Keep the phone connected to the charger.
4. Schedule an hour or more for the encryption process: you must not interrupt it or you will lose some or all of your data.

When you're ready to turn on encryption:

1. Touch  >  > **Settings** > **Security** > **Encrypt phone**.

2. Read the information about encryption carefully.

The **Encrypt phone** button is dimmed if your battery's not charged or your phone's not plugged in.

If you change your mind about encrypting your phone, touch  .

**WARNING!** If you interrupt the encryption process, you will lose data.

3. Touch **Encrypt phone**.

4. Enter your lock screen PIN or password and touch **Next**.

5. Touch **Encrypt phone** again.

The encryption process starts and displays its progress. Encryption can take an hour or more, during which time your phone may restart several times.

When encryption is completed, you're prompted to enter your PIN or password.

Subsequently, you must enter your PIN or password each time you power on your phone, to decrypt it.

# Knowing the Basics

## Monitoring the Phone Status

The status bar at the top of the home screen provides phone and service status information on the right side. You can monitor the phone status by checking the following status icons.

	GPRS connected		No signal
	EDGE connected		Signal strength
	3G connected		Mobile data in use
	HSPA connected		Ringer off
	4G connected		Vibrate mode
	Flight mode		Bluetooth on
	Battery flat		Connected to a Wi-Fi network
	Battery low		Wi-Fi in use
	Battery partially drained		Wired headset connected
	Battery full		Alarm set
	Battery charging		No SIM card installed

## Managing Notifications

### Notification Icons

The status bar at the top of the home screen provides notification alerts on the left. You can view the following notification icons.

	New Message		microSD card unmounted
	New Email		microSD card removed
	New Gmail message		Upcoming event

	New Google Talk instant message		Call on hold
	Problem with SMS/MMS delivery		New Wi-Fi network detected
	Missed call		Downloading data
	Call in progress		Sending data
	USB connected		USB tethering is on
	Song is playing		Portable Wi-Fi hotspot or Wi-Fi direct is on
	Updates available		GPS on

## Open/Close the Notification Panel

Notifications report the arrival of new messages, calendar events, and alarms, as well as ongoing events, such as when you've configured your phone as a Wi-Fi hotspot. You can open the notification panel to view the details of notifications.

- To open the notification panel, swipe your finger down from the top of the screen.
- To close the notification panel, swipe your finger up from the bottom of the screen or touch  .

## Respond to or Remove a Notification

In the notification panel, you can respond to a notification or remove the notifications.

- To respond to a notification, just touch it.
- To remove a notification, swipe it left or right.
- To remove all notifications, touch  in the top right corner.
- Most apps that send notifications, such as Gmail and Google Talk, have notification settings that you can adjust.

**TIP:** In the notification panel, touch  at the top of notifications list to get to the **Settings** menu quickly.

## Managing Shortcuts and Widgets

### Add Shortcuts and Widgets

1. Touch  > .
2. Touch **Widgets** or **Apps** to view the available widgets and apps.
3. Touch and hold a widget or an app and drag it to the Home Screen.

### Move Shortcuts or Widgets

1. Touch and hold a widget or shortcut on the Home Screen.
2. Drag it to the place you need.

### Remove Shortcuts or Widgets

1. Touch and hold a widget or shortcut on the Home Screen.
2. Drag it to  **Remove** to remove it.

### Adjust Widget Size

1. Touch and hold a widget on the Home Screen and then release it.
2. An outline appears around the widget. Drag the outline to resize the widget.

**NOTE:** Not all widgets can be resized.

## Organizing With Folders

You can create folders on the Home Screen and add several shortcuts in a folder.

### Create a Folder

1. Touch and hold the shortcut on the Home Screen you want to add into a folder.
2. Drag the shortcut over another shortcut that you want to add to the folder and release it. A new folder will be created and both shortcuts are added into the folder.

### Rename a Folder

1. Touch a folder to open it.
2. Touch the folder name field and enter a new name.

## Add Shortcuts to a Folder

1. Touch and hold a shortcut and then drag it onto a folder icon.
2. Release the shortcut and it will be added into the folder.

## Remove Shortcuts From a Folder

1. Touch a folder to open it.
2. Touch and hold the shortcut you want to remove and then drag it to the Home Screen.
3. Release the shortcut and it will be removed from the folder.

## Rearranging the Favorites Tray

The Home Screen includes a customizable favorites tray at the bottom visible from all Home Screens. You can drag apps, shortcuts, folders, and other priority items in or out of the favorites tray for instant access from any Home Screen.



### To remove items from the favorites tray:

Touch and hold an item in the favorites tray and drag it out of the tray.

### To add items to the favorites tray:

Touch and hold an item on the Home Screen and drag it into the favorites tray.

If the favorites tray is full, you need to remove an item in the tray.

## Entering Text

You can enter text using the onscreen keyboard. Some apps open it automatically. In others, you open it by touching where you want to type. You can touch  to hide the onscreen keyboard.

## Change Input Methods

1. When you use the onscreen keyboard to enter text, the icon  appears on the notification bar.
2. Open the notification panel and touch **Select input method**.
3. Select an input method you need.

## Android Keyboard

The Android Keyboard provides a layout similar to a desktop computer keyboard. Turn the phone sideways and the keyboard will change from portrait to landscape. The landscape keyboard is not supported in all applications.



- Touch the alphabetic keys to enter letters. Touch and hold some specific keys to enter associated accented letters or numbers. For example, to enter È, touch and hold **E** and the available accented letters and number 3 appear. Then slide to choose È.
- Touch **⇧** to use uppercase. Double-tap **⇧** to lock uppercase. This key also changes to indicate the current case you are using: **⇩** for lowercase, **⇧** for uppercase, and **⇧** when locked in uppercase.
- Touch **⌫** to delete the text before the cursor.
- Touch **☺ 123...** to select numbers and symbols. You can then touch **=\<** to find more. Also, often used symbols are displayed on top of the keyboard.
- Touch and hold **☺ 123...** and then swipe to choose the emoticons.
- Touch **🗣** to use Google's networked voice input.
- Touch and hold **🗣** to change the input languages or set up the Android keyboard.

## TouchPal Keyboard

TouchPal Keyboard offers three layouts: **Full QWERTY**, **12-Key PhonePad** and **CooTek T+**. You can swipe left or right on the TouchPal keyboard to switch the layout.

You can also use TouchPal Curve™ to speed up text input by replacing the key tapping operation with a tracing gesture where you move your finger from

letter to letter without lifting the finger until you reach the end of the word.

### To switch the keyboard layout:

1. Touch  >  > **Settings** > **Language & input** >  (**TouchPal Keyboard**) > **Keyboard layout**.
2. Tick the **Swipe layout** check box.
3. On the TouchPal keyboard, touch  and clear the **Curve** box, and then touch **Close**.
4. Swipe left or right on the TouchPal keyboard to select the **Full QWERTY**, **12-Key PhonePad** or **CooTek T+** layout.

### Full QWERTY



- Touch the alphabetic keys to enter letters.
- Touch  to use uppercase or lowercase. This key also changes to indicate the current case you are using:  for lowercase,  for uppercase, and  when locked in uppercase.
- Slide right on  to enable word prediction. Slide left on  to disable word prediction.
- Touch  to change input language.
- Touch  to enter digits, symbols, emoticons and other pre-defined texts. Touch  to find more. Touch  /  to lock or unlock the inputting. Touch  to go back to enter letters.
- Touch  to start a new line.
- Touch or hold  to delete text before the cursor.
- Touch  to access the quick settings of TouchPal keyboard.
- Touch  to set the TouchPal keyboard.

- Touch  to open text editing options. You can select, cut, copy, paste, and delete text, or move the cursor.
- Touch  to use voice input.
- Touch  to hide the onscreen keyboard. You can touch the text field again to show the keyboard.

## 12-Key PhonePad



Touch a key repeatedly until the desired letter or symbol appears. If word prediction is enabled (  ), just touch the keys once and choose the right word.

## CooTek T+



Touch to enter the left letter on the key; Double-tap or flick right to enter the right letter/symbol on the key. If word prediction is enabled (  ), just touch the keys and choose the right word.

### To enable and use TouchPal Curve:

1. In the TouchPal keyboard screen, touch  and tick the **Curve** check box, and then touch **Close**.
2. Move your finger from letter to letter on the keyboard to trace a word without lifting the finger until you reach the end of the word.

**NOTE:** TouchPal Curve is only available in the **Full QWERTY** layout.



Tips for using TouchPal Curve:

- Touch when you want to. If you want to enter a single letter, go ahead and touch.
- Lift your finger at the end of the word. A space is added automatically when you begin to trace the next word.


## Touch Input Settings

Choose the touch input settings by touching  > **Settings** > **Language & input** from the Home Screen.


In the **KEYBOARD & INPUT METHODS** section, you can set the default input method and choose the settings for input methods.

## Editing Text

- **Move the insertion point:** Touch where you want to type. The cursor blinks in the new position, and a tab appears below it. Drag the tab to move the cursor.
- **Select text:** Touch and hold or double-tap within the text. The nearest word highlights, with a tab at each end of the selection. Drag the tabs to change the selection.
- **Cut or copy:** Select the text you want to manipulate. Then touch the Cut  or Copy  button to cut or copy the text to the clipboard.
- **Replace text with the clipboard text:** Select the text you want to replace. Then touch  or **PASTE**.

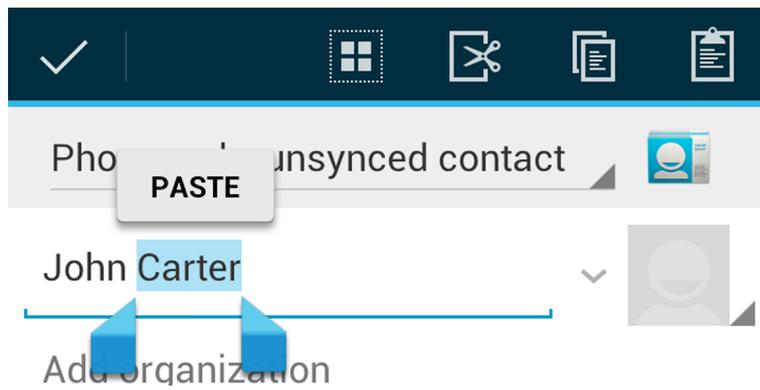

- **Insert text from the clipboard:** Move cursor to the insertion point and then touch and hold the tab below the cursor. Release the finger and touch **PASTE**.

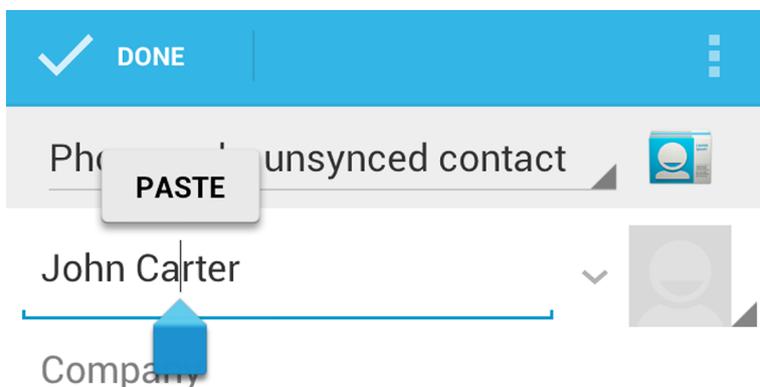

## Opening and Switching apps

### Open an App

1. Touch  > .
2. Slide left or right on the screen and touch an app to open it.

### Switch Between Recently Opened Apps

1. Touch .
- A list of the names and thumbnails of apps you've used recently opens. If you've been using more apps recently than can fit on the screen, you can scroll the list up and down.
2. Touch a thumbnail to open that app.  
You can swipe a thumbnail sideways to remove it from the list.

# Connecting to Networks and Devices

## Connecting to Mobile Networks

### Select Network Operator

1. Touch  >  > **Settings** > **More** > **Mobile networks** > **Network operators**.
2. Touch **Search networks** to search for all available networks.
3. Touch a network in the network list to register manually.  
You can also touch **Select automatically** to select preferred network automatically.

### Control Mobile Data Use

To enable or disable data access:

1. Touch  >  > **Settings** > **More** > **Mobile networks**.
2. Tick the **Data enabled** check box to enable data access over the mobile network. Clear the check box to disable data access.

To get data services when roaming:

1. Touch  >  > **Settings** > **More** > **Mobile networks**.
2. Tick the **Data roaming** check box.

**IMPORTANT:** Data roaming may incur significant roaming charges.

### Select Preferred Network Mode

1. Touch  >  > **Settings** > **More** > **Mobile networks** > **Network Mode**.
2. Touch an option. The phone will only connect to the types of network you select.

### Use 2G Network Only to Save Power

1. Touch  >  > **Settings** > **More** > **Mobile networks**.
2. Tick the **Use only 2G networks** check box to save battery power.

### Set Access Point Names

To connect to the Internet you can use the default Access Point Names (APN).

And if you want to add a new APN, please contact the service provider to get the necessary information.

1. Touch  >  > **Settings** > **More** > **Mobile networks** > **Access Point Names**.
2. Touch  > **New APN**.
3. Touch each item to enter the information you get from your service provider.
4. Touch  > **Save** to complete.

**TIP:** To set the APN to default settings, touch  > **Reset to default**.

## Connecting to Wi-Fi

Wi-Fi is a wireless networking technology that can provide Internet access at distances of up to 100 meters, depending on the Wi-Fi router and your surroundings.

### Turn Wi-Fi On and Connect to a Wi-Fi Network

1. Touch  >  > **Settings** > **Wi-Fi**.
2. Slide the **Wi-Fi** switch to the **ON** position to turn on Wi-Fi.  
The Wi-Fi networks that your phone has detected are displayed with their names and security settings. If your phone finds a network that you connected to previously, it connects to it.
3. Touch a network name to connect to it.

**NOTE:** If the network is secured, you're prompted to enter a password or other credentials. (Ask your network administrator for details.)

### Get Notified of Open Networks

1. Touch  >  > **Settings** > **Wi-Fi**.
2. Slide the Wi-Fi switch to the ON position.
3. Touch  > **Advanced**.
4. Tick the **Network notification** check box.

When Wi-Fi is on, you receive notifications in the status bar when your phone detects an open Wi-Fi network. Clear the check box to turn off notifications.

## Add a Wi-Fi Network

You can add a Wi-Fi network if the network does not broadcast its name (SSID), or to add a Wi-Fi network when you are out of range.

To connect to a secured network, you first need to get the security details from the network's administrator.

1. Touch  >  > **Settings** > **Wi-Fi**.
2. Slide the **Wi-Fi** switch to the **ON** position.
3. Touch **ADD NETWORK**.
4. Enter the network SSID (name). If necessary, enter security or other network configuration details.
5. Touch **Save**.

## Forget a Wi-Fi Network

You can make your phone forget about the details of a Wi-Fi network that you added - for example, if you don't want the phone to connect to it automatically or if it is a network that you no longer use.

1. Touch  >  > **Settings** > **Wi-Fi**.
2. Slide the **Wi-Fi** switch to the **ON** position.
3. Touch the Wi-Fi network name and then touch **Forget**.

## Using Wi-Fi Direct

Wi-Fi Direct allows Wi-Fi devices to connect to each other without the need for wireless access points (hotspots).

**NOTE:** Activating this feature will disconnect your current Wi-Fi network connection.

1. Touch  >  > **Settings** > **More**.
2. Tick the **Wi-Fi direct** check box to turn on Wi-Fi direct.
3. Your phone will search for other devices enabled with Wi-Fi direct connections. Touch **Wi-Fi direct settings** to see all available devices.
4. Touch a device name to begin the connection process.

**NOTE:** The target device must also have Wi-Fi Direct service activated and running before it can be detected by your phone.

5. Touch **Connect**.

The other device will receive a Wi-Fi Direct connection prompt and need to accept the request for connection.

6. Once connected the device is displayed as “Connected” in the Wi-Fi Direct devices list.

## Connecting to Bluetooth Devices

Bluetooth® is a short-range wireless communication technology. Phones or other devices with Bluetooth capabilities can exchange information wirelessly within a distance of about 10 meters. The Bluetooth devices must be paired before the communication is performed.

### Turn Bluetooth On/Off

1. Touch  >  > **Settings** > **Bluetooth**.
2. Slide the **Bluetooth** switch to the **ON** or **OFF** position.

When Bluetooth is on, the  icon will appear in the status bar.

### Make Your Phone Visible

In order to work with other phones or devices that have Bluetooth, you need to make your phone ‘visible’ to them.

1. Touch  >  > **Settings** > **Bluetooth**.
2. Slide the **Bluetooth** switch to the **ON** position.
3. Touch your device name and visibility status on the top of the screen to make your phone visible or invisible.

**NOTE:** Touch  > **Visibility timeout** to set for how long the phone will remain visible.

### Change the Device Name

When your phone is visible to other Bluetooth devices it will be seen by its name and you can make that anything you want – like ‘Ben’s Phone’.

1. Touch  >  > **Settings** > **Bluetooth**.
2. Slide the **Bluetooth** switch to the **ON** position.
3. Touch  > **Rename phone**.
4. Edit the name and touch **Rename**.

## Pair With a Bluetooth Device

1. Touch  >  > **Settings** > **Bluetooth**.
2. Slide the **Bluetooth** switch to the **ON** position.
3. Touch **SEARCH FOR DEVICES**. Your phone scans for and displays the IDs of all available Bluetooth devices in range.
4. Touch the device you want to pair with.

Follow the instructions to complete the pairing. If you're prompted to enter a passcode, try entering 0000 or 1234 (the most common passcodes), or consult the documentation that came with the device.

## Connect to a Bluetooth Device

Once you've paired with a Bluetooth device, you can connect to it manually; for example, to switch devices or to reconnect after it is back in range.

1. Touch  >  > **Settings** > **Bluetooth** and make sure Bluetooth is turned on.
2. In the list of paired devices, touch a paired but unconnected device.

## Disconnect a Bluetooth Device

1. Touch  >  > **Settings** > **Bluetooth** and make sure Bluetooth is turned on.
2. In the list of paired devices, touch a paired and connected device.
3. Touch **OK** to disconnect it.

## Unpair From a Bluetooth Device

You can make your phone forget its pairing connection with another Bluetooth device. To connect to the device again, you may need to enter or confirm a passcode again.

1. Touch  >  > **Settings** > **Bluetooth** and make sure Bluetooth is turned on.
2. In the list of paired devices, touch the icon  beside the Bluetooth device you want to unpair from.
3. Touch **Unpair**.

## Connecting to Your Computer via USB

You can connect your phone to a computer with a USB cable and transfer music, pictures, and other files in both directions. Your phone stores these files in an internal SD storage or on a removable microSD card.

If you are using USB tethering, you must turn that off before you can use USB to transfer files between your phone and computer.

**NOTE:** Visit [www.ztesweden.se](http://www.ztesweden.se) to download the PC software for your Windows or Macintosh computer. With the software, you can manage the data on the phone and use the phone as a modem for your PC.

### Connect Your Phone to a Computer via USB

1. Connect your phone to the PC with a USB cable.
2. Open the Notification panel and touch **Connected as ....**
3. Choose one of the following options:
  - ▶ **Charge only:** Charge your phone via USB (unavailable for Macintosh computers).
  - ▶ **Connect to PC Software:** Use a PC software to sync data, such as contacts and calendars.
  - ▶ **Media device (MTP):** Transfer media files on Windows, or using Android File Transfer on Mac.
  - ▶ **Camera (PTP):** Transfer photos using camera software, and transfer any files on computers that don't support MTP.
  - ▶ **Share mobile network:** Turn on USB tethering and share your phone's data service with the PC. See [Connecting to Networks and Devices - Sharing Your Mobile Data Connection - Share Your Mobile Data Connection via USB](#).
  - ▶ **Install driver:** Install the driver needed for connecting your phone to your PC software, as a media device or camera, or to share mobile network. You only need to install the driver on the same PC once.

### Disconnect Your Phone From the Computer

To disconnect the phone from the computer, simply unplug the USB cable when you're finished.

## Remove the microSD Card From Your Phone

If you need to remove the microSD card while the phone is on, you must unmount it first.

1. Touch  >  > **Settings > Storage**.
2. Touch **Unmount SD card > OK**.
3. The  icon appears in the status bar and you can now safely remove the microSD card from the phone.

## Erase microSD Card

1. Touch  >  > **Settings > Storage**.
2. Touch **Erase SD card > Erase SD card > Erase everything**.

**CAUTION:** The formatting procedure erases all the data on the microSD card, after which the files CANNOT be retrieved.

## Sharing Your Mobile Data Connection

You can share your phone's data capabilities through tethering or by activating the mobile hotspot feature to create a portable Wi-Fi hotspot.

### Share Your Mobile Data Connection via USB

You can access the Internet on your computer via the USB tethering feature of your phone. The feature needs data connection on a mobile network and may result in data charges.

**NOTE:** You cannot transfer files between the phone and the PC when the phone is USB tethered.

1. Connect your phone to your computer with a USB cable.
2. Touch  >  > **Settings > More > Tethering & portable hotspot**.
3. Tick the **USB tethering** check box. A new network connection will be created on your computer.
4. To stop sharing your data connection, uncheck **USB tethering** or disconnect the USB cable.

### Share Your Mobile Data Connection via Bluetooth

If your computer or other device can obtain an Internet connection via Bluetooth, you can configure your phone to share its mobile data connection with that device.

1. Pair your phone with the device via Bluetooth.
2. Configure your device to obtain its network connection via Bluetooth. For more information, please see your computer's documentation.
3. Touch  >  > **Settings** > **More** > **Tethering & portable hotspot**.
4. Tick the **Bluetooth tethering** check box. Your computer is now sharing your phone's data connection.
5. To stop sharing your data connection, uncheck **Bluetooth tethering**.

## Share Your Mobile Data Connection as a Wi-Fi Hotspot

You can share your phone's data connection with other devices by turning your phone into a portable Wi-Fi hotspot. The feature needs data connection on a mobile network and may result in data charges.

**NOTE:** When the portable Wi-Fi hotspot feature is enabled, you cannot use your phone's applications to access the Internet via its Wi-Fi connection. You still remain connected to the Internet via your mobile data network.

1. Touch  >  > **Settings** > **More** > **Tethering & portable hotspot**.
2. Tick the **Portable Wi-Fi hotspot** check box.  
After a moment, the phone starts broadcasting its Wi-Fi network name (SSID).
3. To stop sharing your data connection, uncheck **Portable Wi-Fi hotspot**.

## Rename or Secure Your Wi-Fi Hotspot

You can change the name of your phone's Wi-Fi network name (SSID) and secure your portable Wi-Fi hotspot.

1. Touch  >  > **Settings** > **More** > **Tethering & portable hotspot** > **Configure Wi-Fi hotspot**.
2. Set your name and security options as follows:
  - ▶ **Network SSID:** Enter or edit a network SSID (name) that other devices see when scanning for Wi-Fi networks.
  - ▶ **Security:** Choose a security option: **Open** (not recommended), **WPA PSK** or **WPA2 PSK** (other users can access your mobile hotspot only if they enter the correct password). When you select **WPA PSK** or **WPA2 PSK**, touch the Password field to edit the security password.
3. Touch **Save** to save your settings.

## Connecting to Virtual Private Networks

Virtual private networks (VPNs) allow you to connect to the resources inside a secured local network. VPNs are commonly deployed by corporations, schools, and other institutions to let people access local network resources when not on campus, or when connected to a wireless network.

Depending on the type of VPN you are using, you may be required to enter your login credentials or install security certificates before you can connect to your VPN. You can get this information from your network administrator.

### Add a VPN

1. Touch  >  > **Settings** > **More** > **VPN**.
2. Touch **Add VPN network** and fill in the information provided by your network administrator.
3. Touch **Save**.

The VPN is added to the list on the VPN screen.

### Connect to a VPN

1. Touch  >  > **Settings** > **More** > **VPN**.
2. Touch the VPN that you want to connect to.
3. When prompted, enter any requested credentials, and then touch **Connect**.

When you are connected, the VPN connected icon appears in the status bar.

### Modify a VPN

1. Touch  >  > **Settings** > **More** > **VPN**.
2. Touch and hold the VPN that you want to modify.
3. Touch **Edit network** and edit the VPN settings you want.
4. Touch **Save**.

### Delete a VPN

1. Touch  >  > **Settings** > **More** > **VPN**.
2. Touch and hold the VPN that you want to delete.
3. Touch **Delete network**.

# Phone Calls

You can place calls from the Phone app, the People app, or other apps or widgets that display contact information. Wherever you see a phone number, you can usually touch it to dial.

## Placing and Ending Calls

### Place a Call by Dialing

1. Touch  > .
2. In the dialer tab , enter the phone number with the on-screen keypad. Touch  to delete wrong digits.

**NOTE:** As you enter digits, your phone searches for contacts that match. If you see the number you want to dial, touch it to place the call immediately without entering the rest of the number.

3. Touch the Phone icon  below the keypad to dial.

**TIP:** To make an international call, touch and hold the 0 key to enter the plus (+) symbol. Then enter the international prefix for the country, followed by the area code and phone number.

### End a Call

During a call, touch  on the screen.

## Answering or Rejecting Calls

When you receive a phone call, the Incoming Call screen opens, displaying the caller ID and any additional information about the caller that you've entered in People. You can answer or reject the call, or reject it with a text message.

### Answer a Call

When you receive a phone call, drag  over  to answer the call.

**NOTE:** To silence the ringer before answering the call, press the **Volume Keys** up or down.

## Reject a Call

When you receive a phone call, drag  over  to reject the call.

You can also drag  over  to reject the call and send a preset text message to the caller.

**TIP:** To edit the text response from within the Phone app, touch  > **Settings** > **Quick responses**.

## Working With the Call Log

The Call log is a list of all the calls you've placed, received, or missed. It provides a convenient way to redial a number, return a call, or add a number to your Contacts.

To open the call log, you can touch  >  > **Call Log** or touch the  tab in the Phone app.

## Place a Call From the Call Log

1. Open the call log.
2. Touch a number for more information about the call, or touch  beside it to call back.

**NOTE:** You can touch  on the bottom of the screen and select the call log type you want to view.

## Add a Call Log Number as a Contact

1. Open the call log.
2. Touch a number to view more call information.
3. Touch .
4. To add the number to an existing contact, touch a contact in the list. To add a new contact, touch **CREATE NEW CONTACT**.

## Take Other Actions on a Call Log Entry

1. Open the call log.
2. Touch a number to view more call information. While viewing the call details, you can:
  - ▶ Touch the number to call it.

- ▶ Touch  > **Edit number before call** to edit the number in the dialer before calling it.
- ▶ Touch  to send a message.
- ▶ If the number belongs to a contact you have, touch  to view contact details.

## Delete the Call Log

1. Open the call log.
2. Touch  > **Clear call log**.
3. Touch **OK** to delete all records in the call log.

**NOTE:** You can also touch a number in the call log screen, and touch  > **Remove from call log** to delete the call log of the number.

## Calling Your Contacts

### Call a Contact

1. Touch  >  and then touch the Contact tab .
2. Flick the screen up or down to view all your contacts with phone numbers.  
**TIP:** You can search for a contact by touching  on the screen.
3. Touch a contact or number to call it.

### Call a Favorite Contact

1. Touch  >  and then touch the Contact tab .
2. Your favorite contacts and frequently called contacts or numbers are listed at the top of the screen. Touch a contact or number to call it.

## Checking Voicemail

1. Touch  > .
2. Touch and hold the 1 key in the dialer. If prompted, enter your voicemail password.
3. Follow the voice prompts to listen to and manage your voicemail messages.

**NOTE:** To set your voicemail service, touch  > **Settings** in the dialer and touch the voicemail settings you want to change. For detailed information, please contact the service provider.

## Using Options During a Call

During a call, you will see a number of onscreen options. Touch an option to select it.

- Touch  to turn on or off the handsfree speakerphone.
- Touch  to mute or unmute your microphone.
- Touch  to make another call separately from the first call, which is put on hold.
- Touch  to switch to the dialer, for example to enter a code.
- Touch  to put the call on hold.
- Touch  to put the caller you are speaking to on hold, and switch to the other call that has been put on hold.
- Touch  for more call options. You can hold or unhold the current call, record phone conversation, or switch to another call in progress.
- Touch  to merge separate calls as a single conference call.
- Touch  to end the current call.

**WARNING!** Because of higher volume levels, do not place the phone near your ear during speakerphone use.

## Managing Multi-party Calls

When the call waiting and three-way call features are available, you can switch between two calls or set up a conference call.

**NOTE:** The call waiting and three-way call features need network supports and may result in additional charges. Please contact your service provider for more information.

### Switch Between Current Calls

When you're on a call, your phone screen informs you that another call is coming in and displays the caller ID.

**To respond to an incoming call while you're on a call:**

Drag  over  to answer the call. (This puts the first caller on hold and answers the second call.)

### To switch between two calls:

Touch  > **Swap** on the screen.

### Set Up a Conference Call

With this feature, you can talk to two people at the same time.

1. On the dialer screen, enter a number and touch .
2. Once you have established the connection, touch  and dial the second number. (This puts the first caller on hold and dials the second number.)
3. When you're connected to the second party, touch .

If one of the people you called hangs up during your call, you and the remaining caller stay connected. If you initiated the call and are the first to hang up, all callers are disconnected.

To end the conference call, touch .

## Adjusting Your Call Settings

### Use Fixed Dialing Numbers

Fixed Dialing Numbers (FDN) allows you to restrict outgoing calls to a limited set of phone numbers.

1. Touch  >  > **Settings** > **Call** > **Fixed Dialing Numbers**.
2. The following options are available:
  - ▶ **Enable FDN:** Input the PIN2 code to enable the FDN feature.
  - ▶ **Change PIN2:** Change the PIN2 code for FDN access.
  - ▶ **FDN list:** Manage the FDN list.

**NOTE:** The PIN2 code is provided by your carrier. Entering an incorrect PIN2 code more times than allowed can cause the phone to lock. Contact the service provider for assistance.

### Edit Quick Response to Rejected Callers

1. Touch  >  > **Settings** > **Call** > **Quick responses**.
2. Touch the text message to edit it.

### Set Voicemail

1. Touch  >  > **Settings** > **Call**.

2. Touch **Voicemail service** to select a voicemail service provider. Your carrier is the default.
3. Touch **Voicemail settings > Voicemail number** to edit the voicemail number if necessary.

## Set TTY Mode

Select a TTY mode for your phone to work with a teletypewriter, or turn TTY off.

1. Touch  >  > **Settings > Call > TTY mode**.
2. Touch **TTY Off** to turn the feature off, or touch **TTY Full**, **TTY HCO**, or **TTY VCO** to select a mode for your phone to work with the teletypewriter. Consult your teletypewriter manufacturer's manual if necessary.

## Set DTMF Tones

You can set the length of Dual-tone multi-frequency (DTMF) signal tones.

1. Touch  >  > **Settings > Call > DTMF Tones**.
2. Touch **Normal** or **Long**.

## Set Speed Dials

You can touch and hold the 1 ~ 9 key from the dialer to call the corresponding speed dial number.

The number key 1 is reserved to speed dial your voicemail.

### To assign a speed dial key:

1. Touch  >  > **Settings > Call > Speed dial**.
2. Touch a speed dial key.
3. Enter a phone number or select one from the contact list.
4. Touch **OK**.

## Bar Certain Calls

Call barring feature allows you to forbid certain types of calls from your phone.

1. Touch  >  > **Settings > Call > Call Barring Settings**.
2. Set the restriction of specific types of calls from your phone.

## Forward Incoming Calls

Call forwarding feature allows you to forward your incoming calls to another phone number.

1. Touch  >  > **Settings** > **Call** > **Call forwarding**.
2. Touch an available option ( **Always forward**, **Forward when busy**, **Forward when unanswered**, or **Forward when unreachable**) to enable it.

## Other Options

1. Touch  >  > **Settings** > **Call** > **Additional settings**.
2. Touch **Caller ID** to choose whether your number is displayed when someone receives your outgoing call. Or check **Call waiting** to get notified of incoming calls during a call.

**NOTE:** Please contact the service provider to check whether the caller ID and call waiting features are available.

## Internet Call Settings

### To add an Internet calling account:

1. Touch  >  > **Settings** > **Call** > **Accounts**.
2. Touch **ADD ACCOUNT**.
3. Follow the instructions from your Internet calling service provider to configure the settings for your account.
4. Touch **SAVE**.

### To configure which calls use Internet calling:

You can configure your phone to place all calls using Internet calling (when you're connected to a Wi-Fi network), just calls to Internet calling addresses, or to ask each time you place a call.

1. Touch  >  > **Settings** > **Call**.
2. Touch **Use Internet calling**.
3. Touch the Internet calling option you want.

### To configure your phone to receive Internet calls:

By default, your phone is configured to make Internet calls, but not to ensure that you will receive them. But you can configure your phone to listen for Internet calls made to an Internet calling account you added to your phone.

1. Touch  >  > **Settings** > **Call** > **Accounts**.
2. Tick the **Receive incoming calls** check box. Checking this setting will reduce your battery life between charges.

# People

You can add contacts on your phone and synchronize them with the contacts in your Google Account or other accounts that support contact syncing.

To see your contacts, touch  >  > . From there, you can touch the tabs on the top of the screen to quickly switch to the contact groups  or favorite contacts .

## Opening Your Contact List

1. Touch  >  >  and touch the all contacts tab  to access your contact list.
2. Scroll through the list to view all your contacts.
3. Touch a contact to view its details.

**TIP:** If you have a lot of contacts stored, you'll see a slide bar on the right side of the screen. To go directly to a letter, touch and hold the slide bar and drag it to a letter.

## Adding a New Contact

1. Touch  >  >  and touch the all contacts tab .
2. Touch  to add a new contact.
3. Touch the account field on the top of the screen to choose where to save the contact. If a sync account is selected, the contacts can be synced automatically with your account online.
4. Enter the contact name, phone numbers, email addresses, and other information.
5. Touch **DONE** to save the contact.

## Setting Up Your Own Profile

You can create your own business card in your phone.

1. Touch  >  >  and touch the all contacts tab .
2. Scroll to the top of the screen and touch **Set up my profile**.
3. Edit your profile information and touch **DONE**.

## Importing, Exporting, and Sharing Contacts

You can import/export contacts from/to your SIM or microSD card. This is especially useful when you need to transfer contacts between different devices. You can also quickly share your contacts using Bluetooth, Email or Messages, etc.

### Import Contacts From the SIM Card

1. Touch  >  > .
2. Touch  > **Import/export** > **Import from SIM card**.
3. Select an account to save the contacts.
4. Touch to select the contacts you need. Touch  to select all contacts or  to deselect all.
5. Touch  to begin importing.

### Import Contacts From the microSD Card

1. Touch  >  > .
2. Touch  > **Import/export** > **Import from SD card**.
3. Select an account to save the contacts.
4. If there is more than one vCard file in the microSD card, select the one or those you need and touch **OK**.

### Export Contacts to the SIM Card

1. Touch  >  > .
2. Touch  > **Import/export** > **Export to SIM card**.
3. Touch to select the contacts you need. Touch  to select all contacts or  to deselect all.
4. Touch  to begin exporting.

### Export Contacts to the microSD Card

1. Touch  >  > .
2. Touch  > **Import/export** > **Export to SD card**.

3. The phone will prompt you with the name of the vCard file. Touch **OK** to create the file in the microSD card.

## Share Contacts

1. Touch  >  >  and touch the all contacts tab .
2. Touch  > **Select item(s)**.
3. Touch to select the contacts you want to share. Touch  to select all contacts or  to deselect all.
4. Touch  and choose how you want to share the contacts.

## Working With Favorite Contacts

In the favorite contacts  tab, you can find your favorite contacts and frequently contacted contacts.

### Add a Contact to Favorites

You can add the contacts used frequently to Favorites, so you can find them quickly.

1. Touch  >  >  and touch the all contacts tab .
2. Touch a contact and then touch  next to the contact name.

### Remove a Contact From Favorites

1. Touch  >  >  and touch the favorite contacts tab .
2. Touch a favorite contact and then touch  next to the contact name.

## Working With Groups

### View Your Contact Groups

1. Touch  >  >  and touch the contact groups tab .
2. Scroll through the list to view the preset groups and the groups you create.
3. Touch a group to view its members.

**NOTE:** To send messages to the group members, you can touch  next to the group and select message recipients from the listed group members.

## Add a New Group

1. Touch  >  >  and touch the contact groups tab .
2. Touch  to create a new group.
3. Touch the account field on the top of the screen to choose an account for the group.
4. Enter the group name and touch **DONE**.

## Add Members to a Group

1. Touch  >  >  and touch the contact groups tab  .
2. Touch a group and then touch  .
3. Touch to select the contacts you need as the group members.
4. Touch  .

## Delete a Group

1. Touch  >  >  and touch the contact groups tab  .
2. Touch a group and then touch the **Menu Key > Disband group**.
3. Touch **OK** to disband the group. The contacts in the group will not be deleted.

## Edit a Group

1. Touch  >  >  and touch the contact groups tab  .
2. Touch a group and then touch  .
3. Touch **Rename group** to edit the group name. Or touch **Select item(s)** to select the members you don't need and remove them.

## Searching for a Contact

1. Touch  >  >  .
2. Touch  on the bottom of the screen.
3. Input the contact information you want to search for, such as contact name, phone number, or email. The contacts matched will be listed.

## Editing Contacts

### Edit Contact Details

1. Touch  >  > .
2. Touch a contact you need to edit and then touch  > **Edit**.
3. Edit the contact and touch **DONE**.

### Set a Ringtone for a Contact

Assign a special ringtone to a contact, so you know who is calling when you hear the ringtone.

1. Touch  >  > .
2. Touch a contact you want to set a ringtone for and then touch  > **Set ringtone**.

**NOTE:** The contact must be saved on the phone, not the SIM card.

3. Select a ringtone you like and touch **OK**.

### Delete a Contact

1. Touch  >  > .
2. Touch a contact you want to delete and touch  > **Delete**.
3. Touch **OK** to confirm.

#### To delete several contacts, you can:

1. Touch  > **Select item(s)** in the all contacts screen.
2. Touch to select the contacts you want to remove and then touch .
3. Touch **OK** to confirm.

### Join Contacts

Your phone can synchronize with multiple accounts containing your contact information (such as Google and Microsoft Exchange ActiveSync). When you synchronize your phone with those accounts, there might be duplicate entries of the same contact.

You can merge all the separate information of a account into one entry in the Contacts list.

1. Touch  >  >  .
2. Touch a contact to which you want to join one or more other contacts, to view the contact's details. This is the contact you will see in the Contacts list after the join.
3. Touch  > **Join**. The phone will list the suggested contacts to join.
4. Touch the contact whose information you want to join with the first contact. The information from the second contact is added to the first contact, and the second contact is no longer displayed in the Contacts list.

You can repeat these steps to join another contact to the main contact.

## Separate Contact Information

If contact information from different sources was joined by mistake, you can separate the information back into individual contacts on your phone.

1. Touch  >  >  .
2. Touch a contact you want to separate, to view its details.
3. Touch  > **Separate**.
4. Touch **OK** to confirm.

The contact information is separated into individual contacts in the list of contacts.

# Accounts

## Adding or Removing Accounts

You can add multiple Google Accounts and Microsoft Exchange ActiveSync accounts. You may also add other kinds of accounts, depending on the apps installed on your phone.

### Add an Account

1. From the Home Screen, touch  > **Settings** > **Accounts & sync**.
2. Touch **ADD ACCOUNT**.
3. Touch the type of account you want to add.
4. Follow the onscreen steps to enter the information about the account. Most accounts require a username and password, but the details may vary. You may also need to obtain some information from IT support or system administrator.

When the account is successfully added, it is displayed in the **Accounts & sync** list.

### Remove an Account

Removing an account will delete it and all information associated with it from your phone, such as emails and contacts.

1. From the Home Screen, touch  > **Settings** > **Accounts & sync**.
2. Touch the account.
3. Touch  > **Remove account** > **Remove account**.

## Configuring Account Sync

### Configure Auto Sync Setting

1. Open the **Accounts & sync** settings screen.  
Your accounts and sync status are displayed.  turns green if automatic sync is enabled for some or all of the accounts data, and gray if automatic sync is disabled.
2. Touch the **ON/OFF** switch to turn on or off automatic sync.
  - ▶ When automatic sync is turned on, changes you make to information on your phone or on the web are automatically synced with each other.
  - ▶ When auto sync is turned off, you need to sync manually to collect emails, updates, or other recent information.

### Sync Manually

1. Open the **Accounts & sync** settings screen.
2. Touch the account whose data you want to sync.
3. Touch  > **Sync now**.

### Change an Account's Sync Settings

1. Open the **Accounts & sync** settings screen.
2. Touch the account whose sync settings you want to change. The Sync settings screen appears, showing a list of information the account can sync.
3. Check or uncheck items as you need. Checked types of information on the phone and the web will be kept in sync when auto-sync is turned on.

# Email

Touch  in the Home Screen and select **Email**. Use it to read and send emails from services other than Gmail.

## Set Up the First Email Account

1. When you open **Email** for the first time, enter your email address and password and then touch **Next**.

**NOTE:** Your phone will connect to the Internet and verify incoming and outgoing server settings before proceeding to the next step. If the email service provider is not a popular one, you need to select the type of your account and edit the settings for incoming and outgoing servers. Please contact your mobile service provider and email service provider for more information.

2. Set the email checking frequency, download options, account name and other settings. Touch **Next** when you finish.

Your phone will show the inbox of the email account and start to download email messages.

**TIP:** To add more email accounts, open **Email** to get the Inbox screen. Then touch  > **Account settings** and touch **ADD ACCOUNT** at the top right of the screen.

## Checking Your Emails

Your phone can automatically check for new emails at the interval you set when setting up the account.

You can also check new emails manually by touching  in any of the email account's boxes. Touch **Load more messages** at the bottom of the email list to download earlier messages.

## Responding to an Email

You can reply to or forward a message that you receive. You can also delete messages and manage them in other ways.

### Rely to or Forward an Email

1. Open the email you want to reply to or forward from Inbox.
2. Do the following as you need:

To...	do...
Reply to the sender,	touch  > <b>Reply</b> .
Reply to the sender and all recipients of the original message,	touch  > <b>Reply all</b> .
Forward the message,	touch  > <b>Forward</b> .

3. Edit your message and touch  .

### Mark an Email as Unread

You can return a read email to the unread state—for example, to remind yourself to read it again later. You can also mark a batch of emails as unread.

- While reading a message, touch  > **Mark as unread**.
- While in a message list (for instance, the inbox), touch the checkboxes before the messages and then touch  .

### Delete an Email

You can delete an email from its folder. You can also delete a batch of emails.

- While reading a message, touch  > **OK**.
- While in a message list (for instance, the inbox), touch the checkboxes before the messages and then touch  > **OK**.

## Writing and Sending an Email

1. Open your email Inbox.
2. Touch  to open the compose screen.
3. If you have more than one email accounts added on the phone, touch the sender line to select the account you want to use for sending the message.
4. Enter a contact name or email address in the 'To' field. Separate each recipient with a comma. You can also touch  to select recipients from your contacts.
5. Enter the email subject and compose the email text.
6. Touch  > **Attach file** to add audio files, images, videos and other types of files as attachment.
7. Touch  at the top right of the screen to send the message.

## Adding Signature to Your Emails

You can set a few lines of plain text as signature for every outgoing email message from an account, such as your name and contact information.

1. Open the **Email** app.
2. Touch  > **Account settings** and select the account you want to add signature to.
3. Touch **Signature** and enter the text.
4. Touch **OK**.

## Adding and Editing Email Accounts

### Add an Email Account

After setting up your first email account (see [Email - Set Up the First Email Account](#)), you can add more email accounts and manage them separately.

1. Open **Email** to get the Inbox screen.
2. Touch  > **Account settings** and touch **ADD ACCOUNT** at the top right of the screen.
3. Set up the account as you would with the first one.

### Edit an Email Account

You can change a number of settings for an account, including how often you check for email, how you're notified of new mails, and details about the servers the account uses to send and receive mails.

1. Open **Email** to get the Inbox screen.
2. Touch  > **Account settings** and touch the account whose settings you want to change.
3. Make the changes you want and touch  when you're finished.

### Remove an Email Account

1. Open **Email** to get the Inbox screen.
2. Touch  > **Account settings** and touch the account you want to remove.
3. Touch **Remove account** > **OK**.

## Changing General Email Settings

General settings apply to all email accounts you add.

1. Open **Email** to get the Inbox screen.
2. Touch  > **Account settings** > **General**.
3. Make the changes you want and touch  when you're finished.

After you sign in to your Google Account on the phone, you can send and retrieve Gmail messages with the **Gmail** app.

**NOTE:** This feature may not be available in certain region or with certain service provider.

## Opening Your Gmail Inbox

1. Touch  in the Home Screen and select **Gmail**. The Inbox screen appears.  
If you haven't signed in, you will be prompted to do so or create a new account.
2. Touch  at the bottom right of the screen to refresh your Inbox and download new messages.

## Switching Accounts

Gmail displays conversations, messages, and settings from one Google Account at a time. If you have signed in to more than one Google Account on your phone, you can switch accounts and view information in each account.

1. From your Inbox, touch the current account at the top of the screen.
2. From the drop-down menu, touch the account you want to see. The account's Inbox will open.

## Writing and Sending a Message

1. Open your Gmail Inbox and switch to the account you want to use for sending the message.
2. Touch .
3. Enter a contact name or email address in the 'To' field. Separate each recipient with a comma.
4. Enter the email subject and compose the email text.
5. To attach an image, touch  > **Attach file** and select a file from the image gallery.
6. Touch  at the top right of the screen to send the message.

## Adding Signature to Your Gmail Messages

You can set a few lines of plain text as signature for every outgoing Gmail message. The signature you set on the phone is independent of the signature you use for Gmail on the web.

1. Open the **Gmail** app.
2. Touch  > **Settings** and select the account you want to add signature to.
3. Touch **Signature** and enter the text.
4. Touch **OK**.

## Replying to or Forwarding a Message

1. Open the Gmail message you want to reply to or forward to another person.
2. Do the following as you need:

To...	do...
Reply to the sender,	touch  in the message header.
Reply to the sender and all recipients of the original message,	touch in the message header  > <b>Reply all.</b>
Forward the message,	touch in the message header  > <b>Forward.</b>

3. Edit your message and touch the send icon  .

## Working With Received Attachments

When a message has an attachment, Gmail displays information about that attachment at the top of the message.

Depending on the attachment type, the applications installed on your phone as well as your settings, you may preview, view, play, save the attachment, or check information about the attachment.

**TIP:** For documents with multiple pages, touching the **Preview** option will only download the pages you view, while touching **View**, **Play**, or **Save** will download the entire file and cost more time and data.

## Searching for Messages

You can search for messages using words that appear in addresses, subjects, labels, or contents.

**NOTE:** If you search while the phone doesn't have an active Internet connection, only messages synchronized onto your phone can be searched.

1. Open the **Gmail** app and touch  .
2. Enter the words to search for and touch the search key on the screen keyboard.

As you type, suggestions may appear below the search field. You can touch a suggestion to search for it right away, or touch the arrow next to it to add its text to the search field.


3. In the search results, touch the message you need and work with it just as you would with any Gmail message.

## Working With Labels

Message labels include both labels you create and default labels such as **Sent**, **Starred**, and **Outbox**. You can organize your emails by labeling them or adding stars to them. Labels also help you sort your messages, just like folders.

### To label or change labels:

1. Open the **Gmail** app and touch in the message list the checkboxes before the messages you want to label.

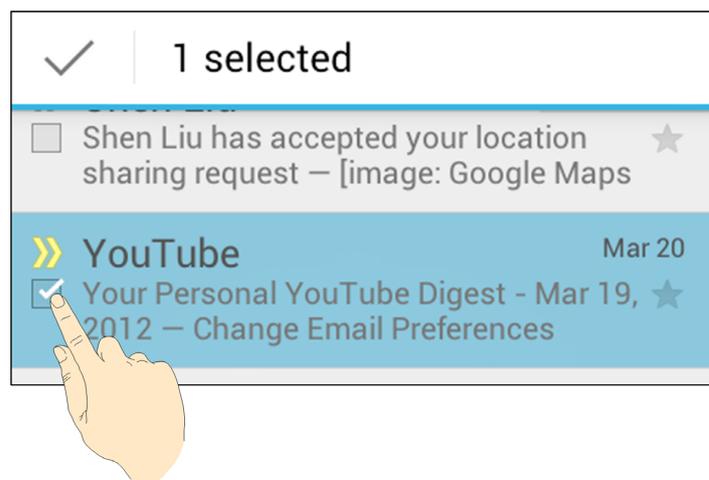

2. Touch the label icon  at the bottom of the screen.
3. Check or uncheck labels in the new screen and touch **OK**.

### To add stars to messages:

1. Open the **Gmail** app and touch in the message list the checkboxes before the messages you want to star.
2. At the bottom of the screen, touch  .

### To view messages by label:

1. Open the **Gmail** app and touch the label icon  at the bottom of the message list without checking any message.
2. Touch the label to view messages with that label.

**TIP:** You can also touch the name of your account at the top of the screen. Then touch one of the labels listed in the **RECENT** section, below account names.

## Changing Gmail Settings

Touch  > **Settings** in any Gmail screen to change **General settings**, which apply to all Gmail accounts, or other settings that only apply to specific accounts.

# Messages

You can use Messaging to exchange text messages (SMS) and multimedia messages (MMS).

## Opening the Messages Screen

Touch  in the Home Screen and select **Messaging**.

The Messaging screen opens, where you can create a new message, search for messages, or open an ongoing message thread.

- Touch  to write a new text or multimedia message.
- Touch  to search for message with keywords.
- Touch an existing message thread to open the conversation you've had with a certain number.

## Sending a Text Message

1. On the Messaging screen, touch  at the bottom.
2. Touch the **To** field, and enter the recipient's number or, if the recipient is stored in **People** as a contact, the first letters of the recipient's name. As matching contacts appear, you can touch a suggested recipient.
3. Touch the **Type message** field, and enter the contents of your text message.
4. Touch .

## Sending a Multimedia Message

1. On the Messaging screen, touch  at the bottom.
2. Enter the recipient and the text of the message, as you do when sending a text message.
3. Touch  **> Add subject** to add a message subject.
4. Touch the paper clip icon  to open a menu where you can select the kind of media file to attach to the message.

- ▶ **Pictures:** Select a picture to add to your message.
- ▶ **Capture picture:** Take a photo and add to your message.
- ▶ **Videos:** Select a video clip to attach to your message.
- ▶ **Capture video:** Shoot a video clip and add to your message.
- ▶ **Audio:** Select an audio file to add to your message.
- ▶ **Record audio:** Record an audio file and add to your message.
- ▶ **Slideshow:** Edit a slideshow and add to your message.
- ▶ **Files:** Select a file of any kind to add to your message.
- ▶ **Insert contact:** Select a contact to add to your message as an attachment.

5. Touch  .

## Replying to a Message

Messages you receive are appended to existing threads of the same number. If the new message comes from a new number, a new thread is created.

1. On the Messaging screen, touch the thread that has the message you want to reply to.
2. Type your reply in the text box at the bottom. You can touch the attach icon  if you want to reply with an MMS.
3. Touch  .

## Forwarding a Message

1. On the Messaging screen, touch the thread that has the message you want to forward.
2. Touch and hold the message.
3. Touch **Forward** in the menu that opens.
4. Enter a recipient for the message and edit the content if you want.
5. Touch  .

## Viewing Details About a Message

1. Touch and hold a message in a thread.
2. Touch **View details** to see information about the message, such as message type, sender, recipient, or date.

## Deleting Messages or Threads

### To delete a message:

1. On the Messaging screen, touch a thread.
2. Touch and hold the message you want to delete.
3. Touch **Delete** in the Message options menu.
4. Touch **Delete**.

### To delete message threads:

1. On the Messaging screen, touch and hold one thread you want to delete.
2. If there are more threads you want to delete, touch them one by one.
3. Touch  at the bottom.
4. Touch **Delete**.

## Changing Message Settings

Touch  > **Settings** in the Messaging screen to change message settings.

# Calendar

Calendar on the phone works with the web-based Google Calendar service for creating and managing events, meetings, and appointments. It also works with the Microsoft Exchange ActiveSync calendar once you sign into your Exchange account on the phone.

To open Calendar, touch  in the Home Screen and select **Calendar**.

## Viewing Your Calendars and Events

### Select Visible Calendars

1. Open the **Calendar** app.
2. Touch  > **Calendars to display**.
3. In the new screen, touch the calendars to check the ones you want to see or uncheck those you'd like to hide.


Events from hidden calendars are not shown in the Calendar app.

### Change Calendar Views

You can view your calendars in different forms. The app offers four view types: Month, Week, Day, and Agenda.

To change calendar views, touch the time shown at the top left and select the view you prefer.

You can also change to Day view from Month view by touching any day in the grid.

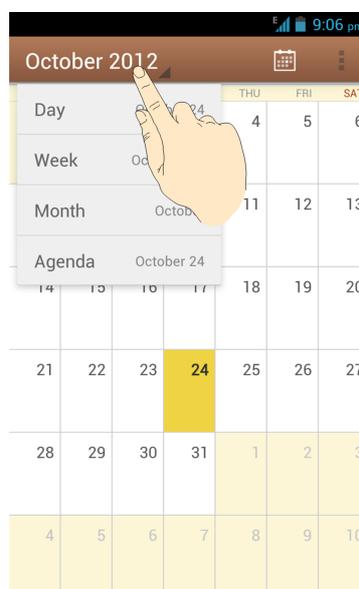

## TIPS:

- In Month view, swipe vertically to see earlier months and later months.
- In Week or Day view, swipe horizontally to see earlier weeks/days and later weeks/days.
- When you are viewing earlier or later days, weeks, or months, touch  at the top to quickly switch to today.

## View Event Details

In Agenda, Day, or Week view, touch an event to view its details.

In Month view, touch a day to switch to Day view. Then touch an event to view its details.

## Creating an Event

1. In any Calendar view, touch  > **New event** to open an event details screen for a new event.

You can also touch a spot in Day or Week view twice to add an event to that time spot.

2. Add details about the event.

Enter a name, location, time span, and other additional details about the event.

**NOTE:** If you have more than one calendar, you can choose the calendar to which to add the event by touching the current calendar above the **Event name** box.

3. Touch **DONE** at the top of the screen to save the new event.

## Editing or Deleting an Event

1. Find the event you want to edit or delete.
2. Open its details screen (see [Viewing Your Calendars and Events - View Event Details](#) in this chapter).
3. Do one of the following as you need.

To...	do...
Edit the event,	touch  at the top of the screen. Touch <b>DONE</b> to save your changes.
Delete the event,	touch  at the top of the screen and then touch <b>OK</b> .

## Changing Calendar Settings

To change Calendar settings, open a Calendar view (Day, Week, Month, or Agenda). Then touch  > **Settings**.

You can change **General settings**, which apply to all accounts, or other settings that only apply to specific accounts.

# Google Talk

Google Talk is Google's instant messaging service. You can use it to communicate in real time with other people who also use Google Talk, on a phone, on the web, or with a desktop application.

## Signing In to See Your Friends

You must sign in to your Google account before you can use Google Talk.

Touch  in the Home Screen and select **Talk**. The first time you launch **Talk**, touch the account you want to sign in with. Your friends list is then displayed.

**NOTE:** You remain signed in to Google Talk after launching the **Talk** app even if you switch to other apps, until you explicitly sign out. To sign out, go back to your friends list and touch  > **Sign out**.

## Adding a Friend

1. In the friends list, touch  at the top right of the screen.
2. Enter your friend's address and touch **DONE**.

Your friend's address in Google Talk is a Gmail or other email address that is configured to connect to Google Talk.

**NOTE:** If other people try to add you as a friend, you will receive a notification in the status bar and the invitation appears in your friends list. You can touch the invitation to **Accept**, **Decline**, or **Block**.

## Changing Your Online Status

1. Touch your own entry at the top of your friends list.
2. In the screen that opens, touch your current status to change it (or to sign out of **Talk**).
3. Enter a status message or if you already have one, edit it.  
In addition to the standard status settings, you can also touch **Change to a recently-used status** to select a message that you've entered previously.
4. Touch  to return to your friends list.

## Chatting With Friends

1. Touch a friend in your friends list. The chat screen for that friend opens.
2. Enter your message and touch . You can also touch  or  to initiate a video chat or voice chat if the friend is online.

### Switch Between Active Chats

If you have more than one chat going, you can switch between these chats in one of the following ways.

- Touch  to return from one chat to the friends list. Then touch the other friend you want to chat with.
- While you are in one chat screen with a friend, swipe left or right to switch to the chat screen with the other friend.

### Use Group Chat

When you're chatting, you can invite additional friends to join a group chat.

1. On a chat screen, touch  > **Add to chat**.
2. Touch the name of the friend to invite.

The friend you invited and the current participants receive an invitation to a group chat. Each one who accepts the invitation joins the group chat. In a group chat, everyone can see everyone else's messages. Group chats appear at the top of your friends list, with a group chat icon.

### End the Chat

While on a chat screen, touch  > **End chat**.

You can also touch  > **End all chats** while in the friends list to end all active chats.

## Changing Google Talk Settings

On any chat screen or the friends list, touch  > **Settings** to change Google Talk settings for your account.

# Google+

Google+ is a social networking service offered by Google. The Google+ application on your phone enables you to manage your data, chat with online contacts, organize them in different circles, and share your selected information.

Touch  in the Home Screen and select **Google+**. The first time you open the Google+ app, select the instant upload and contact sync options.

## Organizing Your Contacts

1. Open the **Google+** app.
2. Touch  > **Circles**.
3. Enter the person you want to search for or select a suggested person, and touch **Add**.
4. Check the circles you want the person to be added to, or touch **Create a new circle**.

## Getting Updates

1. Open the **Google+** app.
2. Touch  > **Home**.
3. Swipe up or down to see different information shared with you by other users. Touch  to choose what groups of information are shown.
  - ▶ **Nearby** shows posts shared with you by users near your current location.
  - ▶ **All circles, Acquaintances, Family, Following** and **Friends** show updates from people you've added to your circles.
  - ▶ **What's hot** shows popular posts on Google+.

## Chatting With Contacts

You can chat with your Google+ contacts through instant messaging, similar to sending a text with the Messages app.

1. Touch  > **Messenger** in the **Google+** app or touch from the Home Screen  > **Messenger**.
2. Touch  to create a new message.
3. If you touched  at the top, touch  to add recipients. They can be contacts or circles.
4. Enter the message.
5. Touch  to send the message.

**TIP:** Touch  > **Hangouts** to hold video chat with your friends.

## Checking Photos

You can see your own photo albums and those shared by other users.

Touch  > **My photos** in the **Google+** app to see all available albums.

## Checking and Managing Your Profile

1. Touch  > **Profile** in the **Google+** app.
2. Swipe up or down to see your posts and personal info.  
Touch  and you can change your profile photo.

# Browser

Use **Browser** to view web pages and search for information.

## Opening the Browser

Touch  in the Home Screen and select **Browser** to start this function.

Browser also opens when you touch a web link - for example, in an email or a text message.

## Open a Web Page or Search the Web

When you open **Browser**, the last web page you were viewing is displayed. If you have not used **Browser** recently, your home page opens. You can switch to another web page by doing the following.

1. Touch the address box at the top of the web page. If the address box isn't visible, swipe down a little to show it.
2. Enter the address (URL) of a web page. Or enter terms you want to search for. As you enter text, your web search engine makes suggestions of web pages and queries. You can also touch the microphone icon  to search by voice.
3. Touch a suggestion or touch **Go** on the keyboard.  
If you touch a suggested page or enter an address and touch **Go**, that web page opens. If you touch a suggested query, your web search engine opens with the results.

**TIP:** Touch the **X** to the left of the address box if you want to stop opening the page.

## Set the Homepage

Your home page opens when you open a new browser window, and when you start **Browser** after restarting your phone or after not using it for a while.

1. Open the page you want to set as your home page.
2. Touch  > **Settings** > **General** > **Set homepage**.
3. Touch **Current page** or one of the following options.
  - ▶ **Blank page:** Open browser windows without opening a web page by default. This can make new Browser windows open more quickly.

- ▶ **Default page:** Set the factory default URL as the homepage.
- ▶ **Most visited sites:** Every new browser window displays a list of your most visited sites for you to choose from.
- ▶ **Other:** Type a URL as the homepage.

## Get Information About the Current Page

Touch the page icon, to the left of the address box.

## Working With an Opened Page

While viewing most web pages, you can do the following operation.

- Scroll: Swipe the screen in any direction.
- Zoom out: Touch the screen with two fingers and pinch them together.
- Zoom in: Touch the screen with two fingers and spread them apart.
- Go back: Touch  to return to the page you've viewed previously in the same window.
- Go forward: Touch  > **Forward**.
- Refresh the page: Touch  > **Refresh**. Or touch the address box and then touch .
- Find text on the page: Touch  > **Find on page** and type the terms you search for.
- Send the page URL to friends: Touch  > **Share page** and select how you want to send the URL.
- Follow a link: Touch a link on the web page to open it.
- Save the page for offline reading: Touch  > **Save for offline reading**. You can touch  > **Bookmarks** > **SAVED PAGES** to read them.

### TIPS:

- Some web sites may redirect you to the mobile version of their web pages, which mostly do not support scrolling or zooming. If you want to view the desktop version, touch  and check **Request desktop site**.
- Besides links, **Browser** also recognizes some phone numbers, addresses, and similar information for you to act on. Try touching them and see what happens.

## Using Multiple Browser Windows

You can open several browser windows at once and switch between multiple web pages.

### To open a new browser window:

1. Touch the tabs icon  to the right of the address box.
2. Touch **+** at the top right of the screen. A new browser window opens and the homepage is loaded.

### To switch between windows:

1. Touch the tabs icon  to the right of the address box.
2. Swipe vertically to scroll through the list of opened tabs.
3. Touch the thumbnail of the window you want to open.

**TIP:** Swipe a thumbnail horizontally or touch its **X** to close the window.

### To use incognito window for privacy browsing:

Pages you view in incognito windows won't appear in your browsing history or search history. No trace will be left on your phone once you close the window.

1. Touch the tabs icon  to the right of the address box.
2. Touch  **> New incognito tab.**

## Downloading Files

Touch and hold an image or a link to a file or to another webpage. In the menu that opens, touch **Save image** or **Save link**.

The downloaded files are saved to your SD card. You can view or open them in the **Downloads** app (  **> Downloads**).

## Using Bookmarks

Save web URLs as bookmarks to open them easily in the future.

To open a bookmark, touch  **> Bookmarks** in a browser window and then touch the bookmark.

## Bookmark a Web Page

1. Open the web page.
2. Touch  > Save to bookmarks.
3. Edit the bookmark label and address if necessary, or choose a different account.  
Touch the name beside **Add to** to change the place where the bookmark will be stored.
4. Touch **OK**.

## Edit a Bookmark

1. Touch  > Bookmarks.
2. Touch and hold the bookmark to edit.
3. Touch Edit bookmark.
4. Edit the label, address, account, or location of the bookmark in the dialog that opens.
5. Touch **OK**.

**NOTE:** Preinstalled bookmarks may not be edited.

## Delete a Bookmark

1. Touch  > Bookmarks.
2. Touch and hold the bookmark to delete.
3. Touch Delete bookmark.
4. Touch **OK**.

**NOTE:** Preinstalled bookmarks may not be deleted.

## Changing Browser Settings

You can configure a number of Browser settings to customize the way you browse the web, including several that you can use to control your privacy.

To open the Browser settings screen, touch  > **Settings**.

# Maps, Navigation, Local, and Latitude

## Activating Location Services

To use **Navigation**, **Local**, **Latitude**, and find your location on Google Maps, you must have location services turned on on your phone.

1. Touch  >  > Settings > Location services.
2. Select the location options you want to use.

Check **Google's location service** to use Wi-Fi and mobile networks to determine your approximate location; check **GPS satellites** to use GPS satellites to determine your location.

## Getting Your Location

1. Touch  in the Home Screen and select **Maps**.
2. Touch  at the top right.

The map centers on a blue blinking dot that indicates your location.

## Searching for a Location

1. Touch  in the Home Screen and select **Maps**.
2. Touch  .
3. Enter the place you're looking for in the search box at the top. You can enter an address, a city, or a type of business or establishment, for example, "museums in Shanghai." As you enter information, suggestions from your previous searches and from popular searches appear in a list below the search box. You can touch a suggestion to search for it.

**TIP:** You can also touch  beside the search box to use voice search.

4. Touch the search key on the keyboard. Search results appear as lettered balloons on the map.
5. Touch a balloon to open a a label with summary information about the location.
6. Touch the label to open a screen with more information, as well as options for obtaining directions and more.

## Getting Directions to Your Destination

Maps can provide directions for travel by foot, public transportation, or car.

1. Touch  in the Home Screen and select **Maps**.
2. Touch  at the bottom.
3. Enter a start and end point and select the mode of transportation (car, public transit, or walking). If you have enabled My Location, this will appear in the start point field by default.
4. Touch **GET DIRECTIONS**. The directions to your destination are marked on the map. Touch the left or right arrow to see the direction step by step. You can also touch **DIRECTIONS LIST** to see your route displayed in a list.

**NOTE:** Touch  > **Navigation** from the Home Screen to use Google Maps Navigation (beta) and get turn-by-turn voice directions.

## Searching for Local Places

Google Local app helps you find all kinds of businesses and establishments around you. You can rate these places and get recommendations

1. Touch  in the Home Screen and select **Local**. Or from the **Maps** app, touch the top left of the screen and select **Local**.
2. Wait while you are being located. Your location, when found, is shown at the top.
3. Select a place category and the information of that type of place near you will be displayed.

You can also use the  button at the top to find the place you need.

**NOTE:** Touch  > **Add a search** to add new place categories.

4. Tap a result you are interested in and check out the details and reviews about that place. You can also see the place on **Maps**, find out how to get there, give that place a call, add your rating and review, and more.

## Sharing Location

Google Latitude lets you and your friends view each others' locations on maps and share status messages with each other.

Touch  in the home screen and select **Latitude** to start location reporting and sharing. For first time use, touch  > **Location settings** and check **Report from this device** and **Enable location sharing**. You can then do the following operations

- Touch  to refresh friends' status.
- Touch **MAP VIEW** to see friends on **Maps**. You can touch the left/right arrow to switch between each friends and yourself.
- Touch  to add new friends to Latitude from contacts, via email addresses, or from suggested friends.
- Touch  to show or hide stale friends, who haven't updated their location with you for a while.
- Touch  > **Location settings** to change Latitude settings.

# Google Search, Voice Search, and Voice Actions

You can search for information on the web or on your phone using Google Search. You can also search the web or perform certain tasks by speaking.

## Searching With Text

1. Start the **Search** app in one of the following ways.
  - ▶ Touch  in the Home Screen and select **Search**.
  - ▶ Touch the Google Search box at the top of the Home Screen.
2. Enter the terms you want to search for and touch the search key on the keyboard, or touch a search suggestion.

## Searching by Speaking

1. Touch the microphone icon to the right of the search box.
2. Speak the terms you want to search for. When you're finished speaking, your speech is analyzed and the search is initiated.

If Google Search didn't quite understand what you said, you are presented with a list of similar-sounding terms. Touch the correct term to start the search.

## Using Voice Actions

1. Touch the microphone icon to the right of the search box.
2. Speak the voice action you want to use. For example, say 'send a text'. Your speech is analyzed before the action is initiated.
3. Some voice actions need you to complete by speaking or typing more information. For example, a **send text** window appears after you say 'send a text'. You need to enter the recipient and message text by typing or speaking.

## Changing Search and Voice Search Settings

Open the **Search** app and touch  > **Settings** to set Searchable items, or Google search options.


To set Voice Search settings, touch in the Home Screen the  > **Settings** > **Language & input** > **Voice Search**.

# Camera

You can take photos and record videos. Photos and videos are stored to the phone's internal storage the external microSD card. You can copy them to your computer or access them in the **Gallery** app.

## Capturing a Photo

1. Touch  in the Home Screen and select **Camera**, or fully press the **Camera Key**.
2. Aim the camera at the subject and make any necessary adjustment.

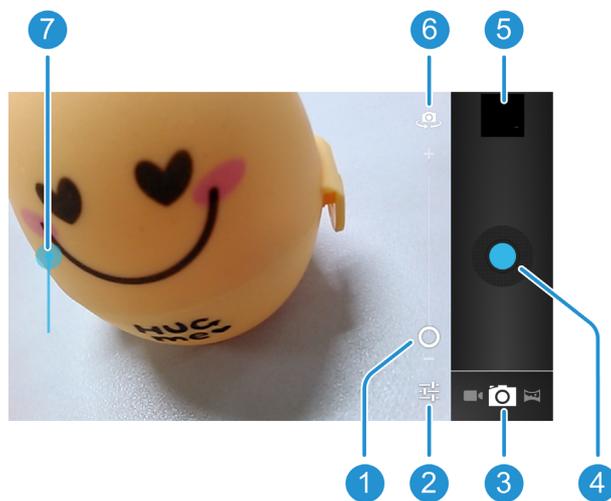

Number	Function
1	Hold the circle and slide to zoom in or out.
2	Change the camera settings.
3	Switch to the camcorder or panorama camera.
4	Capture a photo.
5	View photos and videos you have captured.
6	Switch between the front camera and the back camera.
7	Hold the blue dot and slide to adjust brightness.

3. If **Touch AF/AEC** is turned on in camera settings, touch the area where you want the camera to focus. Green brackets appear around the area you touched.
4. Lightly touch the blue button  , or fully press the **Camera Key**.

## Customize Camera Settings

Before taking a photo, you can touch  to open the following camera setting options. (Some options may not be available for the front camera.)

<p>Store location</p>  or 	<p>Include the location of each photo you take, using the phone's GPS.</p>
<p>Flash mode</p>  ,  , or 	<p>Turn on / off flash, or use auto flash.</p>
<p>White balance</p>  ,  ,  ,  , or 	<p>Select how the camera adjusts colors in different kinds of light, to achieve the most natural-looking colors for your shots. Or allow the camera to adjust the white balance automatically.</p>
<p>Exposure </p>	<p>Adjust the exposure. To let the camera set the exposure automatically, touch 0.</p>
<p>Scene mode </p>	<p>Use predefined settings for your shooting conditions and subjects.</p>
<p>Camera settings</p> 	<p>Set the picture size, focus mode, touch AF (automatic focus) / AEC (automatic exposure control), color effect, picture quality, contrast, saturation, sharpness, auto exposure, composition line, timing photo, interval mode, shutter tone, or restore default camera settings.</p>


## Capturing a Panoramic Photo

You can take wide panoramic photos in panorama mode.

1. Touch  in the home screen and select **Camera**.
2. Touch  >  to switch to panorama mode.
3. Touch  to start capturing the photo.
4. Slowly move the phone in any direction.
5. Touch  when you reach the end point of the panoramic photo.

## Recording a Video

1. Touch  in the Home Screen and select **Camera**, and then touch the camera icon to switch to the camcorder.
2. Aim the camera at the subject and make any necessary adjustment.

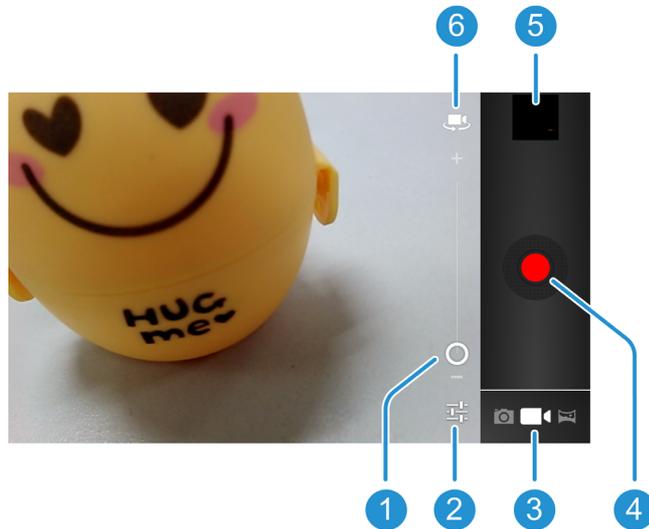

Number	Function
1	Hold the circle and slide to zoom in or out.
2	Change the camcorder settings.
3	Switch to the camera or panorama camera.
4	Start or stop recording a video.
5	View photos and videos you have captured.
6	Switch between the front camera and the back camera.

3. Touch the red button  or press the **Volume Up** or **Volume Down Key** to start recording.
4. Touch  or press the **Volume Up** or **Volume Down Key** to stop recording.

**TIP:** While the recording is in progress, you can touch the screen to save the frame as a separate photo.

## Customizing Camcorder Settings

Before recording a video, you can touch  to open the following camcorder setting options. (Some options may not be available for the front camera.)

<p>Store location</p>  or 	<p>Include the location of each photo you take, using the phone's GPS.</p>
<p>Flash mode</p>  ,  , or 	<p>Turn on / off flash, or use auto flash.</p>
<p>White balance</p>  ,  ,  ,  , or 	<p>Select how the camera adjusts colors in different kinds of light, to achieve the most natural-looking colors for your videos. Or allow the camera to adjust the white balance automatically.</p>
<p>Time lapse interval</p> 	<p>Set the time interval for recording time lapse videos, or turn off this feature to record normal videos.</p>
<p>Video quality</p> <p><b>QVGA, QCIF, CIF, VGA, WVGA, 480p, 720p, 1080p</b></p>	<p>Adjust video quality.</p>
<p>Camera settings</p> 	<p>Select color effects, or restore default camera settings.</p>

# Gallery

## Opening Gallery

Touch  in the Home Screen and select **Gallery** to view albums of your pictures and videos.

## Working With Albums

When you open Gallery, all pictures and videos on your phone are displayed in a number of albums.

### To view album contents:

Touch an album to view the pictures and videos it contains.

### To share albums:

1. Touch and hold an album until it is selected.
2. Touch more albums that you want to share.
3. Touch  at the top of the screen and select how you want to share the albums.

### To view details of an album:


1. Touch and hold an album until it is selected.
2. Touch  > **Details**.

### To delete albums:

1. Touch and hold an album until it is selected.
2. Touch more albums that you want to delete.
3. Touch  > **Delete**.

## Working With Pictures

Touch a picture in an album to view the picture in full screen. Double-touch the picture, or pinch two fingers together or spread them apart to zoom out or in. Slide left or right to view other pictures and videos in the album.

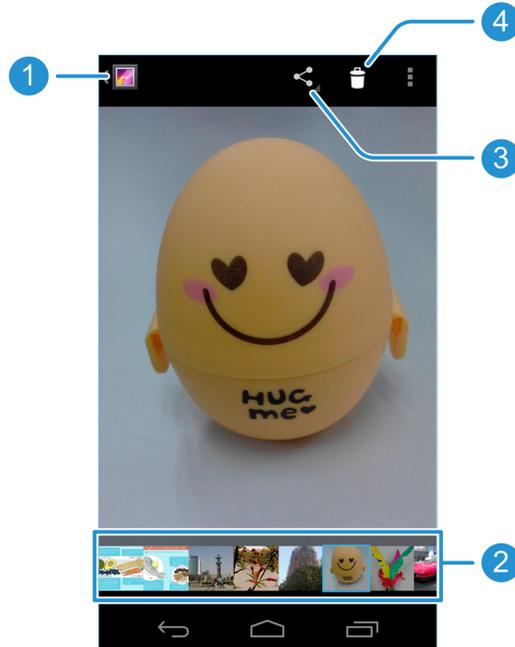

Number	Function
1	Touch to return to the album, where all its contents are displayed in a grid.
2	Thumbnails of all the pictures and videos in the album. Swipe horizontally to see more; touch a thumbnail to view it in full screen.
3	Share the picture.
4	Delete the picture.

Touch  to browse the album contents in a slideshow, rotate the picture, view picture file detail, set it as contact icon or wallpaper, or edit it.

**NOTE:** All the options may not be available for certain albums or pictures.

## Retouch Your Pictures

You can edit any photos you took and some other pictures in **Gallery**. The changed picture is saved in the **Edited** album, while the original image is never affected.

1. Touch  > **Edit** while viewing a picture in full screen to open the Edit interface.

2. Touch the icons along the bottom of the screen to edit the picture.

	Add fill light, emphasize highlight or shadows, or set to auto-fix.
	Apply effects such as posterizing, lomography, documentary, and film grain.
	Apply color effects such as warmth, saturation, B&W, sepia, negative, as well as other effects including doodling on the picture.
	Crop, fix red eye, straighten, rotate, flip, or sharpen the picture.

3. To undo or redo the changes you've made to the picture, touch  or  at the top of the screen.

4. Touch **SAVE** to save the new picture to the **Edited** album.

## Share Your Pictures

1. Touch an album in the gallery and then touch a picture.
2. Touch  at the top of the screen. If the icon is invisible, touch the screen first.
3. Select how you want to share the picture.

## Working With Videos

### Play Videos

Touch an album in the gallery and then touch the thumbnail of a video to play it.

Touch the video to view the playback controls.

### Share Videos

1. Touch an album in the gallery and then touch the thumbnail of a video.
2. Touch  at the top of the screen. If the icon is invisible, touch the screen first.
3. Select how you want to share the video.

# Music

Touch  in the Home Screen and select **Music** to play audio files stored on your phone. **Music** supports a wide variety of audio formats, so it can play music you purchase from online stores, music you copy from your CD collection, and so on.

## Copying Music Files to Your Phone

Before using Music, you need to copy audio files from your computer to your phone's memory card. See [Connecting to Networks and Devices - Connecting to Your Computer via USB](#) for details on establishing the connection.

Use the computer to copy music and other audio files into the memory card. You can use folders to organize your music files.

## Viewing Your Music Library

Touch  in the Home Screen and select **Music** and your music library is displayed. All your audio files are cataloged, according to the information stored in the files.

Touch the tabs at the top of the screen to view your music library organized by **Artists**, **Albums**, **Songs**, or **Playlists**.

**NOTE:** If an audio file is being played, its summary information is displayed at the bottom of the music library screen. Touch the summary area to open the playback screen.

## Set a Song as the Default Ringtone

The song will be used as the ringtone for all incoming calls, except those from contacts you have assigned special ringtones to (see [People - Editing Contacts - Set a Ringtone for a Contact](#)).

1. Touch  in the Home Screen and select **Music** to see the music library.

**NOTE:** If you are in the playback screen, touch  > **Library** to return to the music library.

2. Touch and hold a song in any list.

3. In the menu that opens, touch **Use as phone ringtone**.

**TIP:** If the song is being played, you can touch  > **Use as ringtone** in the playback screen.

## Delete a Song

1. Touch  in the Home Screen and select **Music** to see the music library.

**NOTE:** If you are in the playback screen, touch  > **Library** to return to the music library.


2. Touch and hold a song in any list.

3. In the menu that opens, touch **Delete** > **OK**.

## Playing Music

Touch a song in the music library to listen to it. The following playback screen appears.

Touch  > **SRS Setting** to turn on/off SRS sound effects.

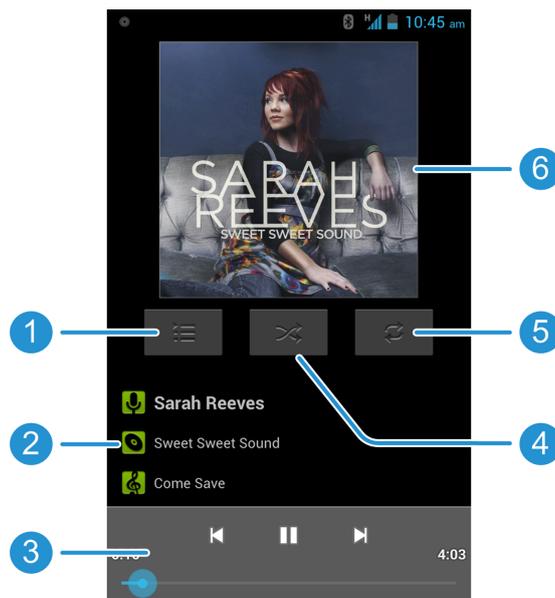

Number	Function
1	Touch to open the current playlist.
2	Song, album, and artist information.
3	Playback control. Skip songs or pause and resume playback. Drag the progress bar to jump to any part of the song.
4	Touch to play the current playlist in shuffle mode, where tracks are played in random order.

5	Touch to toggle repeat mode: no repeat, repeat the current song, or repeat the current playlist.
6	Album artwork.

## Managing Playlists

Create playlists to organize your music files into sets of songs, so that you can play the songs you like in the order you prefer.

### Create a Playlist

1. Touch and hold the song in the music library.
2. In the menu that opens, touch **Add to playlist**.
3. Touch **New**.
4. Type the playlist name and touch **Save**.

The playlist is created and the song you selected is added to the playlist.

### Add a Song to a Playlist

1. Touch and hold the song in the music library.
2. In the menu that opens, touch **Add to playlist**.
3. Touch the name of the playlist you want the song added to.

The song is added to the playlist.

**TIP:** Want to rearrange the songs in a playlist you create? Open the playlist and touch and hold  in front of a song. Drag up or down to change its order in the playlist.

### Remove a Song From a Playlist

1. Open a playlist.
2. Touch and hold the song you want to remove.
3. In the menu that opens, touch **Remove from playlist**.

### Delete or Rename a Playlist

1. Touch the **Playlists** tab in the music library to see all the playlists.
2. Touch and hold a playlist and touch **Rename** or **Delete** in the menu that opens.

**NOTE:** These options may not be available for certain automatically created playlists, such as **Recently added**.

# Play Music

The **Play Music** application (  ) works with Google Music, Google's online music store and streaming service. You can stream via mobile data or Wi-Fi and listen to you favorite songs that you've added to your online Google Music library. You can also play audio files you've copied directly to your phone from a computer.


**NOTE:** The availability of Google Music is dependent on your region. If it is not available, or you don't have a mobile data or Wi-Fi connection, you can only play music stored on your phone.

## Playing Your Music

Touch  in the Home Screen and select **Play Music**. If you are prompted, select an account to access its online music library.

The app searches your online library and your phone for music and playlists before displaying your combined music library, organized by **Recent**, **Artists**, **Albums**, **Songs**, **Playlists**, and **Genres**. To changes views of your library, swipe left or right when holding the phone upright, or touch the view name at the top left of the screen when holding the phone on its side.

Touch a song to play it. When the song is playing, touch the album artwork to display more options.

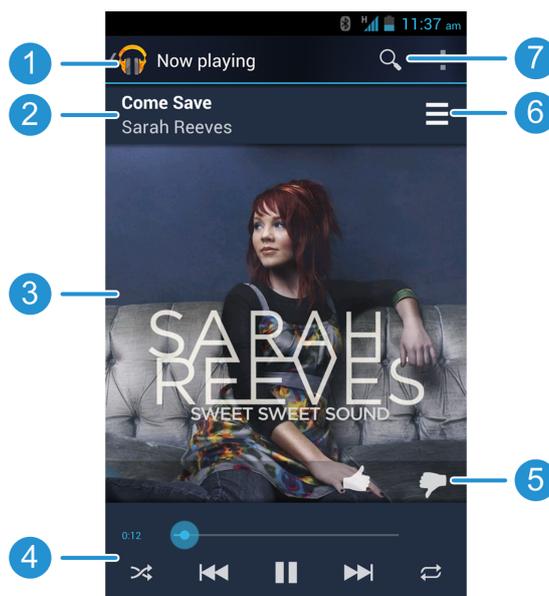

Number	Function
1	Touch to return to the library.
2	Song and artist names.
3	Album artwork.
4	Playback control. Skip songs, pause and resume playback, use shuffle or repeat. Drag the progress bar to jump to any part of the song.
5	Rate the song.
6	Touch to see the current playlist (queue).
7	Search for music.

You can still control the music when you are not in the playback screen.

- In the **Play Music** app, touch the Now Playing bar at the bottom (portrait mode) of the screen to restore the playback screen.
- In other apps, flick down the notification panel. Touch the song title to restore the playback screen, or just pause/ resume playback, skip to the next song, or stop the playback.
- When the screen is locked, the song information, album cover as well as playback control is displayed on top of the screen. You can pause/resume playback or skip songs.

## Managing Playlists

Create playlists to organize your music files into sets of songs, so that you can play the songs you like in the order you prefer.

### To create a playlist or add a song to a playlist:

1. Touch and hold the song or touch  next to the song, and select **Add to playlist**.
2. Touch **New playlist** to create a playlist and add the song to it, or touch an existing playlist to add the song to it.

### To rearrange songs in a playlist:

1. Open a playlist in the **Playlists** tab of the music library.
2. Touch and hold the small grid in front of a song.
3. Drag the grid up or down to change its order in the playlist.

**To remove songs from a playlist:**

1. Open the playlist in the **Playlists** tab of the music library.
2. Touch and hold the song or touch  next to the song you want to remove.
3. Select **Remove from playlist**.

**To rename or delete a playlist:**

1. Swipe to the **Playlists** tab in the music library to see all the playlists.
2. Touch and hold a playlist or touch  next to the playlist.
3. Touch **Rename** or **Delete** in the menu that opens.

# Videos

Use the video player to play various kinds of videos.

## Opening the Video Library

Touch  in the Home Screen and select **Videos** to view your video library.

## Playing and Control Videos

Touch a video in the video library to play it. Rotate the phone on its side to watch the video in landscape view.

- Touch the video to show the playback controls. You can pause and resume the playback, or jump to any part of the video.
- Touch  at the top left of the screen to stop the video and return to the video library..
- Touch  > **SRS Setting** to turn on/off SRS sound effects.

## Managing Video Files

### To delete videos:

1. Touch  in the Home Screen and select **Gallery** and open the album that contains the video.
2. Touch and hold the thumbnail of the video you want to delete.
3. To remove more videos in the album, touch them.
4. Touch  > **Delete**.

### To share videos:

1. Touch  in the Home Screen and select **Videos**.
2. Touch a video in the video library. The video starts to play.
3. Touch  and select how you want to share them.

### To view details of a video:

1. Touch  in the Home Screen and select **Gallery** and open the album that contains the video.
2. Touch and hold the thumbnail of the video.
3. Touch  > **Details**.

# FM Radio

With the FM radio, you can search for radio channels, listen to them, and save them on your phone. Note that the quality of the radio broadcast depends on the coverage of the radio station in your area. The wired headset that comes with your phone works as an antenna, so always connect the headset when using the radio. When you receive an incoming call while listening to the radio, the radio will be turned off.

## Scanning and Saving Channels

1. Touch  in the Home Screen and select **FM Radio**.
2. Touch  > **Scan & save all channels**. All previously saved favorite channels will be removed.

The favorite channels are displayed at the bottom of the screen. Swipe left or right to see more.

**NOTE:** The first time you open **FM Radio**, your phone scans for all available channels and saves them automatically.

## Listening to FM Radio

1. Touch  in the Home Screen and select **FM Radio**.
2. Touch one of the favorite channels at the bottom.

You can also swipe the dial knob above the favorite channels left or right to switch to the adjacent channels.

**TIP:** Touch  and check **Speaker** to listen to the radio programs through the phone speaker.

## Adding a Radio Station to Favorites

1. Touch  in the Home Screen and select **FM Radio**.
2. Touch  > **Tune**.
3. Touch the up and down arrows to adjust the frequency and touch **Set**.
4. Touch and hold the frequency digits and drag it down to the favorite channels area. Or touch  > **Add to favorites**.

The new channel is added to the favorite channels, which are sorted in numerical order.



## Other Options and Settings

### To remove a channel from favorites:

1. Touch the channel you want to remove from favorites.
2. Touch  > **Remove from favorites**.

### To turn off FM radio automatically:

Touch  > **Sleep Timer** and select the time you want to turn off the radio.

A count-down clock appears above the frequency and the radio is turned off when the clock counts down to 0:00.

### To turn off FM radio immediately:

Touch  at the top left of the screen.

### To set your radio region:

FM radio frequency ranges differ in different regions.

Touch  > **World region** to select the region you are in.

**NOTE:** If you change the region setting, the favorite channels are cleared.

# Sound Recorder

**Sound Recorder** enables you to record voice memos and listen to them whenever you like.

## Recording a Voice Memo

1. Touch  in the Home Screen and select **Sound Recorder**.
2. Touch  to start recording.
3. Touch  to stop recording.
4. Touch  to replay the recording. If you are satisfied with it, touch **OK** to save, or touch **Discard** to delete.

## Playing a Voice Memo

1. Touch  > **My recordings** at the top right of the screen to see all recordings.
2. Touch the title of a memo to play it.

**NOTE:** You can also touch  in front of the memo to share or delete it.

## More Apps

### Alarm

Set alarms or turn the phone into a bedside clock.

#### Setting a New Alarm

1. Touch  in the Home Screen and select **Alarm**.
2. Touch a default alarm to configure it, or touch **+** at the bottom of the screen to create a new alarm.
3. Touch **Turn alarm on** and set up the alarm options, such as time, repeat, and ringtone.
4. Touch  to save and exit.

#### Using Bed Clock

Bed clock displays the current time and the next alarm.

1. Touch  in the Home Screen and select **Alarm**.
2. If necessary, touch  > **Bed Clock Preferences** in the **Alarm** screen to set up bed clock options.

<b>Enable bed clock</b>	Turn on or off the bed clock function.
<b>Bed clock never sleeps</b>	Keep the bed clock screen turned on when charging the phone.

3. Touch  to return to the **Alarm** screen. Then touch  > **Bed Clock** to open the bed clock screen.

### Calculator

Touch  in the Home Screen and select **Calculator**.

**TIP:** Touch  or  , or swipe left or right to switch between different panels. You can also hold the phone on its side to see all calculator buttons.

### Chrome

Touch  in the Home Screen and select **Chrome** to use Google Chrome to browse the Internet. When you sign in to the same Google Account with

Chrome on your phone and Chrome on your computer, you can also sync bookmarks, browsing history, and opened tabs.

## File Manager

Quickly access all of your images, videos, audio clips, and other types of files on your phone and the memory card.

Touch  in the Home Screen and select **File Manager**. Touch the folder name at the top of the screen to switch between the external microSD card storage and the internal phone storage.

## Full Share

Full Share offers a wireless solution to sharing media files among devices connected to the same Wi-Fi network. You can use this feature to easily access media content on different devices without having to transfer files.

### Sharing Media Files on Your Phone

1. Connect your phone to a Wi-Fi network.
2. Touch  in the Home Screen and select **Full Share**.
3. Touch  > **Settings** and check or uncheck **Share music**, **Share videos**, or **Share images**. Only checked types of files will be shared.
4. Check **Allow media sharing**.

Now your phone works as a media server and you can access the shared files from other devices that support Full Share and are connected to the same Wi-Fi network as your phone.

### Accessing Shared Files on Other Devices

After another device has shared its media contents while connected to a Wi-Fi network, you can access them with your phone.

1. Connect your phone to the same Wi-Fi network as the other device.
2. Touch  in the Home Screen and select **Full Share**.
3. Touch the **Media Server** tab. The other device should appear in the Server List.
4. Touch the device and select a category to access its contents.
5. Touch a file (and select a media render if prompted) to start playing it with the dedicated player for shared media contents.

You can also touch the checkboxes after the files to select multiple items and then touch the following button.

- ▶ Touch  (and select a media render if prompted) to play the selected files on the media render one by one.
- ▶ Touch  to add the files to the playlist. You can access them in the Playlist tab.
- ▶ Touch  to copy the files to a media server within the network.

## Mi-POP

Mi-POP keeps the onscreen navigation keys always at your fingertips and gives you larger screen area to play with. You no longer need to reach for , , , or  fixed at the bottom or top of the screen.

To enable Mi-POP, touch  in the Home Screen and select **Mi-POP**, and then check **Mi-POP**. The icon  should appear on the screen, replacing  at the bottom. Drag  freely to wherever your finger feels comfortable to reach. Drag  horizontally to display other buttons:  (replacing ) ,  (replacing ) , and  (replacing  ).

**TIP:** While Mi-POP is enabled, check **Hide the navigation bar** to hide the bottom keys and get more screen space.

## News and Weather

**News & Weather** offers weather forecasts and news stories about common topics. You can also customize the news topics that are displayed.

Touch  in the Home Screen and select **News & Weather**. Swipe left or right to view weather forecast and news headlines under different news topics.

Touch  to refresh news and forecast data, or to change the settings.

## Note pad

Touch  in the Home Screen and select **Note pad** to save and view your text notes.

Touch **ADD NOTE** to create a new note. Then enter your text and touch  to save it.

Touch a note to view its entire content. You can also delete, share it, or change its title.

## Software Update

Touch  in the Home Screen and select **Software update**. You can check your system's software status, check for updates, or change update settings.

## Task Manager

Touch  in the Home Screen and select **Task Manager** to view or stop applications.

- Touch  to end a running application, or touch an application to see its information and more options.
- Touch the **APPS** tab to manage all the apps on your phone.
- Touch the **RESOURCES** tab to view the real-time system resources information.

## Timer

Touch  in the Home Screen and select **Timer** to use stopwatch or time countdown.

Stopwatch allows you to record lap times, while countdown allows you to set a time and count down to 0.

## World Time

Touch  in the Home Screen and select **World Time** to check local time for cities around the world.

Touch **+** at the bottom to add a new city or country.

## YouTube

Touch  in the Home Screen and select **YouTube**.

You can watch YouTube videos or upload your own.

# Play Store

Touch  in the Home Screen and select **Play Store**. You can buy or rent music, books, movies, apps, and download them to your phone.

**NOTE:** The content you can access on the Google Play Store depends on your region and your service provider.

## Browsing and Searching for Apps

You can browse apps by category and sort them in different ways. Touch a top-level category, such as **Games** and touch the app from any subcategory. You can also search for apps using an app's name or description, or the developer's name. Just touch  and enter the search terms.

## Downloading and Installing Apps

When you find the app you are interested in through browsing or searching, touch it to open its details screen, where more information about the app is displayed.

1. Touch **Install** (free apps) or the price (paid apps) in the app details screen.
2. If the app is not free, you need to sign in to your Google Wallet account and select a payment method.
3. Touch **Accept & download** (free apps) or **Accept & buy** (paid apps) to accept the permissions for the app. Your app will start downloading immediately or once payment is successfully authorized.

## Managing Your Downloads

After you've downloaded and installed an app, you can rate it, view it in a list with your other downloaded apps, configure it to update itself automatically, and so on.

## View Your Downloaded Apps

1. On the Apps screen of Play Store, touch  > **My Apps**.
2. Your list of installed apps opens, you can touch one to rate it, uninstall it, request a refund, and so on.

## Uninstall an App

1. On the Apps screen of Play Store, touch  > **My Apps**.
2. Touch an app to open its details screen.
3. Touch **Uninstall > OK**.

# Settings

Touch  in the Home Screen and select **Settings**. The **Settings** app contains most of the tools for customizing and configuring your phone.

## Wireless and Networks

### Wi-Fi

Turn on or off Wi-Fi and configure your Wi-Fi connections. See [Connecting to Networks and Devices - Connecting to Wi-Fi](#).

### Bluetooth

Turn on or off Bluetooth and configure your Bluetooth connections. See [Connecting to Networks and Devices - Connecting to Bluetooth Devices](#).

### Data Usage

Touch the **ON/OFF** switch to turn on or off mobile data.

You can check how much data has been used during the time circle you set, set mobile data limit and warning, see what app has been using mobile data, or restrict background data for individual apps.

### Call

Customize the settings for phone calls. See [Phone Calls - Adjusting Your Call Settings](#).

### Airplane Mode

In the **Settings** app, touch **More** under Wireless & networks and check the box next to **Airplane mode**. All the phone's radios that transmit voice or data are turned off.

### VPN

Set up and connect to virtual private networks. See [Connecting to Networks and Devices - Connecting to Virtual Private Networks](#).

### Tethering and Portable Hotspot

Share your phone's mobile data connection with PCs or other devices via USB, Bluetooth, or Wi-Fi. See [Connecting to Networks and Devices - Sharing Your Mobile Data Connection](#).

## Wi-Fi Direct and Settings

Use Wi-Fi direct to share data between two devices via Wi-Fi directly. See [Connecting to Networks and Devices - Using Wi-Fi Direct](#).

## Mobile Networks

Control mobile data use, select mobile network and set access point names. See [Connecting to Networks and Devices - Connecting to Mobile Networks](#).

## Device

### Sound

Adjust volumes (see [Personalizing - Adjusting Volumes](#)), set up ringtone and notification sound (see [Personalizing - Changing Ringtone and Notification Sound](#)), turn on/off SRS sound enhancement, and select system sounds.

Touch **Silent mode** to turn off all sounds except media and alarm, or enable silent mode with vibration.

### Display

- **Brightness:** Set the brightness of the display.
- **Wallpaper:** Select a background image for the Home Screen.
- **Auto-rotate screen:** Allow or forbid the screen to rotate automatically when you rotate the phone.
- **Sleep:** Set the length of time of inactivity before the screen turns off.
- **Font size:** Set the font size of the text on the screen.

### Storage

Check memory information for your memory card and internal storage.

- **Unmount SD card:** Unmount the memory card from your phone so that you can safely remove the card while the phone is on.
- **Erase SD card:** Erase all data on your memory card and prepare it for use with your phone.

### Battery

Check how much power remains for the battery and what has been using the battery.

## Apps

See apps installed on your phone and manage them.

Touch an app in the **DOWNLOADED**, **ON SD CARD**, **RUNNING**, or **ALL** tab to see its information. You can stop the app, uninstall the app, clear data and cache, or move the app between the internal storage and the memory card.

**NOTE:** Not all applications can be moved or uninstalled.

## Connect to PC

Check **Ask me** to let the phone prompt you to select a connection type each time you connect the phone to a computer. If you uncheck **Ask me**, the default connection type is used, which you can set by touching **Connect type**.

See [Connecting to Networks and Devices - Connecting to Your Computer via USB](#).

## Personal

### Accounts and Sync

Manage your accounts and synchronization settings.

- Touch the **ON/OFF** switch to turn on or off auto-sync.
- Touch **ADD ACCOUNT** to sign in or create accounts on your phone.
- Touch an account to set the sync settings for that account. You can then touch  > **Sync now** to sync all checked items.
- Touch an account and then touch  > **Remove account** to remove the account and all information related to it from your phone.

### Location Services

Activate location services to determine your location. See [Maps, Navigation, Places and Latitude - Activating Location Services](#).

Select **Location & Google search** to improve Google search results and other services using your location information.

### Security

- **Screen lock:** Lock the screen with a long press gesture, a pattern, a PIN, or a password. See [Personalizing - Protecting Your Phone With Screen Locks](#).
- **Make pattern visible:** Show the pattern as you draw it.

- **Automatically lock:** Set the time needed for the lock protection to be activated after the screen turns off.
- **Power button instantly locks:** Check this option to let the lock to be activated as soon as you press the Power Key.
- **Vibrate on touch:** Vibrate as you draw the pattern or enter the PIN/password to unlock the phone.
- **Owner info:** Set the text that you may display on the lock screen.
- **Encrypt phone:** Encrypt your data on the phone to protect your privacy. See [Personalizing - Protecting Your Phone With Encryption](#).
- **Set up SIM/USIM card lock:**
  - ▶ **Lock SIM card:** Activate or deactivate the PIN lock to require PIN before accessing the SIM card.
  - ▶ **Change SIM PIN:** Change the PIN used to access the SIM card.
- **Make passwords visible:** Display passwords as you enter them.
- **Device administrators:** View or deactivate apps you have authorized to be phone administrators.
- **Unknown sources:** Tick the checkbox to permit installation of apps from sources other than the Play Store.
- **Trusted credentials:** Display trusted CA certificates.
- **Install from SD card:** Install certificates from the memory card.
- **Clear credentials:** Delete all certificates.

## Language and Input

- **Language:** Select a language and region for your system.
- **Personal dictionary:** Add new words to the phone's dictionary or remove words from the dictionary. The words you add are used for spelling check and word suggestion.
- **KEYBOARD & INPUT METHODS:** Configure text input settings. See [Knowing the Basics - Entering Text - Touch Input Settings](#).
- **Voice Search:**
  - ▶ **Language:** Select the language you use when entering text by speaking or searching by speaking.
  - ▶ **SafeSearch:** You can use Google SafeSearch filtering to block some results when you use Google search by voice.

- ▶ **Block offensive words:** Replace offensive words with asterisk (\*) when you use Google voice recognition to transcribe your voice into text.
- **Text-to-speech output:**
  - ▶ **PREFERRED ENGINE:** Select the speech synthesis engine you want to use or change its settings.
  - ▶ **Speech rate:** Select how quick you want the synthesizer to speak.
  - ▶ **Listen to an example:** Play a brief sample of the speech synthesizer, using your current settings.
- **Pointer speed:** Select how fast the pointer/mouse should scroll when you connect the device to a trackpad or mouse accessory.

## Backup and Reset

- **Back up my data:** Back up app data, Wi-Fi passwords, and other settings to Google servers after you sign in to your Google account.
- **Automatic restore:** Restore previously backed up settings and data when you reinstall an app.
- **Factory data reset:** Reset your phone to factory status. All your personal data from the phone's internal storage will be erased. You can also erase the data on the memory card during the process.

## System

### Date and Time

Set date, time, time zone, and how date and time are displayed. You can also use network-provided data.

### Accessibility

Configure accessibility plug-ins on your phone, such as using **TalkBack** for low-vision users.

### Developer Options

**Developer options** contains settings that are useful for developing Android applications.

### About Phone

View phone status and legal information. You can also copy an update package to the storage card and update the phone software.

# Troubleshooting

If you encounter problems while using the phone, or if it performs abnormally, you can refer to the chart below. If your particular problem cannot be resolved using the information in the chart, contact the dealer where you purchased the phone.

<b>Problem</b>	<b>Possible causes</b>	<b>Possible solution</b>
Poor reception	The network signal is too weak at your current location, for example, in a basement or near a tall building, because wireless transmissions can not effectively reach it.	Move to a location where the network signal can be properly received.
	The network is busy at the current time (for example, during peak times, there may be too much network traffic to handle additional calls).	Avoid using the phone at such times, or try again after waiting a short time.
	You are too far away from a base station for your service provider.	You can request a service area map from your service provider.
Echo or noise	Poor network trunk quality on the part of your service provider.	End the call and dial again. You may be switched to a better-quality network trunk or phone line.
	Poor local telephone line quality.	End the call and dial again. You may be switched to a better-quality network trunk or phone line.
Unable to select certain features	Your service provider does not support these features, or you have not applied for services that provide these features.	Contact your service provider.

Battery not charge	The battery or battery charger is damaged.	Contact the dealer.
	The phone's temperature is below 0°C or higher than 45 °C.	Adjust the battery charging environment to avoid extremes of temperature.
	Poor contact between the battery and charger.	Check all connectors to make sure all connections have been properly made.
Shortened standby time	The standby time is related to your service provider system configuration. The same phone used with different service providers' systems will not provide exactly the same length of standby time.	If you are located in an area where signaling is weak, temporarily power off the phone.
	The battery is depleted. In high-temperature environments, battery life will be shortened.	Use a new battery.
	If you are not able to connect to the network, the phone will continue to send out signals as it attempts to locate a base station. Doing so consumes battery power and will consequently shorten standby time.	Change your location to one where the network is accessible, or temporarily turn off your phone.
Cannot switch your phone on	Battery power has been depleted.	Recharge the phone's battery.
(U)SIM card error	(U)SIM card malfunction or damage.	Take the (U)SIM card to your service provider for testing.
	(U)SIM card inserted improperly.	Insert the (U)SIM card properly.

(U)SIM card error	Debris on the (U)SIM card contacts.	Use a soft, dry cloth to clean the (U)SIM card contacts.
Unable to connect to the network	(U)SIM card invalid.	Contact your service provider.
	You are not within the network's service area.	Check the service area with your service provider.
	Poor signal.	Move to an open space, or if you are inside a building, move closer to a window.
Cannot answer incoming calls	You have activated the <b>Call barring</b> feature.	Go to <b>Settings &gt; Call &gt; Call Barring Settings</b> , and then select <b>Deactive All</b> .
You cannot make outgoing calls.	You have activated the <b>Call barring</b> feature.	Go to <b>Settings &gt; Call &gt; Call Barring Settings</b> , and then select <b>Deactive All</b> .
	You have activated the <b>Fixed dial numbers</b> feature.	Go to <b>Settings &gt; Call &gt; Fixed Dialing Numbers</b> and disable it.
PIN Code blocked	You have entered an incorrect PIN code three consecutive times.	Contact your service provider. If the service provider provides the (U)SIM card's PUK code, use the PUK code to unlock the (U)SIM card.
Unable to enter information into the phone book	The phone book's memory is already full.	Delete unnecessary data from the contacts.

# For Your Safety

## General Safety

	Don't make or receive handheld calls while driving. And never text while driving.		Don't use at petrol stations.
	Keep your phone at least 15 mm away from your ear or body while making calls.		Your phone may produce a bright or flashing light.
	Small parts may cause a choking.		Don't dispose of your phone in fire.
	Your phone can produce a loud sound.		To prevent possible hearing damage, do not listen at high volume levels for long periods.
	Keep away from pacemakers and other electronic medical devices.		Avoid contact with anything magnetic.
	Switch off when asked to in hospitals and medical facilities.		Avoid extreme temperatures.
	Switch off when told to in aircrafts and airports.		Avoid contact with liquids. Keep your phone dry.
	Switch off when near explosive materials or liquids.		Don't take your phone apart.
	Don't rely on your phone for emergency communications.		Only use approved accessories.

## Radio Frequency (RF) Exposure

### General Statement on RF Energy

Your phone contains a transmitter and a receiver. When it is ON, it receives and transmits RF energy. When you communicate with your phone, the sys-

tem handling your call controls the power level at which your phone transmits.

## **Specific Absorption Rate (SAR)**

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The guidelines use a unit of measurement known as Specific Absorption Rate, or SAR. The SAR limit for mobile devices is 2 W/kg and the highest SAR value for this device when tested at the ear was 0.997 W/kg\*. As mobile devices offer a range of functions, they can be used in other positions, such as on the body as described in this user guide\*\*.

As SAR is measured utilizing the device's highest transmitting power, the actual SAR of this device while operating is typically below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum power required to communicate with the network.

\* The tests are carried out in accordance with EN 50360, EN 62311, EN 62209-1, EN 62209-2.

\*\* Please see body worn operation.

## **Body Worn Operation**

Important safety information regarding radio frequency radiation (RF) exposure: To ensure compliance with RF exposure guidelines the phone must be used with a minimum of 15 mm separation from the body.

Failure to observe these instructions could result in your RF exposure exceeding the relevant guideline limits.

## **Limiting Exposure to Radio Frequency (RF) Fields**

For individuals concerned about limiting their exposure to RF fields, the World Health Organization (WHO) provides the following advice:

Precautionary measures: Present scientific information does not indicate the need for any special precautions for the use of mobile phones. If individuals are concerned, they might choose to limit their own or their children's RF exposure by limiting the length of calls, or using 'hands-free' devices to keep mobile phones away from the head and body.

Further information on this subject can be obtained from the WHO home page <http://www.who.int/peh-emf> (WHO Fact sheet 193: June 2000).

## **Regulatory Information**

The following approvals and notices apply in specific regions as noted. Please find the section Declaration of RoHS Compliance and CE DOC in the end of this manual.

## **Distraction**

### **Driving**

Full attention must be given to driving at all times in order to reduce the risk of an accident. Using a phone while driving (even with a hands free kit) can cause distraction and lead to an accident. You must comply with local laws and regulations restricting the use of wireless devices while driving.

### **Operating Machinery**

Full attention must be given to operating the machinery in order to reduce the risk of an accident.

## **Product Handling**

### **General Statement on Handling and Use**

You alone are responsible for how you use your phone and any consequences of its use.

You must always switch off your phone wherever the use of a phone is prohibited. Use of your phone is subject to safety measures designed to protect users and their environment.

- Always treat your phone and its accessories with care and keep it in a clean and dust-free place.
- Do not expose your phone or its accessories to open flames or lit tobacco products.
- Do not expose your phone or its accessories to liquid, moisture or high humidity.
- Do not drop, throw or try to bend your phone or its accessories.
- Do not use harsh chemicals, cleaning solvents, or aerosols to clean the device or its accessories.

- Do not paint your phone or its accessories.
- Do not attempt to disassemble your phone or its accessories, only authorized personnel can do so.
- Do not expose your phone or its accessories to extreme temperatures, minimum - [5] and maximum + [50] degrees Celsius.
- Please check local regulations for disposal of electronic products.
- Do not carry your phone in your back pocket as it could break when you sit down.

## Small Children

Do not leave your phone and its accessories within the reach of small children or allow them to play with it.

They could hurt themselves or others, or could accidentally damage the phone.

Your phone contains small parts with sharp edges that may cause an injury or may become detached and create a choking hazard.


## Demagnetization

To avoid the risk of demagnetization, do not allow electronic devices or magnetic media close to your phone for a long time.

## Electrostatic Discharge (ESD)

Do not touch the SIM card's metal connectors.


## Antenna

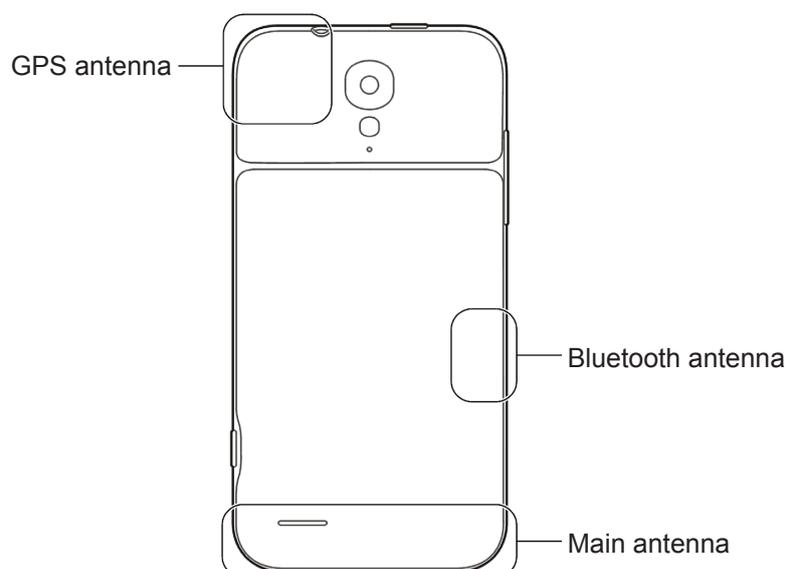

Do not touch the antenna unnecessarily.

## Normal Use Position

When placing or receiving a phone call, hold your phone to your ear, with the bottom towards your mouth.

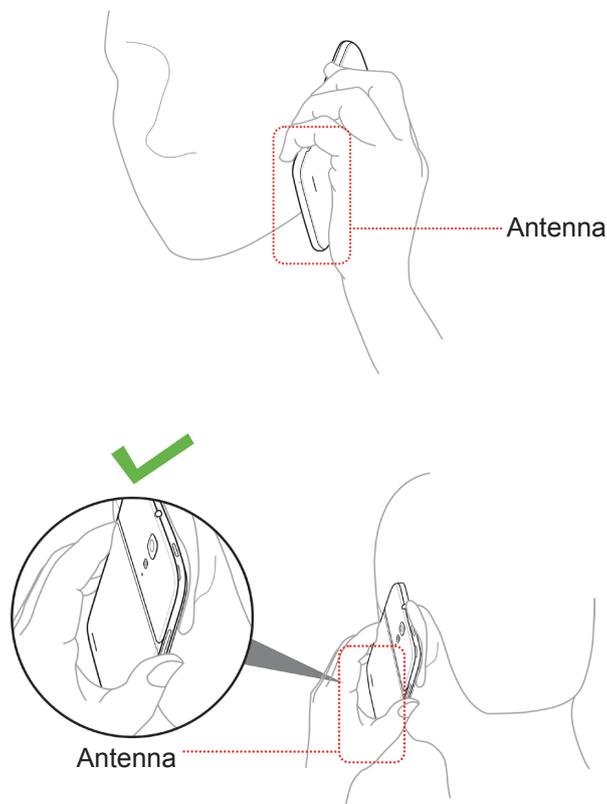

## Air Bags

Do not place a phone in the area over an air bag or in the air bag deployment area as an airbag inflates with great force and serious injury could result. Store the phone safely before driving your vehicle.

## Seizures/Blackouts

The phone can produce a bright or flashing light. A small percentage of people may be susceptible to blackouts or seizures (even if they have never had one before) when exposed to flashing lights or light patterns such as when playing games or watching video. If you have experienced seizures or blackouts or have a family history of such occurrences, please consult a physician.

## Repetitive Strain Injuries

To minimize the risk of Repetitive Strain Injury (RSI) when texting or playing games with your phone:

- Do not grip the phone too tightly.

- Press the buttons lightly.
- Use the special features which are designed to minimize the times of pressing buttons, such as Message Templates and Predictive Text.
- Take lots of breaks to stretch and relax.

## **Emergency Calls**

This phone, like any wireless phone, operates using radio signals, which cannot guarantee connection in all conditions. Therefore, you must never rely solely on any wireless phone for emergency communications.

## **Loud Noise**

This phone is capable of producing loud noises, which may damage your hearing. Turn down the volume before using headphones, Bluetooth stereo headsets or other audio devices.

## **Phone Heating**

Your phone may become warm during charging and during normal use.

## **Electrical Safety**

### **Accessories**

Use only approved accessories.

Do not connect with incompatible products or accessories.

Take care not to touch or allow metal objects, such as coins or key rings, to contact or short-circuit in the battery terminals.

### **Connection to a Car**

Seek professional advice when connecting a phone interface to the vehicle electrical system.

### **Faulty and Damaged Products**

Do not attempt to disassemble the phone or its accessory.

Only qualified personnel can service or repair the phone or its accessory.

If your phone or its accessory has been submerged in water, punctured, or subjected to a severe fall, do not use it until you have taken it to be checked at an authorized service centre.

## Radio Frequency Interference

### General Statement on Interference

Care must be taken when using the phone in close proximity to personal medical devices, such as pacemakers and hearing aids.

### Pacemakers

Pacemaker manufacturers recommend that a minimum separation of 15 cm be maintained between a mobile phone and a pacemaker to avoid potential interference with the pacemaker. To achieve this, use the phone on the opposite ear to your pacemaker and do not carry it in a breast pocket.

### Hearing Aids

People with hearing aids or other cochlear implants may experience interfering noises when using wireless devices or when one is nearby.

The level of interference will depend on the type of hearing device and the distance from the interference source, increasing the separation between them may reduce the interference. You may also consult your hearing aid manufacturer to discuss alternatives.

### Medical Devices

Please consult your doctor and the device manufacturer to determine if operation of your phone may interfere with the operation of your medical device.

### Hospitals

Switch off your wireless device when requested to do so in hospitals, clinics or health care facilities. These requests are designed to prevent possible interference with sensitive medical equipment.

### Aircraft

Switch off your wireless device whenever you are instructed to do so by airport or airline staff.

Consult the airline staff about the use of wireless devices on board the aircraft. If your device offers a 'flight mode', this must be enabled prior to boarding an aircraft.

## **Interference in Cars**

Please note that because of possible interference to electronic equipment, some vehicle manufacturers forbid the use of mobile phones in their vehicles unless a hands-free kit with an external antenna is included in the installation.

## **Explosive Environments**

### **Petrol Stations and Explosive Atmospheres**

In locations with potentially explosive atmospheres, obey all posted signs to turn off wireless devices such as your phone or other radio equipment.

Areas with potentially explosive atmospheres include fuelling areas, below decks on boats, fuel or chemical transfer or storage facilities, areas where the air contains chemicals or particles, such as grain, dust, or metal powders.

### **Blasting Caps and Areas**

Power off your mobile phone or wireless device when in a blasting area or in areas posted power off “two-way radios” or “electronic devices” to avoid interfering with blasting operations.

## Declaration of RoHS Compliance

To minimize the environmental impacts and take more responsibilities to the earth we live on, this document shall serve as a formal declaration that the Grand Era (ZTE V9800) manufactured by ZTE CORPORATION is in compliance with the Directive 2002/95/EC of the European Parliament - RoHS (Restriction of Hazardous Substances) with respect to the following substances:

1. Lead (Pb)
2. Mercury (Hg)
3. Cadmium (Cd)
4. Hexavalent Chromium (Cr (VI))
5. Polybrominated biphenyls (PBBs)
6. Polybrominated diphenyl ethers (PBDEs)

The Grand Era (ZTE V9800) manufactured by ZTE CORPORATION, meets the requirements of EU 2002/95/EC.

## Disposal of Your Old Appliance



1. When this crossed-out wheeled bin symbol is attached to a product, it means the product is covered by the European Directive 2002/96/EC.
2. All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
3. The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.

For this product's recycling information based on WEEE directive, please send an e-mail to [wjee@zte.com.cn](mailto:wjee@zte.com.cn)

# EC DECLARATION OF CONFORMITY

# C € 1588

It is hereby declared that following designated product:

Product Type: LTE/WCDMA/GSM(GPRS) Multi-Mode Digital Mobile Phone

Model No: ZTE V9800

**Complies with** the essential protection requirements of the Radio and Telecommunication Terminal Equipment Directive (EC Directive 1999/5/EC).

This declaration applies to all specimens manufactured identical to the samples submitted for testing/evaluation.

Assessment of compliance of the product with the requirements relating to the Radio and Telecommunication Terminal Equipment Directive (EC Directive 1999/5/EC) was performed by American TCB (Notified Body No.1588), based on the following standards:

Safety	EN 60950-1:2006/A12:2011
EMC	EN 301 489-1 V1.9.2; EN 301 489-3 V1.4.1; EN 301 489-7 V1.3.1; EN 301 489-17 V2.1.1; EN 301 489-24 V1.5.1; EN 55013:2001+A2:2006; EN 55020:2007;
Radio	EN 301 511 V9.0.2; EN 301 908-1 V5.2.1; EN 301 908-2 V5.2.1; EN 301 908-13 V5.2.1; EN 300 440-1 V1.6.1: EN 300 440-2 V1.4.1 EN 300 328 V1.7.1;
Health	EN 50360:2001; EN62311:2008; EN 62209-1:2006; EN 62209-2:2010; EN 50332-1:2000; EN 50332-2:2003
RoHS	IEC 62321:2008
ErP	(EC) No 278/2009

This declaration is the responsibility of the manufacturer:

ZTE Corporation

ZTE Plaza, Keji Road South, Hi-Tech, Industrial Park, Nanshan District,  
Shenzhen, Guangdong, 518057, P.R.China

Authorised person signing for the company:

Xu Feng

Quality Director Of ZTE Corporation

Name in block letters & position in the company

Shenzhen, 15<sup>th</sup> Oct. 2012



Place & date

Legally valid signature

This equipment may be operated in:				AT	BE
CY	CZ	DK	EE	FI	FR
DE	GR	HU	IE	IT	LV
LT	LU	MT	NL	PL	PT
SK	SI	ES	SE	GB	IS
LI	NO	CH	BG	RO	TR