

All rights reserved.
No part of this publication may be quoted, reproduced, translated or used in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation. ZTE Corporation reserves the right to make modifications on print errors or update specifications in this guide without prior notice.

LEGAL INFORMATION
Copyright © 2012 ZTE CORPORATION.

Introduction

Thanks for choosing the Mobile Touch phone.

This quick guide is designed to help you familiarize yourself with the mobile phone's basic functions.

Please note the pictures we use in this guide are only used to demonstrate the mobile phone's functions, so they might be a bit different from what you see on your mobile phone.

Your quick guide includes:

Your phone: Display the appearance of your phone.

Switching your phone on/off: To power on/off your phone.

Waking Up Your Phone: To activate your screen display.

Home Screen: You can add or remove what is shown on your Home Screen.

Extended Home Screen: Giving you loads more space to add more stuff.

Use the touch Screen: Your phone supports touch screen functionality.

Install a SIM/microSD card and Battery: Switch off your phone before installing or replacing the battery, SIM, or memory card.

Charging the battery: It is recommended that you first use up the battery power and then charge it completely.

1

Key Explained

| Key | Function |
|-------------|---|
| Power Key | <ul style="list-style-type: none"> Hold to turn on or off Silent or Airplane mode, or to power off. Press to switch your phone to Sleep mode. Press to wake up your phone. |
| Home Key | <ul style="list-style-type: none"> Press to return to the Home Screen from any application or screen. Hold to see recently used applications. |
| Menu Key | Press to get the options for the current screen. |
| Back Key | Press to go to the previous screen. |
| Volume Keys | Press or hold to turn the volume up or down. |

Switching your phone on/off

Make sure the SIM card is in your device and the battery is charged.

- Hold **Power Key** to switch on your phone.
- To switch it off, hold **Power Key** to get the phone options. Select **Power off**, and then tap **OK**.

Waking up your phone

3

- Point, drag and drop to move particular items across the screen.
- Double-tap the screen to zoom in/out an image. Pinch on with two fingers to zoom in/out a web page.


NOTE: You can view the phone screen in portrait or landscape orientation simply by holding it upright or turning it on its side. Not all screens are viewable in landscape.

Adjust the volume

To adjust the volume, you can press the volume up/down key to increase/decrease the volume level.

Install a SIM/microSD card and battery

- Remove the back cover.

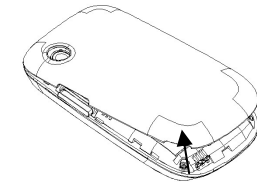

- Hold the SIM card with the cut corner oriented as shown and slips it into the card holder.

5

ZTE

WCDMA/GSM

ZTE-U V856

English

Quick Guide

Making & Receiving Calls: Call your friends, family and colleagues.


Messaging: Send, receive and edit text/Multimedia messages.

Contacts: You can add contacts on your phone.

Multimedia: Your phone comes with an MP3 player, FM radio and a camera etc.

Connect to internet: Using Wi-Fi network on your phone.

Safety Instructions: You should carefully read the safety information before using your phone.

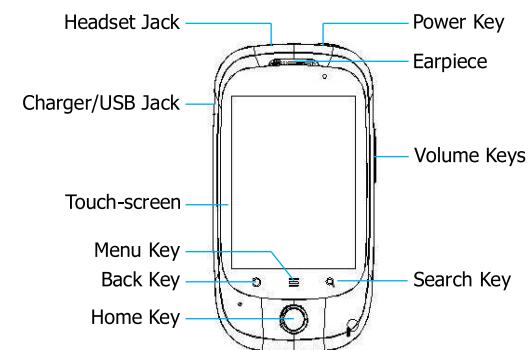

2

- Press **Power Key** to activate your screen display.
- Follow the onscreen prompts, long press the icon to unlock the screen.

NOTE: If you have set an unlock pattern, PIN or password for your phone, you'll need to draw the pattern or enter the PIN/password to unlock your screen.

Home screen

In the Home screen, in addition to the shortcut icon is displayed, you can also set your own wallpaper, add the widgets or application shortcuts you need, or remove them as you like.

Extended home screen


The Home Screen extends beyond the screen width, giving you loads more space to add more stuff. Simply slide your finger to the left or right.

Use the touch screen


You can use finger gestures to control your phone. The controls on your touch-screen change dynamically depending on the tasks you're performing.

- Tap the buttons, icons, or applications to select items or to open applications.
- Flick the screen to scroll up, down, left or right.

4

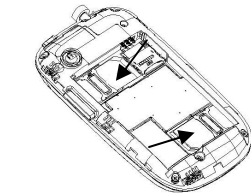


- Follow the OPEN arrow to push the metal slot, and flip it up. Insert the memory card into the metal slot with the metal contacts facing down until it clicks to the right position. Flip the metal slot back and lock it.

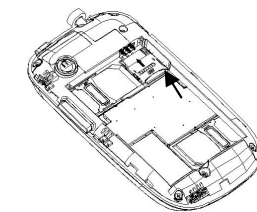

- Insert the battery by aligning the gold contacts on the battery with the gold contacts in the battery compartment. Gently push down on the battery until it clicks into place.

6

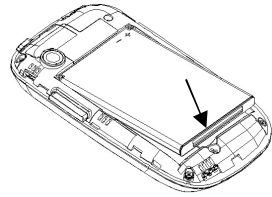

5. Press the cover gently back into place until you hear a click.

▪ **Charging the battery**

1. Connect the adapter to the charger jack. Ensure that the adapter is inserted with the correct orientation. Do not force the connector into the charger jack.



2. Connect the charger to a standard AC wall outlet.
3. Disconnect the charger when the battery is fully charged.

▪ **Sending your message**

1. Press **Home key** > tap > **Messaging**.
2. Tap **Compose new message**.
3. Enter the recipient's number or name. As you type, matching contacts will appear. Tap a suggested contact to add as a recipient.
4. Tap **Type to compose** and type your message.
 - Tap **Menu Key** to insert quick text, smiley, or contact.
 - If you are sending an MMS, tap **Menu Key** to add a subject, or attach pictures, videos, audio, or slideshows.
5. Tap **Send** to send your message.

NOTE: Add an attachment to text message and it will be converted into an MMS automatically. Likewise if you remove all attachments and the subject from an MMS, It'll automatically become a text message.

▪ **Receiving a message**

When you receive a message, your mobile alerts you with a ringtone, prompt or new message icon, you can press **Home Key** > tap > **Messaging** to read the message.

▪ **Taking pictures & Shooting videos with your camera**

- To take a photo, simply by pressing **Home Key** > tap > **Camera**. Tap to take a shot. To view it, just tap the picture in the right corner of the screen. Or select **Menu Key** > **Gallery** to view all your pictures.
- Slide the icon to change to Camcorder mode. Then tap to start shooting, and tap to stop. Select the picture in the right corner of the screen to view the video you've just shot. Or tap **Menu Key** > **Gallery** to see all your video clips.

Note: You must insert the memory card before you use the camera and camcorder.

▪ **Playing your music**

You can play digital audio files from your phone's memory card in **Music**. Before playing music, you need to copy music files to memory card location.

1. Press **Home Key** > tap > **Music** to open the Music Screen.
2. Click the Music category label > music files to start playing
3. Adjust the volume with **Volume Keys**.

▪ **Safety instructions**

| | | | |
|--|---|--|---|
| | Don't make or receive handheld calls while driving. And never text while driving. | | Don't use at petrol stations. |
| | Keep your phone at least 15 mm away from your ear or body while making calls. | | Your phone may produce a bright or flashing light. |
| | Small parts may cause a choking. | | Don't dispose of your phone in fire. |
| | Your phone can produce a loud sound. | | Avoid contacting with anything magnetic. |
| | Keep away from pacemakers and other electronic medical devices. | | Avoid extreme temperatures. |
| | Switch off when asked to in hospitals and medical facilities. | | Avoid contacting with liquids. Keep your phone dry. |

▪ **Making a call**

1. Press **Home Key** > tap > **Phone**.
2. Enter the phone number using the on-screen keypad.
Tap to delete wrong digits.
3. Tap the dial icon.

TIPS: To make international calls, hold to enter the "+".

▪ **Calling from your contacts**

1. Press **Home Key** > tap > **Contacts**.
2. Slide your finger to scroll the contacts list and tap the contact you want to call.

You can search for a contact by tapping on the top of the screen.

3. Tap the dial icon.

▪ **Answering a call**

Answering calls by slipping the relevant icon to right.



▪ **Creating a contact**

1. Press **Home key** > tap > **Contacts**.
2. Tap or **Menu Key** > **New contact** from the Contacts Screen.
3. Choose the storage location to save the contact.
4. Enter the contact name, phone numbers and other information and then save it.

▪ **Searching for a contact**

1. Press **Home key** > tap > **Contacts**
 2. Tap on the top of the Contacts screen.
 3. Input the contact name you want to search for.
- The contacts matched will be listed.

▪ **FM Radio**

Using an earphone you can listen to FM Radio on your phone. To tune in, by pressing **Home key** > tap > **FM Radio**.

▪ **Opening your gallery**

Press **Home Key** > tap > **Gallery**. You can use **Gallery** to view pictures and play videos. You can also do some basic editing of your pictures—such as setting them as wallpaper or contact icons, and sharing with friends.

▪ **Connect to internet**

1. Press **Home Key** > tap > **Settings** > **Wireless & networks**.
2. Tick the **Wi-Fi** box to turn it on.
3. Tap **Wi-Fi settings**, the Wi-Fi access points, or "hotspots", that your phone has detected are displayed with their names and security settings.
4. Tap an access point to connect to it.

If security features are implemented, you'll need to enter a password.

| | | | |
|--|--|--|--------------------------------|
| | Switch off when told to in aircrafts and airports. | | Don't take your phone apart. |
| | Switch off when near explosive materials or liquids. | | Only use approved accessories. |
| | Don't rely on your phone for emergency communications. | | |