

ZTE WP623R GSM Wireless Phone User Guide

Copyright © 2010 by ZTE Corporation

All rights reserved.

No part of this publication may be excerpted, reproduced, translated or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation.

The manual is published by ZTE Corporation. We reserve the right to make modifications on print errors or update specifications without prior notice.

No.55, Hi-tech Road South, ShenZhen, P.R.China

Postcode: 518057

 
Service Hotline: +86-755-26779999

E-mail: mobile@zte.com.cn

URL: http://www.zte.com.cn

Manual No. : 079584502146

Know Your Phone

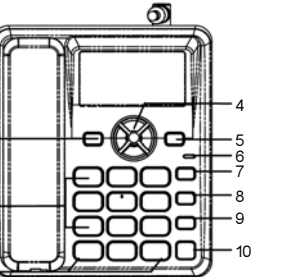

Key Instruction

Key	Description
1. MENU/SELECT	It is used to enter main Menu, select or confirm options in Menu, or confirm the character chosen in condition of character input.
2. Number	Use the number keys to enter numbers and characters.
3. #, *	It differs in different mode, option or function menu.
4. Scrolling	Press these keys to scroll cursor to the left, right, up or down when inputting characters or selecting items. Or default functions in standby mode are set in Settings menu.

- 5. NAMES/CLR/BACK** It is used to erase input information, or cancel operating, exit to previous interface, or enter contacts list in standby mode.
- 6. EXT PWR** Lights on when the phone is connected to external power supply.
- 7. MESSAGE** This is the shortcut key to enter message menu in standby mode.
- 8. EXIT** It is used to power on/power off the phone. End an active call or reject a call.
- 9. CALL/REDIAL** Press this key to make a call after having entered the telephone number intended for calling. Or press to enter all recent call list in standby mode.
- 10. HANDS-FREE** If you are using the handset to call and want to transfer the call to the speakerphone, press this key and hang up the handset to put conversation on the speakerphone.

Interface Icons

Icon	Description	Icon	Description
	Signal strength		New message (blinks when memory is full)
	Silent		Divert always
	Power indicator		Alarm clock
	Bar blacklist		Bar all
	Friend only		New voice mail
	Roaming		

Installation

- 1. Handset**
Connect phone and handset by using the phone cord.
- 2. Antenna**
You need to install the antenna before using your phone. Install the antenna to antenna connector **ANT**. Hold the plastic stick of the antenna and rotate the metal screw cap in clockwise direction to fix it. **Do not rotate antenna directly.**
- 3. External power adapter**
Plug the external power adapter to the external AC socket.
- 4. SIM card**
Always switch the phone off before removing or inserting SIM card. Open the bottom cover of the SIM card. Lift the SIM card holder up, slide the SIM card into the SIM slot. Make sure that the contact area of the card is facing down. And the beveled corner matches with the SIM slot. Close the SIM card holder back to fix the SIM card and install the bottom cover.
- 5. Connect to computer**
Connect computer and phone's **DATA** interface with the compatible data cable.

How to Power on/off

To power on your phone, connect phone and external power outlet with the power adapter, and then press and hold the **Exit** key for about three seconds. If external power not available, switch the power toggle switch **BATT** to **"ON"** side, and then press and hold the **Exit** key for about three seconds.
To power off phone, press and hold **Exit** key till the phone is powered off.

◆ It is strongly recommended to connect the phone to external power outlet, and use internal battery to power your phone only when external power fails or is not available. To charge the internal battery, please switch the **BATT** to **"ON"** side. If the **BATT** toggle switch is on **"OFF"** side, battery charge operation can not be fulfilled.

How to Make a Call

- Pick up the handset or press the **HANDS-FREE** key, or go to step 2 directly.
- Enter the phone number (add country code and area code when making an international call), wait for several seconds to send the call automatically or press **CALL/REDIAL** key to make the call. Select recipient's number from **Contacts**, or press **CALL/REDIAL** key to select a number from the recent calls list, then press **CALL/REDIAL** key to make the call.

Voice Mail

Before using Voicemail, please contact service provider to confirm that the voicemail has been activated.
The system automatically sends a message to your phone informing a new voice message. Read the message and then dial voice mail number to listen to your voice message.
To read or send your voice mail quickly, you set the **Voicemail No.** first. Pick up the handset or press **HANDS-FREE** key, and then hold "1" key to dial voice mail number. In standby mode you can also hold "1" key directly to read your voice mail.

Message

- Select **Short Messages** in **Menu**.
- Select **New message** to write short message, select **Options** to send or save the short message.
 - Select **Inbox** to view messages received.
 - Select **Outbox** to view the sent messages.
 - Select **Draftbox** to view draft messages.
 - Select **Msg settings** to make some necessary short message settings.
 - Select **Voicemail** to **Get voicemail**, or set the **Voicemail No.**

Phone Code

Phone code could prevent your phone from unauthorized use. The default phone code is 1234. Change it to your own as soon as possible.
If you change the default phone code to a new one, remember it or place it at secure place.

PIN Code and PUK Code

- ◆ **PIN Code:** PIN code could prevent your SIM card from unauthorized use. When the PIN lock is on, you should enter the PIN code when powering on the phone again. Change the default PIN code to your own PIN code as soon as possible.
 - ◆ **PUK Code:** Three consecutive incorrect PIN code entries may lock your SIM card. To unlock, you need PUK code.
- PIN code and PUK code may be offered together with the SIM card, contact your network operator if codes not there.**

How to access GPRS

If your phone supports GPRS service, connect the data cable to computer and phone's **DATA** interface (do not insert or remove data cable when power is on). Then you can access GPRS by "ZTE Dial-Up (GSM) software" on the CD which may be offered with the phone. If you use the USB port, first install the USB driver from the CD.

How to Receive FM Radio

Your phone set support FM radio function. The features of the FM function described as follow:

- Frequency range: 76MHz~108MHz.
- Eight levels (from 0~7) are there to adjust the volume, use **Up** or **Down** key to adjust the volume.
- Left** and **Right** keys are there to adjust frequency, 0.1MHz is increased or decreased each time you press **Right** or **Left** key.
- Auto search FM channel, phone set can search the next available channel.
- Can save maximum 10 channels that you preset earlier. And you can browse and delete the saved channels.
- Only phone speaker is supported to listen to FM radio. FM radio will be automatically closed if handset off hooked or **HANDS-FREE** key enabled or phone set is turned on/off.

To receive FM radio, you should :

- Select **Menu**→**Tools**→**FM radio** or press the **Right** key in standby mode, the FM channel bars is shown on the screen.
- Press **Left** key or **Right** key to select channels manually. Press **Up** key to increase volume, and press **Down** key to decrease volume. You can search the available FM channels automatically, select **Options**→**Auto search** in FM radio mode to listen to the available channel.

Perform the action again to move to the next available channel. Select **Options**→**Save** to save the current channel in **Channels**, you can save maximum 10 channels in **Channels**.
To set frequency manually, select **Options**→**Set frequency** in FM radio mode, type frequency number from keypad, select **OK** to confirm.
To listen to the channel you saved in the **Channels**, select **Options**→**Channels** in FM radio mode, use **Up** or **Down** key to select. You can play or rename or change or delete the channel from **Options** menu.

Text Input

Operation	Method
Input Letters	Multitap Input—"ABC" or "abc", press corresponding letter key till the letter appears. Press # key to switch between capitalization and lowercase.
Input Words	eZiText Input—"Eng", press the Number keys to input the characters of the word.
Input Digits	Numbers Input—"123", press the Number keys to input the digits you want directly.
Input Symbol	Press * key, and then select corresponding symbol by using Scrolling keys. Press "1" key till the symbol (common symbols) appears under Multitap input mode.
Input Space	Apart from Numbers input mode, press "0" key to add space.
Erase Character	Press NAMES/CLR/BACK key.

Operation	Method
Erase all the characters	Press NAMES/CLR/BACK key till all the characters been erased.
Move cursor	Press Scrolling keys.
Change input mode	Press # key to change text input mode.

Menu Function

Hereinafter are brief instructions for menu functions of the phone.

Function	Description	Selection
Search contact	Search for a contact entry.	Contacts→Options→Search
Edit contact	Edit the saved contact.	Contacts→Options→Edit
Delete contact	Delete the saved contact.	Contacts→Options→Delete
Add contact	Save phone number.	Contacts→Options→Add new Contact
Contact details	View the details of the contact, and perform other operations in details.	Contacts→Options→Details
Add to speed dial list	Add the selected number to speed dial list.	Contacts→Options→Details→Options→Add to speed
Save number to media	Set where to save the number, SIM card or phone.	Contacts→Options→Settings→Save No. to
Used space of contacts	View the number of saved entries and maximum number of entries capacity in phone and SIM card.	Contacts→Options→Settings→Used space
Speed dial list	View speed dial list.	Contacts→Options→Settings→Speed dial list

Function	Description	Selection
Batch operation	Copy/move all the contact information between SIM card and phone. Delete all contacts in SIM card or phone.	Contacts→Options→Batch operation
Create message	Create message and send to others.	Menu→Short Messages→New message
Read message	Read message in Inbox, Outbox, Draftbox.	Menu→Short Messages→Inbox/Outbox/Draftbox
Templates message	Some preformatted messages.	Menu→Short Messages→Msg settings→Templates
Message center	Set the service provider's message center number.	Menu→Short Messages→Msg settings→Message center
Message validity	Set how long the saved message is valid.	Menu→Short Messages→Msg settings→Message validity
Status Report	Set to let service provider network send message to inform your message reached successfully or not.	Menu→Short Messages→Msg settings→Status report
Storage media	Set where to save the short message.	Menu→Short Messages→Msg settings→Storage media
Used space of messages	View the number of saved messages and maximum number of messages capacity in phone and SIM card.	Menu→Short Messages→Msg settings→Used space
Voicemail	Receive and listen to Voice mail messages. Set voice mail number.	Menu→Short Messages→Voicemail

Function	Description	Selection
Recent calls	View or dial all recent calls, including received calls, dialled calls, missed calls.	Menu→Call Menu→Calls
Call forwarding	Forward an incoming call to a designated phone number.	Menu→Call Menu→Diverts
Firewall	Set Incoming Calls Bar.	Menu→Call Menu→Firewall
Language	Set language for phone.	Menu→Settings→Phone settings→Language
Shortcut key	Set the scrolling key as shortcut key of some menu.	Menu→Settings→Phone settings→Fastkey settings
Keypadlock	Lock the keypad automatically. Press #key, then * key to unlock.	Menu→Settings→Phone settings→Auto lock keypad
Backlight	Set the backlight On/off when using the phone.	Menu→Settings→Display settings→Backlight
Ring tone	Set Ring tone of the phone.	Menu→Settings→Audio settings→Ringtone
Volume	Set the volume of ring tone or speaker.	Menu→Settings→Audio settings→Ringtone/Speaker volume
Keytone	Enable or disable keytone.	Menu→Settings→Audio settings→Key tones
Warn tone	Enable or disable warn tone.	Menu→Settings→Audio settings→Warn tone
Missed alert	Enable missed alert or not.	Menu→Settings→Audio settings→Missed alert
Message alert	Select type of tone to prompt when there is message.	Menu→Settings→Audio settings→Message alert

Function	Description	Selection
Power on/off ring	Ring or not when powering on/off the phone.	Menu→Settings→Audio settings→Power on/off ring
Date and Time	Set date and time for phone.	Menu→Settings→Clock settings→Date & Time
Date format	Set the date format for phone.	Menu→Settings→Clock settings→Date format
Minute minder	Set minute minder.	Menu→Settings→Call settings→Minute minder
Connected minder	Set connected minder.	Menu→Settings→Call settings→Connected minder
Call waiting	Put the current call on hold to answer the other incoming call.	Menu→Settings→Call settings→Call waiting
Network Settings	Set the way of searching network.	Menu→Settings→Network settings
PIN code	Change or set the PIN code for the SIM card.	Menu→Settings→Security settings→SIM password
Phonelock	Set or change the phone lock code.	Menu→Settings→Security settings→Phone lock
Network call bar	The service provider will offer you Network password to activate Network Call Bar.	Menu→Settings→Security settings→Network call bar
Alarm clock	Set alarm clock time.	Menu→Tools→Alarm clock
Calculator	Execute basic math calculation.	Menu→Tools→Calculator
FM radio	Listen to FM radio.	Menu→Tools→FM radio
STK	SIM Card Tool Kit (may be different because of different SIM card).	Menu→STK

Warning and Maintenance

- ◆ Some electronic devices are susceptible to electromagnetic interference sent by the phone if inadequately shielded. Keep using the phone at least 20 cm or as far away as you can from TV sets, radio and other automated office equipment so as to avoid electromagnetic interference.
- ◆ Operating the phone may interfere with medical devices like hearing aides and pacemakers, or other medical devices in hospital. Consult a physician or the manufacturer of the medical device before using the phone.
- ◆ Be aware of the usage limitation when using the phone at places such as oil warehouses, or chemical factories, where there are explosive gases or explosive products being processed, because even if your phone is in idle state, it still transmits radio frequency (RF) energy. Therefore, power off your phone if required.
- ◆ Do not touch the antenna while calling. Otherwise it will affect the quality of calling and waste battery energy. The damaged antenna will cause slight burn while touching your skin.
- ◆ Keep the antenna free from obstructions and position the antenna straight up. This will ensure best call quality.
- ◆ Keep the phone out of the reach of small children. The phone may cause injury if used as a toy.
- ◆ Do not put other things on the terminal to avoid overlaying radiator.
- ◆ Use original accessories or accessories that are authorized by the manufacturer. Using any unauthorized accessories may affect your phone's performance, and violate related national regulations about telecom terminals, or even endanger your body.
- ◆ As your phone can produce electromagnetic field, do not place it near magnetic items such as computer disks.

- ◆ Do not expose your phone to direct sunlight or store it in hot areas. High temperature can shorten the life of electronic devices.
- ◆ Prevent liquid from leaking into your phone.
- ◆ Disconnect external power supply and do not use your phone during thunderstorm.
- ◆ Unplug the external power adapter or remove battery when your phone is not in use, esp. for a long period of time.
- ◆ It is highly recommended to charge the battery before initial use. The battery might have been discharged during storage and delivery.
- ◆ Do not unplug the connector of the data cable from the phone, and not install or remove battery, when the power is on.
- ◆ Do not attempt to disassemble the phone by yourself. Non-expert handling of the devices may damage them.
- ◆ The phone is non-waterproof, keep it dry and store in shady and cool place.
- ◆ If you want to clean your phone, please use clean fabric that is a bit wet or anti-static. Do not use harsh chemical cleaning solvents or strong detergents to clean your phone, such as alcohol, dilution agent and benzene. Power off your phone before you cleaning it.

Limited Warranty

- This warranty does not apply to defects or errors in the Product caused by:
 - Reasonable Router Appearance Disfiguration.
 - End User's failure to follow ZTE's installation, operation or maintenance instructions or procedures.
 - End User's mishandling, misuse, negligence, or improper installation, disassemble, storage, servicing or operation of the Product.
 - Modifications or repairs not made by ZTE or a ZTE-certified individual.

- Power failures, surges, fire, flood, accident, actions of third parties or other events outside ZTE's reasonable control.
- Usage of products of third Parties, or usage in conjunction with third party products provided that such defects is due to the combined usage.
- Any other cause beyond the range of normal usage for Products. End User shall have no right to reject, return, or receive a refund for any product from ZTE under the above-mentioned situations.
 - This warranty is end user's sole remedy and ZTE's sole liability for defective or nonconforming items, and is in lieu of all other warranties, expressed, implied or statutory, including but not limited to the implied warranties of merchantability and fitness for a particular purpose, unless otherwise required under the mandatory provisions of the law.

Limitation of Liability

ZTE shall not be liable for any loss of profits or indirect, special, incidental or consequential damages resulting from or arising out of or in connection with using of this product, whether or not ZTE had been advised, knew or should have known of the possibility of such damages, including, but not limited to lost profits, interruption of business, cost of capital, cost of substitute facilities or product, or any downtime cost.

Troubleshooting

If your phone appears following phenomenon in the process of application, read following relative information at first. If the problems still can not be solved, please contact with the distributor or service provider.

Problem	Check Point
When switching on the phone, it prompts "Enter PIN 1".	Input your PIN1 code which offered with SIM card together. If you have changed PIN1 code, input the new PIN1 code.
When switching on the phone, it prompts "Emergency Only".	Check whether valid SIM card is inserted or not.
When switching on the phone, it prompts "Enter phone code".	Enter phone code you set already to unlock the phone.
No ring tone prompt for a incoming call.	Check volume setting of ring tone.
No display on screen when disconnect external power supply.	Check whether the battery switch is turn to "ON", whether the battery has electricity, or it is damaged; or power on the phone again.
Press CALL/REDIAL key, but no number is sent.	Check whether you have set Network Call Bar.
Certain call cannot be received.	Check whether the number is restricted to come.
Cannot send short message.	Check the network condition, or message centre setting.
Other abnormal phenomenon.	First refer to user guide, then check whether the power is connected correctly or not, if there is no problem, restart the phone.