



Quick Installation Guide

Portable HSPA+ WiFi Hotspot

Version 1.00

English / Indonesian

BEFORE GETTING STARTED

 
This document is designed to aid you to get started with the device. If you experience problems following these guides or need further information pertaining to the device, please visit our website at www.prolink2u.com. All specifications are subject to the manufacturer's configuration at the time of shipping and may change without prior notice, written or otherwise.

1. Package Contents

1



2



3



4



 
Items:

- 1 One (1) unit of PROLiNK® PRT7001H
- 2 One (1) unit of USB Cable
- 3 One (1) unit of 1500mAh Lithium (Li-ion) Battery
- 4 One (1) piece of Quick Installation Guide (QIG)

Note:

1. The illustrations in this document may appear different from your model.
2. If any of above item is not packed in your package when open, please consult your reseller immediately.

2. Overview

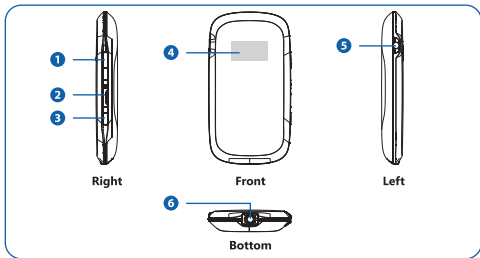

Interface and Buttons

- | | |
|------------------------------------|--|
| 1. Power | Hold the Power button to switch on/off the device. |
| 2. Memory card slot (microSD card) | It is where you insert the memory card (microSD card). |
| 3. WPS | This button is used to start/end Wi-Fi Protected Setup authentication process and enable/disable the Wi-Fi function. <ul style="list-style-type: none">• Hold it for 3 seconds to activate the WPS function.• When the WPS function is enabled, press it to deactivate the WPS function.• Press it to enable/disable Wi-Fi function. |
| 4. LED Screen | It indicates the signal type, signal strength, battery life, Wi-Fi status and etc. |

Icon



2G

Indication

Network signal strength.

Network type, 2G or 3G icon will appear on the LED screen according to the network being connected.

2. Overview

Icon



Indication

Connect to the Internet automatically.

Connect to the Internet manually.

Roaming network indicator.

New message received.

Wi-Fi Status and number of connecting users.

Battery power indicator.

 
5. External Antenna Connector
It is used to connect an external antenna to enhance the signal strength. It is used to connect an external antenna to enhance the signal strength.
6. Charger/USB port
 - Change your device
 - Connect the client to your device via USB cable.

Note:

The illustrations in this document may appear different from your model.

3. Hardware Installation

Inserting SIM Card and Battery

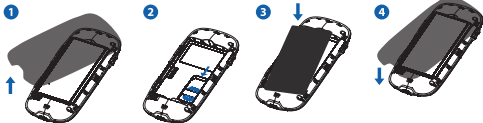


1. Use the thumb catch at the bottom of the device to open the battery cover.
2. Insert the SIM card into the SIM card holder.

3. Hardware Installation

3. Insert the battery as shown with the contacts located against the metal springs, and press the battery down into the case.
4. Line the battery cover up correctly and press gently to close the case.

PRT7001H support three working modes.

 - i. USB Mode – Connection via the USB cable

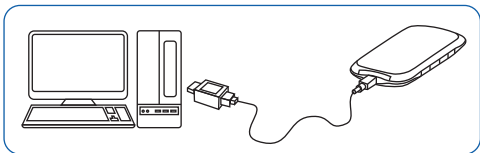

- Connect your device to the client with the USB cable.
- Power on your device.
- Follow the system prompts to complete the software installation.

Note:

1. If the system does not launch installation automatically, you can run the installation program in the path of My Computer > PROLiNK WiFi Hotspot.
2. The driver of your device will be installed at the same time.
 - After the installation, the system will create a shortcut icon on your desktop. Double click on the shortcut and it will lead you to the web configuration page of PRT7001H.

Unless you need to change your 3G settings or access the advanced settings of the device, you can access the Internet without the need to configure the device.

The WAN connection mode is "Automatic" by default.

3. Hardware Installation

ii. Wi-Fi mode - Connection via Wi-Fi



Power on your device directly.

It will take 1~2 minutes to initialize.

Use your normal Wi-Fi application on the client to search for the available wireless network.

 
Select the SSID of your device (default SSID is PROLiNK_PRT7001H_xxxx), and then click Connect. There is no password required by default.

The WAN connection mode is "Automatic" by default. You can access the Internet without the need to configure the device.

If you need to change your 3G settings or access the advanced settings of the device, refer to "Accessing the WebGUI configuration page"

3. Hardware Installation

iii. Mixed Mode – Connection via both USB and Wi-Fi

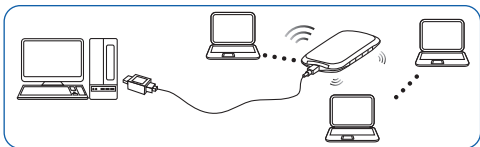

This is a combination of using the USB cable and Wi-Fi connection.

4. Software Installation

Accessing the WebGUI Configuration Page

Make sure the connection between your device and the client is active. Launch the Internet browser and enter <http://192.168.123.254>.

The login page will appear as follow.



Thank you for choosing PROLINK PRT7021K Portable HSPA+ WiFi Hotspot. Key in password to login to Setup Page.

 
Password

Input the case-sensitive default password “password”, and then click Login to access the WebGUI configuration page.

4. Software Installation

Quick Setup

After logging in, select Quick Settings, and then the Quick Setup wizard will appear.

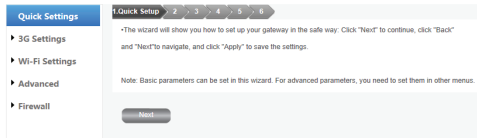

The Quick Setup wizard will guide you on setting up the basic parameters for your device in the safest way. After this procedure, you can use your Internet service.

Note:

If you select Manual APN, please consult your ISP on the APN name to be entered.

Setting

 
After logging in, you can also select Settings, and do the following operations.

- Select **Settings > 3G Settings** View the 3G Wireless Information, select Band Selection Mode or change APN Setting.
- Select **Settings > Wi-Fi Settings** View the current station list, change the basic wireless network settings, choose security mode and WPA type, and perform the WPS configuration.
- Select **Settings > Firewall** Set the Mac/IP/Port Filtering, Port Forwarding or the System Security configuration.
- Select **Settings > Advanced** Change the Administrator settings, restore factory default, manage PIN or set the LAN interface configuration.

4. Software Installation

Disconnect from the Internet

1. Log in the WebGUI Configuration page, and go to Settings > 3G Settings
2. Under WAN Connection Mode, select **Manual** > **Disconnect** to terminate the Internet connection

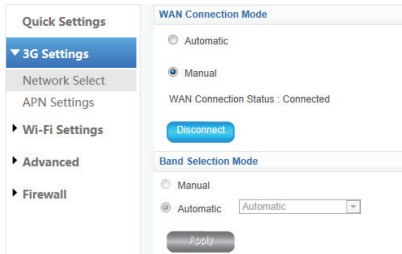

Note:

Turning off the device can also terminate the Internet connection.

Sleep Mode

When you enable the Wi-Fi function with the battery supplying power to the device, it will enter into Sleep Mode when

- i. No user are connected to the device within 10 minutes
- ii. By pressing the WPS button The LED screen and the Wi-Fi function will be turned off when the Sleep Mode is activated. Press **Power** or **WPS** button to wake up the device.

Note:

 
With USB connection and no Wi-Fi user connected to the device within 10 minutes, only the Wi-Fi function will be disabled. Hold the **WPS** button for about 3 seconds to enable this function.

1. Isi Kemasan

1



2



3



4



 
Items:

- 1 Satu (1) unit PROLiNK® PRT7001H
- 2 Satu (1) unit Kabel USB
- 3 Satu (1) unit Baterai Litium (Li-Ion) 1500mAh
- 4 Satu (1) buah Lembar Panduan Instalasi

Catatan:

1. Ilustrasi dalam dokumen ini mungkin tampak berbeda dari model anda.
2. Jika salah satu item di atas tidak dikemas dalam paket anda ketika terbuka, silakan berkonsultasi dengan reseller anda segera.

2. Gambaran

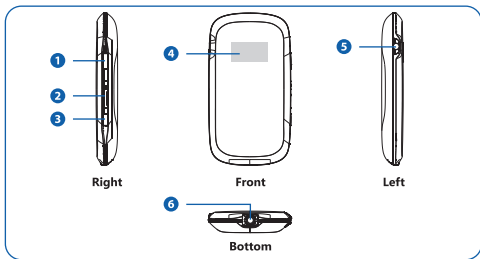

Tombol dan Antarmuka

- | | |
|--------------------------------------|--|
| 1. Power | Tahan tombol Power untuk meng ON/ OFF perangkat. |
| 2. Slot kartu memory (kartu microSD) | Di mana Anda memasukkan kartu memori (kartu microSD). |
| 3. WPS | <p>Tombol ini digunakan untuk memulai / mengakhiri proses otentikasi Wi-Fi Protected Setup dan mengaktifkan / menonaktifkan fungsi Wi-Fi.</p> <ul style="list-style-type: none">• Tahan selama 3 detik untuk mengaktifkan fungsi WPS.• Bila fungsi WPS diaktifkan, tekan untuk menonaktifkan fungsi WPS.• Tekan untuk mengaktifkan / menonaktifkan fungsi Wi-Fi. |
| 4. Layar LED | Ini menunjukkan jenis sinyal, kekuatan sinyal, baterai, status Wi-Fi dan lain-lain. |

2. Gambaran

Ikon



2G



5. Konektor External Antenna
6. Charger/port USB

Indikasi

Kekuatan signal Jaringan

Jenis jaringan, ikon 2G atau 3G akan muncul pada layar LED berdasarkan jaringan yang terkoneksi.

Hubungkan ke Internet secara otomatis.

Hubungkan ke Internet secara manual.

Roaming indikator jaringan.

Pesan baru diterima.

Wi-Fi Status dan jumlah menghubungkan pengguna.

Daya baterai indikator.

Ini digunakan untuk menghubungkan antena eksternal untuk meningkatkan kekuatan sinyal.

 
- Merubah perangkat Anda
- Menghubungkan perangkat klien Anda melalui kabel USB.

Catatan:

Ilustrasi dalam dokumen ini mungkin tampak berbeda dari model Anda.

3. Instalasi Perangkat

Memasukkan kartu SIM dan Baterai

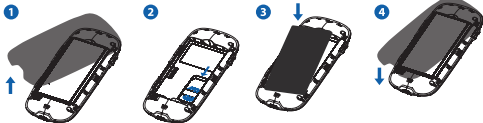


1. Gunakan ibu jari di bagian bawah perangkat untuk membuka penutup baterai.
2. Masukkan kartu SIM ke dalam dudukan kartu SIM.

3. Instalasi Perangkat

3. Masukkan baterai seperti yang ditunjukkan dengan kontak yang terletak terhadap mata logam, dan tekan baterai ke bawah ke dalam tempat ini.
4. Pasang penutup baterai dengan benar dan tekan dengan lembut untuk menutup tempat ini.

PRT7001H mendukung tiga modus kerja.

 - i. Modus USB – Koneksi melalui kabel USB

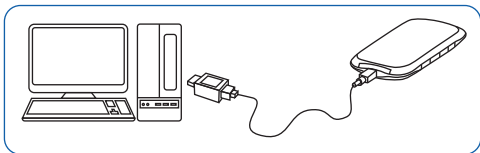

- Koneksikan perangkat Anda ke klien dengan kabel USB.
- Hidupkan perangkat Anda.
- Ikuti sistem untuk menyelesaikan instalasi perangkat lunak.

Catatan:

1. Jika sistem tidak memulai instalasi secara otomatis, Anda dapat menjalankan program melalui My Computer> PROLINK WiFi Hotspot.
2. Drivers perangkat Anda akan terinstal di waktu yang sama.
 - Setelah instalasi, sistem akan membuat ikon shortcut pada desktop Anda. Double klik pada shortcut dan akan membawa Anda ke konfigurasi Web halaman PRT7001H.

Kecuali Anda perlu mengubah pengaturan 3G atau mengakses pengaturan lanjutan dari perangkat, Anda dapat mengakses Internet tanpa perlu mengkonfigurasi perangkat.

Modus koneksi WAN adalah "otomatis" secara default.

3. Instalasi Perangkat

ii. Modus WiFi – Koneksi melalui WiFi



Hidupkan perangkat Anda secara langsung.

Ini akan memakan waktu 1 ~ 2 menit untuk menginisialisasi.

Gunakan aplikasi WiFi normal pada klien untuk mencari nirkabel yang tersedia pada jaringan.

 
Pilihlah SSID dari perangkat Anda (Default SSID adalah PROLiNK_PRT7001H_xxxx), lalu klik konek. Tidak ada permintaan password untuk defaultnya.

Modus koneksi WAN adalah "otomatis" secara default. Anda dapat mengakses Internet tanpa perlu mengkonfigurasi perangkat.

Jika Anda perlu mengubah pengaturan 3G atau mengakses pengaturan lanjutan dari perangkat, lihat "Mengakses halaman konfigurasi WebGUI"

4. Instalasi Software

iii. Modus Campuran – Koneksi melalui WiFi dan USB

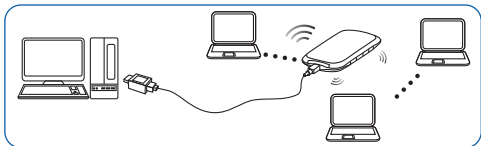


Ini adalah kombinasi dari menggunakan kabel USB dan Wi-Fi.

Mengakses Halaman Konfigurasi WebGUI

Pastikan sambungan antara perangkat Anda dan klien aktif. Jalankan Internet browser dan masukkan <http://192.168.123.254>.

 Halaman login akan muncul sebagai berikut.

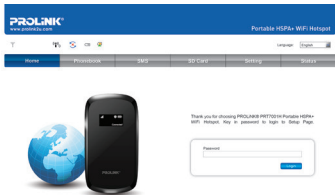


Masukkan password default "password", lalu klik Login untuk mengakses halaman konfigurasi WebGUI.

4. Instalasi Software

Pengaturan Cepat

 Setelah login, pilih Pengaturan Cepat, dan kemudian wizard Pengaturan Cepat akan muncul.

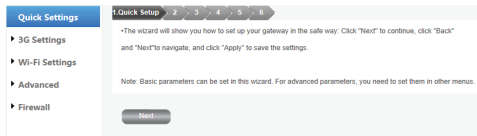

Wizard Pengaturan Cepat akan memandu Anda tentang pengaturan parameter dasar untuk perangkat dengan cara yang paling aman. Setelah prosedur ini, Anda dapat menggunakan layanan Internet Anda.

Catatan:

Jika Anda memilih APN Manual, silakan berkonsultasi dengan ISP Anda apa nama APN harus dimasukkan.

Pengaturan

Setelah login, Anda juga dapat memilih Settings, dan melakukan operasi berikut.

Pilih **Settings > 3G Settings**

Lihat Informasi Wireless 3G, pilih Band Selection Mode atau Ubah pengaturan APN.

Pilih **Settings > Wi-Fi Settings**

Lihat daftar stasiun saat ini, mengubah dasar pengaturan jaringan nirkabel, pilih modul keamanan dan WPA jenis, dan melakukan konfigurasi WPS.

Pilih **Settings > Firewall**

Pengaturan Mac / IP / Port Filtering, Port Forwarding atau konfigurasi Sistem Keamanan.

 
Pilih **Settings > Advanced**

Ubah pengaturan Administrator, mengembalikan standar pabrik, mengelola PIN atau mengatur konfigurasi antarmuka LAN.

4. Instalasi Software

Mengakhiri koneksi dari Internet

1. Masuk halaman Konfigurasi WebGUI, dan pergi ke Settings > 3G Settings
2. Pada WAN Connection Mode, pilih Manual > mengakhiri koneksi dari internet

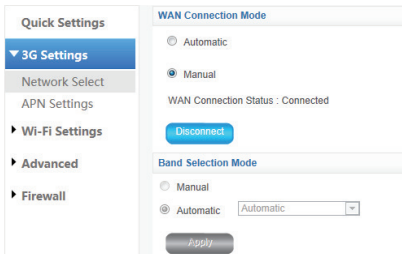

The screenshot shows the 'Quick Settings' menu on the left with '3G Settings' selected. The main content area is titled 'WAN Connection Mode' and contains the following elements:

- Radio buttons for 'Automatic' and 'Manual', with 'Manual' selected.
- Text indicating 'WAN Connection Status : Connected'.
- A blue 'Disconnect' button.
- A section titled 'Band Selection Mode' with radio buttons for 'Manual' and 'Automatic', and a dropdown menu currently set to 'Automatic'.
- An 'Apply' button at the bottom.

Catatan:

Mematikan perangkat ini juga dapat menghentikan koneksi Internet.

Modus Tidur

Ketika Anda mengaktifkan fungsi Wi-Fi dengan power baterai ke perangkat, maka akan masuk ke modus tidur ketika

- i. Tidak ada pengguna yang terhubung ke perangkat dalam waktu 10 menit
- ii. Dengan menekan tombol WPS, Layar LED dan fungsi Wi-Fi akan dimatikan bila modus tidur diaktifkan. Tekan tombol Power atau tombol WPS untuk membangunkan perangkat.

Catatan:

Dengan koneksi USB dan tidak ada pengguna Wi-Fi ke perangkat dalam waktu 10 menit, hanya fungsi Wi-Fi yang akan dinonaktifkan. Tahan tombol WPS selama sekitar 3 detik untuk mengaktifkan fungsi ini.

KETENTUAN GARANSI (for Indonesia region only)

Kami mengucapkan terima kasih atas kepercayaan Anda memilih produk kami dan selaku distributor di Indonesia, kami memberikan garansi produk selama 1 (satu) tahun.

1. Garansi Hanya Berlaku Jika :
 - a. Diisi dengan jelas, lengkap dan benar.
 - b. Jika telah dikirimkan dan diterima oleh PT. Prolink Intidata Nusantara.
 - c. Memperlihatkan kartu garansi asli dan nota pembelian pada saat klaim service.
2. Garansi Tidak Berlaku Apabila :
 - a. Kerusakan yang disebabkan oleh, kelalaian pemakai, bencana alam, kebakaran, tegangan listrik yang terlalu tinggi / rendah, terkena cairan.
 - b. Kerusakan yang diakibatkan karena transportasi / pengiriman, pemasangan / pengoperasian yang tidak sesuai dengan buku petunjuk, penyambungan dengan alat lain.
 - c. Barang yang diservice tidak sesuai dengan kartu garansi.
 - d. Serial number rusak / robek / tidak ada.

3. Ruang Lingkup Garansi :

- a. Garansi hanya mencakup bagian-bagian / komponen perangkat keras dari konfigurasi standar yang terdapat pada spesifikasi produk sesuai dengan faktur.
- b. Khusus netbook garansi baterai hanya berlaku selama 6 bulan sejak tgl. pembelian.

* Biaya pengiriman ditanggung pembeli

No :**KARTU GARANSI / WARRANTY CARD****(for Indonesia region only)**

Barang Data Comm Networking Netbook
Produk UPS Display* Accessories

S/N :

Nama _____
Name _____

Model :

Alamat _____
Address _____

Tgl. Pembelian _____
Purchase Date _____

Dealer : _____
Toko : _____

Kota: _____ **Kode Pos:** _____

Kota : _____
City : _____

Tel / Fax : _____

Email : _____

Pelanggan**PT. Prolink Intidata Nusantara****Cap Toko**

*Kartu Garansi harus diisi lengkap, kirimkan paling lambat 14 Hari setelah Tgl. Pembelian / Please Fill in Your Warranty Card Completely and Send max. 14 day after Purchase
* Pendaftaran No.21347.024.724*

Alamat Pengiriman : _____
Address _____

PT. PROLINK INTIDATA NUSANTARA
Jl. Cideng Barat No.79 Jakarta Pusat 10150 - Indonesia

Telp. : (62-21) 34831777
Fax : (62-21) 34830768
Email : service@prolink.co.id

No :

KARTU GARANSI / WARRANTY CARD

(for Indonesia region only)

Barang Data Comm Networking Netbook
Produk UPS Display* Accessories

S/N :

Nama
Name

Model :

Alamat
Address

Tgl. Pembelian
Purchase Date

Kota :

Kode Pos :

Dealer :
Toko :

Kota :
City :

Tel / Fax :

Email :

Pelanggan

PT. PROLINK INTIDATA NUSANTARA

Cap Toko

Kartu Garansi harus diisi lengkap, kirimkan poling lambat 14 Hari setelah Tgl. Pembelian / Please Fill - in Your Warranty Card Completely and Send max. 14 day after Purchase
* Tendaftar No.21347.824.124

Alamat Pengiriman
Address

 
PT. PROLINK INTIDATA NUSANTARA
Jl. Cideng Barat No.79 Jakarta Pusat 10150 - Indonesia

Telp. : (62-21) 34831777
Fax : (62-21) 34830788
Email : service@prolink.co.id



Tempelkan perangkat
disini.
Hanya untuk pengeposan
di Indonesia

Kepada Yth.
Customer Service
PT. PROLINK INTIDATA NUSANTARA
Jl. Cideng Barat No.79
Jakarta Pusat 10150 - Indonesia



KARTU GARANSI
(for Indonesia region only)



Worldwide Customer Care Centers

INDONESIA Office

PT PROLINK INTIDATA NUSANTARA

Walk-In : Jl. Cideng Barat No. 79, Jakarta Pusat 10150, Indonesia.

Telephone : +62 21 3483 1777

Email Support : support@prolink.co.id

MALAYSIA Office

FIDA SYSTEMS (M) SDN BHD

Walk-In : 29 Jalan USJ 1/31, 47600 Subang Jaya, Selangor Darul Ehsan, Malaysia.

Telephone : +60 3 8024 9151

Email Support : support_my@fida.com

SINGAPORE Office

FIDA INTERNATIONAL (S) PTE LTD

Walk-In : Block 16 Kallang Place #06-02, Kallang Basin Industrial Estate, Singapore 339156.

Telephone : +65 6357 0668

Email Support : support@fida.com

Technical Support Hotline

INDONESIA : +62 21 3483 1717

MALAYSIA : +60 3 8023 9151

SINGAPORE : +65 6357 0666

Note: Closed on Saturdays, Sundays and local/regional Public Holidays.

Register Online For Your Product Warranty @ www.prolink2u.com/register

PROLiNK® is a trademark of Fida International (S) Pte Ltd and is manufactured under its authority. Microsoft®, Windows®, Windows® 98SE/ME/2000/XP/Vista/7/8 are either registered trademarks or trademarks of Microsoft Corporation. Mac and the Mac logo are trademarks of Apple, Inc., registered in the U.S. and other countries. Linux® is a registered trademark of Linus Torvalds and Linux penguin "Tux" created by Larry Ewing and The Gimp. All other brands, products, services, logos and company names mentioned herein are trademarks of their respective owners. All specifications, designs and contents are subjected to changes without prior notice. Images are for demonstration and may vary from actual products. © Copyright 2012. PROLiNK® All rights reserved.