



# MF29

## User Manual





## LEGAL INFORMATION

Copyright © 2012 ZTE CORPORATION.

All rights reserved.

No part of this publication may be excerpted, reproduced, translated or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation.

The manual is published by ZTE Corporation. We reserve the right to make modifications on print errors or update specifications without prior notice.

Version No. : 1.1

Edition Time : 07 03, 2012

## Contents

<b>Welcome .....</b>	<b>5</b>
<b>General Information .....</b>	<b>5</b>
Safety Precautions.....	5
Cleaning and Maintaining .....	6
Limited Warranty.....	6
Limitation of Liability .....	7
<b>Getting started .....</b>	<b>8</b>
Appearance .....	8
LED Indicator .....	8
Interface Description .....	10
Installation.....	10
Inserting (U)SIM Card .....	10
Connecting to Phone.....	11
Connecting to Computer .....	11
Connecting to the Internet.....	12
Connecting with External Power .....	12
Switching on Your Device.....	12
Power Supply.....	12
<b>Voice .....</b>	<b>13</b>
Making a Call .....	13
Answering a Call .....	13
<b>Internet Access .....</b>	<b>14</b>
Preparation .....	14
Establishing a connection between your device and the client. ....	14
Accessing the WebGUI Configuration Page .....	16



Login .....	16
Accessing the Internet .....	18
Accessing the Internet by LTE Gateway .....	18
Operation Mode .....	18
4G Settings .....	19
WAN Connection .....	21
In Cable Broadband mode .....	21
In 4G Gateway mode .....	21
SMS Over IP .....	22
Sending new SMS .....	22
Operating Messages in native .....	22
VoIP .....	24
Settings .....	24
User Details .....	25
Advanced .....	26
Supplementary .....	26
Settings .....	27
Wi-Fi Settings .....	27
Firewall .....	35
Advanced .....	39
Usage of WPS .....	42
U-Disk Master .....	43
Logout .....	43
<b>Troubleshooting .....</b>	<b>44</b>
How to get help .....	45
<b>Technical Parameters .....</b>	<b>46</b>
<b>Glossary .....</b>	<b>47</b>

## Welcome

Thank you for choosing ZTE MF29 Router (hereinafter referred to as “device” or “router”). To get the most from your router and to keep it in the best condition, please read this manual carefully.

The pictures, symbols and contents in this manual are for your reference only. They might not be completely identical with your router. ZTE operates a policy of continuous development. We reserve the right to update the technical specifications in this manual at any time without prior notice.

## General Information

### Safety Precautions

- Some electronic devices may be susceptible to electromagnetic interference. Locate the router away from TV set, radio and other electronic equipment to avoid electromagnetic interference.
- The router may interfere with medical devices like hearing aids and pacemakers. Consult a physician or the manufacturer of the medical device before using the router.
- Please keep yourself at least 20 centimeters away from router.
- Do not use your router in dangerous environments such as oil terminals or chemical factories where there are explosive gases or explosive products being processed.
- Please use original accessories or accessories that are authorized by ZTE. Unauthorized accessories may affect the router performance, damage the router or cause danger to you.
- Do not attempt to dismantle the router. There are no user serviceable parts.



- Do not allow the router or accessories to come into contact with liquid or moisture at any time. Do not immerse the router in any liquid.
- Do not place objects on top of the router. This may lead to overheating of the device.
- The device must be placed in ventilation environment for use.
- Do not expose the router to direct sunlight or store it in hot areas. High temperature can shorten the life of electronic devices.
- Do not allow children to play with the router or charger.
- Keep the length of the cable between the router and the phone less than 10 meters.
- The router is for indoor use only. Do not use the router outside. Do not connect telephone extensions which run outside of the building. These can result in lightning damage to your router.

## Cleaning and Maintaining

- Use an antistatic cloth to clean the router. Do not use chemical or abrasive cleanser as these could damage the plastic case. Turn off your router before you clean it.
- Use the router within the temperature range of -10°C~+55°C, and the storage temperature range is -20°C ~ +65 °C. The humidity range is 5%~95%.
- Do not use your router during a thunderstorm. Remove the mains power pack from the wall socket.
- Do not take out your (U)SIM card unnecessarily. The (U)SIM card may be easily lost or it can be damaged by static electricity.

## Limited Warranty

- This warranty does not apply to defects or errors in the Product caused by:
  - i. Reasonable Router Appearance Disfiguration.

- ii. End User's failure to follow ZTE's installation, operation or maintenance instructions or procedures.
  - iii. End User's mishandling, misuse, negligence, or improper installation, disassemble, storage, servicing or operation of the Product.
  - iv. Modifications or repairs not made by ZTE or a ZTE-certified individual.
  - v. Power failures, surges, fire, flood, accident, actions of third parties or other events outside ZTE's reasonable control.
  - vi. Usage of products of third Parties, or usage in conjunction with third party products provided that such defects is due to the combined usage.
  - vii. Any other cause beyond the range of normal usage for Products. End User shall have no right to reject, return, or receive a refund for any Product from ZTE under the above-mentioned situations.
- This warranty is end user's sole remedy and ZTE's sole liability for defective or nonconforming items, and is in lieu of all other warranties, expressed, implied or statutory, including but not limited to the implied warranties of merchantability and fitness for a particular purpose, unless otherwise required under the mandatory provisions of the law.


## Limitation of Liability

ZTE shall not be liable for any loss of profits or indirect, special, incidental or consequential damages resulting from or arising out of or in connection with using of this product, whether or not ZTE had been advised, knew or should have known of the possibility of such damages, including, but not limited to lost profits, interruption of business, cost of capital, cost of substitute facilities or product, or any downtime cost.

## Getting started

The router operates on the LTE/HSUPA/HSDPA/WCDMA network and supports voice and data service.

### Appearance

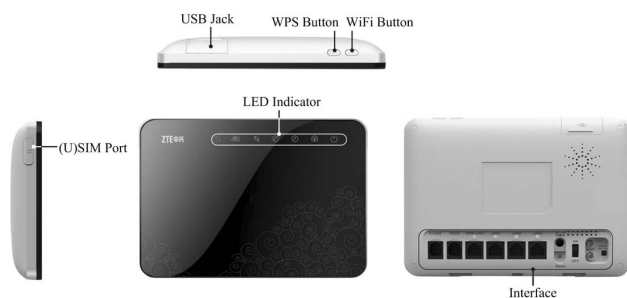

**WiFi button:** To enable and disable WiFi.

**WPS button:** To activate the PBC (Push Button Config) function. For detail usage, please refer to chapter Usage of WPS

### LED Indicator



Indicator	State	Description
1 WAN signal strength indication	On	Signal strength is very good or good (RSSI $\geq$ -90dBm)
	Blinking	Signal strength is weak (-100dBm < RSSI < -90dBm)
	Off	No signal (RSSI < -100dBm)

Indicator	State	Description
2 Network mode indication	Blue	Registered to 3G network
	Green	Registered to LTE network
	Red	Registered to EDGE network
	Off	Not Registered
3 WAN connection status indication	On	WAN connection established (PDP activated)
	Blinking	WAN connection establishing (PDP activating)
	Off	WAN connection not established (PDP not activated)
4 Phone status indication	Off	Local phone hang up or VoIP network un-registered or registration failure
	Blinking	Phone picked up, ringing
	On	Local phone calling
5 Phone status indication	Off	Local phone hang up or VoIP network un-registered or registration failure
	Blinking	Phone picked up, ringing
	On	Local phone calling
6 WiFi indication	Off	WLAN shut down
	On	WLAN working normally with no data transmission
	Blinking	WLAN working normally with data transmission
7 Power indication	On	Once power button is pushed and device is powered on
	Off	Once power button is pushed and device is powered off



## Interface Description




1. **PHONE:** Standard RJ11 connector for telephone.
2. **PHONE:** Standard RJ11 connector for telephone.
3. **WAN/LAN:** Ethernet connections to the Internet or computer.
4. **LAN1~LAN3:** Ethernet connections to computer.
5. **Reset:** To restore factory default configurations after pressing for more than 7 seconds.
6. **POWER Socket:** To power on the device or shut down the power.
7. **ON/OFF:** Turn the router on or off.
8. **ANT:** Connect with the external antenna.
9. **PRESS ANT ON:** To switch between internal antenna and external antenna modes

**Press-down means use CPE's internal antenna for LTE signal, prompt-up means use external antenna. It's in press-down mode as default, only prompt up this button when you connect to an external antenna.**

## Installation

### Inserting (U)SIM Card

Open the protect cover of (U)SIM port Insert the (U)SIM card into the (U)SIM port.

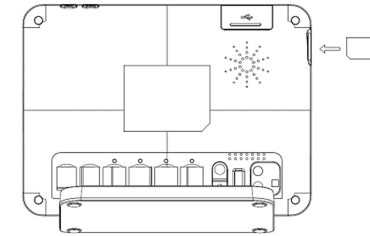

### Note:

Please power off the router and remove the external power adapter before removing or inserting the (U)SIM card. If not, the router or (U)SIM card may be damaged.

### About (U)SIM Card

Avoid handling the (U)SIM card unnecessarily. Hold the card by the edges to prevent static damage. Keep the (U)SIM card away from electrical and magnetic appliances.

If you cannot get service, make sure that:

- You are in an area which has network coverage.
- You are using the correct (U)SIM card.

### Connecting to Phone

Connect the telephone to the **PHONE** interface with a phone cable(RJ11).

### Connecting to Computer

Connect your computer to the **LAN** interface with an Ethernet cable (RJ45).

Notes:

The router will adapt the Ethernet cable style (crossover or straight) automatically.



## Connecting to the Internet

Connect the **WAN/LAN** interface to the Internet with an Ethernet cable (RJ45).

## Connecting with External Power

Connect the external power adaptor to a standard power outlet. Insert the plug into the power socket at the rear of the router.

## Switching on Your Device

1. Turn the power switch on to get started. Make sure that the phone is on hook before powering on.

Notes:

Do not put anything on the top of the router. Do not lay routers to overlap each other when using.

2. Wait 1~2 minutes after turning the router on before you use the service. The 3G & POWER indicator should be lit on.

Notes:

When the router is turned off, an incoming caller will hear the prompt like "The number you have dialed is currently unavailable."

If the net mode indication LED is blinking constantly, try to move the router to another location. The router takes 1~2 minutes to initialize, attach to the network and obtain an IP address.

## Power Supply

For normal operation, connect the router to the external power adaptor. In case of power failure or when there is no available external power supply, the router will not work.

# Voice

## Making a Call

You can make a call through VoIP. The VoIP number is provided by your service operator. Please contact your service operator to get detailed information.

To make a call:

1. Pick up the handset.
2. Key in the telephone number.
3. You can either press # key on the telephone to send the call, or wait 4~8 seconds for the call to be connected automatically.
4. Call will be connected.

**Note:**

If there is no 3G indication, the RF signal is unavailable. Change the location of the router and make sure nothing is blocking it.

## Making a Trunk Call

If you are making a trunk call, add the area code as normal.

**E.g. 03 9612 3456**

## Making an International Call

If you are making an international call, key in the international access code followed by the country code, area code and number.

**E.g. 00 11 64 12 345678**

## Answering a Call

When the phone rings, pick up the handset to answer it. If the telephone has hands-free function you also can answer the call by pressing the **Hands-free** button. Press the **Hands-free** button again to end the call.

## Internet Access

The router does not require any drivers, and it supports all operating systems with Ethernet LAN capability, such as Windows 2000, XP, Vista, MAC OS X and Linux. The router supports two computers surfing on internet using Ethernet cable at the same time.

Note: All the parameter settings in this chapter are just for your reference. Please contact your service provider for detail.

### Preparation

#### Establishing a connection between your device and the client

##### Via RJ45 Ethernet cable

1. Connect your device and the client with the RJ45 Ethernet cable.
2. Power on your device.

The connection between your device and the client will be established successfully a moment later.

##### Via Wi-Fi

 

1. Power on your device directly. It will take 1~2 minutes to initialize, and then Wi-Fi LED is blinking.
2. Use your normal Wi-Fi application on the client to search the available wireless network.

##### Note:

You need to check your Wireless Network Connection. Set the client to obtain an IP address automatically in the Internet protocol (TCP/IP) properties, and the client will get an IP address like "192.168.0.100".

3. Select the SSID of your device, and then click **Connect**.

Notes: the unique SSID of your device is preset in factory. Please refer to the device label on the back side of the device. An device label example:

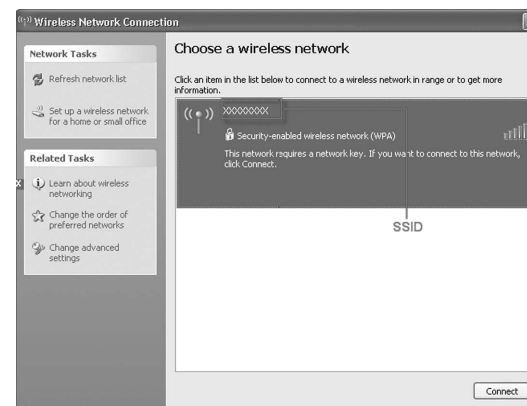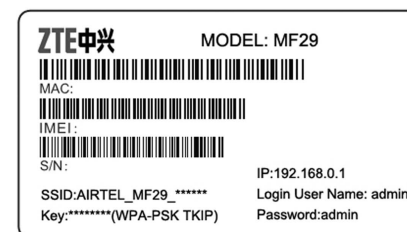

4. Input the correct WPA-PSK KEY in your computer client windows.

##### Note:

The unique WPA Key is preset for each device, please refer to your device label on the back of the device. Wi-Fi user need to, and input the correct key before connecting to the device.

- You can modify the setting of security mode and password on your device's menu **Settings > Wi-Fi Settings > Security**. Then there will be a pop-up window to require the password. Please remember the password you set. If you forget the password, you can connect the device with the computer by RJ45 Ethernet cable to view the password on **Settings > Wi-Fi Settings >**



## Security.

- Wait a moment, the connection between your device and the client will be established successfully.

## Accessing the WebGUI Configuration Page

- Make sure the connection between your device and the client is correct.
- Launch the Internet browser and enter `http://192.168.0.1` in the address bar.

### Note:

It is recommended that you use IE (6.0 or later), Firefox (2.0 or later), Opera (10.0 or later), Safari (4.0 or later) or Chrome (5.0 or later).

- The login page appears as follows.

Language: English

4G LTE CPE

No Service Not Found Disconnected

**Device Information**

- Software Version CR\_MF29TV1.0.0B03
- Hardware Version PCBMF29TV1.0.0
- PIN Status Disable

**WLAN Information**

- SSID ZTE\_MF29T
- Channel 6
- Security Level Disable
- Gateway Address 192.168.0.1
- Subnet Mask 255.255.255.0
- DHCP Server Enable

**WAN Information**

- Network Provider Not Found
- Network Type No Service
- Connection Status Disconnected
- IP Address 0.0.0.0
- Primary DNS 0.0.0.0
- Secondary DNS 0.0.0.0

Copyright (c) 1998-2012 ZTE Corporation. All rights reserved.

## Login

In the WebGUI Configuration page, select the desired language and input the **password** (the default Password is admin).

Language: English

4G LTE CPE

No Service Not Found Disconnected

**Device Information**

- Software Version CR\_MF29TV1.0.0B03
- Hardware Version PCBMF29TV1.0.0
- PIN Status Disable

**WLAN Information**

- SSID ZTE\_MF29T
- Channel 6
- Security Level Disable
- Gateway Address 192.168.0.1
- Subnet Mask 255.255.255.0
- DHCP Server Enable

**WAN Information**

- Network Provider Not Found
- Network Type No Service
- Connection Status Disconnected
- IP Address 0.0.0.0
- Primary DNS 0.0.0.0
- Secondary DNS 0.0.0.0

Copyright (c) 1998-2012 ZTE Corporation. All rights reserved.

Click **Login** to log in the device.

### Note:

If you check **Save** after type in password, the device will save it. Next time when you want to login the device with the same password, what you need to do is click **Login**.

When you login, the following interface appears.

4G LTE CPE WebGUI Configuration

No Service Not Found Disconnected

**Operation Mode**

**WAN Connection**

**SMS over IP**

**VoIP**

**Settings**

**WAN Information**

Network Provider	Not Found
Network Type	No Service
Domain	Unknown
Connection Status	Disconnected
IP Address	0.0.0.0
Primary DNS	0.0.0.0
Secondary DNS	0.0.0.0

**WLAN Information**

SSID	ZTE_MF29T
Channel	6
Security Level	Disable
IP Address	192.168.0.1
Subnet Mask	255.255.255.0
Default Gateway	192.168.0.1
DHCP Server	Enable

Static WAN Information

Copyright (c) 1998-2012 ZTE Corporation. All rights reserved.



The whole interface is divided into three parts. Related functions can be executed by operation in the related areas.

- **Index area:** Show the configuration list for your device.
- **Content area:** Show the detailed configuration.
- **System Information Area:** Show the system status and different kinds of tips.

## Accessing the Internet

Before accessing the internet, make sure;

1. Switch on the device.
2. Establish a connection between your device and the client.

## Accessing the Internet by LTE Gateway

### Note:

Please make sure that you have install (U)SIM card before you switch on the device.

1. Login the WebGUI and set the **Operation Mode** as **4G Gateway**.
2. Set **WAN Connection** in WebGUI.

## Operation Mode


When you fist login the webGUI, you need to choose the operation mode to make the correct setting.

Operation Mode

You may configure the operation mode suitable for you environment.

<input type="radio"/>	Bridge
<input type="radio"/>	Cable Broadband
<input checked="" type="radio"/>	4G Gateway

Apply

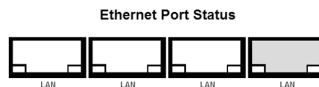

There are three operation modes:

- **Bridge Mode:** Connect to the Internet by Dial-up program on

computer.

- **Cable Broadband:** Connect to the Internet by WAN.
- **4G Gateway:** Connect to the Internet by (U)SIM.

Please choose the correct operation mode according to your actual network condition. For detailed information, please contact network operator. Click **Apply** to finish the setting.

## 4G Settings

### Wireless Info

Select **Settings > 4G Settings > Wireless Info**, the 4G wireless information is shown in the following figure:

4G Settings->Wireless Info

Wireless Info Network Select APN Setting

4G Wireless Information	
Network Provider	Not Found
Network Type	No Service
Roam	--
RSSI	-85 dbm

Refresh

Click **Refresh** to update the wireless information.

### Network Select

Select **Settings > 4G Settings > Network Select**, the Band Selection Mode is shown in the following figure:

4G Settings->Network Select

Wireless Info Network Select APN Setting

Band Selection Mode	
<input type="radio"/>	Automatic
<input checked="" type="radio"/>	4G Only
<input type="radio"/>	3G Only

After Change from 3G to 4G Please Reboot.

Apply

- **Automatic:** Device searches for available network.
- **4G Only:** Device searches for LTE network only.
- **3G Only:** Device searches for WCDMA network only.



Click **Apply** to confirm your configuration.

## APN Setting

Select **Settings > 4G Settings > APN Setting**, the APN parameters are shown in the following figure:

4G Settings->APN Setting	
-Wireless Info -Network Select -APN Setting	
Profile Selection	ZTE
Profile Name	ZTE
APN	3g.com
PDP Type	IP
PDP Setting	Auto PDP
DNS	Auto DNS
Authentication	PAP
User Name	
Password	

Set default Add Delete

- **Profile Selection:** Choose the desired profile name.
- **Profile Name:** Profile Name.
- **APN:** Access Point Name.
- **PDP Type:** Packet Data Protocol (PDP) Type IP is recommended unless service provider instructs others.
- **PDP Setting:** PDP address mode. If a fixed IP address is given by your service provider, select **Manual PDP**. Otherwise select the **Auto PDP** and the router will automatically obtain this parameter.
- **DNS:** If a fixed IP address is given by your service provider, then choose **Manual DNS**. Otherwise, choose **Auto DNS**, and device will automatically obtain parameters.
- **Authentication:** Password Authentication Protocol (PAP) provides a simple method without encryption for the peer to establish its identity using a 2-way handshake. Challenge-Handshake Authentication Protocol (CHAP) is used to periodically verify the identity of the peer using a 3-way

handshake.

- **User Name:** User name is used to obtain authentication from the ISP when the connection is established
- **Password:** Password is used to obtain authentication from the ISP when the connection is established.

Click **Set default** to set this profile as the default profile.

## WAN Connection

### In Cable Broadband mode

Click **WAN Connection**, you can configure how to connect to the Internet.

WAN Connection	
WAN Setting	
WAN Mode	PPPoE
PPPoE	
User Name	ppoeuser
Password	*****
<input checked="" type="checkbox"/>	Auto Connect
<input type="checkbox"/>	Manual Connect
Connect Internet	
WAN Connection Status	Disconnected

Apply

Select WAN mode as **Static**, **DHCP** or **PPPoE**. If you select **PPPoE** mode, you need to input the **User Name** and **Password** supplied by the network provider, and select the Connect mode.

- **Auto Connect:** The router will automatically connect to WAN when it is powered on.
- **Manual Connect:** Connect to the Internet or disconnect from the Internet manually.

Click **Apply** to confirm your configuration, and then the figure will show in the wan connection status.

### In 4G Gateway mode

Click **WAN Connection**, you can configure how to connect to the Internet.



WAN Connection

WAN Connection Mode

☐ Auto Connect

☒ Manual Connect Connect Internet ▼

WAN Connection Status: Disconnected

Apply

There are two connection modes:

- **Auto Connect:** The router will automatically connect to WAN when it is powered on.
- **Manual Connect:** Connect to the Internet or disconnect from the Internet manually.

Click **Apply** to confirm your configuration, and then the figure will show in the wan connection status.

## SMS Over IP

This function allows you to send or receive short messages. And you can use this function only in **4G Gateway** mode.

### Sending new SMS

1. Select **SMS over IP > User1/ User2 > New Message** to access the following figure:

User2 SMS -> NEW Message

NEW Message

TO:

Content:

Send

2. Enter the recipient's phone number.
3. Enter a message.
4. Click **Send** to send the message.

### Operating Messages in native

You can check the messages saved in your device.

## Inbox

Select **SMS over IP > User1/ User2 > Inbox** to access the following figure:

User2 SMS -> Inbox

NEW Message | Inbox | Outbox | Drafts

Inbox SMS Storage Status: 60/60

No	Phonenumber	Status	Operations
----	-------------	--------	------------

View Reply Forward Delete Delete All

All the received messages saved in your device will be displayed here.

- Click **View** to view the selected message.
- Click **Reply** to reply to the selected message sender.
- Click **Forward** to forward message to other person.
- Click **Delete** to delete the selected message.
- Click **Delete All** to delete all the messages.

## Outbox

Select **SMS over IP > User1/ User2 > Outbox** to access the following figure:

User2 SMS -> Outbox

NEW Message | Inbox | Outbox | Drafts

Outbox SMS Storage Status: 60/60

No	Phonenumber	Content	Operations
----	-------------	---------	------------

View Reply Forward Delete Delete All

All the successfully sent messages in your device will be displayed here.

## Drafts

Select **SMS over IP > User1/ User2 > Drafts** to access the following figure:

User2 SMS -> Drafts

NEW Message | Inbox | Outbox | Drafts

Drafts SMS Storage Status: 60/60

No	Phonenumber	Content	Operations
----	-------------	---------	------------

View Reply Forward Delete Delete All



All the drafts and the messages sent unsuccessfully saved in your device will be displayed here.

- Click **View** to access the edited interface of selected message, then click **Send** to send it.

## VoIP

You can use this function only in 4G Gateway mode. For the detailed VoIP parameters, please consult your service provider.

## Settings

Select **VoIP > Settings** to access the following figure:

**Settings**

**Topology**

Outbound Mode	<input checked="" type="radio"/> Disable <input type="radio"/> Enable
STUN Mode	<input checked="" type="radio"/> Disable <input type="radio"/> Enable
Register Every	3600 (1-3600)seconds

**advSipAdvancedOptions**

URI format	<input checked="" type="radio"/> sip <input type="radio"/> tel
DTMF Mode	<input type="radio"/> Out Band <input checked="" type="radio"/> In Band <input type="radio"/> SIP info
SIP Port	5060 (1026-65535)
RTP Port	11000 (1026-65535)

Apply

- Outbound Mode:** Enable or disable the use of SIP outbound server config parameter.
- STUN Mode:** Enable or disable the use of STUN server to discover NAT mapping.
- Reregister Every:** Expires value in seconds for a REGISTER request.
- URI format:** The number format of VoIP call. For example, sip format will be sip:1234@192.168.0.1, while tel format will be tel:1234.
- DTMF Mode:** Select DTMF mode.
- SIP Port:** The listening/binding port of the local User Agents for receiving and transmitting SIP messages. By default, it sets 5060.

- RTP Port:** Set RTP Real-time Transport Protocol Port.

## User Details

Select **VoIP > User > User Details** access the following figure:

**User -> User Details**

**User Details** **Advanced** **Supplementary**

**User 1 SIP Server and Configuration**

SIP Register Server	
SIP Domain	
SIP Realm	
SIP Proxy Mode	<input checked="" type="radio"/> Disable <input type="radio"/> Enable

**User 2 SIP Server and Configuration**

SIP Register Server	
SIP Domain	
SIP Realm	
SIP Proxy Mode	<input checked="" type="radio"/> Disable <input type="radio"/> Enable

**User 1 Authorization**

Display Name	
User Name	
Authorized User Name	
Authorized Password	
VoIP Register Status	Register Fail

**User 2 Authorization**

Display Name	
User Name	
Authorized User Name	
Authorized Password	
VoIP Register Status	Register Fail

Apply

- SIP Register Server:** A server that accepts registration requests from users. If it is unspecified or blank, the voice port will not use a SIP registrar and will not send a REGISTER message. The value must specify the protocol.
- SIP Domain:** A SIP Domain name or IP address, defined by customer.
- SIP Realm:** This is a string value provided by the ITSP, such as AVSTW, or may be a domain name like www.zte.com.cn, defined by customer.
- SIP Proxy Mode:** Enable or disable the use of SIP proxy server config parameter.
- Display Name:** Display name for using in the SIP URI.
- User Name:** User name for using in the SIP URI for the respective appearance.
- Authorized User Name:** This is for authentication with a registrar.

- **Authorized Password:** This is a password for authentication with a registrar.
  - **VoIP Register Status:** Show the register status of SIP server.
- After you click **Apply**, waiting for 3 minutes to confirm your choice.

## Advanced

Select **VoIP > User > Advanced** access the following figure:

User -> Advanced

•User Details    •Advanced    •Supplementary

User 1 Advanced Options		User 2 Advanced Options	
Encoder	G.711 u-Law	Encoder	G.711 u-Law
Packet Rate	20 ms	Packet Rate	20 ms
Jitter Buffer Type	fixed	Jitter Buffer Type	fixed
Jitter Buffer Size	ms	Jitter Buffer Size	ms

Apply

- **Encoder:** Used for SIP negotiation.
- **Packet Rate:** The rate of packet.
- **Jitter Buffer Type:** Set Jitter buffer type.
- **Jitter Buffer Size:** Set Jitter buffer size.

## Supplementary

Select **VoIP > User > Supplementary** access the following figure:

User -> Supplementary

•User Details    •Advanced    •Supplementary

User 1 VoIP supplementary service		User 2 VoIP supplementary service	
Call Forwarding	Cancel all forwarding	Call Forwarding	Cancel all forwarding
Call Waiting	<input type="radio"/> Disable <input checked="" type="radio"/> Enable	Call Waiting	<input type="radio"/> Disable <input checked="" type="radio"/> Enable
Do Not Disturb	<input type="radio"/> Disable <input checked="" type="radio"/> Enable	Do Not Disturb	<input type="radio"/> Disable <input checked="" type="radio"/> Enable
Incoming Call Barring	<input type="radio"/> Disable <input checked="" type="radio"/> Enable	Incoming Call Barring	<input type="radio"/> Disable <input checked="" type="radio"/> Enable
Outgoing Call Barring	<input type="radio"/> Disable <input checked="" type="radio"/> Enable	Outgoing Call Barring	<input type="radio"/> Disable <input checked="" type="radio"/> Enable
Hot Line	<input type="radio"/> Disable <input checked="" type="radio"/> Enable	Hot Line	<input type="radio"/> Disable <input checked="" type="radio"/> Enable

Apply

- **Call Forwarding:** Select call forwarding way.
- **Call Waiting:** Enable or disable call waiting function.
- **Do Not Disturb:** Enable or disable do not disturb function.
- **Incoming Call Barring:** Enable or disable barring incoming call.
- **Outgoing Call Barring:** Enable or disable barring the outgoing call.
- **Hot Line:** Enable or disable hotline service.

Click **Apply** to confirm your choice.

## Settings

- Do not modify any settings unless instructed by your service provider.
- Please disconnect the device from the network before change the settings.

## Wi-Fi Settings

### Station list

Select **Settings > Wi-Fi Setting > Station List**, the wireless network stations are shown in the following figure:

Wi-Fi Setting -> Station List

•Station List    •Basic    •Advanced    •Security    •WPS

Wireless Network	
Station	MAC Address

### Basic

Select **Settings > Wi-Fi Setting > Basic**, the wireless network basic parameters are shown in the following figure:

Wi-Fi Settings - Basic

• Station List • Basic • Advanced • Security • WPS

Wireless Network

Wi-Fi On/Off	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
Network Mode	11b/g/n Mixed Mode
Network Name (SSID)	21E_HF217
Broadcast Network Name (SSID)	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
AP Isolation	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
BSSID	86:1A:82:86:86:8B
Frequency (Channel)	2437MHz (Channel 6)

Wireless Distribution System(WDS)

WDS Mode	Disable
----------	---------

HT Physical Mode

Operating Mode	<input checked="" type="radio"/> Mixed Mode <input type="radio"/> Green Field
Channel Bandwidth	<input type="radio"/> 20 <input checked="" type="radio"/> 40
Guard Interval	<input type="radio"/> Long <input checked="" type="radio"/> Auto
MCS	Auto
Reverse Direction Grant(RDG)	<input type="radio"/> Disable <input checked="" type="radio"/> Enable
Extension Channel	2437MHz (Channel 10)
Aggregation MSSDU(A-MSSDU)	<input checked="" type="radio"/> Disable <input type="radio"/> Enable
Auto Block ACK	<input type="radio"/> Disable <input checked="" type="radio"/> Enable
Decline BA Request	<input checked="" type="radio"/> Disable <input type="radio"/> Enable

Apply Cancel

- **Wi-Fi On/Off:** Enable Wi-Fi or not.
- **Network Mode:** If all of the wireless devices connect with this router in the same transmission mode, performance will be improved by choosing the appropriate wireless mode.
- **Network Name(SSID):** Service Set Identifier (SSID). Enter a string less than 32 characters as the name for your wireless local area network (WLAN).
- **Broadcast Network Name(SSID):** Disable or **Enable** (Default) this function. If Enable is selected, the router broadcasts the SSID, and other devices can detect and connect to it.
- **AP Isolation:** When **Enabled** is selected, each of your wireless clients will not be able to communicate with each other.
- **BSSID:** MAC address of the Wi-Fi.
- **Frequency(Channel):** Choose the appropriate channel to optimize the performance and coverage of your wireless network.

- **WDS Mode:** WDS enable router to communicate with other APs, WDS connection is two-way communication, APs should know each other's wireless MAC address. And make sure that all APs share the same SSID and channel.

WDS configuration is shown below:

Step	Description
1. Set the same SSID and channel for APs	Manually set the SSID and channel is strongly recommended.
2. Select WDS mode: Disable, Lazy Mode, Bridge Mode or Repeater Mode	<ul style="list-style-type: none"> <li>• If you select <b>Disable</b>, WDS is disabled.</li> <li>• If you select <b>Lazy Mode</b>, WDS is enabled, and set wireless MAC address only on the peer APs.</li> <li>• If you select <b>Bridge Mode</b>, WDS is enabled, and set the peer APs wireless MAC address on router. When you set <b>Bridge Mode</b>, your PC can not search SSID of AP after connected.</li> <li>• If you select <b>Repeater Mode</b>, WDS is enabled, and set the peer APs wireless MAC address on router. When you set <b>Repeater Mode</b>, your PC can search SSID of AP after connected.</li> </ul>
3. Select <b>Phy mode:</b> CCK, OFDM, HTMIX or GREENFIELD	<b>CCK:</b> 802.11b <b>OFDM:</b> 802.11g <b>HTMIX:</b> 802.11b/g/n Mixed Mode <b>GREENFIELD:</b> 802.11b/g Mixed Mode
4. Select <b>Encrypt Type:</b> WEP, TKIP, AES	If you select <b>NONE</b> , all the data transmitted without encryption, and other station can access router.



5. Set peer AP's wireless MAC address on router	Only <b>Repeater Mode</b> and <b>Bridge Mode</b> need this.
---	---

The HT physical Mode parameters are shown below:

- **Operating Mode:** In **Mixed Mode**, packets are transmitted with a preamble compatible with the legacy 802.11a/g, the rest of the packet has a new format. In **Green Field**, high throughput packets are transmitted without a legacy compatible part.
- **Channel BandWidth:** Set the HT physical channel bandwidth.
- **Guard Interval:** Guard interval is to introduce immunity to propagation delays, echoes and reflections, to which digital data is normally very sensitive.
- **MCS:** The Modulation and Coding Scheme (MCS) is a value that determines the modulation, coding and number of spatial channels.
- **Reverse Direction Grant(RDG):** Enable **RDG** or not.
- **Extension Channel:** Set extension channel. Extension channel is also able to send and receive data.
- **Aggregation MSDU(A-MSDU) :**To enable Hyper Throughput TX Aggregate MAC Service Data Unit, select **Enable**.
- **Auto Block ACK:** Select to block ACK (Acknowledge Number) or not during data transferring.
- **Decline BA Request:** Select to reject peer BA-Request or not.

Click **Apply** to confirm your configuration.

#### Advanced

Select **Wi-Fi Setting > Advanced**, the advanced wireless network parameters are shown in the following figure:

Wi-Fi Setting -> Advanced	
-Station List -Basic -Advanced -Security -WPS	
Advanced Wireless	
Beacon Interval	100 ms (range 20 - 999, default 100)
Data Beacon Rate (DTIM)	1 ms (range 1 - 255, default 1)
Fragment Threshold	2346 (range 256 - 2346, default 2346)
RTS Threshold	2347 (range 1 - 2347, default 2347)
TX Power	100 (range 1 - 100, default 100)
Short Preamble	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
Short Slot	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
Tx Burst	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
Pkt. Aggregate	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
Country Code	NONE
Wi-Fi Multimedia	
WMM Capable	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
APSD Capable	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
Apply Cancel	

- **Beacon Interval:** The router broadcasts beacon message to announce that it has buffered frames to deliver. The default value is 100 (ms). Beacons are packets sent by an access point to synchronize a wireless network. Specify a beacon interval value. is recommended.
- **Data Beacon Rate(DTIM):** A Delivery Traffic Indication Message(DTIM) informs next clients to listen to broadcast and multicast messages.
- **Fragment Threshold:** This value should remain at its default value of 2346. If you experience a high packet error rate, you may slightly increase your fragment threshold. Setting the fragment threshold too low may result in poor performance.
- **RTS Threshold:** Request To Send (RTS) threshold should be remained as the value of 2347. If you encounter inconsistent data flow, only minor modifications are recommended.
- **TX Power:** Transmit power should be remained as the value of 100.
- **Short Preamble:** The length of CRC block in the frames during the wireless communication.





- **Shot Slot:** To indicate that 802.11g is using a shot time slot because there is no legacy station(802.11b) present.
- **Tx Burst:** Tx burst allows router to deliver better throughput in the same period and environment in order to increase speed.
- **Pkt\_Aggregate:** Increase efficiency by aggregating multiple application packets data into a single transmission frame. In this way, 802.11n networks can send multiple data packets with the fixed overhead cost in just a single frame.
- **Country Code:** Select the region you live.

The Wi-Fi multimedia parameters are shown below:

- **WMM Capable:** When multimedia contents are transferred over wireless network, this function enhances data transfer performance.
- **APSD Capable:** Automatic Power Save Delivery (APSD),enable or disable data flow using APSD during transmitting for power saving.

Click **Apply** to confirm your configuration.

## Security

Select **Wi-Fi Setting > Security**, the Security parameters are shown in the following figure:

Unless one of these encryption modes is selected, wireless transmissions to and from your wireless network can be easily intercepted and interpreted by unauthorized users.

The security modes are described below:

- **OPEN:** You can authenticate successfully with a SSID, whether it is valid or empty.
- **SHARED:** The WLAN clients who have the same WEP key with wireless gateway can pass the authentication and access the wireless network.
- **WEPAUTO:** Select WEP security automatically.
- **WPA-PSK:** WPA Pre-Shared Key, Enter the Pre-Shared key as a plain text (ASCII) pass-phrase of at least 8 characters.
- **WPA2-PSK:** It is the securer version of WPA with implementation of the 802.11i standard.
- **WPA-PSK/WPA2-PSK:** Apply both the WPA-PSK and WPA2-PSK scheme.

If the Authentication type is **SHARED**, **WEPAUTO**, the bottom part of the configuration page displays parameters as shown.

- **WEP Keys:** At most four keys can be set in the blank. Choose the primary key index. The primary key is the only key in use at a given time. Whatever keys you enter for an access point, you must also enter the same keys for the client adapter in the same order. In other words, WEP key 1 on the AP must match WEP key 1 on the client adapter, WEP key 2 on the AP must match WEP key 2 on the client adapter, etc. Select **Hex** if use 10 or 26 hexadecimal numbers (0~9, a~f or A~F). Select **ASCII** if use 5 or 13 ASCII characters (case-sensitive).

If the Authentication type is **WPA-PSK**, **WPA2-PSK** or **WPA-PSK/WPA2-PSK**, the bottom part of the configuration page displays WPA parameters.

- **WPA Algorithm:** **TKIP**, **AES** or **AUTO**.
- **Pass phrase:** You can input hexadecimal digits up to 64 characters or input ASCII characters choose a length of 63 characters or less.

- **Key Renewal Interval:** Define how long the key should be renew.

You can set **Wireless MAC Filtering**:

- **Wireless Disable:** If disabled, MAC address is not used to control network access.
- **Wireless Allow:** Set the MAC address that is allowed to access network.
- **Wireless Reject:** Set the MAC address that is not allowed to access network.

Click **Apply** to confirm your configuration.

## WPS

Select **Wi-Fi Setting > WPS**, the WPS configuration is shown in the following figure:

Select **Enable**, click **Apply**, the WPS settings are shown in the following figure:

WPS Summary, WPS Progress and WPS Status are all shown in the figure.

To set WPS, select WPS mode, the two modes are described below:

- **PIN:** There are two ways to use PIN mode, one is set PIN code on the client's wireless adapter(you can find the PIN code in **AP PIN** field of **WPS Summary**), the other way is set the client's PIN code in **Client PIN** field.
- **PBC:** Press the WPS button of the router or select PBC, and then click **Apply**. Press WPS button on the client wireless adapter within two minutes, and the negotiation process will be established.

## Firewall

You may setup firewall rules to protect your network from virus, worm and malicious activity on the Internet. This function is not available on **Bridge** mode.

Notes:

You can set the maximum 10 filtering items for **MAC/IP/Port Filtering** and **Port Forwarding**.

### MAC/IP/Port Filtering

Select **Settings > Firewall > Mac/IP/Port Filtering**, the Mac/IP/Port Filtering is shown in the following figure:

If you select **Enable**, the filter settings will appear:

MAC/IP/Port Filter Settings

MAC address	<input type="text" value="0000000000000000, eg 00:1E:96:FF:FF:FF"/>
Dest IP Address	<input type="text" value="0000.000.000.000, eg 192.168.5.101"/>
Source IP Address	<input type="text"/>
Protocol	<input type="text" value="None"/>
Dest Port Range	<input type="text" value="1-65535"/>
Source Port Range	<input type="text" value="1-65535"/>
Action	<input type="text" value="Accept"/>
Comment	<input type="text"/>

The maximum rule count is 10.

Apply Reset

Current MAC/IP/Port filtering rules in system

No.	MAC address	Dest IP Address	Source IP Address	Protocol	Dest Port Range	Source Port Range	Action	Comment

Delete Reset

- **Default Policy:** Set how to handle the packet if none of the rules matches.
- **MAC address:** Set the MAC address that will be filtered.
- **Dest IP Address:** Set the destination IP address that will be filtered.
- **Source IP Address:** Set the source IP address that will be filtered.
- **Protocol:** Set which protocol will be used for filtering.
- **Dest Port Range:** Set the destination port numbers that will be filtered
- **Source Port Range:** Set the source port numbers that will be filtered.
- **Action:** Set how to handle the packet if it matches with the rule.
- **Comment:** Type comment for the filter settings.

#### Note:

Filtering rules are matched one by one, if met this provision, it will not continue to match the rules listed below.

Click **Apply** to confirm your configuration.

Click **Delete Selected** to delete the rule which you selected.

Click **Reset** to clear what you select or input.

To add a new rule:

1. Select **Enable** in the **Basic Settings** area.
2. Click **Apply**.
3. Input the detail information in the **Mac/IP/Port Filtering** area.
4. Click **Apply** in the **Mac/IP/Port Filtering** area.

#### URL Filtering

You can setup content filter to restrict the improper content access.

Select **Firewall > URL Filtering**, the URL Filtering is shown in the following figure:

Firewall -> URL Filtering

MAC/IP/Port Filtering -URL Filtering -Port Forwarding -DMZ -System Security

Add a URL filter

URL

The maximum rule count is 10.

Add Reset

Current URL Filtering

No.	URL

Delete Reset

Type URL address, and then click **Add** to add the URL address into the filtering list. The new URL filtering item will be shown in the **Current Webs URL Filters:** field.

#### Port Forwarding

You can setup virtual servers to provide services on the Internet. Select **Firewall > Port Forwarding**, the virtual server settings is shown in the following figure:

Firewall -> Port Forwarding

MAC/IP/Port Filtering -URL Filtering -Port Forwarding -DMZ -System Security

Virtual Server Settings

Virtual Server Settings

Apply

If you select **Enable**, the Virtual Server Settings will appear:

Firewall > Port Forwarding

MAC/IP Port Filtering -URL Filtering -Port Forwarding -DMZ -System Security

Virtual Server Settings

Virtual Server Settings

IP Address: [ ] (000.000.000.000, eg 192.168.1.101)

Port Range: [ ] (1-65535)

Protocol: [TCP+UDP]

Comment: [ ]

The maximum rule count is 10.

Apply

Current Virtual Servers in system:

No.	IP Address	Port Range	Protocol	Comment

Delete Reset

- **IP Address:** Set IP address for the virtual server.
- **Port Range:** Set port numbers for the virtual server.
- **Protocol:** Set protocol for the virtual server.
- **Comment:** Type comment for the virtual server settings.

Click **Apply** to confirm your configuration.

## DMZ

You can setup a De-militarized Zone(DMZ) to separate internal network with the Internet. Select **Firewall > DMZ**, the DMZ setting is shown in the following figure:

Firewall > DMZ

MAC/IP Port Filtering -URL Filtering -Port Forwarding -DMZ -System Security

DMZ Settings

DMZ Settings: [Disable]

Apply

If you select **Enable**, set the **DMZ IP Address**, and then click **Apply** to confirm your configuration.

Firewall > DMZ

MAC/IP Port Filtering -URL Filtering -Port Forwarding -DMZ -System Security

DMZ Settings

DMZ Settings: [Enable]

DMZ IP Address: [000.000.000.000, eg 192.168.1.101]

Apply

## System Security

You can configure system firewall to protect AP or router from being attacking. Select **Firewall > System Security**, the system security setting is shown in the following figure:

Firewall > System Security

MAC/IP Port Filtering -URL Filtering -Port Forwarding -DMZ -System Security

Remote management

Remote management (via WAN): [Deny]

Ping from WAN Filter

Ping from WAN Filter: [Deny]

Apply Reset

- **Allow** or **Deny** the remote management function, and then click **Apply**.
- **Allow** or **Deny** ping from WAN filter on requirement, and then click **Apply**.

## Advanced Status

Select **Settings > Advanced > Status**, the system information is shown in the following figure:

Advanced > Status

-Status -Management -Restore -PIN Manage -Router -Upgrade Firmware -Time

System Info

Wireless access module software version	BC_MF29T-V1.0.1802
Control and route module software version	CR_MF29T-V1.0.0803
Hardware version	PCB0P29T-V1.0.0
IMEI	
System Up Time	39 mins, 35 secs

Refresh

## Management

Select **Settings > Advanced > Management**, the administrator settings information is shown in the following figure:

Advanced > Management

-Status -Management -Restore -PIN Manage -Router -Upgrade Firmware -Time

Administrator Settings

Current Password: [ ]

New Password: [ ]

Verify Password: [ ]

Apply Cancel

You can change the administrator's password. Click **Apply** to confirm your configuration.

## Restore

Select **Settings > Advanced > Restore**, click **Restore** to set all the settings to their factory default values, and then the device will restart automatically.

## PIN Manage

Note: Pin Manage can be used in 4G Gateway mode.

Select **Settings > Advanced > PIN Manage**, the PIN manage is shown in the following figure:

If you select **Modify**, the modification parameters are shown in the following figure:

Type the old PIN code, and then type two times the new PIN code. Click **Apply** to confirm your configuration.

## Notes:

Consecutive inputting wrong PIN code for three times can cause locking of UIM card. To unlock, you need PUK code.

PIN code and PUK code may be offered together with the UIM card.

If not, please contact with network operator. Please change default PIN code to your own as soon as possible.

## Router

Note: Router can be used in 4G Gateway mode and Cable Broad-band mode.

Select **Settings > Advanced > Router**, the router information is shown in the following figure:

- **IP Address:** IP address for LAN interface.
- **Subnet Mask:** Subnet mask for the IP address.
- **MAC Address:** MAC address for the LAN interface.
- **DHCP Server:** Enable or disable DHCP Server function.
- **DHCP IP Pool:** Allocate begin and end IP address for IP pool.
- **DHCP Lease Time:** Define how long the leased IP address will be expired, and will relocate new IP address.

Click **Apply** to confirm your configuration.

## Upgrade Firmware

Select **Settings > Advanced > Upgrade Firmware** to upgrade the software version of the router.



Click **Browse...**, locate the latest software version, and then click **Upgrade**.

## Time

Select **Settings > Advanced > Time** to set the time manually or select SNTP Auto Synchronization mode.



## Usage of WPS

If your client device supports WPS, you need not to input the password manually after WPS has been available. Please do the following:


1. Start up your device.
2. Launch the client device connected to your device.
3. Enable the WPS function of your device.
4. Enable the WPS function of the client.

Notes:

For the detailed operations about the client, please refer to the client's instruction.

## U-Disk Master

1. Start up your device.
2. Launch the client device connected to your device.
3. Connect the storage devices (i.e.USB disk) to the USB port of the device.
4. Select **Start > Run** of the computer.
5. Input \\192.168.0.1\, in the open field and press OK.

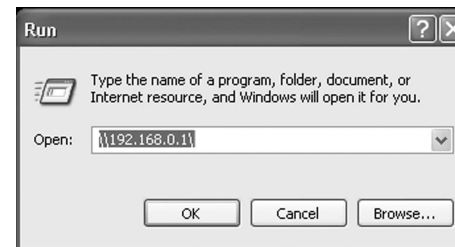

6. Input User Name and Password. The default User Name is admin, Password is admin. Then you can view storage devices.

## Logout

Select **Logout**, a pop-up window will appear as the following figure shown:



Click **OK** to logout the web page.



## Troubleshooting

### Voice Related Problems

Symptoms	Possible Problems/ Solutions
No Dial Tone.	Please wait for 1~2 minutes after the router is turned on. If network LED light is blinking, you have no good RF reception. Change the location of the router.
There is a prompt/ phone alert/ announcement as soon as I lift the phone off the hook.	Make sure your (U)SIM card is inserted correctly and the PIN number has been entered. If the PIN number has been entered incorrectly then you will need to enter the PUK code when prompted.
The line is noisy/ distorted when I lift the phone off the hook.	Remove any electrical appliance which is too close to the phone or router. The cable or phone set might be faulty.
I hear a rapid engaged tone as soon as I lift the phone off the hook.	Put the phone on hook and try again.
After dialing the last digit I hear nothing /silence.	When you have finished dialing you can press the # key or wait 4-8 seconds to connect the call.
I can't make or receive a call when I am surfing on the net.	Please disconnect the Internet and wait 30 seconds to 1 minute before making a call.

### Internet Related Problems

Symptoms	Possible Problems/ Solutions
I cannot access the Internet at all.	Please check your configuration settings. Please wait 1~ 2 minutes for the router to initialize. Check your service indicator LED's.
The download or upload speeds are very slow.	The speed is dependent on signal strength. Check your signal strength and network type.

### Others

Symptoms	Possible Problems/ Solutions
The RSSI signal indicator is always blinking or does not light.	This indicates poor reception. Try moving the router to another location near the window.

### How to get help

You can get Help by:

- Sending E-mail to **mobile@zte.com.cn**
- Visiting **<http://www.airtel.in/4G>**
- Calling Service Hotline: **18001030405**



## Technical Parameters

### Network & Frequency Band

LTE TDD:

2600 MHz (Band 38)

2300 MHz (Band 40)

UMTS: 2100 MHz (Band 1)

900 MHz (Band 8)

### Power Adapter

Input:

100 V~240 V (AC), 50 Hz~60 Hz

Output:

+12 V±10% (DC), 1.5 A

### Data Service

HSDPA: DL 3.6 Mb/s (Category 6)

DL 7.2 Mb/s (Category 8)

DL 14.4 Mb/s (Category 10)

DL 1.8 Mb/s (Category 12)

DL 21 Mb/s (Category 14)

HSUPA:

UL 2 Mb/s (Category 5)

UL 5.76 Mb/s (Category 6)

LTE TDD:

DL 68 Mb/s (Category 3)

UL 17 Mb/s (Category 3)

### Dimensions (W×H×D)

202 mm×160 mm×30.5 mm

### Weight

About 550 g

## Glossary

- AC: Alternating Current
- APN: Access Point Name
- DC: Direct Current
- DHCP: Dynamic Host Control Protocol
- DNS: Domain Name System (or Service or Server)
- DoS: Denial of Service
- EDGE: Enhanced Data GSM Evolution
- ESSID: Expanded Service Set Identifier
- Ethernet: A frame-based computer networking technology for local area networks (LANs)
- GSM: Global System for Mobile Communications
- GPRS: General Packet Radio Service
- HSDPA: High Speed Downlink Packet Access
- HSUPA: High Speed Uplink Packet Access
- IP: Internet Protocol
- LAN: Local Area Network
- LED: Light - emitting Diode
- MHz: Megahertz
- MTU: Maximum Transmission Unit
- PDP: Packet Data Protocol
- PIN: Personal Identification Number
- PPP: Point to Point Protocol
- PUK: PIN Unlocking Key
- RSSI: Radio Signal Strength Indicator
- RF: Radio Frequency
- SIP: Session Initiated Protocol
- UPnP: Universal Plug and Play
- (U)SIM: Subscriber Identification Module
- WCDMA: Wideband CDMA (Code-Division Multiple Access)
- WEP: Wired Equivalent Privacy
- WLAN: Wireless LAN
- WPA-PSK: Wi-Fi Protected Access-PreShared Key





## **ZTE CORPORATION**

NO. 55, Hi-tech Road South, ShenZhen, P.R.China

Postcode: 518057

Tel: +86-755- 26779999

<http://www.zte.com.cn>

E-mail: [mobile@zte.com.cn](mailto:mobile@zte.com.cn)

