

BEETEL BG65

Quick Guide

BEETEL TELETECH LTD,

Regd. Office: 1st Floor, Plot No 16,Udyog Vihar Phase-IV
Gurgaon-122015,Haryana,India.

LEGAL INFORMATION

Copyright © 2011 BEETEL TELETECH LTD.

All rights reserved.

No part of this publication may be excerpted, reproduced, translated or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of BEETEL TELETECH LTD.

The manual is published by BEETEL TELETECH LTD. We reserve the right to make modifications on print errors or update specifications without prior notice.

Version No. : R1.0

Quick Guide

Introduction

BEETEL BG65 is a 3G/2G device, working in GSM/GPRS/EDGE/WCDMA/HSPA network. This device could connect via USB or Wi-Fi interface. The device supports data and SMS services, enabling you to communicate anytime and anywhere.

This quick guide provides instructions on how to install and get started with the product. For information about connection of services, please consult your service provider.

Specification

Data Service	HSPA: DL 7.2Mbps UL 5.76Mbps
	WCDMA CS: 64kbps UL/DL WCDMA PS: 384kbps UL/DL
Interface	USB and Wi-Fi
Wi-Fi Standard	802.11b/g
Wi-Fi Security	WEP/WPA/WPA2
USB Version	USB 2.0 HIGH SPEED
USB Interface Type	Mini USB-B
Weight	65g
Dimensions (W×H×D):	99.7mm*53.7mm*13.9mm

microSD card	Support up to 32GB microSD card
Power Adapter	5V/700mA
Battery	1500mAh
*Standby time	100hours
*Working time	4hours
Operate system	Windows 7, Windows Vista, Windows XP (SP2 or later), MAC 10.4 or later
Web Browser	IE (7.0 or later), Firefox (3.0 or later), Opera (10.0 or later), Safari (4.0 or later), Chrome (5.0 or later)
Operating temperature	0°C~ +35°C
Storage temperature	-20°C ~ +50°C
Charging temperature	0°C ~ +45°C
Humidity	5%~ 95%

 
Notes:

microSD  is a trademark of SD Card Association.

The device's standby and working time are only for your reference, and based on ideal working environment.

Getting to Know Your Device

The following figure shows the appearance of the device, it is only for your reference. The actual device may be different.

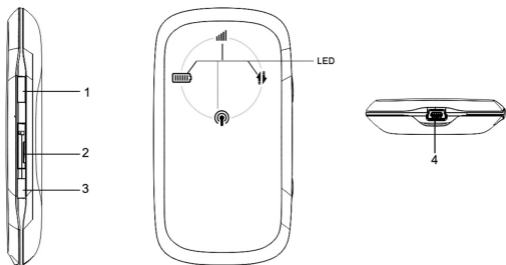

Interface and Buttons

1.Power	Hold the Power button to switch on/off the device.
2.Memory card slot (microSD card)	It is where you insert the memory card (microSD card).
3.WPS	This button is used to start Wi-Fi Protected Setup authentication process and enable/disable the Wi-Fi function. <ul style="list-style-type: none"> ● Hold it for three seconds to activate the WPS process. ● Press it to enable/disable Wi-Fi function.
4.Charger/USB port	<ul style="list-style-type: none"> ● Charge your device. ● Connect the client to your device via USB cable.





Notes:

Hold the **WPS** and **Power** buttons simultaneously until all LEDs are off, and then release the buttons. The device will restart automatically and restore to the factory default settings.


LED Indicator

It indicates the status of your device.

When the device is powered on:

Indicator	Status	Description
Battery indication 	Red blinking	Please charge the battery
	Red solid	Voltage of battery is low
	Green blinking	Charging
	Green solid	Voltage of battery is full(Charging completed)
Signal strength indication 	Red solid	ERROR or NO signal or NO network service
	Green blinking	Signal is ok
	Green solid	Signal is good
Wi-Fi indication 	Blue blinking	Wi-Fi is active
	Blue solid	WPS is active
	LED off	Wi-Fi is inactive
Network indication 	Red blinking	2G data transferring
	Red solid	Register on 2G network
	Green blinking	3G data transferring
	Green solid	Register on 3G network


When the device is powered off and charging:

Indicator	Status	Description
Battery indication 	Green blinking	Charging
	LED off	Voltage of battery is full (Charging complete)


Hardware Installation

Inserting SIM Card and Battery

 
1. Use the thumb catch at the bottom of the device to open the battery cover.



 
2. Insert the SIM card into the SIM card holder.

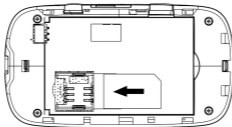

 3. Insert the battery as shown with the contacts located against the metal springs, and press the battery down into the case.

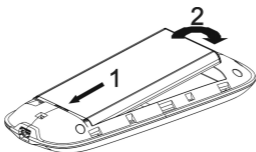

 4. Line the battery cover up correctly and press gently to close the case.

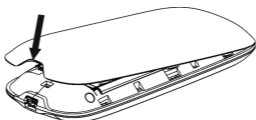



Inserting microSD Card

1. Pull the microSD cover out of the card slot.

Notes:

Do not pull the cover rudely, as it is connected with the device.

  2. Insert the microSD card into the microSD slot. The following picture shows the correct inserting direction. You will hear a click when the microSD card locks in place.



3. Close the microSD cover.

Switching On/Off Your Device

Hold the **Power** button to switch on/off the device.

 
Notes:

The device is powered on when the signal strength indication lights up.

Charging Your Device

You can charge your device by using USB cable or adapter.


1. Insert the charger lead carefully with the plug arrow facing the bottom of the device.
2. The plug only fits one way. Do not use excessive force to insert the plug.
3. Make sure the plug is the right way round and lined up correctly and insert it gently.

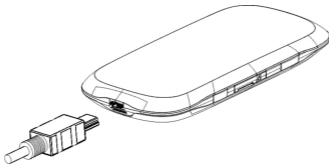

Working Mode

Your device supports three working modes. For the client, we only use PC or laptop as the example in this document.

 USB Mode: Connect to the device with the USB cable.

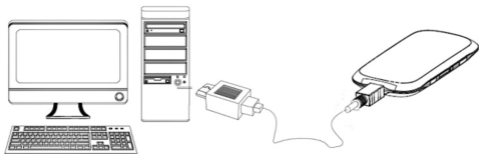

Wi-Fi Mode: Connect to the device via Wi-Fi.



Mixed Mode: Connect to the device with the above two connection methods.

Notes:

If you want to connect to the Internet by using Wi-Fi mode, make sure that the client supports the Wi-Fi function.

The following picture is the application example. All of the client devices can surf on the Internet at the same time.



Establish a connection between your device and the client

Via USB Cable

1. Connect your device and the client with the USB cable.
2. Power on your device.
3. Follow the system prompts to complete the software installation.

Notes:

- If the system does not launch installation automatically, you can run the installation program in path of **My Computer > BG65**.
 - The driver of your device will be installed at the same time.
4. After the installation, the system will create a shortcut icon on your desktop and a **BG65** program group in the **Start→Programs** menu. The connection between your device and the client will be established successfully a moment later.

 
Via Wi-Fi

1. Power on your device directly. It will take 1~2 minutes to initialize, and then Wi-Fi LED is blinking.
2. Use your normal Wi-Fi application on the client to search the available wireless network.

Notes:

You need to check your Wireless Network Connection. Set the client to obtain an IP address automatically in the Internet protocol (TCP/IP) properties, and the client will get an IP address like "192.168.0.100".

3. Select the SSID of your device, and then click **Connect**.

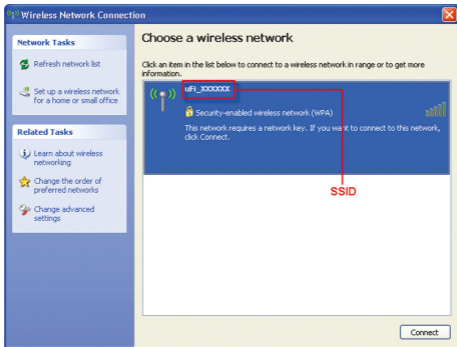

Notes:

There will be a pop-up window to require the password. Check the label on your device to gain the SSID and preset password information. Make sure that you can remember the new password if you have changed the password by selecting **Settings > Wi-Fi Settings > Security**. Please restore the device to the factory default settings in case you forget the new password.

4. Wait a moment, the connection between your device and the client will be established successfully.

Access the Internet

1. Switch on the device.
2. Establish a connection between your device and the client.
3. After successfully establishing the connection, access the Internet in the **Always On**, **Manual** or **On Demand** mode. The default mode is **Always On**.

Notes:

You can browse the WebGUI Configuration page and click **WAN Connection** to set the WAN connection mode.

 
Access the WebGUI Configuration Page

1. Make sure the connection between your device and the client is correct.
2. Launch the internet browser and enter `http://192.168.0.1` or `http://beetel3gmax.home/login.asp` in the address bar, or double click the **Beetel BG65 3GMAX** icon on the desktop directly.

Notes:

It is recommended that you use IE (7.0 or later), Firefox (3.0 or later), Opera (10.0 or later), Safari (4.0 or later) or Chrome (5.0 or later).

3. The login page appears as follows.

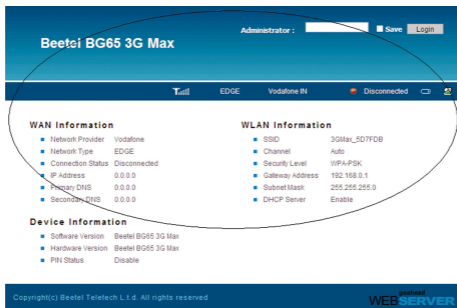

View the information of WAN, WLAN and Device. Input the case-sensitive default password “**admin**”, and then click **Login** to access the WebGUI Configuration page.

Notes:

- Do not put anything on the top of your device. Do not lay devices to overlap each other when using.
- The device takes 1~2 minutes to initialize, and attach to the network.

PIN Code Verification

If the PIN code of your SIM card is enabled, you will need to input the PIN code when you login at the first time.

PIN	
Verify PIN	
PIN	<input type="text"/>
	Remaining times: 3

Notes:

The SIM card will be locked if you enter wrong PIN code consecutively for three times.

If you want to modify the PIN Status, please select **Settings > Advanced > PIN Manage** to do the actions.

Advanced -> PIN Manage	
-Status -Management -Restore -PIN Manage -Router	
PIN Manage	
PIN Status	Enable
Action	<input type="button" value="Disable"/>
PIN	<input type="text"/>
	Remaining times: 3

Quick Setup

After logging in, select **Quick Setup**, and then the Quick Setup wizard appears.

Quick Setup (1/8)	
<small>*The wizard will show you how to set up your gateway in the safe way. Click "Next" to continue, click "Back" and "Next" to navigate, and click "Apply" to save the settings.</small>	
<small>Notes: Basic parameters can be set in this wizard. For advanced parameters, you need to set them in other menus.</small>	

The Quick Setup wizard guides you how to set the basic parameters for your device in the safest way. After this procedure, you can use your Internet service.

Notes:

The parameter settings may have been preset by your service provider, and you will enjoy your Internet service directly. Please contact your service provider for details if you want to do some modification.

WAN Connection

After logging in, select **WAN Connection**, and you can choose the WAN Connection Mode according to your requirement.

WAN Connection	
WAN Connection Mode	
<input checked="" type="radio"/>	Always On
<input type="radio"/>	Manual <input type="text" value="Disconnected Internet"/>
<input type="radio"/>	On Demand
WAN Connection Status	Connected

Settings

After logging in, select **Settings**, and you can do the following operations.

Select Settings > Wi-Fi Settings	View the current station list, change the basic wireless network settings, choose security mode and WPA type, and perform the WPS configuration.
Select Settings > 3G Settings	View the 3G Wireless Information, select Band Selection Mode or change APN Setting.
Select Settings > Firewall	Set the Mac/IP/Port Filtering, Port Forwarding or the System Security configuration.

Select Settings > Advanced	View the current status of your device, change the Administrator Settings, restore factory defaults, manage PIN or set the LAN interface configuration.
--------------------------------------	---

Notes:

Make sure that you can remember the new password if you change the login password by selecting **Settings > Advanced > Management**. Please restore the device to the factory default settings in case you forget the new password.

Disconnect from the Internet

1. Log in the WebGUI Configuration page, and select **WAN Connection**.
2. Select **Manual > Disconnect Internet**.
3. Click **Apply**.

WAN Connection	
WAN Connection Mode	
<input type="checkbox"/>	Always On
<input checked="" type="checkbox"/>	Manual Disconnected Internet
<input type="checkbox"/>	On Demand
WAN Connection Status	Connected

Notes:

Turning off the device can also terminate the internet connection.

SMS

This function allows you to view, send and receive short messages.

After logging in, select **SMS**, and you can do the following operations.

Select SMS > Local	Operate the SMS in your device.
Select SMS > SIM Card	Operate the SMS in your SIM card.
Select SMS > New Message	Send or save SMS.
Select SMS > SMS Settings	Set the SMS configuration.

PhoneBook

This function allows you to store contacts to your device or SIM card.

After logging in, select **PhoneBook**, and you can add a new contact by clicking the **Add New** tab, and perform operations to the contacts in the **Local** or **SIM Card** tab.

PhoneBook - Local (1 / 50)

<Local SIM Card Add New

<input type="checkbox"/>	Name	Phone number	Mobile number	Home number	Office number	Nick name	E-mail	Group
<input type="checkbox"/>	hanson	+1800138000				spliff		Common

Buttons: Edit, Delete, Delete All

microSD Card

This function allows you to share SD card with others.

After logging in, select **microSD Card**, and then select the **microSD Card Share Mode** which you want to use. Click **Apply** to confirm.

microSD Card

- NONE: No microSD card is shared.
- USB: You could access microSD card from USB.
- FTP: We suggest that you access microSD card by using a ftp client, address: ftp://192.168.0.1

microSD Card Share Mode: NONE

Buttons: Apply, Cancel

Notes:

Please insert your microSD card before selecting this menu.

Usage of WPS

If your client device supports WPS, you need not to input the password manually after WPS has been available. Please do the following:

1. Start up your device.
2. Launch the client device connected to your device.
3. Enable the WPS function of your device.
4. Enable the WPS function of the client.

Notes:

For the detailed operations about the client, please refer to the client's instruction.

Sleep Mode

When you enable the Wi-Fi function and use the battery to supply power to the device, once no user connects to the device within 10 minutes or you press the WPS button, the device will enter the sleep mode, and all LEDs will be turned off. In the sleep mode, the Wi-Fi function will be disabled. Press **Power** or **WPS** button to wake up the device, and all LEDs will be turned on.

Notes:

With USB connection if no Wi-Fi user connects to the device within 10 minutes, only the Wi-Fi function will be disabled. Press **WPS** button to enable this function.

Warning and Notice

To the Owner

- Some electronic devices are susceptible to electromagnetic interference sent by your device if inadequately shielded, such as the electronic system of vehicles. Please consult the manufacturer of your device before using if necessary.
- Operating of laptop and desktop PCs and your device may interfere with medical devices like hearing aids and pacemakers. Please always keep them more than 20 centimeters away from such medical devices when they are turned on. Turn your device off if necessary. Consult a physician or the manufacturer of the medical device before using your device.
- Be aware of the usage limitation when using your device at places such as oil warehouses or chemical factories, where there are explosive gases or explosive products being processed. Turn off your device if required.
- The use of electronic transmitting devices is forbidden in aircrafts, at petrol stations and in hospitals. Please observe and obey all warning signs and switch off your device in these conditions.
- Do not touch the inner antenna area if not necessary. Otherwise it will affect your device's performance.
- Store your device out of the reach of little children. Your device may cause injury if used as a toy.
- Do not touch the metallic parts of your device so as to avoid a burn, when your device is working.

Using Your Device

- Please use original accessories or accessories that are authorized. Using any unauthorized accessories may affect your device's performance, and violate related national regulations about telecom terminals.
- Avoid using your device near or inside metallic structures or establishments that can emit electromagnetic waves. Otherwise it may influence signal reception.
- Your device is not waterproof. Please keep it dry and store in a shady and cool place.
- Do not use your device immediately after a sudden temperature change. In such case, it will produce dew inside and outside your device, so don't use it until it becomes dry.
- Handle your device carefully. Do not drop, bend or strike it. Otherwise your device will be damaged.
- No dismantling by non-professionals and only qualified technicians can undertake repair work.
- Operating temperature range of 0°C~ +35°C and humidity range of 5% ~ 95% are recommended.

Using Battery

- Do not short-circuit the battery, as this can cause excessive heat and fire.
- Do not store battery in hot areas or dispose of it in a fire to avoid explosion.
- Do not disassemble or modify the battery.

- When not using the battery for a long period, remove it from the device and store it in a cool dry place.
- Never use any charger or battery damaged or worn out.
- Return the wear-out battery to the provider or put it in the appointed recycle place. Do not put it in familial rubbish.

Warning: If the battery is broken, keep away from it. If it taints your skin, wash your skin with abundant fresh water and ask doctor help if necessary.

Limited Warranty

- This warranty does not apply to defects or errors in the Product caused by:
 - i. Reasonable abrasion.
 - ii. End User's failure to follow BEETEL's installation, operation or maintenance instructions or procedures.
 - iii. End User's mishandling, misuse, negligence, or improper installation, disassembly, storage, servicing or operation of the Product.
 - iv. Modifications or repairs not made by BEETEL or a BEETEL-certified individual.
 - v. Power failures, surges, fire, flood, accidents, actions of third parties or other events outside BEETEL's reasonable control.
 - vi. Usage of third-party products, or usage in conjunction with third-party products provided that such defects are due to the combined usage.
 - vii. Any other cause beyond the range of normal usage intended for the Product.

End User shall have no right to reject or return the Product, or receive a refund for the Product from BEETEL under the above-mentioned situations.

- This warranty is End User's sole remedy and BEETEL's sole liability for defective or nonconforming items, and is in lieu of all other warranties, expressed, implied or statutory, including but not limited to the implied warranties of merchantability and fitness for a particular purpose, unless otherwise required under the mandatory provisions of the law.

Limitation of Liability

BEETEL shall not be liable for any loss of profits or indirect, special, incidental or consequential damages resulting from or arising out of or in connection with using of this product, whether or not BEETEL had been advised, knew or should have known of the possibility of such damages, including, but not limited to lost profits, interruption of business, cost of capital, cost of substitute facilities or product, or any downtime cost.

How to Get Help

You can get Help by:

- Sending E-mail to beetel.mobiles@beetel.in
- Visiting <http://www.beetel.in>
- Toll Free: 1800-1023456
- Service Support : 011-40521723