LTE USB Modem **Quick Guide**

MF880T

No part of this publication may be excerpted, reproduced, translated or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation.

The manual is published by ZTE Corporation. We reserve the right to make modifications on print errors or update specifications without prior notice.

Version No.: R1.0

LEGAL INFORMATION

All rights reserved.

Copyright © 2012 ZTE CORPORATION.

Date: April 2012 Manual No.: 079584504462

Introduction

The ZTE USB modem is a multi-mode USB modem, working in LTE/GSM/GPRS/EDGE/UMTS/HSPA/HSPA+ networks. With USB interface connecting to a laptop or a desktop PC, it integrates the functionality of a modem SMS services through the mobile phone network, enabling you to communicate anytime and anywhere.

SMS service, Data service, Applications management, etc.

Specification

The following table shows the specification of your device

The following table of own the op	to low mig table on owe the specimental of your device.		
Interface Type	USB 2.0 HIGH SPEED		
Systems supported	Supports most types of laptop and desktop PC.		
Operating systems supported	Windows XP, Vista, Windows 7 MAC 10.5, 10.6, 10.7		

Network Standards	LTE /GSM/GPRS/EDGE/UMTS/HSPA/HSPA+
Transmission speed (Max)	LTE TDD: 68Mbps DL, 17Mbps UL HSUPA: 5.76Mbps UL HSDPA 42Mbps DL
Temperature	Storage: -40°C ~ +80°C
remperature	Operation:-10°C ~ +45°C
Dimension	94mm×37mm×14.5mm

be different.

Getting to know your device The following figure shows the appearance of the MF880T. It is only for your reference. The actual product may

LED to disease

LED Indicator		
Indication	Modem Status	
Red	Power on and Offline	
Blue	Registered to GSM/GPRS/EDGE/UMTS/HSPA/HSPA+	
Blue blinking	Registered to GSM/GPRS/EDGE/UMTS/HSPA/HSPA+ with data transmission	
Green	Registered to LTE	
Green blinking	Registered to LTE with data transmission	

Indicator

4. (U)SIM card slot

Postcode: 518057

ZTE CORPORATION NO. 55, Hi-tech Road South, ShenZhen, P.R.China

Hardware Installation

1. Put finger on the bottom finger grip, and then lift the front cover of the modem to release and remove.

Do not open the front cover rudely so as to avoid the damage of the front cover.

Insert the SIM/USIM card into the SIM/USIM card slot.

Insert the SIM/USIM card with the metal contact area facing downwards into the slot, and then push SIM/USIM

card as far as possible, shown as the following picture. 3. Put the front cover of the modem flatly upon the body of modem. Direct the front cover towards the locking





Connect the Modem to your laptop or desktop PC.

Warning and Notice

To the owner

using the modem if necessarv.

medical device before using the modem.

Rotate the USB connecter and plug the modem firmly into a USB port on your computer.

You can rotate the USB connector from two axis. Working range for the first axle of rotating USB connector is 0-180 degree, for the second axle, it is -90 - 90 degree. To avoid damage to the USB connector, do not use

excessive force to do the rotation while using. Plug the USB connector into your computer's USB port and make sure that it is tightly inserted.



observe and obey all warning signs and switch off your modem in these conditions.

The use of electronic transmitting devices is forbidden in aircrafts, at petrol stations and in hospitals. Please

Some electronic devices are susceptible to electromagnetic interference sent by modem if inadequately

Operating of laptop and desktop PCs and the modem may interfere with medical devices like hearing aids

and pacemakers. Please always keep them more than 20 centimeters away from such medical devices

Be aware of the usage limitation when using a modem at places such as oil warehouses or chemical

factories, where there are explosive gases or explosive products being processed. Turn off your modern if

when they are turned on. Turn the modem off if necessary. Consult a physician or the manufacturer of the

shielded, such as the electronic system of vehicles. Please consult the manufacturer of the device before

Do not touch the inner antenna area if not necessary. Otherwise it will affect your modem's performance.

Store the modem out of the reach of little children. The modem may cause injury if used as a toy.

Using your USB Modem

Limited Warranty

waves. Otherwise it may influence signal reception.

inside and outside the modem, so don't use it until it becomes dry.

This warranty does not apply to defects or errors in the Product caused by:

Reasonable abrasion.

Do not touch the metallic parts of the modem so as to avoid a burn, when the modem is working.

The modem is not waterproof. Please keep it dry and store in a shady and cool place.

No dismantling by non-professionals and only qualified technicians can undertake repair work

Operating temperature range of -10°C ~ +45°C and humidity range of 5% ~ 95% are recommended.

Please use original accessories or accessories that are authorized. Using any unauthorized accessories

Avoid using the modem near or inside metallic structures or establishments that can emit electromagnetic

may affect your modem's performance, and violate related national regulations about telecom terminals.

 End User's failure to follow ZTE's installation, operation or maintenance instructions or procedures. iii. End User's mishandling, misuse, negligence, or improper installation, disassembly, storage, servicing operation of the Product.

iv. Modifications or repairs not made by ZTE or a ZTE-certified individual.

How to get help v. Power failures, surges, fire, flood, accidents, actions of third parties or other events outside ZTE's reasonable control.

vi. Usage of third-party products, or usage in conjunction with third-party products provided that such defects are due to the combined usage.

vii. Any other cause beyond the range of normal usage intended for the Product.

End User shall have no right to reject or return the Product, or receive a refund for the Product from ZTE under

the above-mentioned situations. This warranty is End User's sole remedy and ZTE's sole liability for defective or nonconforming items, and is in lieu of all other warranties, expressed, implied or statutory, including but not limited to the implied

warranties of merchantability and fitness for a particular purpose, unless otherwise required under the mandatory provisions of the law.

Limitation of Liability ZTE shall not be liable for any loss of profits or indirect, special, incidental or consequential damages resulting from or arising out of or in connection with using of this product, whether or not ZTE had been advised, knew or should have known of the possibility of such damages, including, but not limited to lost profits, interruption of business, cost of capital, cost of substitute facilities or product, or any downtime cost.

You can get Help by:

Sending E-mail to mobile@zte.com.cn

Calling Service Hotline: 18001030405

Visiting http://www.airtel.in/4G