ZTE S170 CDMA 1X Digital Mobile Phone **Quick Start Guide**

ZTE CORPORATION

NO. 55. Hi-tech Road South, ShenZhen, P.R.China

Tel: +86-755-26779999 URL: http://www.zte.com.cn

E-mail: mobile@zte.com.cn

LEGAL INFORMATION

Copyright © 2012 ZTE CORPORATION.

All rights reserved.

No part of this publication may be excerpted, reproduced, translated or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation.

The manual is published by ZTE Corporation. We reserve the right to make modifications on print errors or update specifications without prior notice.

Version No.: R1.0 Edition Time: April 2012 Manual No.: 079584504341

Postcode: 518057

Phone Overview



Key Functions

Key Function Description			
Call Key	Make or answer a call. Press the Call Key in standby mode to enter All Calls list.		
End Key	 End an active call or reject a call. Long press to Power on/Power off. Exit from any interface to standby mode. 		
Left Soft Key	 Enter main Menu in standby mode. Switch to the options at lower left of the LCD. 		

Enter All of Contacts in standby mode. Switch to the options at lower right of the LCD. Move the cursor up, down, left and right. In standby mode. Used as hot keys to enter the designated functions. In Contacts list, press the Left key or Right key

to switch groups. Press the Left key or Right key to adjust volume in conversation. Used as direction keys in games. Press and hold the Down Key to turn on/off the Confirm the commands and options selected. Confirm the character chosen while character Kev in numbers or characters.

Press and hold the 0 kev to input + in standby 0 ~ 9 Number

Press and hold to make a Speed Dial call (1-9) in standby mode. Press to enter corresponding submenu. Press the # Key to select text mode when Press the # Key in standby mode to enable/ disable vibrate mode.

Press and hold the * Key in standby mode to lock phone's keypad. Insert the UIM card as shown below

Press the * Key once to enter symbols in text input mode.

Inserting the UIM Card

Charging Your Phone

. Insert the lead from the charger to the socket, and connect the

2. After the completion of charging, disconnect the charger from the

charger to a standard wall AC socket.

phone and AC socket.

Open the Back Cover

Remove the back cover as shown below.



Installing the Battery

Install the battery as shown below.



Switching On/Off

- . Press and hold the **End Key** to switch on/off your phone.
- 2. The phone will automatically search for available networks.

Indicators and Icons

Icon	Indication	Icon	Indication
EAU	Signal strength		Battery indicator
\boxtimes	New SMS	₫,	Silence mode
0	Headset mode	\bigcirc	Alarm

Keypad Lock

If you activate Auto Keypad Lock, the keypad will be locked automatically according to your settings.

Press and hold the * **Key** to lock the keypad in standby mode. If you want to unlock the keypad, please press first the Right Soft

Kev. and then the * Kev.

If the call is coming when the keypad is locked, you can press the Call Kev to answer.

When the keypad is locked, calls may be possible to the official emergency number programmed into your device.

Phone code could prevent your phone from illegal use. The default

Text

Method

Press the **# Key** to select another text mode

press the * **Key** to enter the symbols mode.

letter key till the letter appears.

found in the dictionary.

except for the 123 mode.

Press the Navigation keys.

In the abc/ABC/Abc mode, press corresponding

In the **eZi** mode, press any key once to key in

any word. Predictive text input is based on a built-

in dictionary. When you have finished writing the

word and it is correct, confirm it by pressing the

OK Key. If the word is incorrect, press the **Up**

In the **123** mode, press digit key once.

key or Down key to view other matching words

Press the **Navigation keys** to switch symbols

1 key till the symbol (common symbols) appears

and press corresponding digit key. Or press the

Press the **0 key**, except for the **123** mode.

Operation

Phone Code

Your phone offers text input modes: abc. ABC. Abc. 123, eZi and phone code is 0000. Please change it to your own as soon as

Notes:

Please remember the code: otherwise some service expense may

PIN Code

PIN code could prevent your UIM card from illegal use. When PIN lock is on, you should enter the PIN code when powering on the handset again. The network provider offers you PIN code (four to eight digits). You should change PIN code as soon as possible for

PUK Code

Consecutive inputting wrong PIN code for three times can cause

If not, please contact your network service provider. Please change default PIN code to your own as soon as possible.

PIN and PUK

locking of UIM card. To unlock, you need PUK code.

PIN code and PUK code may be offered together with the UIM card.

Torch

Press and hold the **Down Key** to turn on/off the torch.

Basic Function

Herein after are basic functions of the phone

- Add Name: Add a new contact to your phone or UIM card.
- All List: View all contacts in all list, press the Left key or Right **kev** to view different groups. In all list, you can search for a contact by entering the key words, press the **OK Key** to view the details. Select **Option** to do more operations.
- Groups: View/edit groups and set group ringer.
- Speed Dial: View speed dial list and you can set speed dial. In standby mode, press and hold the number key to dial the corresponding call.
- Memory Status: View Number of entries saved and maximum number of entries capacity in phone and UIM card.

- New Message: Send a new message to other mobile phones' number. The message could be send to multi-receivers. See "Text" for more instructions of writing text and character. Select **Option** to insert contact details and message template when you edit a message.
- Inbox/Drafts/Outbox/Sent: Read messages in Inbox/Drafts/
- Recorder Message Settings: Change the general and SMS settings
- Message Template: Some common used messages preformatted in phone. You can edit or send them.
- **Delete Message**: You can choose to delete the messages in the inbox, drafts, outbox, sent or delete them together.

Memory Status: Check the storage status of the phone/UIN

- · Call History: View call's log. Select Option, you can do more
- Call Duration: Check the call duration.

- Profile: Select the mode of profile Silent/Vibrate/General/ Outdoor/Meeting/Flight to edit it.
- Display Settings: Change the settings of Screen/Theme/Keypad automatically.
- Phone Settings: Set the language/shortcut/auto keypad lock/ power save/auto power on/off of the phone and view the version frequency to set channel manually.
- list/voice privacy/international dial settings.
- Time & Date Settings: Set the time and date format.
- Security Settings: Change the settings about the phone code, PIN code, restore factory settings and clear user data.

Special Functions

Herein after are special functions of the phone.

- Select Left Soft Key [Menu] > Tools > Voice Recorder
- Select Option > Settings to set the recorder parameters
- 3. Press the **OK Key** to start recording your voice memo.
- 4. Press the Left Soft Key [Pause] to pause, press the Left Soft perform corresponding operations. Key [Continue] to resume recording.

Press the **Right Soft Key [Stop]** to stop recording, and then the voice memo is saved automatically.

- is a bit wet or anti-static. Do not use harsh chemical cleaning Compatible earphone or component is necessary for the radio solvents or strong detergents to clean it. Turn off your phone
- You can listen to radio by the handset.
- 1. Insert the earphone compatible with your handset.
- 2. In standby mode, select Left Soft Key [Menul > Tools > FM Using the phone near electrical appliances such as TV. Player, the radio will be started. telephone, radio and personal computer can cause interference.
- Select Left Soft Key [Option] >Auto Search to search channels which affects the function of the phone. Do not expose your mobile phone to direct sunlight or store it in
- Or select Left Soft Key [Option] > Enter Frequency to input the hot areas. High temperatures can shorten the life of electronic

General Care

before you clean it.

can break internal circuit boards.

Do not charge the mobile phone without battery.

 Prevent liquid from leaking into your phone Call Settings: Set the call/answer/call information reminder/black Please select suitable volume while listening. Do not drop, knock or harshly treat your phone. Rough handling

Press the **OK Key** to play it.

usage.

- Continuous high volume may be harmful to your ear.

- · Calendar: View calendar and schedule events. Do not store battery in hot areas or dispose of it in a fire to avoid
- · Games: Select one game and play it.
- · Alarm: Set alarm alert time.
- Store the phone out of the reach of little children. The phone may · Calculator: Execute basic math calculation. cause injury if used as a toy.
- Stopwatch: Stopwatch timing.
- Notepad: Create note as memos.
- Unit Converter: Make unit converter.
- . World Time: View times of the other cities in the world and because even if your phone is in standby mode, it still transmits radio frequency (RF) energy. Therefore, power off your phone if
- · File Manager: Organize your files in folders.

Do not touch the antenna while calling. Otherwise it will affect

Safety Information

If you want to clean your phone, please use clean fabric that

Be aware of the usage limitation when using a mobile phone at

places such as oil warehouses or chemical factories, where there

are explosive gases or explosive products being processed

- the quality of calling and waste battery energy. The damaged antenna will cause slight burn while touching your skin.
- Do not put other things on the terminal to avoid overlaying use phone at least 20 cm or as far away as you can from TV set, radio and other automated office equipment so as to avoid Keep the antenna free from obstructions and position the
- Use a wireless hands-free system (headphone, headset) with a As your mobile phone can produce electromagnetic field, do not low power Bluetooth emitter. place it near magnetic items such as computer disks.

security measures as follows:

Take it with you as you can.

Road Safety

Set PIN code of the UIM card.

- Make sure the cell phone has a low SAR.
- Keep your calls short or send a text message (SMS) instead This advice applies especially to children, adolescents and pregnant women.
- Use cell phone when the signal quality is good.

the battery. Please keep ESN/MEID number for future use.

antenna straight up. This will ensure best call quality.

 People having active medical implants should preferably keep **Emergency Service** the cell phone at least 15 cm away from the implant.

 If your mobile phone is lost or stolen, please report to your to enter emergency phone number, and then press Call Key to make service provider or agencies of banning the use of your lost a phone call. Do not short-circuit the battery, as this can cause excessive heat phone, which will protect you from economic losses resulted from

Third Party Equipment unauthorized use. You need to provide the phone's ESN/MEID

Hospital Safety

electromagnetic interference.

number labeled. You can see ESN/MEID number after removin To protect your mobile phone from illegal use, please take the violate related national regulations about telecom terminals. even endanger vour body.

Please use original accessories or accessories that are

medical device before using the phone.

- Do not connect the phone with other unauthorized peripheral equipments.
- Pay attention to traffic safety. Do not use your mobile phone while driving. Park before making or answering a call.

Vehicles Equipped with an Airbag Some electronic devices are susceptible to electromagnetic Before making or answering a call, you should pay attention to

- interference sent by phone if inadequately shielded. Please the local laws about using wireless mobile phones and take them into account in practical use. Safety airbag, brake, speed control system and oil eject system
- shouldn't be affected by wireless transmitting. If you do meet problems above, please contact your automobile provider. · Operating of mobile phone may interfere with medical devices Please power off your mobile phone when refueling your
- like hearing aid and pacemaker. Please always keep the mobile automobile, and so do the place where duplex wireless phone more than 20 centimeters away from such medical equipments are banned. Don't put your phone together with devices when the phone is powered on. Do not carry the flammable or explosive items, as inner spark may cause fire. mobile phone in the breast pocket. Power the mobile phone

Aircraft Safety

off if necessary. Consult a physician or the manufacturer of the

- Follow the restrictions in aircraft. Wireless devices can cause interference in aircraft.
- On occasion of emergent calling, keep your phone in status of power In order to protect airplane's communication system from on and in area of service. On the condition of standby, press the key interference, it is never allowed to use mobile phone when it is in flight. Using mobile phone before the plane taking off should get aircrew's permission according to safety regulations.

Radio Frequency (RF) Energy

- exposure to radio waves. authorized by the manufacturer. Using any unauthorized This phone is designed and manufactured not to exceed the accessories may affect your mobile phone's performance, and
 - emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government: The exposure standard for wireless mobile phones employs a unit
- of measurement known as the Specific Absorption Rate, or SAR The SAR limit set by the FCC is 1.6W/kg. *Tests for SAR are Do not attempt to disassemble the mobile phone and battery by conducted using standard operating positions accepted by the FCC
- yourself. Non-expert handling of the devices may damage them.

highest certified power level, the actual SAR level of the phone while

power output.

operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the poser required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the

FCC when tested for use at the ear is 0.911 W/kg and when worn

on the body, as described in this user guide, is 0.815 W/kg (Body-

worn measurements differ among phone models, depending upon

tested frequency bands. Although the SAR is determined at the

- Water or any other liquid damage The highest SAR value for the model phone as reported to the
 - Any unauthorized repair or modification

provisions of the law.

- Power surges, lightning damage, fire, flood or other events
- Use of the product with any unauthorized third party products such as generic chargers
- While there may be differences between the SAR levels of various phones and at various positions, they all meet the government Please power off your mobile phone before taking on till landing. requirement.
- The FCC has granted an Equipment Authorization for this mode phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of http://www.fcc.gov/oet/ea/fccid/ after searching on This model phone meets the government's requirements for

available enhancements and FCC requirements.)

For body worn operation, this phone has been tested and meets the FCC RF exposure guidelines for use with an accessory that contains

FCC ID: Q78-ZTECS170.

no metal and the positions the handset a minimum of 1.5 cm from the body. Use of other enhancements may not ensure compliance with FCC RF exposure guidelines. If you do no t use a body-worn accessory and are not holding the phone at the ear, position the handset a minimum of 1.5 cm from your body when the phone is with the phone transmitting at its highest certified power level in all switched on.

The warranty does not apply to defects or errors in the product

Warranty Terms

Reasonable abrasion.

- Misuse including mishandling, physical damage, improper installation, unauthorized disassembly of the product.

 - outside ZTE's reasonable control.

 - Any other cause beyond the range of normal usage for products. End User shall have no right to reject, return, or receive a refund for any product from ZTE under the above-mentioned situations.

This warranty is end user's sole remedy and ZTE's sole liability for defective or nonconforming items, and is in lieu of all other warranties, expressed, implied or statutory, including but not limited to the implied warranties of merchantability and fitness for a particular purpose, unless otherwise required under the mandatory

Limitation of Liability

ZTE shall not be liable for any loss of profits or indirect, special, incidental or consequential damages resulting from or arising out of or in connection with using this product, whether or not ZTE had been advised, knew or should have known the possibility of such damages. Refer to the enclosed warranty card for full warranty and service information.