

**GSM Dual-Band GPRS Digital
Mobile Phone
User Manual**

The manual is applicable for R235 mobile phone

LEGAL INFORMATION

Copyright © 2010 by ZTE CORPORATION

All Rights Reserved.

No part of this publication may be excerpted, reproduced, translated or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation.

The manual is published by ZTE Corporation. We reserve the right to make modifications on print errors or update specifications without prior notice.

Version No. : R1.0

Edition Time : 20101216

Manual No. : 079584502371

Contents

Security	4	Sending MMS	25
Safety Precautions	4	Receiving messages	26
Limitation of Liability	12	Call History	27
Key functions	13	Personalizing phone	27
Indicator icons.....	16	User Profiles	29
Battery	16	Setting alarm.....	29
Inserting SIM card	19	View Image.....	29
Inserting memory card	20	Play Music.....	30
Powering on/ off phone	21	File Manager	30
Writing text.....	21	WAP	31
Adding a contact	23	FM Radio	32
Making and receiving calls...24			
Sending SMS	24		

Security

- To protect your mobile phone from illegal use, take the security measures as follows:
 - Set PIN codes of the SIM card.
 - Set handset lock code.
 - Set call restrictions.

Safety Precautions

This section includes some important information on safe and efficient operation. Please read this information before using the phone.

Operational Precautions

- Please use your phone properly. When making or receiving a call, please hold your phone as holding a wireline telephone. Make sure that the phone is at least one inch (about two point five centimeters) from your body when transmitting.

- Do not touch the antenna when the phone is in use. Touching the antenna area affects call quality and may cause the phone to operate at a higher power level than needed.
- Some people may be susceptible to epileptic seizures or blackouts when exposed to flashing lights, such as when watching television or playing video games. If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult your doctor before playing video games on your phone or enabling a flashing-light feature on your phone. (The flashing-light feature is not available on all products.)
- Keep the phone out of the reach of small children. The phone may cause injury if used as a toy.

Precautions While Driving

- Please pay attention to the traffic safety. Check the laws and regulations on the use of your phone in the area where you drive. Always obey them.
- Use hands-free function of the phone, if available.

- Pull off the road and park before making or answering a call if conditions require.

Precautions for Medical Devices and Facilities

- When using your phone near pacemakers, please always keep the phone more than eight inches (about twenty centimeters) from the pacemaker when the phone is switched on. Do not carry the phone in the breast pocket. Use the ear opposite the pacemaker to minimize the potential for interference. Switch off the phone immediately if necessary.
- Some phones may interfere with some hearing aids. In the event of such interference, you may consult your hearing aids manufacturer to discuss alternatives.
- If you use any other personal medical device, please consult the manufacturer of your device to determine if it is adequately shielded from RF energy.
- In those facilities with special demand, such as hospital or health care facilities, please pay attention to the restriction on the use of mobile phone. Switch off your phone if required.

Mobile Phone

- Please use original accessories or accessories approved by the phone manufacturer. Using any unauthorized accessories may affect your mobile phone's performance, damage your phone or even cause danger to your body and violate related local regulations about telecom terminals.
- Turn off your phone before you clean it. Use a damp or anti-static cloth to clean the phone. Do not use a dry cloth or electrostatically charged cloth. Do not use chemical or abrasive cleaners as these could damage the phone.
- As your mobile phone can produce electromagnetic field, do not place it near magnetic items such as computer disks.
- Using the phone near electrical appliances such as TV, telephone, radio and personal computer can cause interference.
- Do not expose your mobile phone to direct sunlight or store it in hot areas. High temperatures can shorten the life of electronic devices.
- Keep your phone dry. Any liquid may damage your phone.

- Do not drop, knock or harshly treat the phone. Rough handling can break internal circuit boards.
- Do not connect the phone with any incompatible enhancement.
- Do not attempt to disassemble the mobile phone or battery.
- Do not store the phone with flammable or explosive articles.
- Do not charge the mobile phone without battery.

Precautions for Potentially Explosive Atmospheres

- Switch off your phone prior to entering any area with potentially explosive atmospheres, such as fueling areas, fuel or chemical transfer or storage facilities.
- Do not remove, install, or charge batteries in such areas. Spark in a potentially explosive atmosphere can cause an explosion or fire resulting in bodily injury or even death.
- To avoid possible interference with blasting operations, switch off your phone when you are near electrical blasting caps, in a blasting area, or in areas posted "Turn off electronic devices." Obey all signs

and instructions.

Precautions for Electronic Devices

- Some electronic devices are susceptible to electromagnetic interference sent by mobile phone if inadequately shielded, such as electronic system of vehicles. Please consult the manufacturer of the device before using the phone if necessary.

Safety and General Use in Vehicles

- Safety airbag, brake, speed control system and oil eject system shouldn't be affected by wireless transmission. If you do meet problems above, please contact your automobile provider. Do not place your phone in the area over an airbag or in the airbag deployment area. Airbags inflate with great force. If a phone is placed in the airbag deployment area and the airbag inflates, the phone may be propelled with great force and cause serious injury to occupants of the vehicle.
- Please turn off your mobile phone at a refueling point, and the same to the place where the use of two-way radio is prohibited.

Aircraft Safety

- Please turn off your mobile phone before the airplane takes off. In order to protect airplane's communication system from interference, it is forbidden to use mobile phone in flight. Safety regulations require you to have permission from a crew member to use your phone while the plane is on the ground.
- If the mobile phone has the function of automatic timing power-on, please check your alarm setting to make sure that your phone will not be automatically turned on during flight.

Battery Use

- Do not short-circuit the battery, as this can cause the unit to overheat or ignite.
- Do not store battery in hot areas or throw it into fire. Otherwise, it will cause explosion.
- Do not disassemble or refit the battery. Otherwise, it will cause liquid leakage, overheating, explosion and ignition of the battery.

- Please store the battery in a cool dry place if you don't use it for a long period.
- The battery can be recharged for hundreds of times, but it will eventually wear out. When the operating time (talk time and standby time) is noticeably shorter than normal, it is time to replace it with a new one.
- Please stop using the charger and battery when they are damaged or show evidence of aging.
- Return the worn-out battery to the provider or dispose of it in accordance with environment regulations. Do not dispose of it in household rubbish.
- Please use original batteries or batteries approved by the phone manufacturer. Using any unauthorized battery may affect your handset performance or may cause danger of explosion, etc.



Warning: If the battery is damaged, do not discharge it. If the leakage does come into contact with the eyes or skin, wash thoroughly in clean water and consult a doctor.

Limitation of Liability

ZTE shall not be liable for any loss of profits or indirect, special, incidental or consequential damages resulting from or arising out of or in connection with using this product, whether or not ZTE had been advised, knew or should have known the possibility of such damages. The user should refer to the enclosed warranty card for full warranty and service information.

Note: The pictures and icons shown in the manual are just schematic drawings for function demonstration. If they are inconsistent with your handset, please take your handset as the standard. If the inconsistency exists in the manual because of the handset function updating, please refer to the follow-up public information from ZTE CORPORATION.

Key functions




Function	Description
Left soft key	Perform the function indicated at the left bottom of the screen.
Right soft key	Perform the function indicated at the right bottom of the screen.
Centre key	Confirm actions and make selections.
4-Way Navigation keys	<p>These keys (Up, Down, Left and Right) allow for navigation through menu options and quick accessing to some function menus.</p> <p>You can customize the dedicated key settings of 4-Way Navigation keys in the standby mode.</p>
Send key	Dial a phone number or answer a call, or view the call history.
End/Power key	Press to exit to the standby mode.

Function	Description
	Hold to switch on/off the phone.
Alpha numeric keys	Enter characters 0-9 and the alphabets .
USB port	For charging the battery and connect to the PC.
Earpiece	Listen to a phone call.
Camera key	Press to enable the camera in the standby mode.
Volume keys	Press to adjust the volume.

Note: In this User Manual, “press a key” means to press the key and release it immediately, while “hold a key” means to press the key for at least two seconds and then release it. To lock/unlock the keypad, press the **Left soft key** and then the *** key**.

Indicator icons

 Signal strength


 New SMS

 Missed call

 Ring

 Battery status


 GPRS in use

 Call diverting

 New MMS

 Vibration

 Silent

 Alarm clock set

 Keypad locked

Battery


The lithiumion battery of the mobile phone can be immediately used after unpacking.

Install battery

1. Remove the battery cover.
2. Insert the battery carefully with the contacts located against the gold


springs. The battery will only fit one way.

3. Close the case by locating the top of the plastic cover into the grooves and gently pushing the cover down to close it.

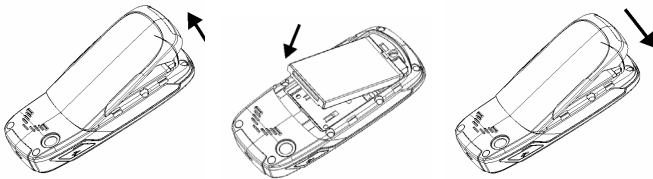

Remove battery

1. Make sure that your mobile phone is switched off.
2. Remove the battery cover.
3. Pull the battery up and remove it from the mobile phone.

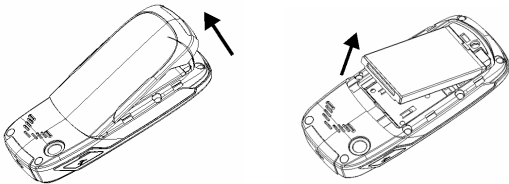

Charge battery

Your phone is powered by a rechargeable battery. For maximum battery performance, it is recommended that you first use up the battery power and then charge it completely. A new battery's full performance is achieved only after three complete charge and discharge cycles.

- Connect your travel adapter to the USB port of your mobile phone.
- Connect the other end of the travel adapter to the mains socket.
- If you charge the battery when the phone is switched off, the battery indicator appears with the bars flashing. If you charge the battery

when the phone is switched on, the battery indicator appears with a lightning bolt.


- When the battery is fully charged, disconnect the charger.

Inserting SIM card

You want a mobile phone that is sophisticated yet easy to use and here it is in your hands! Naturally you are eager to start using it, but first you need to insert the SIM card.

Insert the SIM card as follows:

- Make sure that the phone is switched off and the charger is disconnected from the phone.
- Turn the phone over and remove the battery cover.
- Remove the battery if it is already installed.
- Hold your SIM card with the cut corner oriented as shown and then slide it into the card holder with the gold-colored contacts facing downward.

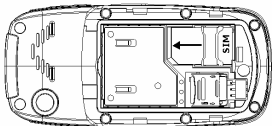

What is a SIM card?

Every mobile phone has a SIM card (Subscriber Identity Module). This is a micro-chip that holds your personal information such as names and phone numbers. Your phone won't work without it. If you already have contacts on your SIM card, they can be transferred in most cases.

Inserting memory card

You can use memory card to expand the storage of the phone. You can store or copy files such as videos, photos, music, and so on.

Do not take out the card or switch off the phone while transmitting or storing data, which may cause data loss or damage to the phone or the card.

Insert the memory card as follows:

- The memory card slot is beside the SIM card holder. Open the battery cover and remove the battery. Insert the card with the metal contacts facing down until it clicks to the right position.

Powering on/ off phone

Make sure that your SIM card is in your mobile phone and that the battery is charged.

Please hold the **End/Power key** to power on/off the phone. The phone will automatically search for the network.

Writing text

- Change input mode: Press the **# key** to change the input mode (input modes: eZi EN, eZi en, eZi Abc, ABC, abc and 123).
- Input Letters: In ABC/abc mode, constantly press the corresponding letter key till the letter appears.

- **Input Words:** In eZi EN/eZi en/eZi Abc mode, input any letter with a single key press. Press each key only once for every letter. The word changes after each key stroke. Predictive text input is based on a built-in dictionary. When you have finished writing the word and it is correct, confirm it by pressing the **0 key** or the **Centre key**. If the word is incorrect, press the **Up/Down key** to view other matching words found in the dictionary. Press the **Navigation keys** to move the cursor.
- **Input Digits:** In 123 mode, press digit key once to input a digit. In ABC/abc mode, constantly press the digit key until the number appears.
- **Input Symbol:** Press the *** key** to enter a symbol. In ABC/abc mode, constantly press the **1 key** till the required symbol (common symbols) appears.
- **Input Space:** Press the **0 key** to input space. It does not work in 123 mode.
- **Delete Character:** Press the **Right soft key** to clear a character. Hold the **Right soft key** to delete all characters and clear the display.
- **Move Cursor to left or right:** Press the **Left/Right key** to move the cursor to left or right.

Adding a contact

There are some numbers that you may want to call again and again, so it makes sense to add these numbers to your contact list. You can then access these numbers quickly and easily.

- Go to **Menu**→**Phone Book**→**Add New Entry**.
- Select to save the number to **To SIM** or **To Phone**.
- Move to **Name** and press the **Edit** or the **Centre key**, then enter a name and press the **Option** or the **Centre key**. Choose **Done** to confirm the name.
- Move to **Number** and enter the phone number.
- You can also save a number right after you've made or received a phone call or a text message from someone who is not yet in your contact list.
- To delete someone from your contact list, first select the name, then press the **Option** and choose **Delete**.

Making and receiving calls

The most basic way to make a call is to input the number in the standby mode and press the **Send key**. You can also make a call from the contact list.

- To call someone: Go to **Menu**→**Phone Book**, and then select **Quick Search**. Use the **Up/Down key** to find the name of the person you want to call. You can also type in the first letter of the name of the person you want to call, and press the **Send key**.
- To receive a call, press the **Send key**.
- To end a call, press the **End/Power key**.

Make sure that you are in an area with sufficient coverage to make calls. The strength of the network signal is indicated on the status bar of the screen.

Sending SMS

You can use your mobile phone to send and receive text messages.

1. Go to **Menu**→**Messages**→**SMS**→**Write Message**.
2. Write your message. For more information on writing, see section 'Writing text'.
3. Press **Option** to finish the editing.
To send to one recipient, select **Send**.
To send to more than one recipient, select **Send To Many** and **Search** the names from the contact list.
4. Enter the recipient's phone number or select from contact list. Then select **OK** to send the message.

Sending MMS

You can use your mobile phone to send and receive multimedia messages.

1. Go to **Menu**→**Messages**→**MMS**→**Write Message**.
2. Enter the phone number of one or more recipients in **To** by selecting **Edit**→**Add Number**. When you finish adding recipients, press **Done** to back to MMS editing screen.

To send a copy of this message to others, move up to the **Cc** and **Bcc** fields below the **To** field.

3. Enter the MMS **Subject**.
4. Move to **Edit Content** and press **Edit** to enter content for your MMS message.

Insert text directly on the screen.

Use **Option** to select add image/audio/video/attachment and so on.

5. When you finish editing content press **Option** and select **Done** to back to MMS editing screen.
6. When you press **Done** in the MMS editing screen, then select **Send Only** to send the message.

Receiving messages

Upon receiving a message, the mobile phone indicates with ringtone, prompt, or a new message icon.

1. Press the **Read** to open the new message. You can also go to Inbox

to read the message.

2. Use the **Up/Down key** to read the message.
3. While the message is open, use the **Option** to reply, delete, or forward the message. You can extract the sender's number and then call back the sender.

Call History

Go to **Menu**→**Call History**.

Dialed Calls, Received Calls and Missed Calls are saved in **Call History**. If the records are full, the earliest saved records will be deleted automatically.

Also, you can view **Call Time** and **Call Cost** in **Call History**.(**Call Cost** function need network supporting)

Personalizing phone

Go to **Menu**→**Settings**.

You can adjust various settings of your phone.

- Phone Setup: Set display characteristics, set schedule power on/off, set date and time, edit greeting text, set dedicated key, set speed dial, select auto update of date and time, select flight mode, set LCD backlight and keybacklight.
- Call Setup: Select to activate/deactivate call waiting, call divert, call barring, select to turn on/off the call time reminder and call time display,.
- Network Setup: Set the GPRS connection mode, set network selection.
- Security Setup: Security features protect you from illegal use of your phone and SIM card, including selecting to turn on/off the locking functions of SIM card, phone and keypad, set password for SIM card and your phone.

Note: You need to input the handset lock code to enter the security settings interface. The default lock code is 1234.

- Restore Factory Settings: Enter the phone lock code to restore to the factory settings. Some personal information might be lost if you use this function, so be careful.

User Profiles

You can select **Option**→**Activate** to activate a profile. Or you can select **Option**→**Customize** to edit a profile.

Setting alarm

Go to **Menu**→**Extras**→**Alarm**.

- Set alarm: Select an alarm and press **Edit** to set the corresponding features according to instructions.
- List alarms: Select an alarm and press **Edit**, you can view and edit the alarm clocks settings. You can also enable or disable the alarms.

View Image

Go to **Menu**→**Multimedia**→**Image Viewer**.

The images you want to view in Image viewer must be put in the **..\Photos** folder in the phone or memory card.

You can select an image and view it.

Image viewer supports: jpeg, jpg, bmp, gif.

Play Music

Go to **Menu**→**Multimedia**→**Audio Player**.

The audio you want to play in Audio player must be put in the ..\ My Music folder in the phone or memory card.

You can select an audio and play it.

In **List**, you can press **Option** to refresh list or make personal settings.

Audio player supports: AMR-NB, WAV, MP3, iMelody, MIDI.

File Manager

Go to **Menu**→**File Manager**. You can check all the folders in the phone or memory card, create new ones or rename, delete, or sort, etc. The files you download from the internet will be stored in these folders.

Note: When you select **Option**→**Format**, the data will be lost, so please be careful with this function.

WAP

Go to **Menu**→**Services**→**WAP**.

The WAP browser feature on your phone allows you to view internet content.

- You can view the homepage when it has been set or input the website address to view the web pages.
- The current website addresses can be saved as bookmarks on your phone.
- You can set the features of WAP browser.

FM Radio

Go to **Menu**→**Multimedia**→**FM Radio**.

With the radio, you can search for radio channels, listen to them, and save them on your device. Note that the quality of the radio broadcast depends on the coverage of the radio station in that particular area. The wired headset works as an antenna, so always connect the headset when using the radio. When you receive an incoming call while listening to the radio, the radio will be turned off temporarily.

You can scan for channels automatically or tune them manually. The channels can also be set by inputting valid frequencies.

To adjust the volume, press the **Up/Down key**.

The channels can be stored in channels list. Open the list to view the information of the saved channels.