

Telecom V9 Tablet

 


Quick Start Guide


Welcome to the Telecom V9 Quick Start Guide To get started please follow these simple steps...

1. Insert your SIM card

- Remove the battery cover:

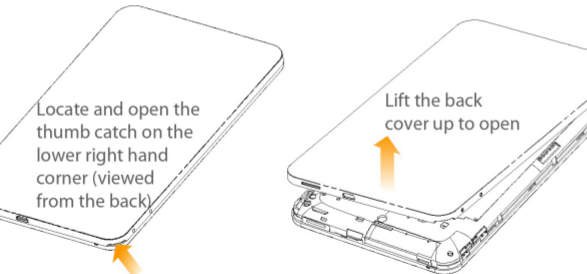


1

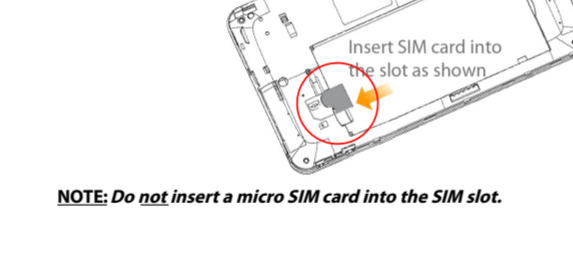

3

 - Insert your SIM card into the SIM slot. There is a diagram showing the correct orientation of the card printed above the SIM slot.

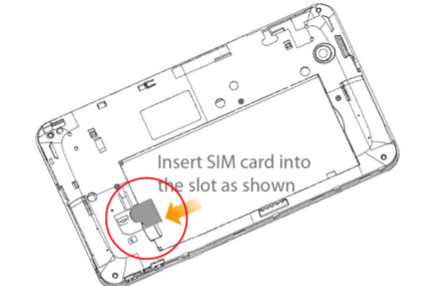


NOTE: Do not insert a micro SIM card into the SIM slot.

2


2. Insert your battery

- Insert the battery with the contacts located against the gold springs.
- Push the battery down into place.
- Replace the back cover fitting the top edge first.

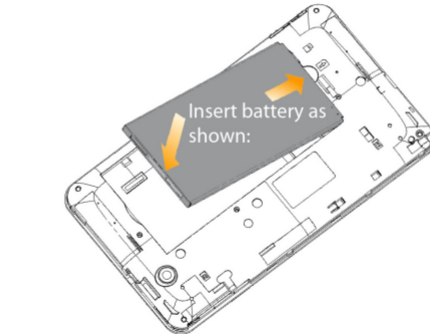

3. Power On your device


- Make sure your SIM card and battery are inserted.
- Press the **Power Key** to power on your tablet.
- Drag the unlock bar right to unlock the screen:

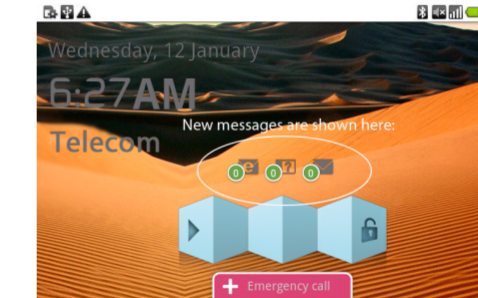

4



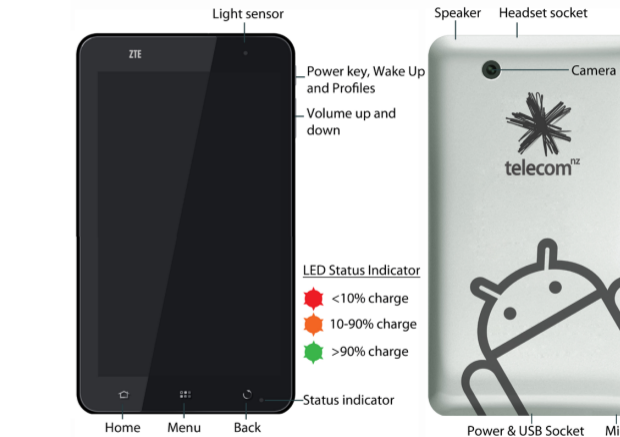 

- To power off your tablet, press and hold the Power Key, select Power off > OK.

Device Overview




5


Keys

Power 	Press & hold to power on your tablet. Press to switch to sleep mode. Press to wake up your tablet. Hold down for Profile options: Power off, Silent, Vibrate, or Airplane mode.
Home 	Tap to return to the Home Screen from any screen. Hold to see the recently used applications.
Menu 	Tap to get menu options for the current screen. Hold to open the quick search keypad.
Back 	Tap to go to the previous screen.
Volume	Use to control the volume Up or Down.


Charge your tablet

 The plug and socket are keyed so they only fit together one way. Normal charge time from flat is 3-4 hours.

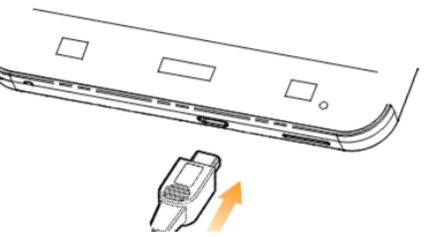

- Do NOT use excessive force which may damage the USB port.
- The tablet can also be charged by connecting to a computer using the USB lead supplied.
- When charging is completed, the battery full indicator  is shown on the status bar and the status LED is Green.
- Disconnect the charger when fully charged.

Quick Function Reference

Function	Directions
Add icons to the Home Screen Remove icons	Tap & hold on the Home Screen for the Add to Home Screen menu From Apps, tap & hold the desired App then position on the Home Screen Tap & hold icon, drag to the Trash bin to delete
Airplane Mode	Hold the power key for 2 seconds Select Airplane mode Check icon on task bar 
Alarm	Apps > Alarm > Menu Key > Add alarm. Configure using the on screen options
APN Settings	Settings > Wireless & networks > Mobile networks > Access Point Names > Press Menu to Add
Bluetooth	Settings > Wireless & networks > Bluetooth
Brightness	Settings > Sound & display > Brightness


Function	Directions
Call Divert	Settings > Call Settings > GSM/WCDMA call settings > Additional settings > Call forwarding
Caller ID	Settings > Call Settings > GSM/WCDMA call settings > Additional settings > Caller ID
Call Logs	Apps > Call logs
Camera & Camcorder	Apps > Camera Apps > Camcorder
Clear Browser Data & History	Apps > Browser > Menu Key > More > Settings Select from the available choices or choose Reset to default to erase all user data.
Clear Privacy Data	Settings > Privacy > Use My Location Settings > Privacy > Factory data reset
Copy Contacts (SIM backup)	Contacts > Menu Key > Import/Export Select from Import from SIM, Export to SIM, Import from SD card, Export to SD card
Email Setup	Email > Follow the wizard
Factory Reset	Settings > Privacy > Factory data reset

Function	Directions
File Manager	Apps > Filer
FM Radio	Apps > FM Radio
Keylock, Screen Timeout	1) Power Key 2) Swipe the Lock Bar from Left to Right 3) Settings > Sound & display > Screen timeout
Messages (SMS & MMS)	Messages Messages > Menu Key > Settings
Network Selection	Settings > Wireless & Network > Mobile network settings
Predictive Text	Messages > Dic, Yellow is enabled, white is Off
Ringtones	Settings > Sound & display > Phone ringtone Contacts > Menu Key > Options > Ringtone
Ring Volume	Settings > Sound & display > Ringer volume
Screen Calibration	Settings > Sound & display > Calibration
Security	Settings > Location & security > Set unlock pattern Settings > Location & security > Set up SIM card lock

Function	Directions
Speed Dial	Settings > Call settings > Speed dial (Key 1 cannot be set as it is pre-set for Voicemail)
Vibrate Mode	1) Settings > Sound & display > Phone vibrate 2) Messages > Menu Key > Settings > Vibrate 3) Press & hold the Power Key > Vibration Mode 4) Settings > Sound & display > Haptic feedback
Wi-Fi	Settings > Wireless & networks > Wi-Fi
Zoom	Browser > Menu > More > Settings > Default zoom Double Tap the image or use the zoom control in the top RHS.

Access the User Guide directly on your device

There is a copy of the User Guide stored on your device.

- Click on **Apps > Help** 
- Follow the on screen instructions to access the User Guide.
- Visit www.zte.co.nz for more information & FAQ's.