

**ZTE-G R228
Mobile Phone
User Manual**

LEGAL INFORMATION

Copyright © 2011 ZTE CORPORATION.

All rights reserved.

No part of this publication may be excerpted, reproduced, translated or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation.

The manual is published by ZTE Corporation. We reserve the right to make modifications on print errors or update specifications without prior notice.

Version No. : R1.0

Edition Time : 2011.09.07

Table of Contents

SECURITY	4	MAKING AND RECEIVING CALLS	26
SAFETY PRECAUTIONS.....	4	CALL CENTER.....	27
LIMITATION OF LIABILITY	12	SENDING AND RECEIVING	
KEY FUNCTIONS.....	13	MESSAGES	29
TURNING ON / OFF OR WAKING UP		SENDING AND RECEIVING EMAIL.....	32
YOUR PHONE	15	USER PROFILES	33
LOCKING / UNLOCKING THE KEYPAD		SETTINGS	34
.....	15	BLUETOOTH.....	37
STATUS BAR ICONS	16	APPLICATIONS	39
WRITING TEXT	16	MULTIMEDIA.....	40
BATTERY	18	JAVA MIDLETS	44
INSERTING THE SIM CARD	22	SERVICES	44
INSERTING THE MEMORY CARD.....	23		
CONTACTS	24		

Security

- To protect your mobile phone from illegal use, take the security measures as follows:
 - Set PIN codes of the SIM card.
 - Set handset password.
 - Set call restrictions.

Safety Precautions

This section includes some important information on safe and efficient operation. Please read this information before using the phone.

Operational Precautions

- Please use your phone properly. When making or receiving a call, please hold your phone as holding a wireline telephone. Make sure that the phone is at least one inch (about two point five centimeters) from your body when transmitting.
- Do not touch the antenna when the phone is in use. Touching the antenna area affects call quality and may cause the phone to operate at a higher power level than needed.
- Some people may be susceptible to epileptic seizures or blackouts when

exposed to flashing lights, such as when watching television or playing video games. If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult your doctor before playing video games on your phone or enabling a flashing-light feature on your phone. (The flashing-light feature is not available on all products.)

- Keep the phone out of the reach of small children. The phone may cause injury if used as a toy.

Precautions While Driving

- Please pay attention to the traffic safety. Check the laws and regulations on the use of your phone in the area where you drive. Always obey them.
- Use hands-free function of the phone, if available.
- Pull off the road and park before making or answering a call if conditions require.

Precautions for Medical Devices and Facilities

- When using your phone near pacemakers, please always keep the phone more than eight inches (about twenty centimeters) from the pacemaker when the phone is switched on. Do not carry the phone in the breast pocket. Use the ear opposite the pacemaker to minimize the potential for interference. Switch off the phone immediately if necessary.
- Some phones may interfere with some hearing aids. In the event of such interference, you may consult your hearing aids manufacturer to discuss alternatives.
- If you use any other personal medical device, please consult the manufacturer of your device to determine if it is adequately shielded from RF (radio frequency) energy.
- In those facilities with special demand, such as hospital or health care facilities, please pay attention to the restriction on the use of mobile phone. Switch off your phone if required.

Mobile Phone

- Please use original accessories or accessories approved by the phone manufacturer. Using any unauthorized accessories may affect your mobile phone's performance, damage your phone or even cause danger to your body and violate related local regulations about telecom terminals.
- Turn off your phone before you clean it. Use a damp or anti-static cloth to clean the phone. Do not use a dry cloth or electrostatically charged cloth. Do not use chemical or abrasive cleaners as these could damage the phone.
- As your mobile phone can produce electromagnetic field, do not place it near magnetic items such as computer disks.
- Using the phone near electrical appliances such as TV, telephone, radio and personal computer can cause interference.
- Do not expose your mobile phone to direct sunlight or store it in hot areas. High temperatures can shorten the life of electronic devices.
- Keep your phone dry. Any liquid may damage your phone.
- Do not drop, knock or harshly treat the phone. Rough handling can break internal circuit boards.

- Do not connect the phone with any incompatible enhancement.
- Do not attempt to disassemble the mobile phone or battery.
- Do not store the phone with flammable or explosive articles.
- Do not charge the mobile phone without battery.
- Some electronic devices are susceptible to electromagnetic interference sent by phone if inadequately shielded. Please use phone at least 20 cm or as far away as you can from TV set, radio and other automated office equipment so as to avoid electromagnetic interference.
- Operating phone may interfere with medical devices like hearing aides and pacemakers, or other medical devices in hospital. Consult a physician or the manufacturer of the medical device before using phone.
- Be aware of the usage limitation when using phone at places such as oil warehouses, or chemical factories, where there are explosive gases or explosive products being processed, because even if your phone is in idle state, it still transmits radio frequency (RF) energy. Therefore, power off your phone if required.
- Do not touch the antenna while calling. Otherwise it will affect the quality of calling and waste battery energy. The damaged antenna will cause slight burn while touching your skin.

- Keep phone out of the reach of small children. Phone may cause injury if used as a toy.
- Do not put other things on the terminal to avoid overlaying radiator.
- Keep the antenna free from obstructions and position the antenna straight up. This will ensure best call quality.

Precautions for Potentially Explosive Atmospheres

- Switch off your phone prior to entering any area with potentially explosive atmospheres, such as fueling areas, fuel or chemical transfer or storage facilities.
- Do not remove, install, or charge batteries in such areas. Spark in a potentially explosive atmosphere can cause an explosion or fire resulting in bodily injury or even death.
- To avoid possible interference with blasting operations, switch off your phone when you are near electrical blasting caps, in a blasting area, or in areas posted "Turn off electronic devices." Obey all signs and instructions.

Precautions for Electronic Devices

- Some electronic devices are susceptible to electromagnetic interference sent by mobile phone if inadequately shielded, such as electronic system of vehicles. Please consult the manufacturer of the device before using the phone if necessary.

Safety and General Use in Vehicles

- Safety airbag, brake, speed control system and oil eject system shouldn't be affected by wireless transmission. If you do meet problems above, please contact your automobile provider. Do not place your phone in the area over an airbag or in the airbag deployment area. Airbags inflate with great force. If a phone is placed in the airbag deployment area and the airbag inflates, the phone may be propelled with great force and cause serious injury to occupants of the vehicle.
- Please turn off your mobile phone at a refueling point, and the same to the place where the use of two-way radio is prohibited.

Aircraft Safety

- Please turn off your mobile phone before the airplane takes off. In order to protect airplane's communication system from interference, it is forbidden to use mobile phone in flight. Safety regulations require

you to have permission from a crew member to use your phone while the plane is on the ground.

- If the mobile phone has the function of automatic timing power-on, please check your alarm setting to make sure that your phone will not be automatically turned on during flight.

Battery Use

- Do not short-circuit the battery, as this can cause the unit to overheat or ignite.
- Do not store battery in hot areas or throw it into fire. Otherwise, it will cause explosion.
- Do not disassemble or refit the battery. Otherwise, it will cause liquid leakage, overheating, explosion and ignition of the battery.
- Please store the battery in a cool dry place if you don't use it for a long period.
- The battery can be recharged for hundreds of times, but it will eventually wear out. When the operating time (talk time and standby time) is noticeably shorter than normal, it is time to replace it with a new one.
- Please stop using the charger and battery when they are damaged or show evidence of aging.

- Return the worn-out battery to the provider or dispose of it in accordance with environment regulations. Do not dispose of it in household rubbish.
- Please use original batteries or batteries approved by the phone manufacturer. Using any unauthorized battery may affect your handset performance or may cause danger of explosion, etc.


Warning: If the battery is damaged, do not discharge it. If the leakage does come into contact with the eyes or skin, wash thoroughly in clean water and consult a doctor.

Limitation of Liability

ZTE shall not be liable for any loss of profits or indirect, special, incidental or consequential damages resulting from or arising out of or in connection with using this product, whether or not ZTE had been advised, knew or should have known the possibility of such damages. The user should refer to the enclosed warranty card for full warranty and service information.

Note: The pictures and icons shown in the manual are just schematic drawings for function demonstration. If they are inconsistent with your handset, please take your handset as the standard. If the inconsistency exists in the manual because of the handset function updating, please refer to the follow-up public information from ZTE CORPORATION.

Key Functions

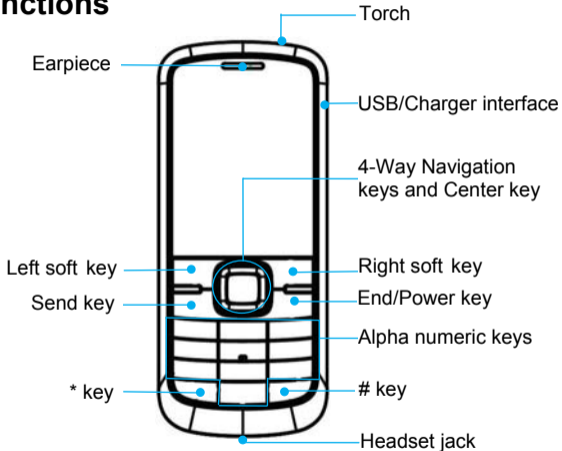

Function	Description
Left soft key	Performs the function indicated at the left bottom of the screen.
Right soft key	Performs the function indicated at the right bottom of the screen.
Center key	Press to confirm actions and make selections.
4-Way Navigation keys	These keys (UP, DOWN, LEFT and RIGHT) allow for navigation through menu options and quick access to some function menus.
Send key	Press to dial a phone number or answer a call, or view the call history in the standby mode.
End/Power key	Press to exit to the standby mode. Hold to switch on/off the phone.
# key	Hold to change the current profile to Silent mode.
Alpha numeric keys	Press to enter characters 0-9 and the alphabets from a-z.

Turning On / Off or waking up your phone

Hold the **Power key** to turn your phone on or off.

In **Menu**→**Settings**→**Phone settings**→**Misc. settings**→**LCD backlight**, set the LCD backlight time. If the phone is not operated within this time, the screen will turn black.

Press any key to wake up your phone.














Locking / unlocking the keypad

In **Menu**→**Settings**→**Security settings**→**Auto keypad lock**, set the auto keypad lock time. If the phone is not operated in the standby mode within this time, the keypad will be locked.

In the standby mode, press the **Left soft key** and then press the *** key** within two seconds to lock the keypad. The unlock method is the same. Locking the keypad can prevent unintentional operations on it. You can answer an incoming call with the regular operation when the keypad is locked.

Note: In this User Manual, “press a key” means to press the key and release it immediately, while “hold a key” means to press the key for at least two seconds and then release it.

Status bar icons

Indicator	What it means	Indicator	What it means
	Signal strength		New SMS, message box full when blinking
	Keypad locked		New MMS
	Missed call		Call forwarding
	Silent		GPRS
	General		Battery status
	Outdoor		Alarm clock set
	Meeting		

Writing Text

You can use the keyboard to enter text messages, contact information, notes and so on.

- Change input mode: Press the **# key** to change the input mode. (Input modes: eZi Abc, eZi ABC, eZi abc, Abc, ABC, abc, 123)
- Input letters: In ABC/abc/Abc mode, constantly press the corresponding letter key till the letter appears. In eZi ABC/eZi abc/eZi Abc mode, press the corresponding letter key, then use **Left/Right Navigation keys** to choose the letter you want. Press **Left soft key**, **Center key** to confirm it.
- Input words: In eZi ABC/eZi abc/eZi Abc mode, input any letter with a single key press. Press each key only once for every letter. The word changes after each key stroke. Predictive text input is based on a built-in dictionary. When you have finished writing the word and it is correct, confirm it by pressing the **Left soft key** or the **Center key**. If the word is incorrect, press the **Left/Right Navigation keys** to view other matching words found in the dictionary.
- Input digits: In 123 mode, press digit key once to input a digit. In eZi ABC/eZi abc/eZi Abc mode, press the digit key, and select the number by pressing the **Navigation keys**. You cannot input 0 in eZi ABC/eZi abc/eZi IT/eZi Abc mode. In ABC/abc/Abc mode, constantly press the digit key until the number appears.

- Input symbol: Press the *** key** to enter symbol mode, select the required symbol (common symbols) by pressing the **Navigation keys** and then press the **Left soft key** or **Center key** to confirm it. In eZi ABC/eZi abc/eZi Abc mode, press the **1 key**, and select the required symbol (common symbols) by pressing the **Navigation keys**. In ABC/abc/Abc mode, constantly press the **1 key** until the required symbol (common symbols) appears.
- Input space: Press the **0 key** to input space. It does not work in 123 mode.
- Delete character: Press the **Right soft key** to clear a character. Hold the **Right soft key** to delete all characters and clear the display.
- Move cursor to left or right: Among the text, press the **Left/Right navigation keys** to move the cursor to left or right.

Battery

The lithium ion battery of the mobile phone can be immediately used after unpacking.

Installing the battery

1. Pull the battery cover from the notch at the bottom and remove the cover.



2. Insert the battery by aligning the gold-coloured contacts with the contacts in the battery slot.
3. Push down the upper section of the battery until it clicks into place.



4. Replace the battery cover and close it gently until you hear a click.



Removing the battery

1. Make sure that your mobile phone is switched off.
2. Remove the battery cover.
3. Pull the battery up and remove it from the mobile phone.



Charging the battery

Your phone is powered by a rechargeable battery. For maximum battery performance, it is recommended that you first use up the battery power and then charge it completely. A new battery's full performance is achieved only after three complete charge and discharge cycles.

- Connect your travel adapter to the right side of your mobile phone as shown in the diagram below.



- Connect the other end of the travel adapter to the mains socket.
- When you charge the battery, the battery charging indicator appears.
- When the battery is fully charged, disconnect the charger.

Inserting the SIM card

You want a mobile phone that is sophisticated yet easy to use and here it is in your hands! Naturally you are eager to start using it, but first you need to insert the SIM card.

Insert the SIM card as follows:

1. Make sure that the phone is switched off and the charger is disconnected from the phone.
2. Turn the phone over and remove the battery cover.
3. Hold your SIM card with the cut corner oriented as shown and then slide it into the card holder.
4. Replace the battery first.
5. Replace the battery cover.



Every mobile phone has a SIM card (Subscriber Identity Module). This is a micro-chip that holds your personal information such as names and phone numbers. Your phone won't work without it. If you already have contacts on your SIM card, they can be transferred in most cases.

Inserting the Memory Card

You can use a memory card to expand the storage of the phone. You can store or copy files such as videos, photos, music and so on.

Do not take out the card or switch off the phone while transmitting or storing data, which may cause data loss or damage to the phone or the card.

Insert the memory card as follows:

The memory card slot is beside the camera lens. Insert the card with the metal contacts facing downwards until it clicks to the right position.



Contacts

There are some numbers that you may want to call again and again, so it makes sense to add these numbers to your **Contacts**. You can then access these numbers quickly and easily.

- Add new contact

First of all, you should go to **Menu**→**Contacts**→**Options**→**Contacts settings**→**Preferred storage** to set the storage location for the

contact.

If you have selected **All** in **Preferred storage**, the phone will remind you of choosing a storage when you save the contact.

Go to **Menu**→**Contacts**→**Add new contact** to add new contact.

Then Edit the information and save it.

- Save number to Contacts

You can also save a number right after you've made or received a phone call or a message from someone who is not yet in your **Contacts** list.

- Quick search

To quickly search for the contacts, enter the first letter of your desired contact on the screen.

- Delete one record

To delete someone from your **Contacts** list, first select the name, then select **Options**→**Delete**.

- Copy or move records

You can copy or move the records to SIM or to phone. You can also copy the records to file. Select **Options**→**Copy** or **Move**.

- Mark several records

Select **Options**→**Mark several** and choose the records you want to mark. Then select **Options** to view the submenu.

- View memory status
Select **Options**→**Contacts settings**→**Memory status** to check the memory status about the phone and SIM card.

Making and receiving calls

- Basic way to make a call
In the standby mode, press the **Alpha numeric keys** to input the number and then press the **Send key** to dial.
- Dial from the Contacts
Go to **Menu**→**Contacts**. Find the name of the person you want to call, and press the **Send key**.
- Make an emergency call
You can make emergency calls without the SIM card inserted so long as you are in an area with network coverage.
- Answer a call
Press the **Send key**.
- End a call

Press the **End key**.

- Use call options

During a call, you can select **Options** to enter the call options.

You can use the speakerphone by pressing **Center key**.

You can put a call on hold, make a new call, and use applications such as Messaging & Contacts while you're on a call.

Call center

Go to **Menu**→**Call center**.

- Call history

You can select SIM1 call history or SIM2 call history to view. Dialed calls, Received calls and Missed calls are saved in **Call history**. If the records are full, the earliest saved records will be deleted automatically. Press **Left/Right Navigation keys** to choose between All calls, Dialed calls, Received calls and Missed calls.

Select **Options** to enter the submenu:

- ◆ View: View the details of call record.
- ◆ Call: Call the record again.
- ◆ Send message: Send a message to the record.

- ◆ Save to Contacts: Save the current number.
- ◆ Edit before call: Edit the number before you call.
- ◆ Delete: Delete the current call record.
- ◆ Delete all: Delete all your call records.
- ◆ Advanced: View call timers, call cost, text msg. counter and GPRS counter. (**Call cost** need network support.)
- Call settings
 - SIM1/SIM2 call settings
 - ◆ Caller ID: You can select to Set by network, Hide ID or Send ID.
 - ◆ Call waiting: After this function is activated, the system will inform you if there is another incoming call. Please contact your network provider for details.
 - ◆ Call divert: The call divert service enables you to divert an incoming call from a service to a specified telephone number in preset conditions. You can contact the network provider to activate this service. You can set the call divert service so that voice calls and data calls are diverted to a preset number under different conditions.
 - ◆ Call barring: You can bar outgoing and incoming calls.

- ◆ Line switching: Switch the call line.
- ◆ Closed user group: You can create groups and numbers in one group can call each other, but can not call numbers in other groups.
- Advance settings: You can set auto redial, call time display and call time reminder.

Sending and receiving messages

- Write a new message
You can use your mobile phone to send and receive messages.
 1. Go to **Menu**→**Messages**→**Write message**.
 2. Write your message. For more information on input method, see section 'Writing Text'. The default message type is SMS.
 3. If you want to change to MMS, you can press **Options** and choose **Switch to MMS**; or you can press **Options** and choose **Add picture**, **Add sound**, **Add video** or **Add subject** to directly insert multimedia contents to the message and it will be switched to MMS automatically.
 4. You can select **Options**→**Slide Option** to add a new slide.

5. When you finish writing, press **Options**→**Send to** to enter numbers or add from Contacts. If you are writing an MMS, after adding recipients, you can select **Options**→**Change to Cc** or **Change to Bcc** to change the current contact to Cc or Bcc.
 6. Select **Options**→**Send** to send the message out. If you want to save the MMS as a draft, select **Options**→**Save to Drafts**. If you are writing a SMS, select **Options**→**Save**.
- View messages
Upon receiving a message, the mobile phone will alert you with a ringtone, prompt, or a new message icon.
 1. Press **View** to open the new message. You can also go to Inbox to view the message.
 2. While the message is open, use **Options** to reply, delete, or forward the message. You can also call back the sender.
- Note:**
- If you want to save the sender's number, first highlight the message in Inbox interface, then select **Options**→**Save to Contacts**.
 - If you want to save the number in the message content, first open

the message, then select **Options**→**Advanced**→**Use number**.

You can view the message boxes in Messages interface.

- ◆ Select **Inbox** to view received messages.
 - ◆ Select **Drafts** to view unsent messages.
 - ◆ Select **Outbox** to view messages that failed to send.
 - ◆ Select **Sent messages** to view messages been successfully sent and saved.
 - ◆ Select **Archive** to view archive messages.
 - ◆ Select **Voicemail server** to call or edit the voicemail.
 - ◆ Select **Broadcast message** to view Broadcast messages.
 - ◆ Select **Templates** to view message templates.
- Message settings
Go to **Menu**→**Messages**→**Message settings**→**Text message**→**SIM1/SIM2 message settings**.
 - ◆ Profile settings: This is automatically set by the service provider, but please contact us if this is not available.
 - ◆ Common settings: You can set Delivery report and Reply path on or off. You can select to save sent messages or not.
 - ◆ Memory status: View the SIM and phone memory status.

- ◆ Preferred storage: Set the preferred storage to SIM or Phone. Go to **Menu**→**Messages**→**Message settings**→**Multimedia message**.
- ◆ Profiles: You can activate a preset profile or add new ones.
- ◆ Common settings: In **Compose**, you can set Slide time, Creation mode, Picture resizing, Auto signature and Signature. In **Sending**, you can set Validity period, Delivery report, Read report, Priority, Delivery time and Send and save. In **Retrieval**, you can set Home network, Roaming, Filters, Read report and Delivery report. In **Preferred storage**, you can set the preferred storage to Phone or Memory card. In **Memory status**, you can view memory status.

Sending and receiving email

- Set up accounts

First you have to setup your email accounts. If the account is not properly set or activated, you cannot send or receive any email.

Go to **Menu**→**Messages**→**Email**→**Email accounts**.

1. Select **Options**, and then select **New account**.
2. Select a mail server, then enter your email address, user name and password. Or you can select **Other Email accounts**, then

enter your email address, protocol, data account, and server information, etc.

3. Activate your email account.

- Send an email

Go to **Menu**→**Messages**→**Email**→**Write Email**. When you finish writing, select to send or save the email.

- Send and receive emails

If you want to receive emails, go to **Menu**→**Messages**→**Email**.

Select **Send and receive**, and the emails in your mailbox will be downloaded to your phone and the emails in the Outbox will be sent out. Go to **Inbox** to view your received emails.

User profiles

Go to **Menu**→**User profiles**. You can select your preferred profile in this menu. The profile options are: General, Meeting, Outdoor, Indoor, Silent, Headset and Bluetooth. The default settings for each individual profile are preset at the factory. You can change them in the **Options**→**Customize** menu. In **Customize** you can see the following submenus:

- Tone settings: Set the tone for various conditions.
- Volume: Set the Ringtone and Key tone.

- Alert type: Choose among four modes.
- Ring type: Choose among Single, Repeat and Ascending.
- Extra tone: Let the phone alert when warning, error, camp on or connect.
- Answer mode: Select **Any key** to answer a call.

Note: The Headset mode can only be activated with the headset connected. And the Bluetooth mode can only be activated when the Bluetooth headset is connected.

Settings

You can adjust various settings of your phone. Go to **Menu**→**Settings**.

- Dual SIM switch: Select with SIM status or use default mode.
- Dual SIM settings: Select dual SIM open, only SIM1/SIM2 open or flight mode.

Note: In flight mode, all wireless functions are disabled.

- Phone settings
 - ◆ Time and date: You can set home city, format, etc.
 - ◆ Schedule power on/off: Set auto power on and off time.
 - ◆ Language: You can set the language environment for the phone.

- ◆ Writing language: You can set the preferred input method.
- ◆ Display: You can set Wallpaper, etc.
- ◆ Dedicated key: You can set Navigation keys refer to some certain functions, and when you press Navigation keys in the standby mode, you can directly and quickly get access to these functions.
- ◆ Auto update of date and time: This function need network support.
- ◆ Misc. settings: You can set brightness and time for LCD backlight.
- ◆ Key backlight: Set the Key backlight **On** or **Off**.
- Network settings
In this menu, you can select **Automatic/Manual** to select the network service provider according to requests. If you have selected a service provider manually, you have to manually select again or return to the **Automatic** option to select the service provider when you switch to the SIM card of another network.
- Security settings
 - SIM1/SIM2 security settings

- ◆ SIM1/SIM2 lock: If SIM1/SIM2 Lock is currently set **Off**, select it and input SIM1/SIM2 PIN code to turn it on. You need to input the correct PIN code to unlock your SIM card when you turn on your mobile phone next time.

Note: The PUK code is required to unlock the SIM card if you have incorrectly input the PIN code for three consecutive times. The PIN code and the PUK code may be supplied along with the SIM card. If not, contact the network provider.

- ◆ Change password: You can change the PIN and PIN2 password.
- Phone lock: Phone lock can prevent your mobile phone from unauthorized use. Select **On/Off** to enable or disable the handset lock protection.
- Auto keypad lock: Select a time for auto keypad lock, and the phone will automatically lock the keypad if there is no operation on the keypad within this time in the standby mode.
- Change password: You can change the phone password here.

Note: You may be required to input the phone password in some of the security setting interfaces. The default phone password is 1234. Go to **Security settings**→**Change password**→**Phone password** to

change the phone password.

- Connectivity
 - ◆ Bluetooth: See chapter “Bluetooth”.
 - ◆ Data account: You can add and view your GPRS data usage.
- Restore factory settings
You need to input the correct phone password to restore factory settings.

Bluetooth

Go to **Menu**→**Settings**→**Connectivity**→**Bluetooth**. The Bluetooth devices must be paired before the communication is performed.

- Turn on or off the Bluetooth on your phone
Go to **Power**, you can turn on or off Bluetooth.
- Make your phone visible
Go to **Bluetooth**→**Visibility**, you can choose to be visible or not.
When your phone is visible, and the Bluetooth is turned on, all other Bluetooth-enabled devices within range can detect your phone.
- Create a Bluetooth partnership

1. Go to **Bluetooth**→**My device**→**Search new device** to search other Bluetooth-enabled devices and list them.
 2. Select the desired device name in the list and press **Pair**.
 3. Enter a passcode (1 up to 16 characters), and then press **OK**. When the opposite party enters the same passcode, the connection will be established. Sometimes the devices can be paired automatically without entering password.
- **Beam information using Bluetooth**
After the Bluetooth partnership is established, you can beam information, such as contacts, and calendar items, as well as files from your phone to another Bluetooth-enabled device.
For example, if you want to send an item from the **Contacts** list to the opposite party, find that item, press **Options**→**Send contact**→**Via Bluetooth**, and then select the device name. If you want to send a multimedia file, find the file from the media folder and then press **Options**→**Send**→**Via Bluetooth**, and then select the device name.
 - **Connect a Bluetooth hands-free or stereo headset**
For hands-free phone conversations or to listen to music, you can use a Bluetooth hands-free or stereo headset.

Go to **Bluetooth**→**Search audio device** to search for the Bluetooth hands-free or stereo headset.

Applications

Go to **Menu**→**Applications**.

- **Calendar**
Enter **Calendar**, the calendar of the current month will be displayed on the screen and the current date will be marked by a background box in a special colour.
You can check the date, and press the **Navigation keys** to switch the date. The information on the screen will also change consequently.
- **Tasks**
You can add tasks in this menu.
- **Alarm**
You can view and edit the alarm clock settings. You can also enable or disable the alarms. By pressing **Edit**, you can set the corresponding features of the alarm according to the instructions.
- **Calculator**

You can perform simple calculations. Press digit key to enter the number. Press **Navigation keys** to select the operational character. Press **Left soft key** or **Center key** to get the result.

Note: This calculator has limited accuracy and rounding errors may occur especially in long division.

- Unit converter
Your mobile phone has a unit converter to convert weight and length. Input the value to perform the conversions.
- World clock
You can view the time in different cities.
- Games
Your mobile phone has classic games pre-loaded. For further information on this, access the menu and view game Help.

Multimedia

Go to **Menu**→**Multimedia**.

- Camera
 - ◆ Take a photo

Aim the camera at the object and then press the **Center key** to take the shot.

Before capturing a photo, press the **Left/Right Navigation keys** to adjust the brightness.

- ◆ Configure your camera

Press the **Left soft key** to configure your camera.

- Image viewer

The images you want to view in **Image viewer** must be put in the ..

\Photos folder in the phone or memory card, and in

Options→**Storage**, the storage must be set to phone or memory card correspondingly.

You can select an image and view it.

Album supports these formats: jpeg, jpg, bmp, gif, png.

- Video recorder

- ◆ Take a video

Go to **Video recorder** to record a scene.

Aim the camera at the object and then press the **Center key** to start, press it again to pause, and press the **Right soft key** to finish recording.

Before recording a video, press the **Navigation keys** to adjust brightness and zoom to the right size.

◆ Configure your video recorder

Go to **Video recorder**. Press the **Left soft key** to configure your video recorder.

- Video player

The videos you want to play in Video player must be put in the **..\Videos** folder in the phone or memory card, and in

Options→**Storage**, the storage must be set to phone or memory card correspondingly.

You can then select a video and play it.

- Audio player

You can play the audio in your phone or memory card.

The music you want to play in Audio player must be put in the **..\ My Music** folder in the phone or memory card, and in

List→**Options**→**Settings**→**Pre. playlist**, the storage must be set to phone or memory card correspondingly.

In **List**→**Options**, you can refresh your playlist and make personal settings.

- Sound recorder
Go to **Options**→**New record** to record a sound clip.
Go to **Options**→**List** to view the sound clips you recorded.
Go to **Options**→**Settings** to set preferred storage and file format.
- FM radio
With the radio, you can search for radio channels, listen to them, and save them on your device. Note that the quality of the radio broadcast depends on the coverage of the radio station in that particular area. In the FM radio interface, you can press the **Up/Down Navigation keys** to adjust volume, press the **Left/Right Navigation keys** to tune the frequency. When you receive an incoming call while listening to the radio, the radio will be paused. Select **Options** to enter the submenu.
- File manager
You can check all the folders in the phone or memory card, create new ones, rename, delete or sort, etc. The files you download from the internet will be stored in these folders.
Note: When you select **Format**, the data will be lost, so please be careful with this function.

Java MIDlets

Go to **Menu**→**Java MIDlets**.

Java MIDlets are Java™-based applications that can run on your phones. It supports Java 2 Edition, J2ME™. Java allows you to download Java-based applications, such as games and tools that are specifically designed for mobile phones. Java gives you the flexibility of installing and managing additional J2ME applications from the Internet.

Services

Go to **Menu**→**Services**.

Services allows you to view internet content. In **Services**, you can use STK and Internet service.

- STK
SIM card Toolkit (STK) services are value-added services provided by your network provider.
Your mobile phone supports STK service, but if your SIM card and network provider do not support the service, these functions can't be used.
- Internet service

Your phone supports Wireless Application Protocol (WAP). You can get access to this service through your network provider. **Internet service** lets you get information about news, weather forecasts and so on.

You can perform the following operations:

- ◆ Homepage: Homepage is a WAP site you set in **Settings**→**Profiles**.
- ◆ Bookmarks: Access your phone's preset websites. Select a bookmark and press **Options**→**Go to** to load the website.
- ◆ Input address: Input a URL and press **Options**→**Done** to visit the website.
- ◆ Recent pages: Display the pages you've visited recently. Select an item and choose **Options**→**Go to** to visit the page again.
- ◆ Settings: You can set Profiles, Browser options and Preferences and so on.