Product Safety Information

ZTE N855D Quick Start Guide

	Do not use while re-fuelling
	Do not use hand-held while driving
×	This device may produce a bright o flashing light
	For body-worn operation maintain a separation of 15 mm
	Do not dispose of it in a fire
	Small parts may cause a choking hazard
Ø	Avoid contact with magnetic media
	This device may produce a loud sound
	Avoid Extreme Temperatures
	Keep away from pacemakers and other personal medical devices

	Avoid any contact with liquid, keep it dry
R	Switch off when instructed in hospi- tals and medical facilities
	Do not attempt to disassemble
	Switch off when instructed in air- crafts and airports
	Do not rely on this device for emer- gency communications
*	Switch off in explosive environ- ments
	Only use approved accessories
Notes:	
microSD logo	

Card Association

Notice

 
SD

We offer self-service for our smart terminal device users. Please visit ZTE official website (at www.zte.com.cn) for more information on selfservice and supported product models. Information subject to the website.

This product is designed to support two (U)SIM cards. You can install two (U)SIM cards simultaneously and have them both in standby. However, both (U)SIM cards cannot be used at the same time for phone service or data service. When you're in a phone call using one (U)SIM card, the other one will be unreachable through phone call. Callers to that card's number may hear voice prompts such as "The number you dialed is unreachable." or "The number you dialed is out of service area". Similarly, if you're using one (U)SIM card's GPRS or EDGE for data service, the other (U)SIM will be unreachable for calls; but if you're using one (U)SIM's 3G data service, the other (U)SIM may be reached normally.

The above situation is caused by the phone design and has nothing to do with the network of your operator. This design can significantly reduce power consumption and improve your phone's standby time. In case of missing important phone calls, please contact your operator to enable services like missed call reminder or mobile secretary.

Getting to Know Your Phone



Power Key

- Hold to select phone modes: Silent, Airplane, or to power off.
- Press to switch your phone to Sleep mode.
- Press to wake up your phone.

Home Key

- Press to return to the Home Screen from any application or screen.
- Hold to see recently used applications.

Menu Key

Press to get the options on the current screen.

Back Key

Press to go to the previous screen.

Search Key

Press to start the Search application.

Volume Key

 
Press higher end of the key to turn the volume up and the lower end of the key to turn it down.

Before Getting Started

Removing the back cover



Installing the (U)SIM cards



Caution: Install your CDMA card into SIM slot 1. Install your 2G GSM card into SIM slot 2. SIM slot 1 is the main slot, SIM slot 2 is the auxiliary slot.

Installing the battery



Installing the memory card



Charging the battery



When you first get your new phone you'll need to charge the battery like this...

- 1. Connect the adapter to the charger jack.
- 2. Connect the charger to a standard AC wall outlet.
- Disconnect the charger when the battery is fully charged.

Powering On/Off Your Phone

- Make sure the (U)SIM is in your device and the battery is charged.
- 2. Hold Power Key to switch on your phone.
- 3. To switch it off, hold **Power Key** to get the phone options. Select **Power off**, and then tap **OK**.

Switching to Sleep Mode

To save battery power, Sleep Mode suspends

your device to a low-power-consumption state while the display is off. Your device also goes into Sleep Mode automatically when the display is automatically turned off after a certain period of time, which you can set in **Screen timeout** of the display settings.

Press Power Key to switch to Sleep Mode.

Waking Up Your Phone

If your phone is in Sleep Mode, you can wake it up by...

- 1. Pressing **Power Key** to activate your screen display.
- 2. Press and hold (B) to unlock the screen.

Notes:

If you have set an 'unlock pattern', or a PIN/ password for your phone, you'll need to draw the pattern or enter the PIN/password to unlock your screen.

Move applications to SD card

- Touch the Home Key > Menu Key > Settings > Applications > Manage applications.
- 2. Touch on the application you want to move to SD card.
- 3. Touch Move to SD card, and touch OK to confirm.

Notes:

- Make sure the microSD is installed.
- Not all the applications can be moved to the SD card.