

ZTE中兴



ZTE-G R260

ZTE中兴

ZTE CORPORATION

NO. 55, Hi-tech Road South, ShenZhen, P.R.China

Postcode: 518057

<http://www.zte.com.cn> mobile@zte.com.cn

Service Hotline: +86-755-26779999

The information on the package is only for your reference. Images are for your reference only. Please check the product model before purchasing.
ZTE reserves the rights to change specifications and parameters of the products without further notice.

English

User Manual

ZTE-G R260

Mobile Phone

User Manual

LEGAL INFORMATION

Copyright © 2011 ZTE CORPORATION.

All rights reserved.

No part of this publication may be excerpted, reproduced, translated or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation.

The manual is published by ZTE Corporation. We reserve the right to make modifications on print errors or update specifications without prior notice.

Version No. : R1.0

Edition Time : 2011.10.29

Table of Contents

SECURITY.....	4	MAKING AND RECEIVING CALLS ...	27
SAFETY PRECAUTIONS.....	4	CALL CENTER.....	28
LIMITATION OF LIABILITY.....	14	SENDING AND RECEIVING MESSAGES	30
KEY FUNCTIONS.....	15	USER PROFILES.....	34
LOCKING AND UNLOCKING THE KEYPAD.....	17	SETTING YOUR PHONE.....	35
STATUS BAR ICONS.....	18	BLUETOOTH	37
BATTERY	19	ORGANIZER.....	39
INSERTING THE SIM CARD.....	22	FILE MANAGER	41
INSERTING THE MEMORY CARD....	23	FUN&GAMES	42
POWERING YOUR PHONE ON/OFF	24	MULTIMEDIA.....	43
WRITING TEXT	25	USING SERVICES	45
ADDING CONTACT TO THE PHONEBOOK	26	WLAN	47
		SOCIAL NETWORK.....	48

Security

- To protect your mobile phone from illegal use, take the security measures as follows:
 - Set PIN codes of the SIM card.
 - Set handset password.
 - Set call restrictions.

Safety Precautions

This section includes some important information on safe and efficient operation. Please read this information before using the phone.

Operational Precautions

- Please use your phone properly. When making or receiving a call, please hold your phone as holding a wireline telephone. Make sure that the phone is at least one inch (about two point five centimeters) from your body when transmitting.

- Do not touch the antenna when the phone is in use. Touching the antenna area affects call quality and may cause the phone to operate at a higher power level than needed.
- Some people may be susceptible to epileptic seizures or blackouts when exposed to flashing lights, such as when watching television or playing video games. If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult your doctor before playing video games on your phone or enabling a flashing-light feature on your phone. (The flashing-light feature is not available on all products.)
- Keep the phone out of the reach of small children. The phone may cause injury if used as a toy.

Precautions While Driving

- Please pay attention to the traffic safety. Check the laws and regulations on the use of your phone in the area where you drive. Always obey them.

- Use hands-free function of the phone, if available.
- Pull off the road and park before making or answering a call if conditions require.

Precautions for Medical Devices and Facilities

- When using your phone near pacemakers, please always keep the phone more than eight inches (about twenty centimeters) from the pacemaker when the phone is switched on. Do not carry the phone in the breast pocket. Use the ear opposite the pacemaker to minimize the potential for interference. Switch off the phone immediately if necessary.
- Some phones may interfere with some hearing aids. In the event of such interference, you may consult your hearing aids manufacturer to discuss alternatives.
- If you use any other personal medical device, please consult the manufacturer of your device to determine if it is adequately shielded from RF(radio frequency) energy.

- In those facilities with special demand, such as hospital or health care facilities, please pay attention to the restriction on the use of mobile phone. Switch off your phone if required.

Mobile Phone

- Please use original accessories or accessories approved by the phone manufacturer. Using any unauthorized accessories may affect your mobile phone's performance, damage your phone or even cause danger to your body and violate related local regulations about telecom terminals.
- Turn off your phone before you clean it. Use a damp or anti-static cloth to clean the phone. Do not use a dry cloth or electrostatically charged cloth. Do not use chemical or abrasive cleaners as these could damage the phone.
- As your mobile phone can produce electromagnetic field, do not place it near magnetic items such as computer disks.
- Using the phone near electrical appliances such as TV, telephone, radio and personal computer can cause interference.

- Do not expose your mobile phone to direct sunlight or store it in hot areas. High temperatures can shorten the life of electronic devices.
- Keep your phone dry. Any liquid may damage your phone.
- Do not drop, knock or harshly treat the phone. Rough handling can break internal circuit boards.
- Do not connect the phone with any incompatible enhancement.
- Do not attempt to disassemble the mobile phone or battery.
- Do not store the phone with flammable or explosive articles.
- Do not charge the mobile phone without battery.
- Some electronic devices are susceptible to electromagnetic interference sent by phone if inadequately shielded. Please use phone at least 20 cm or as far away as you can from TV set, radio and other automated office equipment so as to avoid electromagnetic interference.
- Operating phone may interfere with medical devices like hearing aides and pacemakers, or other medical devices in hospital. Consult a physician or the manufacturer of the medical device before using phone.

- Be aware of the usage limitation when using phone at places such as oil warehouses, or chemical factories, where there are explosive gases or explosive products being processed, because even if your phone is in idle state, it still transmits radio frequency (RF) energy. Therefore, power off your phone if required.
- Do not touch the antenna while calling. Otherwise it will affect the quality of calling and waste battery energy. The damaged antenna will cause slight burn while touching your skin.
- Keep phone out of the reach of small children. Phone may cause injury if used as a toy.
- Do not put other things on the terminal to avoid overlaying radiator.
- Keep the antenna free from obstructions and position the antenna straight up. This will ensure best call quality.

Precautions for Potentially Explosive Atmospheres

- Switch off your phone prior to entering any area with potentially explosive atmospheres, such as fueling areas, fuel or chemical transfer or storage facilities.
- Do not remove, install, or charge batteries in such areas. Spark in a potentially explosive atmosphere can cause an explosion or fire resulting in bodily injury or even death.
- To avoid possible interference with blasting operations, switch off your phone when you are near electrical blasting caps, in a blasting area, or in areas posted “Turn off electronic devices.” Obey all signs and instructions.

Precautions for Electronic Devices

- Some electronic devices are susceptible to electromagnetic interference sent by mobile phone if inadequately shielded, such as electronic system of vehicles. Please consult the manufacturer of the device before using the phone if necessary.

Safety and General Use in Vehicles

- Safety airbag, brake, speed control system and oil eject system shouldn't be affected by wireless transmission. If you do meet problems above, please contact your automobile provider. Do not place your phone in the area over an airbag or in the airbag deployment area. Airbags inflate with great force. If a phone is placed in the airbag deployment area and the airbag inflates, the phone may be propelled with great force and cause serious injury to occupants of the vehicle.
- Please turn off your mobile phone at a refueling point, and the same to the place where the use of two-way radio is prohibited.

Aircraft Safety

- Please turn off your mobile phone before the airplane takes off. In order to protect airplane's communication system from interference, it is forbidden to use mobile phone in flight. Safety regulations require you to have permission from a crew member to use your phone while the plane is on the ground.

- If the mobile phone has the function of automatic timing power-on, please check your alarm setting to make sure that your phone will not be automatically turned on during flight.

Battery Use

- Do not short-circuit the battery, as this can cause the unit to overheat or ignite.
- Do not store battery in hot areas or throw it into fire. Otherwise, it will cause explosion.
- Do not disassemble or refit the battery. Otherwise, it will cause liquid leakage, overheating, explosion and ignition of the battery.
- Please store the battery in a cool dry place if you don't use it for a long period.
- The battery can be recharged for hundreds of times, but it will eventually wear out. When the operating time (talk time and idle time) is noticeably shorter than normal, it is time to replace it with a new one.
- Please stop using the charger and battery when they are damaged or show evidence of aging.

- Return the worn-out battery to the provider or dispose of it in accordance with environment regulations. Do not dispose of it in household rubbish.
- Please use original batteries or batteries approved by the phone manufacturer. Using any unauthorized battery may affect your handset performance or may cause danger of explosion, etc.

 
Warning: If the battery is damaged, do not discharge it. If the leakage does come into contact with the eyes or skin, wash thoroughly in clean water and consult a doctor.

Limitation of Liability

ZTE shall not be liable for any loss of profits or indirect, special, incidental or consequential damages resulting from or arising out of or in connection with using this product, whether or not ZTE had been advised, knew or should have known the possibility of such damages. The user should refer to the enclosed warranty card for full warranty and service information.

Note: The pictures and icons shown in the manual are just schematic drawings for function demonstration. If they are inconsistent with your handset, please take your handset as the standard. If the inconsistency exists in the manual because of the handset function updating, please refer to the follow-up public information from ZTE CORPORATION.

Key Functions

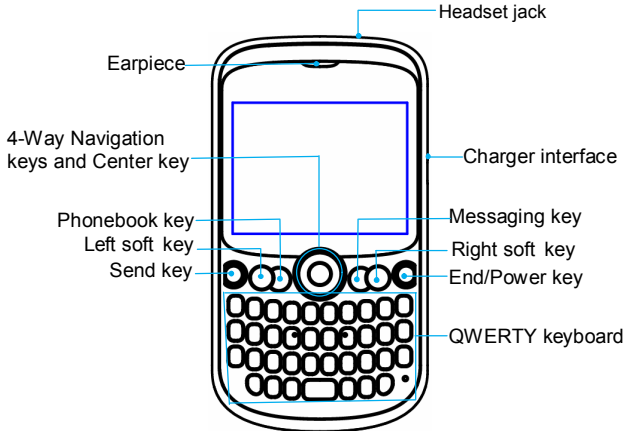

Function	Description
Left soft key	Performs the function indicated at the left bottom of the screen.
Right soft key	Performs the function indicated at the right bottom of the screen.
Center key	Press to confirm actions and make selections.
4-Way Navigation keys	These keys (UP, DOWN, LEFT and RIGHT) allow for navigation through menu options and quick access to some function menus. Press Up/Down Navigation keys to adjust the volume.
Send key	Press to dial a phone number or answer a call, or view the call history in the standby mode.
End/Power key	Press to exit to the idle mode. Hold to switch on/off the phone.
QWERTY keyboard	Press to enter characters 0-9, the alphabets from a-z and symbols.

Note: In this User Manual, “press a key” means to press the key and release it immediately, while “hold a key” means to press the key for at least two seconds and then release it.















Locking and Unlocking the Keypad

In idle screen, hold  key to lock the keypad.

To unlock the keypad, press the **Left soft key** and then press  Key.

Locking the keypad can prevent unintentional operations on it. You can answer an incoming call with the regular operation when the keypad is locked.

Status Bar Icons


Indicator	What it means	Indicator	What it means
	Signal strength		General
	GPRS		Outdoor
	Missed call		Silent
	Call forward		Meeting
	New SMS, message full when blinking		Bluetooth
	New MMS		Keypad locked
	Battery status		Alarm clock set

Battery

The lithium ion battery of the mobile phone can be immediately used after unpacking.

Installing the battery

 
1. Pull the battery cover from the notch at the bottom and remove the cover.
2. Insert the battery by aligning the gold-colored contacts with the contacts in the battery slot.
3. Push down the upper section of the battery until it clicks into place.
4. Replace the battery cover and close it gently until you hear a click.



Remove the battery cover



 
Push down the battery



Replace the battery cover

Removing the battery

 1. Make sure that your mobile phone is switched off.
2. Remove the battery cover.
3. Pull the battery up and remove it from the mobile phone.



Remove the battery cover

 


Pull up the battery

Charging the battery

Your phone is powered by a rechargeable battery. For maximum battery performance, it is recommended that you first use up the battery power and then charge it completely. A new battery's full performance is achieved only after three complete charge and discharge cycles.

1. Connect your travel adapter to the right side of your mobile phone as shown in the diagram below.

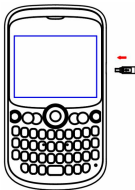


2. Connect the other end of the travel adapter to the mains socket.
3. When the battery is being charged, the display will show the animation of a battery being filled up.
4. When the battery is fully charged, disconnect the charger.

Inserting the SIM card

Insert the SIM card as follows.

 1. Make sure that the phone is switched off and the charger is disconnected from the phone.
2. Turn the phone over and remove the battery cover.
3. Remove the battery if it is already installed.
4. Hold your SIM card with the cut corner oriented as shown and then slide it into the card holder with the metal contacts facing downwards.
5. Replace the battery first.
6. Replace the battery cover.

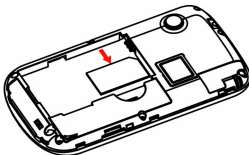

Insert the SIM card

SIM card (Subscriber Identity Module) is a micro-chip that holds your personal information such as names and phone numbers. Your phone won't work without it. If you already have contacts on your SIM card, they can be transferred in most cases.

 
Inserting the Memory Card

You can use a memory card to expand the storage of the phone. You can store or copy files such as photos, music and so on.

Do not take out the card or switch off the phone while transmitting or storing data, which may cause data loss or damage to the phone or the card.

Insert the memory card as follows.

Open the battery cover. Insert the card with the metal contacts facing downwards until it clicks to the right position.

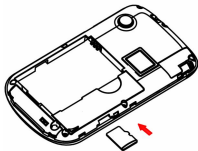

Insert the Memory card

Powering your phone on/off

Make sure that your SIM card is in your mobile phone and that the battery is charged.

Hold the **End/Power key** to power on/off the phone. The phone will automatically search for the network.

Writing Text


- Text Mode

Your mobile phone provides the following input methods: alphabetic (**abc**, **Abc**, **ABC**) mode and numeric (**123**) mode. The current input method is displayed on the screen above the input field. You can select **Options**→**Input method** to choose the input method.


- Alphabetic Modes

- ◆ Press A ~ Z to enter desired characters.

- ◆ Press  to switch between uppercase and lowercase.

- ◆ Press  to select symbols.

- ◆ Press  to start a new paragraph.

- ◆ Press  to enter a space.

- ◆ Press  to delete letters.

- **Numeric Mode**

In numeric mode, press the numeric keys to enter numbers.

Note: Letters cannot be entered in numeric mode.

- **Entering Symbols**

Press **Options**→**Insert symbol**, then select desired symbol.

Adding contact to the Phonebook

There are some numbers that you may want to call again and again, so it makes sense to add these numbers to your **Phonebook**. You can then access these numbers quickly and easily.

First you should choose the preferred storage for the contacts.

Go to **Menu**→**Phonebook**→**Options**→**Phone settings**→**Preferred storage**, then choose the storage position.

After setting the storage position, then you can go to **Menu**→**Phonebook**→**Add new contact** to add new contacts.

- You can also save a number right after you've made or received a phone call or a message from someone who is not yet in your Phonebook list.
- To delete someone from your **Phonebook** list, first select the name, then select **Options**→**Delete**.

Making and receiving calls

- Basic way to make a call

In idle screen, press the **numeric keys** to input the number and press the **Send key** to dial.

- Dial from the Phonebook

Go to **Menu**→**Phonebook**. Find the name of the person you want to call, and press the **Send key**.

- Make an emergency call

You can make emergency calls without the SIM card inserted so long as you are in an area with network coverage.

- Answer a call

Press the **Send key**.

- End a call

Press the **End key**.

Make sure that you are in an area with sufficient coverage to make calls. The strength of the network signal is indicated on the Status Bar of the screen.

Call center

Go to **Menu**→**Call center**.

- Call history

Dialled calls, Missed calls and Received calls are saved in **Call history**. If the records are full, the earliest saved records will be deleted automatically. Select **Options** to enter the submenus.

- Call settings

- ◆ Caller ID: You can select to Set by network, Hide ID or Send ID.

- ◆ Call waiting: After this function is activated, the system will inform you if there is another incoming call. Please contact your network provider for details.
- ◆ Call divert: The call divert service enables you to divert an incoming call from a service to a specified telephone number in preset conditions. You can contact the network provider to activate this service. You can set the call divert service so that voice calls and data calls are diverted to a preset number under different conditions.
- ◆ Call barring: You can bar outgoing and incoming calls.
- ◆ Line switching: Switch the call line.
- ◆ Group list: You can create group which the members in this group can call each other, but can not call numbers in other groups. This function need network support.
- ◆ Advance settings: You can set blacklist, auto redial, IP dial, background sound, call time display, call time reminder, auto quick end, reject by SMS, connect notice and answer mode.

Sending and receiving messages

- Write a new message

You can use your mobile phone to send and receive messages.

1. Go to **Menu**→**Messaging**→**Write message**.
2. Write your message. For more information on input method, see section 'Writing Text'. The default message type is SMS.
3. If you want to change to MMS, you can press **Options** and select **Switch to MMS**; or you can press **Options** and select **Add picture**, **Add sound**, **Add video** or **Add subject** to directly insert multimedia contents to the message and it will be switched to MMS automatically.
4. You can select **Options**→**Slide options** to add a new slide. And you can select **Options**→**Advanced** to insert an attachment, contact number, contact name or bookmark.

5. When you finish writing, press **Options**→**Send to** to enter recipient or add from Phonebook. If you are writing an MMS, after adding recipients, then you can select **Options**→**Change to Cc** or **Change to Bcc** to change the current contact to Cc or Bcc.
 6. Select **Options**→**Send** to send the message out. If you want to save the MMS as a draft, select **Options**→**Save to Drafts**. If you are writing a SMS, select **Options**→ **Save**.
- View messages

Upon receiving a message, the mobile phone will alert you with a ringtone, prompt, or a new message icon.

 1. Press **View** to open the message. You can also go to Inbox to read the message.
 2. While the message is open, use **Options** to reply, delete or forward the message. You can also call back the sender.

Note:

If you want to save the sender's number, first you should highlight the message in Inbox interface, then select **Options**→**Save to Phonebook**.

If you want to save the number which included in the message content, first you should open the message and then select **Options**→**Advanced**→**Use number**.

You can view the message boxes in the Messaging interface.

- ◆ Select **Inbox** to view received messages.
- ◆ Select **Drafts** to view unsent messages.
- ◆ Select **Outbox** to view messages that failed to send.
- ◆ Select **Sent messages** to view messages been successfully sent and saved.
- ◆ Select **Email** to send and receive emails.
- ◆ Select **Broadcast message** to view broadcast messages.
- Message settings

Go to **Menu**→**Messaging**→**Message settings**→**Text message**.

- ◆ Profile settings: This is automatically set by the service provider, but please contact us if this is not available.
- ◆ Voicemail server: Edit your voicemail server and call voicemail.
- ◆ Common settings: You can set Delivery report and Reply path on or off. You can select to save sent messages or not.
- ◆ Memory status: View the SIM and phone memory status.
- ◆ Preferred storage: Set the preferred storage to SIM or Phone.
- ◆ Preferred connection: You can choose your preferred connection for network connection.

Go to **Menu**→**Messaging**→**Message settings**→**Multimedia message**.

- ◆ Data account: View the primary and secondary account.

- ◆ Common settings: In **Compose**, you can set Slide time, Creation mode, Picture resizing, Auto signature and Signature. In **Sending**, you can set Validity period, Delivery report, Read report, Priority, Delivery time and Send and save. In **Retrieval**, you can set Home network, Roaming, Filters, Read report and Delivery report. In **Preferred storage**, you can set the preferred storage to Phone or Memory card. In **Memory status**, you can view memory status.

User profiles

Go to **Menu**→**Settings**→**User profiles**.

You can select your preferred profile in this menu. The profile options are: General, Silent, Meeting, Outdoor and My style. The default settings for each individual profile are preset at the factory. You can select **Options**→**Activate** to activate a profile. Or you can select **Options**→**Customize** to edit a profile. Select **Options**→**Reset** to restore to the factory settings.

Note: The Silent mode can not be customized.

Setting your phone

You can adjust various settings of your phone. Go to **Menu**→**Settings**.

- Phone settings: Set time and date and schedule power on/off, set Flight mode, etc.

Note: In Flight mode, all the wireless functions will be turned off.

- Network settings: Set to automatically or manually select network, and set the preferred networks and so on.
- Security settings: Set security features to protect you from unauthorized use of your phone and SIM card.

Note: You will be required to input PIN code. If **SIM lock** is currently set **Off**, select **On**, then input a PIN code to turn it on. You need to input the correct PIN code to unlock your SIM card when you turn on your mobile phone next time.

The PUK code is required to unlock the SIM card if you have incorrectly input the PIN code for three consecutive times. The PIN code and the PUK code may be supplied along with the SIM card. If not, contact the network provider.

When you turn on or off the **Phone lock** function, the phone will ask you to input the phone password. The default phone password is 1234.

- Connectivity
 - ◆ Bluetooth: See chapter “Bluetooth”.
 - ◆ Conn. management: You can view your GPRS connectivity actions.
 - ◆ Data account: You can edit GPRS account and view your GPRS data usage.
- Restore factory settings: Enter the phone password to restore to the factory settings. Some personal information might be lost if you use this function, so be careful.
- Sound effects: Set audio effect.

Note: You may be required to input the phone password in some of the security setting interfaces. The default phone password is 1234. Go to **Security settings**→**Change password**→**Phone password** to change the phone password.

Bluetooth

Go to **Menu**→**Settings**→**Connectivity**→**Bluetooth**. The Bluetooth devices must be paired before the communication is performed.

- Turn on or off the Bluetooth on your phone
Go to **Power**, you can turn on or off Bluetooth.
- Make your phone visible
Go to **Visibility**, you can choose to be visible or not. When your phone is visible, and the Bluetooth is turned on, all other Bluetooth-enabled devices within range can detect your phone.

- Create a Bluetooth partnership
 1. Go to **My device**→**Search new device** to search other Bluetooth-enabled devices and list them.
 2. Select the desired device name in the list and press **Pair**.
 3. Enter a passcode (1 up to 16 characters), and then press **OK**. When the opposite party enters the same passcode, the connection will be established. Sometimes the devices can be paired automatically without entering password.

- Beam information using Bluetooth

After the Bluetooth partnership is established, you can beam information, such as contacts and calendar items, as well as files from your phone to another Bluetooth-enabled device.

For example, if you want to send an item from the **Phonebook** list to the opposite party, find that item, press **Options**→**Send business card**→**Via Bluetooth**, and then select the device name. If you want to send a multimedia file, find the file from the media folder and then press **Options**→**Send**→**Via Bluetooth**, and then select the device name.

- Connect a Bluetooth hands-free or stereo headset

For hands-free phone conversations or to listen to music, you can use a Bluetooth hands-free or stereo headset.

Go to **Bluetooth**→**Search audio device** to search for the Bluetooth hands-free or stereo headset.

Organizer

Go to **Menu**→**Organizer**.

- Calculator

You can perform simple calculations. Press digit key to enter the number. Press **Navigation keys** to select the operational character. Press **Left soft key** or **Center key** to get the result.

Note: This calculator has limited accuracy and rounding errors may occur especially in long division.

- Currency converter

Your mobile phone provides you with basic functions of currency conversion. Input the **Rate**, select **OK** and input a figure in the **Local** field, and then press **OK** to get the result.

- Ebook reader

Read the ebooks stored in the **..\Ebook** folder which in the phone or memory card. Select **Options** to set the bookshelf.

- Calendar

Enter **Calendar**, the calendar of the current month will be displayed on the screen and the current date will be marked by a background box in a special colour.

- Tasks

You can add tasks.

- Alarm

You can view, and edit the alarm clock settings. You can also enable or disable the alarms. By pressing **Edit**, you can set the corresponding features of the alarm according to the instructions.

- World clock

You can view the time in different cities.

- Notes

You can add note.

File manager

Go to **Menu**→**File manager**. You can check all the folders in the phone or memory card, create new ones or rename, delete, or sort, etc. The files you download from the internet will be stored in these folders.

Note: When you select **Options**→**Format**, the data will be lost, so please be careful with this function.

Fun&Games

Go to **Menu**→**Fun&Games**.

- Java

Java allows you to download Java-based applications, such as games and tools that are specifically designed for mobile phones. Java gives you the flexibility of installing and managing additional J2ME applications from the Internet.

- Games

Your mobile phone has classic games and applications pre-loaded. Select a game and start it, you can view **Help** to see the rules of the game.

Multimedia

Go to **Menu**→**Multimedia**.

- Camcorder

Aim the camera lens at the object and then press the **Center key** to take the shot.

Press **Left soft key** to configure your camera, and you can select **Switch to**→**Video recorder** to switch to the video mode.

- Image viewer

The images you want to view in **Image viewer** must be put in the **.\ Photos** folder in the phone or memory card, and in **Options**→**Storage**, the storage must be set to phone or memory card correspondingly.

- Media player

You can play the audio files and videos in your phone or the memory card.

- Sound recorder

Go to **Options**→**New record** to record a sound clip.

Go to **Options**→**List** to view the sound clips you recorded.

Go to **Options**→**Settings** to set file format and so on.

- FM radio

With the radio, you can search for radio channels and listen to them. In the FM radio interface, you can press the **Up/Down Navigation keys** to adjust volume, press the **Left/Right Navigation keys** to tune the frequency, and press the **Center key** to pause. Select **Options** to enter the submenu.

Note: The wired headset works as an antenna, so always connect the headset when using the radio. The quality of the radio broadcast depends on the coverage of the radio station in that particular area.

Using Services

Go to **Menu**→**Services**.

Services allows you to view internet content. In **Services**, you can use STK and Internet service, and you can select **Licence manager** to manage the licences.

- STK

SIM card Toolkit (STK) services are value-added services provided by your network provider.

Your mobile phone supports STK service, but if your SIM card and network provider do not support the service, these functions can't be used.

- Internet service

Your phone supports Wireless Application Protocol (WAP). You can get access to this service through your network provider. **Internet service** lets you get information about news, weather forecasts and more.

You can perform the following operations:

- ◆ Homepage: Homepage is a WAP site you set in **Settings**→**Homepage**.
- ◆ Bookmarks: Access your phone's preset websites. Select a bookmark and press **Options**→**Go to** to load the website.
- ◆ Input address: Input a URL and press **Options**→**Go to** to visit the site.
- ◆ Last web address: View the last web address.
- ◆ Recent pages: Display the pages you've visited recently. Select an item and choose **Options**→**Go to** to visit the page again.
- ◆ Stored pages: View the stored web pages.
- ◆ Settings: You can set Browser options, Preferences and so on.
- Licence manager
 - ◆ Licence list: Display the list of Licences.
 - ◆ Status: Check the version and time.

- ◆ Advance: Select **Sweep** to remove useless licences and reboot your phone.

WLAN

WLAN provides wireless Internet access.

- Turning on WLAN

Go to **Menu**→**WLAN**. Select **Yes** to turn WLAN on. Then your phone will search available networks and list them.

- Connecting to a WLAN Network

Select the desired WLAN Network name in the list and press **Options**→**Connect**.

- ◆ If you selected an open network, you will be automatically connected to the network.
- ◆ If you selected a secured network, you will need to input the correct password.

- Turning off WLAN
 - ◆ If there is not an available network, you can press **Off** to turn off WLAN.
 - ◆ When your phone has been connected to a WLAN network, you can press **Options**→**Disable WLAN** to turn off WLAN.

Social Network

Go to **Menu**→**Social Network**. In this menu, you can visit some famous social networks directly.