



ZTE MF60

Postcode: 518057

URL: http://www.zte.com.cn E-mail: mobile@zte.com.cn

LEGAL INFORMATION

Copyright © 2012 ZTE CORPORATION.

All rights reserved.

No part of this publication may be excerpted, reproduced, translated or utilized i any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation.

The manual is published by ZTE Corporation. We reserve the right to make modifications on print errors or update specifications without prior notice

Version No.: 1.0 Edition Time: 05-2012 Manual No.: 079584504594

Quick Start Guide

ZTE CORPORATION NO. 55. Hi-tech Road South, ShenZhen, P.R.China

Tel: +86-755-26779999

Introduction

ZTE MF60 is a 3G/2G mobile hotspot device, working in GSM/GPRS/EDGE/ 5. External WCDMA/HSPA/HSPA+ network. The client devices could connect to it via USB Antenna or Wi-Fi interface. The device supports data and SMS services, enabling you to communicate anytime and anywhere.

This guide provides the instructions on how to install and get started with the product. For information about connection of services, please consult your service

Getting to Know Your Device and Power buttons simultaneously until the screen turns off, and then release the

The following figure shows the appearance of the device, it is only for your reference. The actual device may be different.

t indicates the network type, signal strength, battery. Wi-Fi.

It is used to connect an external antenna to enhance the

Connect the client to your device via USB cable.

Network type, 2G or 3G icon will appear on the screen

according to the network being connected.

Wi-Fi Status and number of the connecting users.

Connect to the Internet automatically.

Connect to the Internet manually.

Roaming network indication.

New message received.

Battery power indication.

signal strength.

 
Indication

Icon

Charge your device.

Note: To restart device and restore to the factory default settings, hold the WPS

Network signal strength.

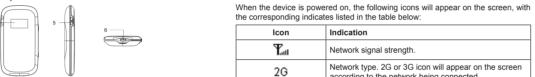

Interface and Buttons

1.Power

2.Memory card slot

(microSD card)

Hold the Power button to switch on/off the device.	
It is where you insert the memory card (microSD card).	
This button is used to start/end Wi-Fi Protected Setup	
authentication process and enable/disable the Wi-Fi	
function.	
Hold it for 3 seconds to activate the WPS function.	
When the WPS function is available, press it to	
deactivate the WPS function.	
Press it to enable/disable Wi-Fi function.	
Press it twice continuously to display the current SSID	
and Wi-Fi password on the screen.	

Hardware Installation

Inserting SIM Card and Battery

correct inserting direction. You will hear a click when the microSD card locks in Use the thumb catch at the bottom of the device to open the battery cover.



2. Insert the SIM card into the SIM card holder.

and press the battery down into the case.

microSD **micro** is a trademark of SD Card Association.

Switching On/Off Your Device

Hold the **Power** button to switch on/off the device.

Pull the microSD cover gently out of the card slot.

Notes:

Close the microSD cover.

Inserting microSD Card

The device is powered on when the screen lights up.

Charging Your Device

You can charge your device by using USB cable or adapter.

2 Insert the microSD card into the microSD slot. The following picture shows the

- 1. Insert the charger lead carefully with the plug arrow facing the bottom of the
- The plug only fits one way. Do not use excessive force to insert the plug.
- Make sure the plug is the right way round and lined up correctly. Insert it gently.



Working Mode

Your device supports three working modes. For the client, we only use PC or laptop as the example in this document.

USB Mode: Connect to the device with the USB cable.



Wi-Fi Mode: Connect to the device via Wi-Fi



the client supports the Wi-Fi function.

Follow the system prompts to complete the software installation.

- installation program in path of My Computer > AIRTEL HOTSPOT.
- The driver of your device will be installed at the same time.
- connection between your device and the client will be established successfully a moment later.

Via Wi-Fi

- Power on your device directly. It will take 1~2 minutes to initialize.
- 2. Use your normal Wi-Fi application on the client to search the available wireless

Mixed Mode: Connect to the device with the above two connection methods. Notes: You need to check your Wireless Network Connection. Set the client to obtain an IP address automatically in the Internet protocol (TCP/IP) properties, and the client will get an IP address like "192,168,0,100".

3. Select the SSID of your device, and then click Connect.

Choose a wireless network Refresh network list Click an item in the list below to connect to a wireless network in range or to get more Set up a wireless networ for a home or small office Related Tasks Learn about wireless networking Notes: If you want to connect to the Internet by using Wi-Fi mode, make sure that Change the order of preferred networks Change advanced settings The following picture is the application example. All of the client devices can surf on

the Internet at the same time.

- Connect your device and the client with the USB cable.
- Power on your device.

- If the system does not launch installation automatically, you can run the
- After the installation, the system will create a shortcut icon on your desktop and an Airtel Internet program group in the Start - Programs menu. The

the Automatic or Manual mode.

varies from device to device.

established successfully.

Switch on the device.

You can select the WAN connection mode by clicking Settings >3G Settings.

There will be a pop-up window to require the password. Check the label on

AIRTEL XXXXXX is the SSID(Service Set Identifier) of your device. XXXXXX

4. After a few moments, the connection between your device and the client will be

Accessing the Internet

3. After successfully establishing the connection, you can access the Internet in

your device to gain the SSID and preset password information.

Establish a connection between your device and the client.

4. Line the battery cover up correctly and press gently to close the case.

Insert the battery as shown with the contacts located against the metal springs.

Accessing the WebGUI Configuration Page

- Make sure the connection between your device and the client is established
- Check your internet settings to make sure no proxy servers are defined.
- 3. Launch the internet browser and enter http://192.168.0.1 or http://m.home in the address bar. And you can also double-click on your desktop to

access the page.

It is recommended that you use IE (7.0 or later), Firefox (3.0 or later), Opera (10.0 or later). Safari (4.0 or later), Chrome (10.0 or later).

The login page appears as follows.



View the information of WAN, WLAN and Device, Input the case-sensitive default password "admin", and then click Login to access the WebGUI Configuration

- Do not put anything on the top of your device. Do not lay devices to overlap each other when using.
- The device takes 1~2 minutes to initialize, and attach to the network

PIN Code Verification

If the PIN code of your SIM card is enabled, you will need to input the PIN code when you login at the first time.



Quick Settings

PIN Manage

▶ 3G Settings

Login

Password:

(3 attempt(s) left)

The SIM card will be locked if you enter wrong PIN code consecutively for three

If you want to modify the PIN Status or change the PIN code, please select Settings > Advanced > PIN Manage to do the actions.



Quick Setup

wizard appears.

▶ 3G Settings

► Wi-Fi Settings

3G Settings change APN Setting. After logging in, select Settings > Quick Settings, and then the Quick Setup



The wizard will show you how to set up the gateway in the safe way.

The parameter settings may have been preset by your service provider, and you will enjoy your Internet service directly. Please contact your service provider for details if you want to do some modification.

WAN Connection

Disconnecting from the Internet After logging in, select Settings > 3G Settings, and you can choose the WAN Connection Mode according to your requirement. Click button in the WebGUI Configuration page.

 


After logging in, select Settings, and you can do the following operations.

Phonebook

Mobile Number

Device (0'100) Q

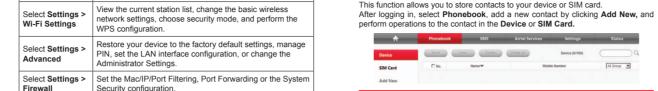

MAC Address

Notes: Turning off the device can also terminate the Internet connection.

and then release the buttons.

† 0 Bytes/s

↓ 0 Bytes/s

Select Settings > Select WAN Connection Mode Band Selection Mode or

Make sure that you can remember the new password if you change the login This function allows you to view, send and receive short messages. password by selecting Settings > Advanced > Management. Please restore the After logging in, select SMS, and you can do the following operations. device to the factory default settings in case you forget the new password. To do this hold the WPS and Power buttons simultaneously until the screen turns off Select SMS > New Message | Send or save SMS.

Select SMS > Device Operate the SMS in your device Select SMS > SIM Card Operate the SMS in your SIM card | Select SMS > SMS Settings | Set the SMS configuration.

Airtel Services

After logging in, select Airtel Services, and you can check your balance, recharge your account, etc. For the detailed information, please ask your service provider.



then unplug the USB cable, the device will enter the sleep mode. To wake up your device, press any button or connect your device and PC with the

USB cable to wake up the device.

Warning and Notice

manufacturer of the medical device before using your device.

Some electronic devices are susceptible to electromagnetic interference

sent by your device if inadequately shielded, such as the electronic system

of vehicles. Please consult the manufacturer of your device before using if

Operating of laptop and desktop PCs and your device may interfere with

medical devices like hearing aids and pacemakers. Please always keep

them more than 20 centimeters away from such medical devices when they

are turned on Turn your device off if necessary Consult a physician or the

Be aware of the usage limitation when using your device at places such as

The use of electronic transmitting devices is forbidden in aircrafts, at petrol

stations and in hospitals. Please observe and obey all warning signs and

Store your device out of the reach of little children. Your device may cause

Please use original accessories or accessories that come with the device

oil warehouses or chemical factories, where there are explosive gases of

explosive products being processed. Turn off your device if required.

To the Owner

After logging in, select Status to check the basic and network information.

Phonebook SMS Airtel Services Settings Status



Usage of WPS

switch off your device in these conditions If your client device supports WPS, you need not to input the password manually Do not touch the inner antenna area if not necessary as it may affect your after WPS has been available. Please do the following: device's performance.

- Start up vour device
- Launch the client device connected to your device.
- Enable the WPS function of your device.
- Enable the WPS function of the client.

Sleep Mode

In anyone of the two conditions below your device will enter the sleep mode:

- After powering your device on without USB connection, once no user connects Using any unauthorized accessories may affect your device's performance. to the device within 10 minutes and no action is performed to the device. Or you press the WPS button, the device will enter the sleep mode. In the sleep
- and violate related national regulations about telecom terminals. Avoid using your device near or inside metallic structures or establishments mode, the Wi-Fi function will be disabled. that can emit electromagnetic waves as it may influence signal reception.
- With USB connection, once the device is in the idle status for 10 minutes, or Your device is not waterproof. Please keep it dry and store in a shady and cool the WPS button is pressed manually, the Wi-Fi function will be disabled, and
 - Do not use your device immediately after a sudden temperature change. In
 - such case, it will produce dew inside and outside your device, so don't use it until it becomes dry.

injury if used as a toy.

device is working.

Using Your Device

- Handle your device carefully. Do not drop, bend or strike it. Otherwise your device will be damaged No dismantling by non-professionals and only qualified technicians can
- Operating temperature range of 0 °C ~ +35 °C and humidity range of 5% ~
- 95% are recommended.

Using Battery

- Do not short-circuit the battery as this can cause excessive heat and fire
- Do not store battery in hot areas or dispose of it in a fire to avoid explosion. Do not disassemble or modify the battery
- When not using the battery for a long period, remove it from your device and store it in a cool dry place Never use any charger or battery damaged or worn out.
- Return the wear-out battery to the provider or put it in the appointed recycle

If the battery is broken, keep away from it. If it taints your skin, wash your skin with fresh water and seek medical attention if necessary.

Limited Warranty

- This warranty does not apply to defects or errors in the Product caused by: Reasonable abrasion
- ii. End User's failure to follow ZTE's installation, operation or maintenance Do not touch the metallic parts of your device so as to avoid a burn, when your instructions or procedures
 - iii. End User's mishandling, misuse, negligence, or improper installation,
 - iv. Modifications or repairs not made by ZTE or a ZTE-certified individual.

 - vi. Usage of third-party products, or usage in conjunction with third-party
 - products provided that such defects are due to the combined usage.
 - End User shall have no right to reject or return the Product, or receive a refund for

the Product from ZTE under the above-mentioned situations.

or nonconforming items, and is in lieu of all other warranties, expressed. implied or statutory, including but not limited to the implied warranties of merchantability and fitness for a particular purpose, unless otherwise required under the mandatory provisions of the law

This warranty is End User's sole remedy and ZTE's sole liability for defective

Limitation of Liability

ZTE shall not be liable for any loss of profits or indirect, special, incidental or consequential damages resulting from or arising out of or in connection with using of this product, whether or not ZTE had been advised, knew or should have known of the possibility of such damages, including, but not limited to lost profits. interruption of business, cost of capital, cost of substitute facilities or product, or any downtime cost

How to Get Help

You can get Help by:

- Sending F-mail to mobile@zte.com.cn
- Visiting http://www.zte.com.cn Calling Service Hotline: +86–755–26779999

disassembly, storage, servicing or operation of the Product.

v. Power failures, surges, fire, flood, accidents, actions of third parties or other events outside ZTE's reasonable control.

vii. Any other cause beyond the range of normal usage intended for the