

ZTE WP850 CDMA Wireless Phone User Guide

LEGAL INFORMATION

Copyright © 2011 ZTE CORPORATION.


All rights reserved.

No part of this publication may be excerpted, reproduced, translated or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation.

The manual is published by ZTE Corporation. We reserve the right to make modifications on print errors or update specifications without prior notice.

Version No. : R1.1
Edition Time : 2011.08.12
Manual No. : 079584502620

Know Your Phone

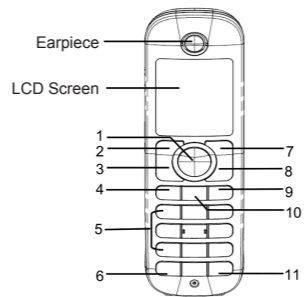

There are two ZTE WP850 models. One needs UIM card inserted in, the other does not need. Section or function marked with “★” is only available to the model with UIM card. Otherwise, it is available to both models.

Key Instruction

Key	Description
1, 3, 8: Scrolling keys (Up/Down/Left/Right key)	Press these keys to scroll cursor to the left, right, up or down when inputting characters or selecting items.

2: Left select key	<ul style="list-style-type: none"> Enter main menu. Select or confirm options in menu. Enter the left-bottom menu.
4: CALL/REDIAL key	<ul style="list-style-type: none"> Make a call or answer an incoming call. In standby mode, press this key to enter recent calls list.
5: Number keys	<ul style="list-style-type: none"> Input numbers and characters.
6, 11: * key, # key	<ul style="list-style-type: none"> Perform different functions under different conditions.
7: Right select key	<ul style="list-style-type: none"> Enter right-bottom submenu on the screen. Erase character(s) while editing text. Return to the previous page during menu navigation.
9: End key	<ul style="list-style-type: none"> End an active call or reject a call. Hold this key to Power on/Power off the phone. Exit from any interface to standby mode.
10: OK key	<ul style="list-style-type: none"> Confirm the commands and options selected. Confirm the characters inputting.

Notes:

In this guide, “press” a key means to press the key once, “hold” a key means to press the key for 2 or 3 seconds.

Interface Icons

Icon	Description	Icon	Description
	Signal strength		New message
	Silent		Roaming
	Power indicator		Alarm clock

Installation

1. Charge the battery

- Connect the desk charger and external AC socket via power adapter.
- Put the phone on the desk charger. The charge spring of the desk charger should be inserted in the apertures at the bottom of the phone.
- Meanwhile, power indicator in the upper-right corner of the display blinks, indicating the charging is in progress. While charging in power-off mode, the display only shows the charge indicator. If the battery is completely flat, it may take a while before the charge indicator appears on the display.
- When the power indicator on the screen stops blinking, the charging is completed. The normal charging time is 4 hours. In the process of charging, it is a normal phenomenon that the battery, phone and charger get hot.
- After the completion of charging, disconnect the charger from the

phone and AC socket.

Note:

- When charging the battery, place the phone in an environment with good ventilation and temperature between 0°C ~ +45°C. Make sure to use the charger offered by the phone manufacturer. Using unauthorized charger may cause danger and violate the guarantee articles.
 - When the phone is automatically switched off or indicates power shortage, charge the battery in time.
 - The standby time and the talk time of the phone are based on ideal working environment. In practice, the working time of battery varies with network condition, working environment and application methods.
- #### 2. ★ UIM Card
- Power off the phone and remove other external power.
 - Take off the back cover and remove the battery of the phone.
 - Insert UIM card into UIM card slot in the phone or pull out UIM card out of slot.
 - Direct the back cover towards the locking catches on the both sides of the phone and push the back cover of the phone upward to lock the cover into its place.

How to Power On/Off

- Hold the **End key** to power on the phone.
- When the phone is powered on, hold the **End key** to power off the phone.

How to Make a Call

- Enter the telephone number. Add the international prefix, country code and area code (without the leading 0) before the number when making an international call.
 - Press the **CALL/REDIAL key** to make the call.
- Note:** If required, hold the **0 key** for the international prefix “+”, or input international prefix e.g. “00” directly.

Message

Select **Menu**→**Messages**.

- Select **New Message** to create new message: key in receiver’s phone number or press **OK key** to select from **Contacts** list, press **Down key** to input message text, Press **OK key** to send the message.
- Select **Inbox** to view messages received.
- Select **Drafts** to view draft you saved.
- Select **Outbox** to view the stored messages.
- Select **Sent** to view the sent messages.
- Select **Message Settings** to set the message configuration.
- Select **Message Template** to view or edit the default text.
- Select **Delete Message** to erase certain messages.
- Select **Memory Status** to view the memory information of message box.

Phone Code

Phone code could prevent your phone from illegal using. The default handset password is 0000. Change it to your own phone password as soon as possible.

Notes:

Remember the handset password, otherwise some service expense may happen.

★ PIN Code and PUK Code

Notes:

PIN code and PUK code may be offered together with the UIM card. If not, please contact with network operator. Change default PIN code to your own as soon as possible.

PIN code: PIN code could prevent your phone from illegal use. You should input the PIN code when entering some menus.

PUK code: The UIM card will be locked if you enter a wrong PIN code consecutively for three times. You need PUK code to unlock it.

Text Input

Operation	Method
Input Letters	Multitap Input — “ Abc/abc/ABC ” press corresponding letter key till the letter appears.

Input Words	eHiText Input — “eZI”, press any key once to key in any word.
Input Digits	Numbers Input — “123”, press digital key once.
Input Symbol	Symbols Input — Press * key to enter the symbols mode and press corresponding digital key. Or press “1” key till the symbol (common symbols) appears except for numbers input mode.
Input Space	Press “0” key , except for the numbers input mode.
Erase Character	Press Right select key .
Move cursor	Press Scrolling keys .
Change input mode	Press # key to select another text mode.

Menu Function

The contents in the following table briefly describe the functions of the phone.

Function	Selection	Description
Add Name	Menu→Contacts→Add Name	Add a new contact to the phone or the UIM card (★) .

Function	Selection	Description
All List	Menu→Contacts→All List	View all the contacts in the phone or UIM card (★) .
Groups	Menu→Contacts→Groups	View the Group's name and change some related settings about the group.
Speed Dials	Menu→Contacts→Speed Dials	Call a contact by holding a number key (1~9) for a few seconds.
Memory Status	Menu→Contacts→Memory Status	Check the storage information about the phone or UIM card (★) .
Call History	Menu→Call History→Call History	View the call history.
Call Duration	Menu→Call History→Call Duration	View the dialed/answered/all calls' time, and you can also clear the call time.
Profile	Menu→Profile	Select and modify the phone profile.
Display Settings	Menu→Settings→Display Settings	You can change the settings of screen, banner or keypad light.
Phone Settings	Menu→Settings→Phone Settings	Set the phone or view the version information of the phone.
Call Settings	Menu→Settings→Call Settings	Make the call settings.

Function	Selection	Description
Time & Date Settings	Menu→Settings→Time & Date Settings	Set the time and date format.
Security Settings	Menu→Settings→Security Settings	Change the settings about the phone code or PIN code (★) , restore factory settings and clear user data.
Alarm	Menu→Alarm	Set reminder time.
Calendar	Menu→Calendar	View the date, and check/create a task that relates with the date.
Magic Box	Menu→Magic Box	Use the tools in magic box.

To the Owner

- The guidelines use a unit of measurement known as Specific Absorption Rate, or SAR. The highest SAR value for this phone when tested was **0.053 W/kg**.
- Some electronic devices are susceptible to electromagnetic interference sent by phone if inadequately shielded. Use phone at least 20 cm or as far away as you can from TV sets, radio and other automated office equipment so as to avoid electromagnetic interference.
- Operating phone may interfere with medical devices like hearing aids and pacemakers, or other medical devices in hospital. Consult a physician or the manufacturer of the medical device before using phone.

Function	Selection	Description
Time & Date Settings	Menu→Settings→Time & Date Settings	Set the time and date format.
Security Settings	Menu→Settings→Security Settings	Change the settings about the phone code or PIN code (★) , restore factory settings and clear user data.
Alarm	Menu→Alarm	Set reminder time.
Calendar	Menu→Calendar	View the date, and check/create a task that relates with the date.
Magic Box	Menu→Magic Box	Use the tools in magic box.

To the Owner

- The guidelines use a unit of measurement known as Specific Absorption Rate, or SAR. The highest SAR value for this phone when tested was **0.053 W/kg**.
- Some electronic devices are susceptible to electromagnetic interference sent by phone if inadequately shielded. Use phone at least 20 cm or as far away as you can from TV sets, radio and other automated office equipment so as to avoid electromagnetic interference.
- Operating phone may interfere with medical devices like hearing aids and pacemakers, or other medical devices in hospital. Consult a physician or the manufacturer of the medical device before using phone.

Function	Selection	Description
Time & Date Settings	Menu→Settings→Time & Date Settings	Set the time and date format.
Security Settings	Menu→Settings→Security Settings	Change the settings about the phone code or PIN code (★) , restore factory settings and clear user data.
Alarm	Menu→Alarm	Set reminder time.
Calendar	Menu→Calendar	View the date, and check/create a task that relates with the date.
Magic Box	Menu→Magic Box	Use the tools in magic box.

To the Owner

- The guidelines use a unit of measurement known as Specific Absorption Rate, or SAR. The highest SAR value for this phone when tested was **0.053 W/kg**.
- Some electronic devices are susceptible to electromagnetic interference sent by phone if inadequately shielded. Use phone at least 20 cm or as far away as you can from TV sets, radio and other automated office equipment so as to avoid electromagnetic interference.
- Operating phone may interfere with medical devices like hearing aids and pacemakers, or other medical devices in hospital. Consult a physician or the manufacturer of the medical device before using phone.

Function	Selection	Description
Time & Date Settings	Menu→Settings→Time & Date Settings	Set the time and date format.
Security Settings	Menu→Settings→Security Settings	Change the settings about the phone code or PIN code (★) , restore factory settings and clear user data.
Alarm	Menu→Alarm	Set reminder time.
Calendar	Menu→Calendar	View the date, and check/create a task that relates with the date.
Magic Box	Menu→Magic Box	Use the tools in magic box.

To the Owner

- The guidelines use a unit of measurement known as Specific Absorption Rate, or SAR. The highest SAR value for this phone when tested was **0.053 W/kg**.
- Some electronic devices are susceptible to electromagnetic interference sent by phone if inadequately shielded. Use phone at least 20 cm or as far away as you can from TV sets, radio and other automated office equipment so as to avoid electromagnetic interference.
- Operating phone may interfere with medical devices like hearing aids and pacemakers, or other medical devices in hospital. Consult a physician or the manufacturer of the medical device before using phone.

Function	Selection	Description
Time & Date Settings	Menu→Settings→Time & Date Settings	Set the time and date format.
Security Settings	Menu→Settings→Security Settings	Change the settings about the phone code or PIN code (★) , restore factory settings and clear user data.
Alarm	Menu→Alarm	Set reminder time.
Calendar	Menu→Calendar	View the date, and check/create a task that relates with the date.
Magic Box	Menu→Magic Box	Use the tools in magic box.

To the Owner

- The guidelines use a unit of measurement known as Specific Absorption Rate, or SAR. The highest SAR value for this phone when tested was **0.053 W/kg**.
- Some electronic devices are susceptible to electromagnetic interference sent by phone if inadequately shielded. Use phone at least 20 cm or as far away as you can from TV sets, radio and other automated office equipment so as to avoid electromagnetic interference.
- Operating phone may interfere with medical devices like hearing aids and pacemakers, or other medical devices in hospital. Consult a physician or the manufacturer of the medical device before using phone.

Function	Selection	Description
Time & Date Settings	Menu→Settings→Time & Date Settings	Set the time and date format.
Security Settings	Menu→Settings→Security Settings	Change the settings about the phone code or PIN code (★) , restore factory settings and clear user data.
Alarm	Menu→Alarm	Set reminder time.
Calendar	Menu→Calendar	View the date, and check/create a task that relates with the date.
Magic Box	Menu→Magic Box	Use the tools in magic box.

To the Owner

- The guidelines use a unit of measurement known as Specific Absorption Rate, or SAR. The highest SAR value for this phone when tested was **0.053 W/kg**.
- Some electronic devices are susceptible to electromagnetic interference sent by phone if inadequately shielded. Use phone at least 20 cm or as far away as you can from TV sets, radio and other automated office equipment so as to avoid electromagnetic interference.
- Operating phone may interfere with medical devices like hearing aids and pacemakers, or other medical devices in hospital. Consult a physician or the manufacturer of the medical device before using phone.

Troubleshooting

If your phone appears following phenomenon in the process of operation, please read following relative information at first. If the problems still can not be solved, please contact the distributor or service provider.

Problem	Check Point
When switching on the phone, it prompts “Enter phone password”.	Enter phone code you set already to unlock the phone.
Incorrect display of system time.	Check whether the system signal is too weak.
No corresponding response when press the phone keys (after several attempts).	Restart the phone.
No display on screen when disconnect external power supply.	Check whether the battery has electricity or it is damaged, or restart the phone.
There is incoming call, but no prompt ring tone.	Check the silent mode and the volume of ring tone.
There is no prompt tone when the alarm clock has reached the time.	Check whether the alarm clock is enabled or not.
Cannot send short message.	Check the network condition.
Other abnormal phenomenon.	Please first refer to user guide, then check whether the power is connected correctly or not, if there is no problem, please restart the phone.