

ZTE S170

CDMA 1X Digital Mobile Phone

Quick Start Guide

ZTE CORPORATION
 NO. 55, Hi-tech Road South, ShenZhen, P.R.China
 Postcode: 518057 Tel: (86) 755 26779999
 URL: <http://www.zte.com.cn> E-mail: mobile@zte.com.cn

LEGAL INFORMATION

Copyright © 2011 ZTE CORPORATION.

 
All rights reserved.

No part of this publication may be excerpted, reproduced, translated or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation.

The manual is published by ZTE Corporation. We reserve the right to make modifications on print errors or update specifications without prior notice.

Version No. : R1.0
 Edition Time : 2011.12
 Manual No. : 079584504178

Phone Overview

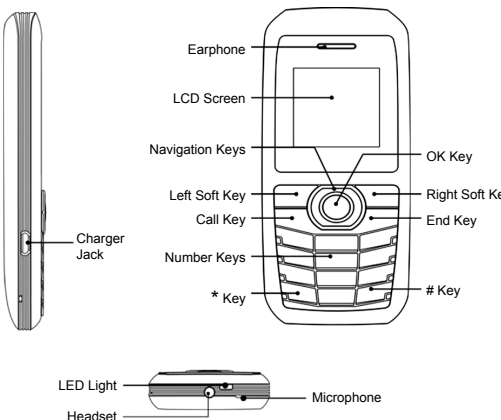

Key Functions

Key	Function Description
Call Key	<ul style="list-style-type: none"> Make or answer a call. Press the Call Key in standby mode to enter All Calls list.

End Key	<ul style="list-style-type: none"> End an active call or reject a call. Long press to Power on/Power off. Exit from any interface to standby mode.
Left Soft Key	<ul style="list-style-type: none"> Enter main Menu in standby mode. Switch to the options at lower left of the LCD.
Right Soft Key	<ul style="list-style-type: none"> Enter All of Phonebook in standby mode. Switch to the options at lower right of the LCD.
Navigation Keys	<ul style="list-style-type: none"> Move the cursor up, down, left and right. In standby mode, Used as hot keys to enter the designated functions. In Phonebook list, press the Left key or Right key to switch groups. Press the Left key or Right key to adjust volume in conversation. Used as direction keys in games. Press and hold the Down Key to turn on/off the LED Light.
OK Key	<ul style="list-style-type: none"> Confirm the commands and options selected. Confirm the character chosen while character inputting. In standby mode, press the OK Key to access the main menu.

0 ~ 9 Number Keys	<ul style="list-style-type: none"> Key in numbers or characters. Press and hold the 0 key to input + in standby mode. Make a Speed Dial call (2-9) in standby mode. Press to enter corresponding submenu.
# Key	<ul style="list-style-type: none"> Press the # Key to select text mode when edit text.
* Key	<ul style="list-style-type: none"> Press and hold the * Key in standby mode to lock phone's keypad. Press the * Key once to enter symbols in text input mode.

 
Open the Back Cover

Remove the back cover as shown below.




Installing the Battery

Install the battery as shown below.

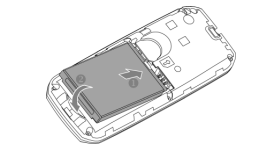


Inserting the UIM Card

 Insert the UIM card as shown below.

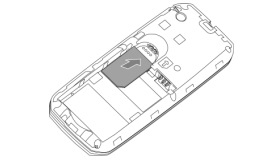

Charging Your Phone

 1. Insert the lead from the charger to the socket, and connect the charger to a standard wall AC socket.

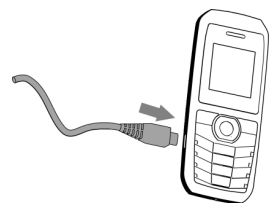

2. After the completion of charging, disconnect the charger from the phone and AC socket.

Switching On/Off

1. Press and hold the **End Key** to switch on/off your phone.
 2. The phone will automatically search for available networks.

Indicators and Icons

Icon	Description	Icon	Description
	Signal strength		Battery indicator
	New SMS		Silence mode
	Headset mode		Alarm

Keypad Lock

If you activate **Auto Keypad Lock**, the keypad will be locked automatically according to your settings. Press and hold the *** Key** to lock the keypad in standby mode. If you want to unlock the keypad, please press first the **Right Soft Key**, and then the *** Key**.

Notes:
 If the call is coming when the keypad is locked, you can press the **Call Key** to answer.
 When the keypad is locked, calls may be possible to the official emergency number programmed into your device.

Phone Code

Phone code could prevent your phone from illegal use. The default phone code is 0000. Please change it to your own as soon as possible.

Notes:
 Please remember the code; otherwise some service expense may happen.

PIN and PUK

PIN Code
 PIN code could prevent your UIM card from illegal use. When PIN lock is on, you should enter the PIN code when powering on the handset again. The network provider offers you PIN code (four to eight digits). You should change PIN code as soon as possible for security.

PUK Code
 Consecutive inputting wrong PIN code for three times can cause locking of UIM card. To unlock, you need PUK code.

Notes:
 PIN code and PUK code may be offered together with the UIM card. If not, please contact your network service provider. Please change default PIN code to your own as soon as possible.

Text

Your phone offers text input modes: abc, Abc, ABC, 123, eZi and Symbols.

Operation	Method
Change input mode	Press the # Key to select another text mode, press the * Key to enter the symbols mode.
Input Letters	In the abc/Abc/ABC mode, press corresponding letter key till the letter appears.
Input Words	In the eZi mode, press any key once to key in any word. Predictive text input is based on a built-in dictionary. When you have finished writing the word and it is correct, confirm it by pressing the OK Key . If the word is incorrect, press the Up key or Down key to view other matching words found in the dictionary.
Input Digits	In the 123 mode, press digit key once.
Input Symbol	Press the Navigation keys to switch symbols and press corresponding digit key. Or press the 1 key till the symbol (common symbols) appears except for the 123 mode.
Input Space	Press the 0 key , except for the 123 mode.
Move cursor	Press the Navigation keys .

Basic Function

Herein after are basic functions of the phone.

PhoneBook

- **Add Name:** Add a new contact to your phone or UIM card.
- **All List:** View all contacts in all list, press the **Left key** or **Right key** to view different groups. In all list, you can search for a contact by entering the key words, press the **OK Key** to view the details. Select **Option** to do more operations.
- **Groups:** View/edit groups and set group ringer.
- **Speed Dials:** View speed dial list and you can set speed dial. In standby mode, press and hold the number key to dial the corresponding call.
- **Memory Status:** View Number of entries saved and maximum number of entries capacity in phone and UIM card.

Messages

- **New Message:** Send a new message to other mobile phones' number. The message could be send to multi-receivers. See "Text" for more instructions of writing text and character. Select **Option** to insert contact details and message template when you edit a message.
- **Inbox/Voice mail/Drafts/Outbox/Sent:** Read messages in Inbox/Voice mail/Drafts/Outbox/Sent.
- **Message Settings:** Change the general and SMS settings.

- **Message Template:** Some common used messages preformatted in phone. You can edit or send them.
- **Delete Message:** You can choose to delete the messages in the inbox, drafts, outbox, sent or delete them together.
- **Memory Status:** Check the storage status of the phone/UIM card.

Call History

- **Call History:** View call's log. Select **Option**, you can do more operations.
- **Call Duration:** Check the call duration.

Settings

- **Display Settings:** Change the settings of Screen/Banner/Keypad Light/Cadence Light.
- **Phone Settings:** Set the language/shortcut/auto keypad lock/power save/auto power on/off of the phone and view the version information.
- **Call Settings:** Set the call/answer/call information reminder/voice privacy/international dial settings.
- **Time & Date Settings:** Set the time and date format.
- **Security Settings:** Change the settings about the phone code, PIN code, restore factory settings and clear user data.

Profile

You can select the mode of profile Silent/General/Outdoor/Meeting/Flight to edit it.

Special Functions

Herein after are special functions of the phone.

Recorder

1. Select **Left Soft Key [Menu] > Magic box > Voice Recorder**.
2. Select **Option > Settings** to set the recorder parameters.
3. Press the **OK Key** to start recording your voice memo.
4. Press the **Left Soft Key [Pause]** to pause, press the **Left Soft Key [Continue]** to resume recording.
5. Press the **Right Soft Key [Stop]** to stop recording, and then the voice memo is saved automatically. Press the **OK Key** to play it.

Radio

Compatible earphone or component is necessary for the radio usage.

You can listen to radio by the handset.

1. Insert the earphone compatible with your handset.
2. In standby mode, select **Left Soft Key [Menu] > Magic box > Radio**, the radio will be started.
3. Select **Left Soft Key [Option] >Auto Search** to search channels automatically.

Or select **Left Soft Key [Option] > Enter Frequency** to input the frequency to set channel manually.

Tips:

Please select suitable volume while listening.

Continuous high volume may be harmful to your ear.

Other Facility

- **BAM:** You can use some predefined functions which are provided by your service provider.

- **Calendar:** View calendar and schedule events.
- **Games:** Select one game and play it.
- **Alarm:** Set alarm alert time.
- **Calculator:** Execute basic math calculation.
- **Stopwatch:** Stopwatch timing.
- **Notepad:** Create note as memos.
- **File Manager:** Organize your files in folders.

Safety Information

General Care

- If you want to clean your phone, please use clean fabric that is a bit wet or anti-static. Do not use harsh chemical cleaning solvents or strong detergents to clean it. Turn off your phone before you clean it.
- As your mobile phone can produce electromagnetic field, do not place it near magnetic items such as computer disks.
- Using the phone near electrical appliances such as TV, telephone, radio and personal computer can cause interference, which affects the function of the phone.
- Do not expose your mobile phone to direct sunlight or store it in hot areas. High temperatures can shorten the life of electronic devices.
- Prevent liquid from leaking into your phone.
- Do not drop, knock or harshly treat your phone. Rough handling can break internal circuit boards.
- Do not charge the mobile phone without battery.
- Do not short-circuit the battery, as this can cause excessive

heat and fire.

- Do not store battery in hot areas or dispose of it in a fire to avoid explosion.
- Store the phone out of the reach of little children. The phone may cause injury if used as a toy.
- Be aware of the usage limitation when using a mobile phone at places such as oil warehouses or chemical factories, where there are explosive gases or explosive products being processed, because even if your phone is in standby mode, it still transmits radio frequency (RF) energy. Therefore, power off your phone if required.
- Do not touch the antenna while calling. Otherwise it will affect the quality of calling and waste battery energy. The damaged antenna will cause slight burn while touching your skin.
- Do not put other things on the terminal to avoid overlaying radiator.
- Keep the antenna free from obstructions and position the antenna straight up. This will ensure best call quality.

General Guidelines

- If your mobile phone is lost or stolen, please report to your service provider or agencies of banning the use of your lost phone, which will protect you from economic losses resulted from unauthorized use. You need to provide the phone's ESN/MEID number labeled. You can see ESN/MEID number after removing the battery. Please keep ESN/MEID number for future use.

- To protect your mobile phone from illegal use, please take the security measures as follows:
 - Set PIN code of the UIM card.
 - Take it with you as you can.

Road Safety

Pay attention to traffic safety. Do not use your mobile phone while driving. Park before making or answering a call.

Hospital Safety

- Some electronic devices are susceptible to electromagnetic interference sent by phone if inadequately shielded. Please use phone at least 20 cm or as far away as you can from TV set, radio and other automated office equipment so as to avoid electromagnetic interference.
- Operating of mobile phone may interfere with medical devices like hearing aid and pacemaker. Please always keep the mobile phone more than 20 centimeters away from such medical devices when the phone is powered on. Do not carry the mobile phone in the breast pocket. Power the mobile phone off if necessary. Consult a physician or the manufacturer of the medical device before using the phone.

Emergency Service

On occasion of emergent calling, keep your phone in status of power on and in area of service. On the condition of standby, press the key to enter emergency phone number, and then press **Call Key** to make a phone call.

Third Party Equipment

- Please use original accessories or accessories that are authorized by the manufacturer. Using any unauthorized accessories may affect your mobile phone's performance, and violate related national regulations about telecom terminals, or even endanger your body.
- Do not connect the phone with other unauthorized peripheral equipments.
- Do not attempt to disassemble the mobile phone and battery by yourself. Non-expert handling of the devices may damage them.

Vehicles Equipped with an Airbag

- Before making or answering a call, you should pay attention to the local laws about using wireless mobile phones and take them into account in practical use.
- Safety airbag, brake, speed control system and oil eject system shouldn't be affected by wireless transmitting. If you do meet problems above, please contact your automobile provider.
- Please power off your mobile phone when refueling your automobile, and so do the place where duplex wireless equipments are banned. Don't put your phone together with flammable or explosive items, as inner spark may cause fire.

Aircraft Safety

- Follow the restrictions in aircraft. Wireless devices can cause interference in aircraft.

- Please power off your mobile phone before taking on till landing. In order to protect airplane's communication system from interference, it is never allowed to use mobile phone when it is in flight. Using mobile phone before the plane taking off should get aircrew's permission according to safety regulations.

Warranty Terms

The warranty does not apply to defects or errors in the product caused by:

- Reasonable abrasion.
- Misuse including mishandling, physical damage, improper installation, unauthorized disassembly of the product.
- Water or any other liquid damage.
- Any unauthorized repair or modification.
- Power surges, lightning damage, fire, flood or other events outside ZTE's reasonable control.
- Use of the product with any unauthorized third party products such as generic chargers.
- Any other cause beyond the range of normal usage for products.

End User shall have no right to reject, return, or receive a refund for any product from ZTE under the above-mentioned situations.

This warranty is end user's sole remedy and ZTE's sole liability for defective or nonconforming items, and is in lieu of all other warranties, expressed, implied or statutory, including but not

limited to the implied warranties of merchantability and fitness for a particular purpose, unless otherwise required under the mandatory provisions of the law.

Limitation of Liability

ZTE shall not be liable for any loss of profits or indirect, special, incidental or consequential damages resulting from or arising out of or in connection with using this product, whether or not ZTE had been advised, knew or should have known the possibility of such damages. Refer to the enclosed warranty card for full warranty and service information.

Declaration of RoHS compliance

To minimize the environmental impact and take more responsibility to the earth we live in, this document shall serve as formal declaration that the S170 manufactured by **ZTE CORPORATION** is in compliance with the Directive 2002/95/EC of the European Parliament - RoHS (Restriction of Hazardous Substances) with respect to the following substances:

- Lead (Pb)
- Mercury (Hg)
- Cadmium (Cd)
- Chromium (Cr (VI))
- Polybrominated biphenyls (PBB's)
- Polybrominated diphenyl ethers (PBDE's)

The S170 manufactured by **ZTE CORPORATION**, meets the requirements of EU 2002/95/EC.