



# LEGAL INFORMATION

**Copyright © 2012 WARID TELECOM.**

All rights reserved.

No part of this publication may be excerpted, reproduced, translated or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of WARID TELECOM.

The manual is published by WARID TELECOM. We reserve the right to make modifications on print errors or update specifications without prior notice.

**Version No.** : R1.0

# Table of Contents

SECURITY	5	HOW TO ADD PEOPLE TO THE PHONEBOOK	20
SAFETY PRECAUTIONS	5	HOW TO MAKE AND RECEIVE CALLS	21
KEY FUNCTIONS	11	HOW TO SEND MESSAGES	21
LOCK AND UNLOCK THE KEYPAD	13	HOW TO RECEIVE A MESSAGE	22
INTERFACE ICONS	13	HOW TO SET USER PROFILES	22
TECHNICAL PARAMETERS	14	HOW TO VIEW CALL HISTORY	22
BATTERY	14	HOW TO CONFIGURE CALL SETTINGS	22
INSERTING THE SIM CARD	16	HOW TO SET YOUR PHONE	23
INSERTING THE MEMORY CARD	17	HOW TO SET YOUR ALARM	24
CHARGING THE BATTERY	18	FILE MANAGER	24
POWERING YOUR PHONE ON/OFF	19	HOW TO PLAY MUSIC	24
TURN THE TORCH ON/OFF	19	HOW TO LISTEN TO FM	25
WRITING TEXT	19	HOW TO USE SERVICES	26

## Security

- To protect your mobile phone from illegal use, take the security measures as follows:
- Set PIN codes of the SIM card.
- Set handset lock code.
- Set call restrictions.

## Safety Precautions

This section includes some important information on safe and efficient operation. Please read this information before using the phone.

### Operational Precautions

- Please use your phone properly. When making or receiving a call, please hold your phone as holding a wireline telephone. Make sure that the phone is at least one inch (about two point five centimeters) from your body when transmitting.
- Do not touch the antenna when the phone is in use. Touching the antenna area affects call quality and may cause the phone to operate at a higher power level than needed.
- Some people may be susceptible to epileptic seizures or blackouts when exposed to flashing lights, such as when watching television or playing video games. If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult your doctor before playing video games on your phone or enabling a flashing-light feature on your phone. (The flashing-light feature is not available on all products.)
- Keep the phone out of reach of small children. The phone may cause injury if used as a toy.

## Precautions While Driving

- Please pay attention to the traffic safety. Check the laws and regulations on the use of your phone in the area where you drive. Always obey them.
- Use the hands-free function of the phone, if available.
- Pull off the road and park before making or answering a call if conditions require.

## Precautions for Medical Devices and Facilities

- When using your phone near pacemakers, please always keep the phone more than eight inches (about twenty centimeters) from the pacemaker when the phone is switched on. Do not carry the phone in the breast pocket. Use the ear opposite the pacemaker to minimize the potential for interference. Switch off the phone immediately if necessary.
- Some phones may interfere with some hearing aids. In the event of such interference, you may consult your hearing aids manufacturer to discuss alternatives.
- If you use any other personal medical device, please consult the manufacturer of your device to determine if it is adequately shielded from RF energy.
- In those facilities with special demand, such as hospital or health care facilities, please pay attention to restrictions on mobile phones. Switch off your phone if required.

## Mobile Phone

- Please use original accessories or accessories approved by the phone manufacturer. Using any unauthorized accessories may affect your mobile phone's performance, damage your phone or even cause danger to your body and violate related local regulations about telecom terminals.

- Turn off your phone before you clean it. Use a damp or anti-static cloth to clean the phone. Do not use a dry cloth or electrostatically charged cloth. Do not use chemical or abrasive cleaners as these could damage the phone.
- As your mobile phone can produce electromagnetic fields, do not place it near magnetic items such as computer disks.
- Using the phone near electrical appliances such as TVs, telephones, radios and computers can cause interference.
- Do not expose your mobile phone to direct sunlight or store it in hot areas. High temperatures can shorten the life of electronic devices.
- Keep your phone dry. Any liquid may damage your phone.
- Do not drop, knock or harshly treat the phone. Rough handling can break internal circuit boards.
- Do not connect the phone with any incompatible enhancements.
- Do not attempt to disassemble the mobile phone or battery.
- Do not store the phone with flammable or explosive articles.
- Do not charge the mobile phone without battery.

## Precautions for potentially explosive atmospheres

- Switch off your phone prior to entering any area with potentially explosive atmospheres, such as fueling areas, fuel or chemical transfer or storage facilities.
- Do not remove, install, or charge batteries in such areas. Spark in a potentially explosive atmosphere can cause an explosion or fire resulting in bodily injury or even death.
- To avoid possible interference with blasting operations, switch off your phone when you are near electrical

 
blasting caps, in a blasting area, or in areas posted "Turn off electronic devices." Obey all signs and instructions.

### Precautions for Electronic Devices

- Some electronic devices are susceptible to electromagnetic interference sent by mobile phone if inadequately shielded, such as electronic system of vehicles. Please consult the manufacturer of the device before using the phone if necessary.

### Safety and General Use in Vehicles

- Safety airbag, brake, speed control system and oil eject system should not be affected by wireless transmission. If you do meet problems above, please contact your automobile provider. Do not place your phone in the area over an airbag or in the airbag deployment area. Airbags inflate with great force. If a phone is placed in the airbag deployment area and the airbag inflates, the phone may be propelled with great force and cause serious injury to occupants of the vehicle.
- Please turn off your mobile phone at a refueling point, and the same to the place where the use of two-way radio is prohibited.

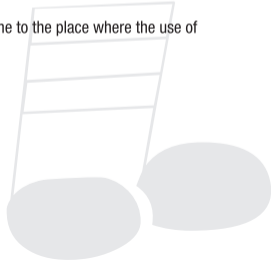

### Aircraft Safety

- Please turn off your mobile phone before the airplane takes off. In order to protect an airplane's communication system from interference, it is forbidden to use your mobile phone in flight. Safety regulations require you to have permission from a crew member to use your phone while the plane is on the ground.
- If the mobile phone has the function of automatic timing power-on, please check your alarm setting to make sure that your phone will not be automatically turned on in flight.

### Battery Use

- Do not short-circuit the battery, as this can cause the unit to overheat or ignite.
- Do not store the battery in hot areas or throw it into fire otherwise, it will cause an explosion.
- Do not disassemble or refit the battery otherwise, it will cause liquid leakage, overheating, explosion and ignition of the battery.
- Please store the battery in a cool dry place if you do use it for a long period.
- The battery can be recharged for hundreds of times, but it will eventually wear out. When the operating time (talk time and standby time) is noticeably shorter than normal, it is time to replace it with a new one.
- Please stop using the charger and battery when they are damaged or show evidence of aging.
- Return the worn-out battery to the provider or dispose of it in accordance with environment regulations. Do not dispose of it in household rubbish.
- Please use original batteries or batteries approved by the phone manufacturer. Using any unauthorized battery may affect your handset performance or may cause danger of explosion, etc.

**Warning:** If the battery is damaged, do not discharge it. If the leakage does come into contact with the eyes or skin, wash thoroughly in clean water and consult a doctor.

 


## Limitation of Liability


WARID shall not be liable for any loss of profits or indirect, special, incidental or consequential damages resulting from or arising out of or in connection with using this product, whether or not WARID had been advised, knew or should have known the possibility of such damages.

The user should refer to the enclosed warranty card for full warranty and service information.

**Note:** The pictures and icons shown in the manual are just schematic drawings for function demonstration. If they are inconsistent with your handset, please take your handset as the standard. If the inconsistency exists in the manual because of the handset function updates, please refer to the follow-up public information from WARID TELECOM.

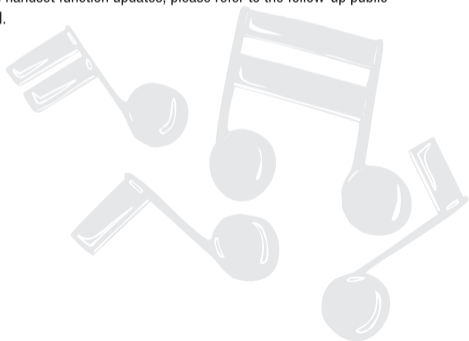

## Key Functions

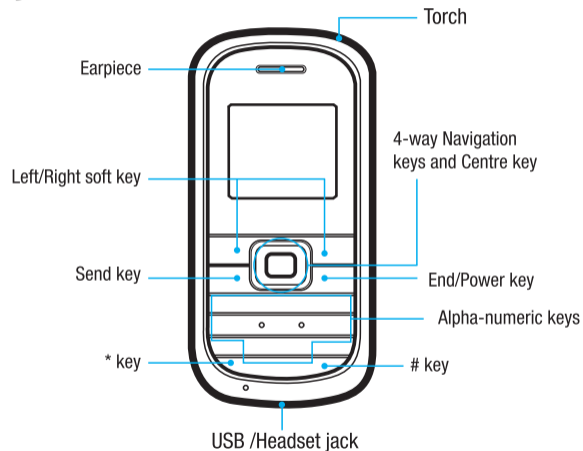 

Function	Description
Left soft key	Performs the function indicated at the left bottom of the screen.
Right soft key	Performs the function indicated at the right bottom of the screen.
Centre key	Press to confirm actions and make selections.
4-Way Navigation keys	These keys (UP, DOWN, LEFT and RIGHT) allow for navigation through menu options and quick access to some function menus.
Send key	Press to dial a phone number or answer a call, or view the call history.
End/Power key	Press to exit to the standby mode. Hold to switch on/off the phone.
* key and # key	They have different functions in different modes or function menus.
Alpha-numeric keys	Press to enter characters 0-9 and the alphabets from a-z.

**Note:** In this User Manual, “press a key” means to press the key and release it, while “hold a key” means to press the key for at least two seconds and then release it.

## Lock and Unlock the Keypad

In the standby mode, press the Left soft key and then press the \* key within two seconds to lock the keypad. The unlock method is the same.

Locking the keypad can prevent unintentional operations on it. You can answer an incoming call with the regular operation when the keypad is locked.

## Interface Icons

 	Signal strength	 	New SMS, message full when blinking
	Keypad locked		Alarm clock set
	Silent		General
	Battery status		Headset

## Technical Parameters

### Handset

Type	ZTE-G S217
Dimensions(LxWxH)	108.5 mm x 46 mm x 12.3mm
Weight	Approx. 66 g (with battery)

### Battery

Continuous standby time	max. 220 hours (subject to network status)
Continuous talk time	max. 300 minutes (subject to network status)

 
 
For other parameters about battery and charger, refer to their labels.

## Battery


Make sure the battery is charged for a minimum of four (4) hours before use.

### Install the battery

1. Pull the battery cover from the notch on the top edge and remove the cover.
2. Insert the battery by aligning the gold-coloured contacts with the contacts in the battery slot.
3. Push down the upper section of the battery until it clicks into place.
4. Fix the battery cover till you hear the click sound.

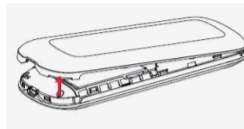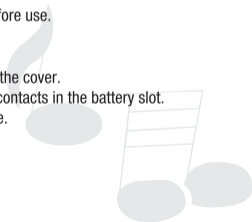

Remove the battery cover

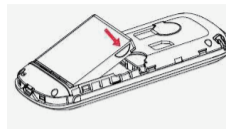 


Push down the battery

### Remove the battery

 1. Make sure that your mobile phone is switched off.
2. Remove the battery cover.
3. Pull the battery up and remove it from the mobile phone.



Remove the battery cover

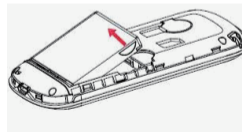


Pull up the battery from here

## Inserting the SIM Card

 Insert the SIM card as follows:

1. Make sure that the phone is switched off and the charger is disconnected from the phone.
2. Turn the phone over and remove the battery cover.
3. Remove the battery if it is already installed.
4. Hold your SIM card with the cut corner oriented as shown and then slide it into the card holder with the gold-coloured contacts facing downward.
5. Install your battery.
6. Fix the battery cover till you hear the click sound.

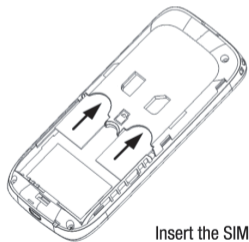

Insert the SIM card

SIM (Subscriber Identity Module) card is a micro chip from a network provider that keeps the carrier details and customers information such as names and phone numbers. Your phone will not work without it. If you already have contacts on your SIM card, they can be transferred in most cases.


## Inserting the Memory Card

 You can use a memory card to expand the storage of the phone. You can store or copy files such as photos, music, and so on.

Do not take out the card or switch off the phone while transmitting or storing data, this may cause data loss or damage to the phone or the card.

Insert the memory card as follows:

- The memory card slot is in the middle of the SIM card holders. Open the battery cover and remove the battery. Insert the card with the metal contacts facing down until it clicks to the right position.

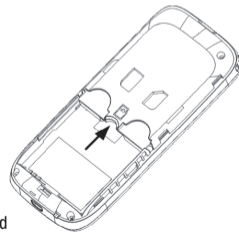

Insert the Memory card

## Charging the Battery

Your phone is powered by a rechargeable battery. For maximum battery performance, it is recommended that you first use up the battery power and then charge it completely. A new battery's full performance is achieved only after three complete charge and discharge cycles.

1. Connect your travel adapter to the bottom of your mobile phone as shown in the diagram.
2. Connect the other end of the travel adapter to the mains socket.
3. When you charge the battery, the battery charging indicator appears.
4. When the battery is fully charged, disconnect the charger.



## Powering your Phone On/Off

Make sure that your SIM card is in your mobile phone and that the battery is charged.

Hold the End/Power key to power on/off the phone. The phone will automatically search for the network.

## Turn the Torch On/Off

In the standby mode, hold the \* key to turn on or off the torch.

## Writing Text

- **Change input mode:** Press the # key to change the input mode (input modes: ABC, abc and Numeric).
- **Input Letters:** press A~Z to enter desired characters. It does not work in numeric (123) mode.
- **Input Digits:** In numeric mode, press digit key once to input a digit.

- **Input Symbol:** Press the \* key to enter symbol mode, select the required symbol (common symbols) by pressing the Navigation keys and then press the Left soft key or Center key to confirm it.
- **Input Space:** Press the 0 key to input space. It does not work in numeric (123) mode.
- **Delete Character:** Press the Right soft key to clear a character. Hold the Right soft key to delete all characters and clear the display.
- **Move Cursor to Left or Right:** Among the text, press the Left/Right navigation keys to move the cursor to left or right.

## How to Add People to the Phonebook

There are some numbers that you may want to call again and again, so it makes sense to add these numbers to your Phonebook. You can then access these numbers quickly and easily.

- Go to Menu → Phonebook → Add new contact.
- Select to save the number to SIM or phone.
- Edit the information and save by selecting OK.
- You can also save a number right after you have made or received a phone call or a text message from someone who is not yet in your Phonebook list.
- To delete someone from your Phonebook list, first select the name, then select Options-Delete.
- To view the memory status and so on, select Options-Phonebook settings.

## How to Make and Receive Calls

The most basic way to make a call is to input the number in the standby mode and press the Send key. You can also make a call from the Phonebook list.

- To call someone: Go to Menu → Phonebook. Use the Up/Down keys to find the name of the person you want to call. You can also type in the first letter of the name of the person you want to call to find the right name, and press the Send key.
- To receive a call, press the Left soft key or the Send key.
- To end a call, press the End/Power key.
- To reject a call, press the End/Power key.

Make sure that you are in an area with sufficient coverage to make calls. The strength of the network signal is indicated on the Status Bar of the screen.

## How to Send Messages

You can use your mobile phone to send and receive messages.

1. Go to Menu → Menu → Messages → Write message → Text message / Multimedia message.
2. Write your message. For more information on input method, see section 'Write Text'. When you write an SMS, press Options-Send to, and edit the recipient. When you write an MMS, you can edit To, Cc, Bcc, Subject and content. In content field, you can select Options and then select to add picture, sound, subject and so on.
3. When you finish writing an SMS, select Options to send or save the message.

## How to Receive a Message

Upon receiving a message, the mobile phone will alert you with a ringtone, prompt, or a new message icon.

1. Press Read to open the new message. You can also go to Inbox to read the message.
2. Use the Up/Down keys to view the message.
3. While the message is open, use Options to reply, delete, or forward the message. You can also call back the sender or save the sender's number.

## How to Set User Profiles

Go to Menu-User profiles. You can select Options-Activate to activate a profile. Or you can select Options-Customize to edit a profile.

## How to View Call History

Go to Menu → Call center → Call history.

Dialed calls, Received calls and Missed calls are saved in Call History. If the records are full, the earliest saved records will be deleted.

Also, you can view call timers and reset all.

## How to Configure Call Settings

Go to Menu → Call center → Call settings.

You can set call waiting, call divert and call barring.

In Advance settings, you can set auto redial, call time reminder and answer mode.

## How to Set Your Phone

You can adjust various settings of your phone. Go to Menu → Settings.

- **Dual SIM settings:** Select dual SIM open, only SIM1/SIM2 open
- **Phone settings:** Select language, set time and date and schedule power on/off, set preferred input method, display, and LCD backlight.
- **Network settings:** Set to automatically or manually select network, and set the preferred networks.
- **Security settings:** Set security features to protect you from unauthorized use of your phone and SIM card.
- **Connectivity:** View connection activities and set data account.
- **Restore factory settings:** Enter the phone lock code to restore to the factory settings. Some personal information might be lost if you use this function, so be careful.

**Note:** You may be required to input the phone lock code in some of the security settings interfaces.

The default lock code is 1122. Go to Security settings → Phone security → Change password to change the phone lock code.

## How to Set your Alarm

Go to Menu  $\mapsto$  Organizer  $\mapsto$  Alarm. You can view, and edit the alarm clocks settings. You can also enable or disable the alarms. By pressing Edit, you can set the corresponding features of the alarm according to instructions: repeat type, time, snooze, alert type, etc.

## File Manager

Go to Menu  $\mapsto$  File manager. You can check all the folders in the phone or memory card, create new ones or rename, delete, or sort, etc. The files you download from the internet will be stored in these folders.

**Note:** When you select Format, the data will be lost, so please be careful with this function.

## How to Play Music

Go to Menu  $\mapsto$  Multimedia  $\mapsto$  Audio player. You can play the audio in your phone or the memory card.

In List  $\mapsto$  Options, you can refresh your playlist, set storage, or make personal settings.

Audio player supports: AMR-NB, WAV, MP3, iMelody, MIDI.

## How to Listen to FM

Go to Menu  $\mapsto$  Multimedia  $\mapsto$  FM radio.

With the radio, you can search for radio channels, listen to them, and save them on your device. Note that the quality of the radio broadcast depends on the coverage of the radio station in that particular area. In the FM radio interface, you can press the Up/Down keys to adjust volume, press the Left/Right keys to tune the frequency, and press the Centre key to pause. Select Options to enter the submenu.

- Channel list: Edit up to 16 channels.
- Manual input: Manually input a channel.
- Auto search: Automatically searches for channels.
- Settings: You can turn on/off Background play.



## How to Use Services

Go to Menu  $\mapsto$  Services. Services allows you to view internet content.

In Services you can use the STK and WAP.

- In WAP, select Homepage to go into your homepage.
- Select Bookmarks to view the list of saved pages.
- Select Recent pages to view the list of pages you recently visited.
- Select Input address to go to a page by directly inputting the address.
- Go to Settings  $\mapsto$  Select profile to select a profile or add a new one.
- Go to Settings  $\mapsto$  Preferences. Select Timeout to set timeout. If the timeout period elapsed prior to completion of the operation or the server is not responding, it will show "Connection Failed". During the timeout period, it will keep trying to connect until expired. Select Show pictures to set whether or not to show the images. Select whether or not to enable Cache and Cookies.
- Go to Settings  $\mapsto$  Browser options  $\mapsto$  Clear cache to clear cache.
- Go to Settings  $\mapsto$  Browser options  $\mapsto$  Clear cookies to clear cookies.

