

MF29A

User Manual

LEGAL INFORMATION

Copyright © 2012 ZTE CORPORATION.

All rights reserved.

No part of this publication may be excerpted, reproduced, translated or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation.

The manual is published by ZTE Corporation. We reserve the right to make modifications on print errors or update specifications without prior notice.

Version No. : R1.3

Edition Time : March 2012

Manual No. : 079584504936

Content

Welcome	5
General Information	5
Safety Precautions.....	5
Cleaning and Maintaining	6
Limited Warranty	6
Limitation of Liability	7
Getting started	8
Appearance	8
LED Indicator	8
Interface Description	9
Installation.....	10
Inserting (U)SIM Card	10
Connecting to Phone.....	11
Connecting to Computer	11
Connecting to PSTN	11
Connecting to WAN/LAN.....	11
Connecting with External Power	11
Switching on Your Device.....	12
Power Supply.....	12
Voice	13
Making a Call	13
Answering a Call.....	13
Internet Access	14
Preparation	14
Establishing a connection between your device and the client.	14
Accessing the Internet	15

Accessing the Internet by Bridge Mode	15
Accessing the Internet by Cable Broadband.....	15
Accessing the Internet by 3G Gateway.....	16
Accessing the WebGUI Configuration Page.....	16
Login	17
Operation Mode.....	18
WAN Connection	18
In Cable Broadband mode	18
In 3G Gateway mode	19
Zamtel Service.....	20
PhoneBook	20
SMS	21
Sending new SMS.....	21
Operating Messages	21
Setting up Messages.....	22
Settings.....	22
3G Settings	22
Wi-Fi Settings.....	23
Firewall.....	30
Advanced	35
Status	41
Usage of WPS	41
U-Disk Master	42
Logout.....	42
Troubleshooting	43
Technical Parameters.....	45
Glossary	46

Welcome

Thank you for choosing ZTE MF29A Router (hereinafter referred to as “unit” or “router”). To get the most from your router and to keep it in the best condition, please read this manual carefully.

The pictures, symbols and contents in this manual are for your reference only. They might not be completely identical with your router. ZTE operates a policy of continuous development. We reserve the right to update the technical specifications in this manual at any time without prior notice.

General Information

Safety Precautions

- Some electronic devices may be susceptible to electromagnetic interference. Locate the router away from TV set, radio and other electronic equipment to avoid electromagnetic interference.
- The router may interfere with medical devices like hearing aids and pacemakers. Consult a physician or the manufacturer of the medical device before using the router.
- Please keep yourself at least 20 centimeters away from router.
- Do not use your router in dangerous environments such as oil terminals or chemical factories where there are explosive gases or explosive products being processed.
- Please use original accessories or accessories that are authorized by ZTE. Unauthorized accessories may affect the router performance, damage the router or cause danger to you.
- Do not attempt to dismantle the router. There are no user serviceable parts.
- Do not allow the router or accessories to come into contact with liquid or moisture at any time. Do not immerse the router in any liquid.

- Do not place objects on top of the router. This may lead to overheating of the device.
- The device must be placed in a well ventilated environment for use.
- Do not expose the router to direct sunlight or store it in hot areas. High temperature can shorten the life of electronic devices.
- Do not allow children to play with the router or charger.
- Keep the length of the cable between the router and the phone less than 10 meters.
- The router is for indoor use only. Do not use the router outside. Do not connect telephone extensions which run outside of the building. These can result in lightning damage to your unit.

Cleaning and Maintaining

- Use an antistatic cloth to clean the router. Do not use chemical or abrasive cleanser as these could damage the plastic case. Turn off your router before you clean it.
- Use the router within the temperature range of -10°C +55°C , and the storage temperature range is -20°C +65°C. The humidity range is 5%~95%.
- Do not use your router during a thunderstorm. Remove the mains power pack from the wall socket.
- Do not take out your (U)SIM card unnecessarily. The (U)SIM card may be easily lost or it can be damaged by static electricity.

Limited Warranty

- This warranty does not apply to defects or errors in the Product caused by:
 - i. Reasonable Router Appearance Disfiguration.
 - ii. End User's failure to follow ZTE's installation, operation or maintenance instructions or procedures.

- iii. End User's mishandling, misuse, negligence, or improper installation, disassemble, storage, servicing or operation of the Product.
 - iv. Modifications or repairs not made by ZTE or a ZTE-certified individual.
 - v. Power failures, surges, fire, flood, accident, actions of third parties or other events outside ZTE's reasonable control.
 - vi. Usage of products of third Parties, or usage in conjunction with third party products provided that such defects is due to the combined usage.
 - vii. Any other cause beyond the range of normal usage for Products. End User shall have no right to reject, return, or receive a refund for any Product from ZTE under the above-mentioned situations.
- This warranty is end user's sole remedy and ZTE's sole liability for defective or nonconforming items, and is in lieu of all other warranties, expressed, implied or statutory, including but not limited to the implied warranties of merchantability and fitness for a particular purpose, unless otherwise required under the mandatory provisions of the law.

Limitation of Liability

ZTE shall not be liable for any loss of profits or indirect, special, incidental or consequential damages resulting from or arising out of or in connection with using of this product, whether or not ZTE had been advised, knew or should have known of the possibility of such damages, including, but not limited to lost profits, interruption of business, cost of capital, cost of substitute facilities or product, or any downtime cost.

Getting started

The router operates on the HSPA+/HSUPA/HSDPA/WCDMA network and GSM/GPRS/EDGE network and supports voice and data service.

Appearance




LED Indicator



Indicator	State	Description
1 WAN signal strength indication	ON	Signal strength is very good or good (RSSI >= -90dBm)
	Blinking	Signal strength is weak (-100dBm < RSSI < -90dBm)
	OFF	No signal
2 Network mode indication	Blue	Registered to 3G network
	Red	Registered to 2G network
	OFF	Not Registered

3 WAN connection status indication	ON	WAN connection established (PDP activated)
	Blinking	WAN connection establishing (PDP activating)
	OFF	WAN connection not established (PDP not activated)
4 Phone status indication	Off	PSTN not connected
	On	PSTN connected or calling via PSTN
5 Phone status indication	Off	Local phone hang up
	Blinking	Phone picked up, ringing or network CS registering
	On	In calling.
6 WiFi indication	Off	WLAN shut down
	Blinking	WLAN working normally with data transmission
7 Power indication	ON	External power supply works normally.
	OFF	External power supply is disconnected or power off.

Interface Description

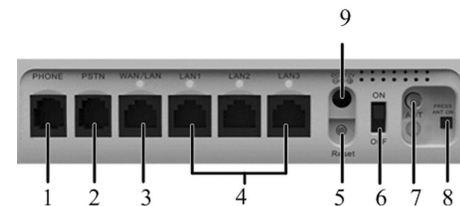

1. **Phone:** Standard RJ11 connector for Telephone.
2. **PSTN:** Standard RJ11 connector for PSTN.

3. **WAN/LAN:** Ethernet connections to internet. In 3G Gateway mode, it is LAN connector. In Cable broadband and Bridge mode, it is WAN connector.
4. **LAN1~LAN3:** Ethernet connections to computer.
5. **Reset:** Reset button
6. **ON/OFF:** Turn the router ON or OFF.
7. **ANT:** Connect to external antenna.
8. **PRESS ANT ON:** To switch between internal antenna and external antenna modes. Press-down means to use internal antenna, prompt-up means to use external antenna. It's in press-down mode as default, only prompt up this button when you connect to an external antenna.


Note: If you prompt up this button without using external antenna, the RSSI signal of the router will be poor.

9. **POWER Socket:** Connection to the external power supply.

Installation

Inserting (U)SIM Card

Insert the (U)SIM card into the (U)SIM port.

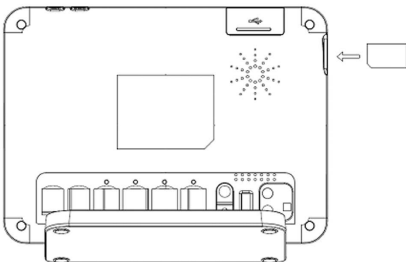

Note:

Please power off the router and remove the external power adapter before removing or inserting the (U)SIM card. If not, the router or (U)SIM card may be damaged.

About (U)SIM Card

Avoid handling the (U)SIM card unnecessarily. Hold the card by the edges to prevent static damage. Keep the (U)SIM card away from electrical and magnetic appliances.

If you cannot get service, make sure that:

- You are in an area which has network coverage.
- You are using the correct (U)SIM card.

Connecting to Phone

Connect the telephone to the **PHONE** interface with a phone cable (RJ11).

Connecting to Computer

Connect your computer to the **LAN** interface with an Ethernet cable (RJ45).

Notes:

The router will adapt the Ethernet cable style (crossover or straight) automatically.

Connecting to PSTN

Connect PSTN with a phone cable (RJ11).

Connecting to WAN/LAN

Connect WAN/LAN with an Ethernet cable (RJ45).

Connecting with External Power

Connect the external power adapter to a standard power outlet. Insert the plug into the socket at the rear of the router.

Switching on Your Device

1. Turn the power switch on to get started. Make sure that the phone is on hook before power on.

Note:

Do not put anything on the top of the router. Do not lay routers to overlap each other when using.

2. Wait 1~2 minutes after turning the router on before you use the service. The WiFi indicator and power indicator should be lit on.

Note:

When the router is turned off, an incoming caller will hear the prompt like “The number you have dialed is currently unavailable.”

If the network mode indicator is blinking constantly, try to move the router to another location. The router takes 1~2 minutes to initialize, attach to the network and obtain an IP address.

Power Supply

For normal operation, connect the router to the external power adapter. In case of power failure or when there is no available external power supply, the router will not work.

Voice

Making a Call

You have two ways to make a call:

- Through (U)SIM card.
- Through PSTN.

To make a call:

1. Pick up the handset.
2. Key in the telephone number.
3. You can either press # key on the telephone to send the call, or wait 4 ~ 8 seconds for the call to be connected automatically.
4. Call will be connected.

Note:

If the network mode indicator is off, the RF signal is unavailable. Change the location of the router and make sure nothing is blocking it.

Making a Trunk Call

If you are making a trunk call, add the area code as normal.

E.g. 03 9612 3456

Making an International Call

If you are making an international call, key in the international access code followed by the country code, area code and number.

E.g. 00 11 64 12 345678

Answering a Call

When the phone rings, pick up the handset to answer it. If the telephone has hands-free function you also can answer the call by pressing the **Hands-free** button. Press the **Hands-free** button again to end the call.

Internet Access

The router does not require any drivers, and it supports all operating systems with Ethernet LAN capability, such as Windows 2000, XP, Vista, MAC OS X and Linux.

Note: All the parameter settings in this chapter are just for your reference. Please contact your service provider for detail.

Preparation

Establishing a connection between your device and the client

Via RJ45 Ethernet cable

1. Connect your device and the client with the RJ45 Ethernet cable.
2. Power on your device.

The connection between your device and the client will be established successfully a moment later.


Via Wi-Fi

1. Power on your device directly. It will take 1~2 minutes to initialize, and then Wi-Fi LED is blinking.
2. Use your normal Wi-Fi application on the client to search the available wireless network.

Note:

You need to check your Wireless Network Connection. Set the client to obtain an IP address automatically in the Internet protocol (TCP/IP) properties, and the client will get an IP address like "192.168.0.100".

3. Select the SSID of your device, and then click **Connect**.

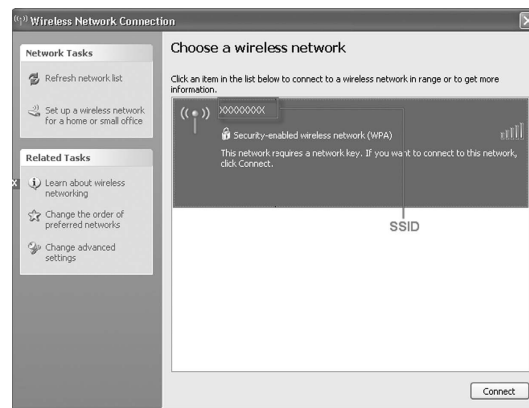

Note:

There will be a pop-up window to require the password. Please check the label on the battery compartment of your device to gain the SSID and preset password information.

4. Wait a moment, the connection between your device and the client will be established successfully.

Accessing the Internet

Before accessing the internet, make sure;

1. Switch on the device.
2. Establish a connection between your device and the client.

Accessing the Internet by Bridge Mode

1. Login to the WebGUI and set the **Operation Mode** as **Bridge**.
2. Connect the device with internet by **WAN** or **LAN**.

Accessing the Internet by Cable Broadband

1. Login to the WebGUI and set the **Operation Mode** as **Cable Broadband**.
2. Connect the device with internet by **WAN**.
3. Set **WAN Connection** in WebGUI.

Accessing the Internet by 3G Gateway

Note:

Please make sure that you have inserted the (U)SIM card before you switch on the device.

1. Login to the WebGUI and set the **Operation Mode** as **3G Gateway**.
2. Set **WAN Connection** in WebGUI.

Accessing the WebGUI Configuration Page

1. Make sure the connection between your device and the client is correct.
2. Launch the internet browser and enter `http://192.168.0.1` in the address bar.

Note:

It is recommended that you use IE (7.0 and later), Firefox (3.0 and later), Opera (10.0 and later), Safari (4.0 and later) or Chrome (10.0 and later).

3. The login page appears as follows.




Login

In the WebGUI Configuration page, select the desired language and input the password (the default Password is **admin**).



Click **Login** to log in to the device.

When you login, the following interface appears.

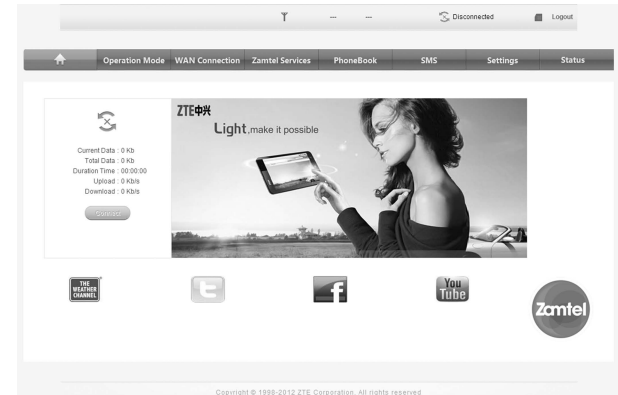


The whole interface is divided into three parts. Related functions can be executed by operations in the related areas.

- **Index area:** Shows the configuration list for your device.
- **Content area:** Shows the detailed configuration.

- **System Information Area:** Shows the system status and different kinds of tips.

Operation Mode

When you first login to the web GUI, you need to choose the operation mode to make the correct setting.

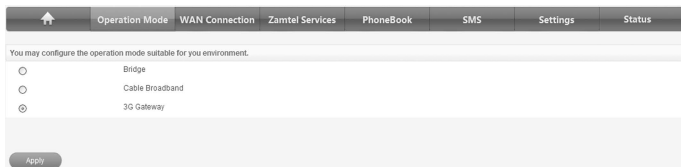

There are three operation modes:


- **Bridge:** Connect to Internet by WAN interface.
- **Cable Broadband:** Connect to Internet by WAN interface.
- **3G Gateway:** Connect to Internet by (U)SIM.

Please choose the correct operation mode according to your actual network condition. For detailed information, please contact your network operator. Click **Apply** to finish the setting.

WAN Connection

In Cable Broadband mode

Click **WAN Connection**, you can configure how to connect to the Internet.

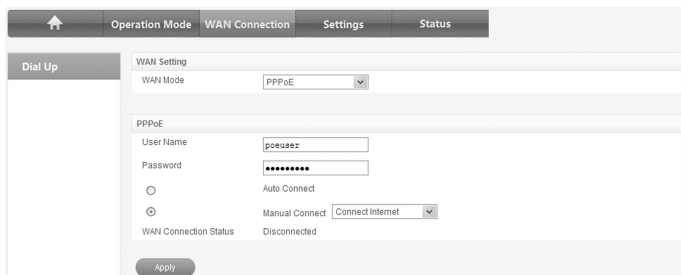


Select WAN mode as **Static**, **DHCP** or **PPPoE**. If you select **PPPoE** mode, you need to input the **User Name** and **Password** supplied by the network provider, and select the Connect mode.

- **Auto Connect:** The router will automatically connect to WAN when it is powered on.
- **Manual Connect:** Connect to the Internet or disconnect from the Internet manually.

Click **Apply** to confirm your configuration, and then the figure will show in the wan connection status.

In 3G Gateway mode


Click **WAN Connection**, you can configure how to connect to the Internet.

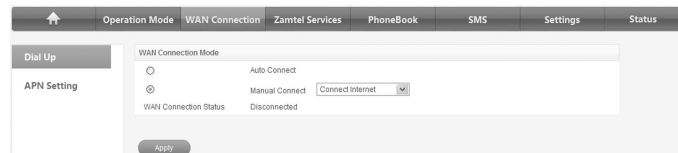

Click **Dial Up**, and then select the connection mode.


- **Auto Connect:** The router will automatically connect to WAN when it is powered on.
- **Manual Connect:** Connect to Internet or disconnect from Internet manually.

Click **Apply** to confirm your configuration.

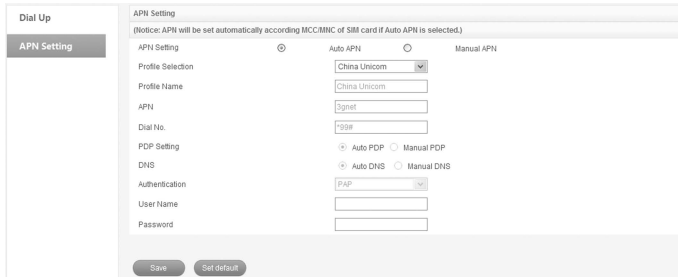

Click **APN Setting**, set up the APN settings, and then click **Save** to save you configuration, click **Set default** to set your configuration as default.

Zamtel Service

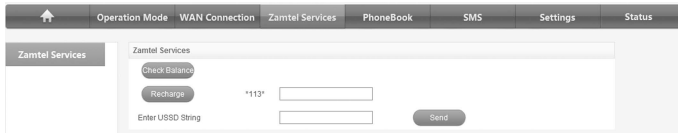

Contact the network operator for settings details.

PhoneBook

View the contacts you saved in the device or SIM card, or add a new contact to native or SIM card.




Enter the name and phone number, and then click **Save** to save the new contact.

SMS

This function allows you to send or receive short messages. And you can use this function only in 3G Gateway mode.

Sending new SMS

1. Select **SMS > New Message** to access the following figure:

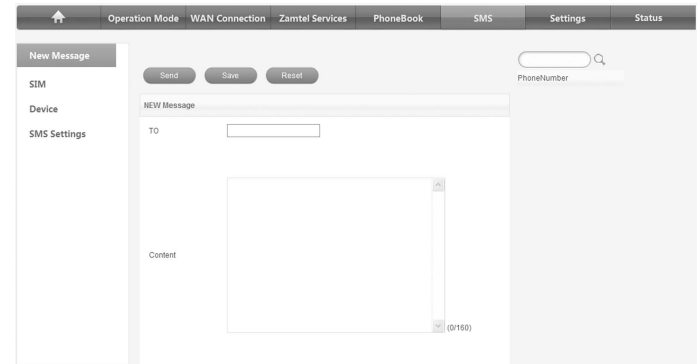

2. Enter the recipient's phone number or find in phonebook.
3. Enter message content.
4. Click **Send** to send the message.

Operating Messages

Inbox: select **SMS > SIM/Device > Inbox**, all the received messages saved in your SIM/device will be displayed.


Outbox: select **SMS > SIM/Device > Outbox**, all the sent messages in your device will be displayed.

Drafts: select **SMS > SIM/Device > Drafts**, all the drafts saved in your device will be displayed.

- Click **View** to view the selected message.
- Click **Send** to send the selected message.
- Click **Reply** to reply to the selected message sender.

- Click **Forward** to forward message to another person.
- Click **Delete** to delete the selected message.
- Click **Delete All** to delete all the messages.

Setting up Messages

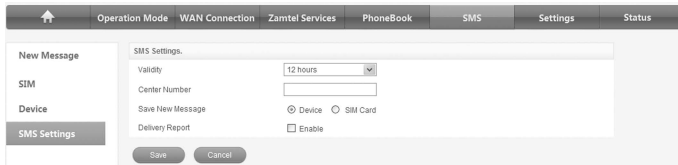

Select **SMS > SMS Settings** to set up the message settings.

Settings


- Do not modify any settings unless instructed by your service provider.
- Please disconnect the device from the network before changing the settings.

3G Settings

Click Refresh to update the wireless information.

Network Select

Select **Settings > Network Select**, the Band Selection Mode is shown in the following figure:

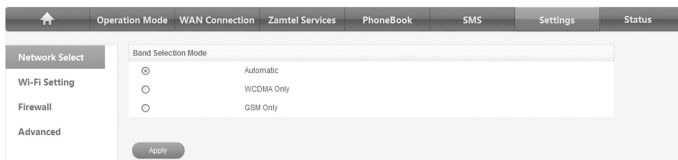


- **Automatic:** Device searches for available network.
- **WCDMA Only:** Device searches for 3G/WCDMA network only.
- **GSM Only:** Device searches for GSM network only.

Click **Apply** to confirm your configuration.

Wi-Fi Settings


Station list

Select **Settings > Wi-Fi Setting > Station List**, the wireless network stations are shown in the following figure:

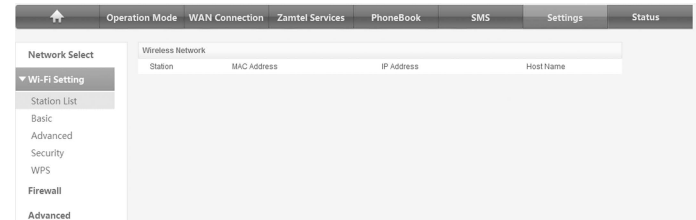

Basic

Select **Settings > Wi-Fi Setting > Basic**, the wireless network basic parameters are shown in the following figure:

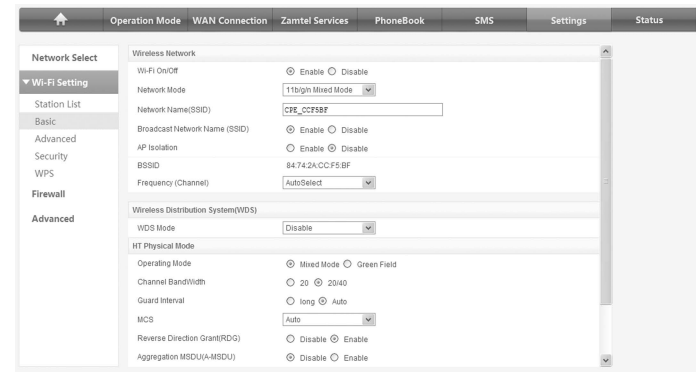

- **Wi-Fi On/Off:** Enable Wi-Fi or not.
- **Network Mode:** If all of the wireless devices connect with this router in the same transmission mode, performance will be improved by choosing the appropriate wireless mode.

- **Network Name(SSID):** Service Set Identifier (SSID). Enter a string less than 32 characters as the name for your wireless local area network (WLAN).
- **Broadcast Network Name(SSID):** Disable or Enable (Default) this function. If **Enable** is selected, the router broadcasts the SSID, and other devices can detect and connect to it. If **Disable** is selected, the other devices cannot detect the router. You can only connect to the router by manual setting.
- **AP Isolation:** When **Enabled** is selected, each of your wireless clients will not be able to communicate with each other. When **Disable** is selected, each of your wireless clients will be able to communicate with each other.
- **BSSID:** MAC address of the Wi-Fi.
- **Frequency(Channel):** Choose the appropriate channel to optimize the performance and coverage of your wireless network.
- **WDS Mode:** WDS mode allows the router to communicate with other APs, WDS connection is two-way communication, APs should know each other's wireless MAC address. And make sure that all APs share the same SSID and channel.

WDS configuration is shown below:

Step	Description
1.Set the SSID and the same channel for APs	Manually set the SSID and the same channel is strongly recommended.

Step	Description
2.Select WDS mode: Disable, Lazy Mode, Bridge Mode or Repeater Mode	<ul style="list-style-type: none"> • If you select Disable, WDS is disabled. • If you select Lazy Mode, WDS is enabled, and set wireless MAC address only on the peer APs. • If you select Bridge Mode, WDS is enabled, and set the peer APs wireless MAC address on router. When you set Bridge Mode, your PC can not search SSID of AP after connected. • If you select Repeater Mode, WDS is enabled, and set the peer APs wireless MAC address on router. When you set Repeater Mode, your PC can search SSID of AP after connected.
3.Select Phy mode: CCK,OFDM, HTMIX or GREENFIELD	CCK: 802.11b OFDM: 802.11g HTMIX: 802.11b/g/n Mixed Mode GREENFIELD: 802.11b/g Mixed Mode
4.Select Encrypt Type: TKIP, AES	If you select NONE , all the data transmitted without encryption, and other station can access router. If you select the Encrypt Type, you should set all APs the same Encrypt type and password to make the data transfer.
5.Set peer AP's wireless MAC address on router	Only Repeater Mode and Bridge Mode need this.


The HT Physical Mode parameters are shown below:

- **Operating Mode:** In **Mixed Mode**, packets are transmitted with a preamble compatible with the legacy 802.11a/g, the rest of the packet has a new format. In **Green Field**, high throughput packets are transmitted without a legacy compatible part.
- **Channel Bandwidth:** Set the HT physical channel bandwidth.
- **Guard Interval:** Guard interval is to introduce immunity to propagation delays, echoes and reflections, to which digital data is normally very sensitive.
- **MCS:** The Modulation and Coding Scheme (MCS) is a value that determines the modulation, coding and number of spatial channels.
- **Reverse Direction Grant(RDG):** Enable **RDG** or not.
- **Aggregation MSDU(A-MSDU) :**To enable Hyper Throughput TX Aggregate MAC Service Data Unit, select **Enable**.
- **Auto Block ACK:** Select to block ACK (Acknowledge Number) or not during data transferring. When you enable the WDS function, you should set to enable **Auto block ACK** to preventing the other effect during data transferring.
- **Decline BA Request:** Select to reject peer BA-Request or not.

Click **Apply** to confirm your configuration.

Advanced

Select **Settings > Wi-Fi Setting > Advanced**, the advanced wireless network parameters are shown in the following figure:

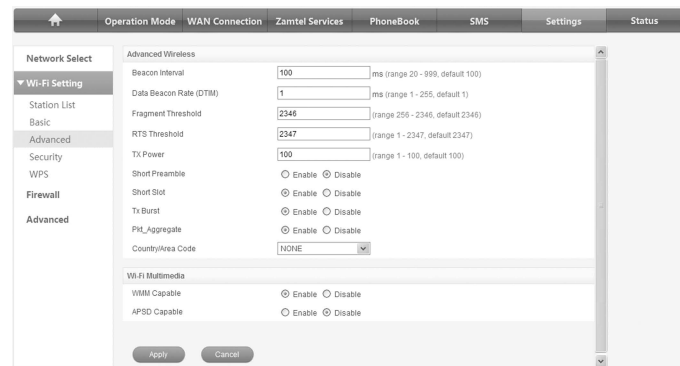

- **Beacon Interval:** The router broadcasts beacon message to announce that it has buffered frames to deliver. The default value is 100 (ms). Beacons are packets sent by an access point to synchronize a wireless network. Specify a beacon interval value. is recommended.
- **Data Beacon Rate(DTIM):** A Delivery Traffic Indication Message(DTIM) informs next clients to listen to broadcast and multicast messages.
- **Fragment Threshold:** This value should remain at its default value of 2346. If you experience a high packet error rate, you may slightly increase your fragment threshold. Setting the fragment threshold too low may result in poor performance.
- **RTS Threshold:** Request To Send (RTS) threshold should be remained as the value of 2347. If you encounter inconsistent data flow, only minor modifications are recommended.
- **TX Power:** Transmit power should be remained as the value of 100.
- **Short Preamble:** The length of CRC block in the frames during the wireless communication.

- **Shot Slot:** To indicate that 802.11g is using a shot time slot because there is no legacy station(802.11b) present.
- **Tx Burst:** Tx burst allows router to deliver better throughput in the same period and environment in order to increase speed.
- **Pkt_Aggregate:** Increase efficiency by aggregating multiple application packets data into a single transmission frame. In this way, 802.11n networks can send multiple data packets with the fixed overhead cost in just a single frame.

Country/Area Code: Select the region you live in.

The Wi-Fi multimedia parameters are shown below:

- **WMM Capable:** When multimedia contents are transferred over wireless network, this function enhances data transfer performance.
- **APSD Capable:** Automatic Power Save Delivery (APSD),enable or disable data flow using APSD during transmitting for power saving.

Click **Apply** to confirm your configuration.

Security

Select **Settings > Wi-Fi Setting > Security**, the Security parameters are shown in the following figure:



Unless one of these encryption modes is selected, wireless transmissions to and from your wireless network can be easily intercepted and interpreted by unauthorized users.

The security modes are described below:

- **No ENCRYPTION:** You can authenticate successfully with a SSID, whether it is valid or empty.
- **WPA-PSK/WPA2-PSK:** Apply both the WPA-PSK and WPA2-PSK scheme.

If the Authentication type is **WPA-PSK/WPA2-PSK**, the bottom part of the configuration page displays WPA parameters.

- **WPA Algorithm:** **TKIP, AES** or **AUTO**.
- **Pass phrase:** You can input hexadecimal digits up to 64 characters or input ASCII characters choose a length of 63 characters or less.
- **Key Renewal Interval:** Define how long the key should be renew.


You can set **Wireless MAC Filtering**:

- **Wireless Disable:** If disabled, MAC address is not used to control network access.
- **Wireless Allow:** Set the MAC address that is allowed to access network.
- **Wireless Reject:** Set the MAC address that is not allowed to access network.


Click **Apply** to confirm your configuration.

WPS

Select **Settings > Wi-Fi Setting > WPS**, the WPS configuration is shown in the following figure:

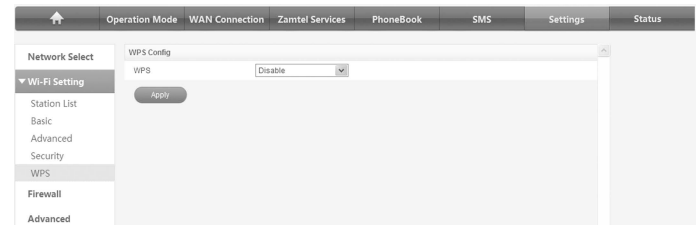

Select **Enable**, click **Apply**, the WPS settings are shown in the following figure:

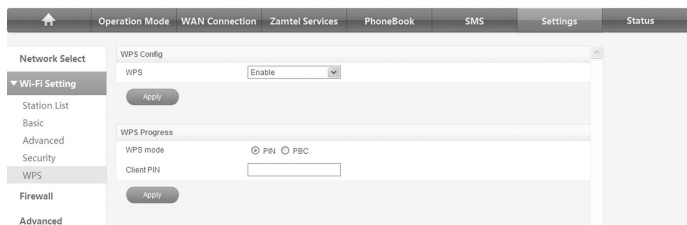

WPS Summary, WPS Progress and WPS Status are all shown in the figure.

To set WPS, select WPS mode, the two modes are described below:

- **PIN**: Set the client's PIN code in **Client PIN** field.
- **PBC**: Press the WPS button of the router or select PBC, and then click **Apply**. Press WPS button on the client wireless adapter within two minutes, and the negotiation process will be established.

Firewall


You may setup firewall rules to protect your network from virus, worm and malicious activity on the Internet.

Notes:


You can set the maximum 10 filtering items for **MAC/IP/Port Filtering**, URL Filtering and **Port Forwarding**.

MAC/IP/Port Filtering

Select **Settings > Firewall > MAC/IP/Port Filtering**, the MAC/IP/Port Filtering is shown in the following figure:

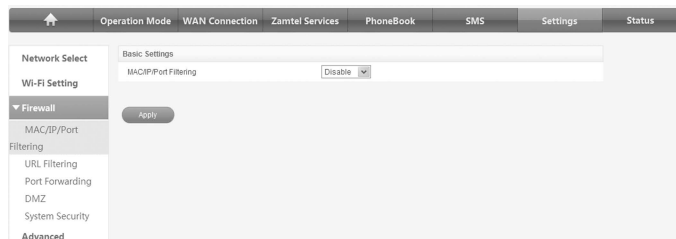

If you select **Enable**, the filter settings will appear:

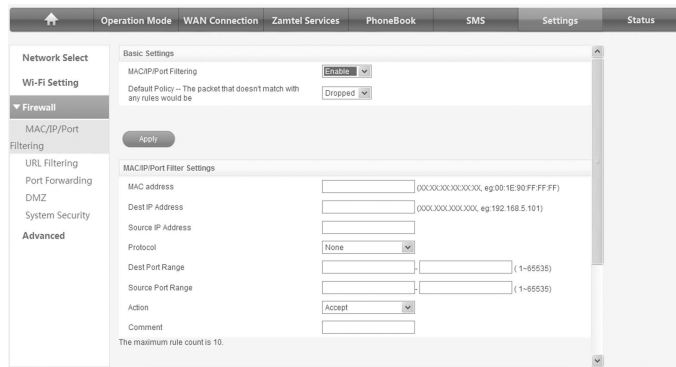

- **Default Policy**: Set how to handle the packet if none of the rules matches.
- **MAC address**: Set the MAC address that will be filtered.
- **Dest IP Address**: Set the destination IP address that will be filtered.
- **Source IP Address**: Set the source IP address that will be filtered.
- **Protocol**: Set which protocol will be used for filtering.

- **Dest Port Range:** Set the destination port numbers that will be filtered
- **Source Port Range:** Set the source port numbers that will be filtered.
- **Action:** Set how to handle the packet if it matches with the rule.
- **Comment:** Type comment for the filter settings.

Note:

Filtering rules are matched one by one, if met this provision, it will not continue to match the rules listed below.

Click **Apply** to confirm your configuration.

Click **Delete** to delete the rule which you selected.


Click **Reset** to clear what you select or input.

To add a new rule:

1. Select **Enable** in the **Basic Settings** area.
2. Click **Apply**.
3. Input the detail information in the **MAC/IP/Port Filtering** area.
4. Click **Apply** in the **MAC/IP/Port Filtering** area.

URL Filtering


You can setup content filter to restrict the improper content access. Select **Settings > Firewall > URL Filtering**, the URL Filtering is shown in the following figure:

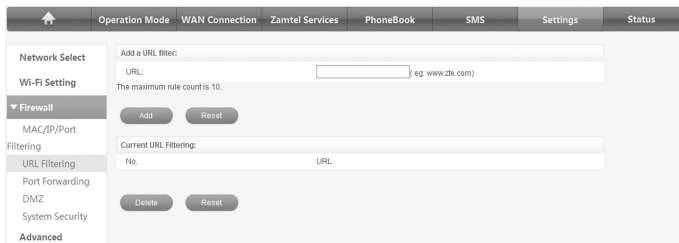


Type URL address, and then click **Add** to add the URL address into the filtering list. The new URL filtering item will be shown in the **Current URL Filtering:** field.

Port Forwarding

You can setup virtual servers to provide services on the Internet. Select **Settings > Firewall > Port Forwarding**, the virtual server settings is shown in the following figure:

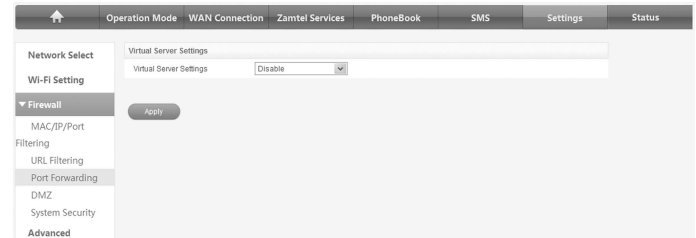

If you select **Enable**, the Virtual Server Settings will appear:

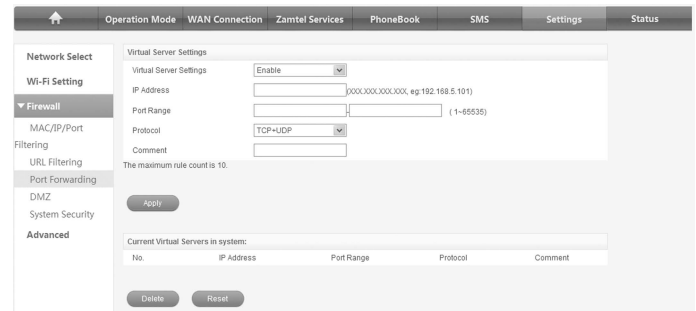


- **IP Address:** Set IP address for the virtual server.
- **Port Range:** Set port numbers for the virtual server.
- **Protocol:** Set protocol for the virtual server.
- **Comment:** Type comment for the virtual server settings.


Click **Apply** to confirm your configuration.

DMZ

You can setup a De-militarized Zone(DMZ) to separate internal network with the Internet. Select **Settings > Firewall > DMZ**, the DMZ setting is shown in the following figure:

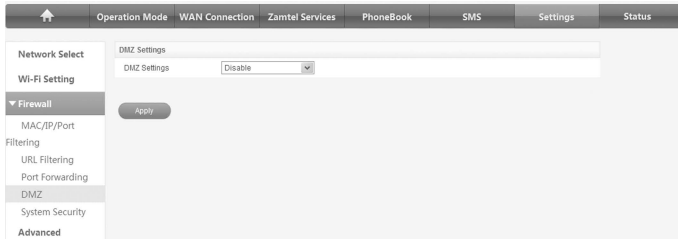


If you select **Enable**, set the **DMZ IP Address**, and then click **Apply** to confirm your configuration.

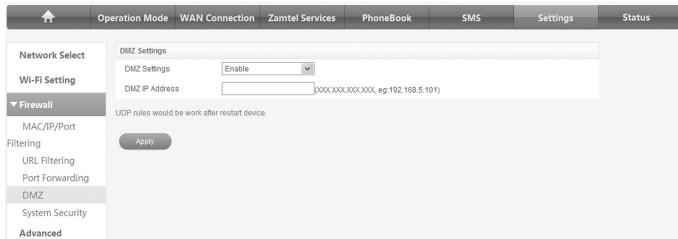

System Security


You can configure system firewall to protect AP or router from being attacking. Select **Settings > Firewall > System Security**, the system security setting is shown in the following figure:

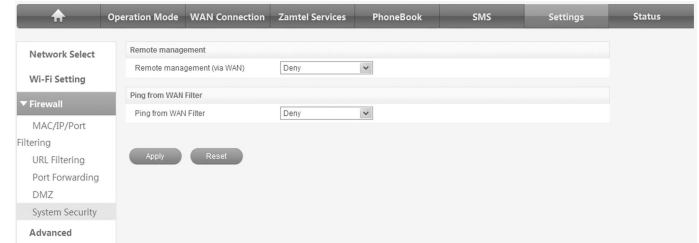

Allow or **Deny** the remote management function, **Allow** or **Deny** ping from WAN filter on requirement, and then click **Apply**.

Advanced Management


Select **Settings > Advanced > Management**, the administrator settings information is shown in the following figure:

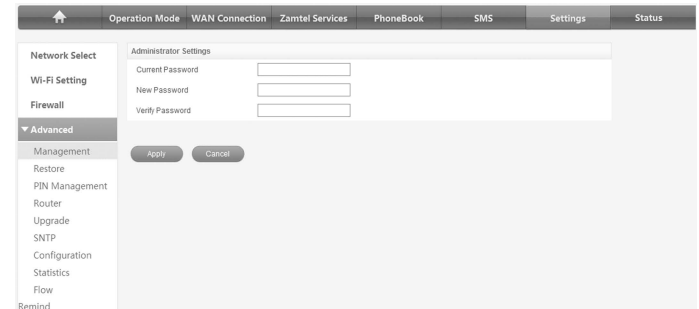

You can change the administrator's password. Click **Apply** to confirm your configuration.

Restore


Select **Settings > Advanced > Restore**, click **Restore** to set all the settings to their factory default values, and then the device will re-start automatically.

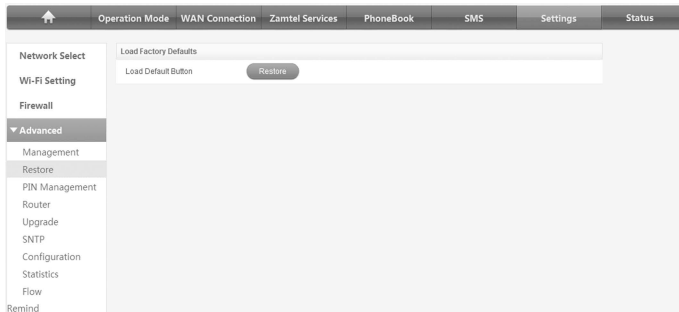


PIN Management

Note: Pin Manage can be used in 3G Gateway mode.

Select **Settings > Advanced > PIN Management**, the PIN management is shown in the following figure:

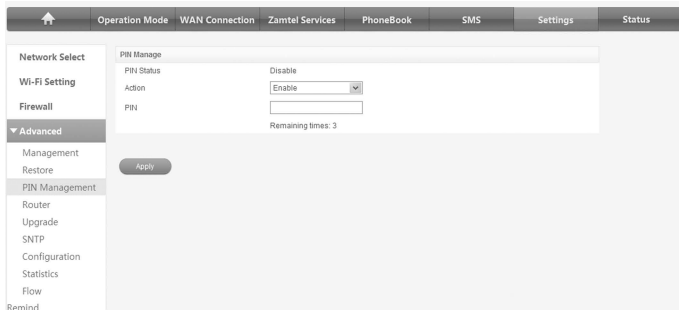

If you select **Modify**, the modification parameters are shown in the following figure:

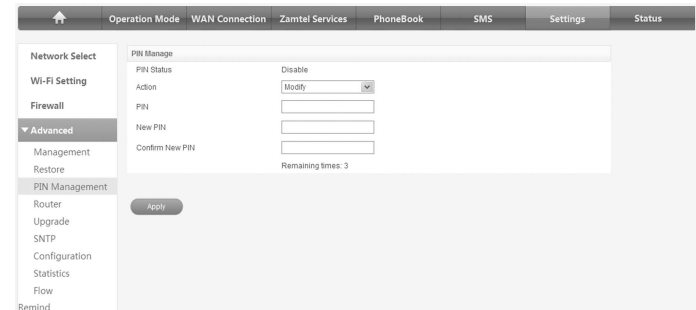

Type the old PIN code, and then type two times the new PIN code. Click **Apply** to confirm your configuration.

Note:


Three times consecutive wrong PIN code entries will block the (U)SIM card. To unlock, you need PUK. PIN code and PUK code may be offered together with the (U)SIM Card. If not, please contact with network operator.

Router

Note:

Router can be used in 3G Gateway mode and Cable Broadband mode.

Select **Settings > Advanced > Router**, the router information is shown in the following figure:

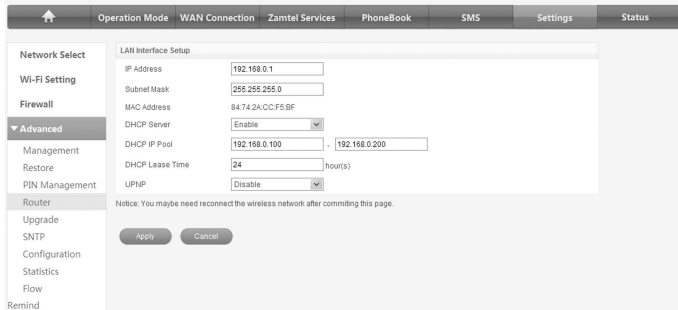


- **IP Address:** IP address for LAN interface.
- **Subnet Mask:** Subnet mask for the IP address.
- **MAC Address:** MAC address for the LAN interface.
- **DHCP Server:** Enable or disable DHCP Server function.
- **DHCP IP Pool:** Allocate begin and end IP address for IP pool.
- **DHCP Lease Time:** Define how long the leased IP address will be expired, and will relocate new IP address.
- **UPNP:** Enable or disable UPNP.

Click **Apply** to confirm your configuration.

Upgrade


Select **Settings > Advanced > Upgrade** to upgrade the software version of the router.

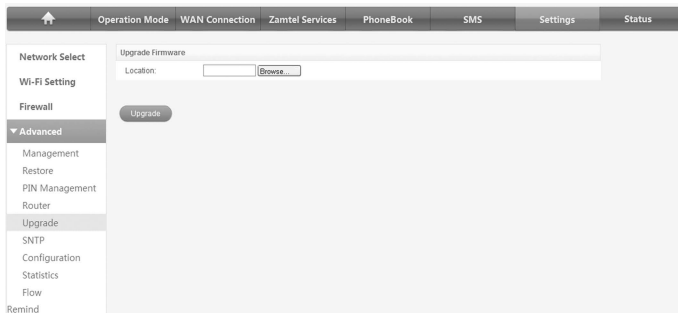

Click **Browse...**, locate the latest software version, and then click **Upgrade**.


SNTP

Select **Settings > Advanced > SNTP** to set the time of the router.

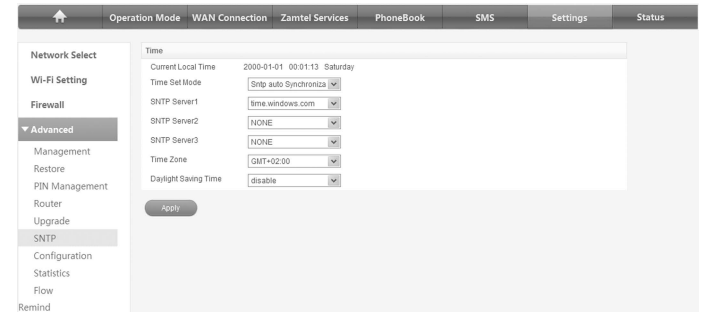

Configuration

Select **Settings > Advanced > Configuration** to export or import settings file.

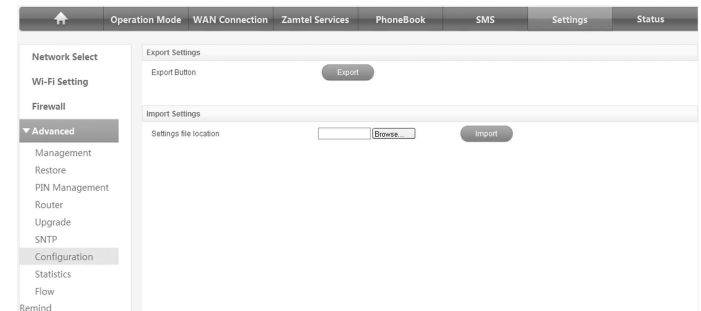

Statistics

Select **Settings > Advanced > Statistics** to view the statistics information.

The screenshot shows the 'Statistics' page in the device's settings. The top navigation bar includes 'Operation Mode', 'WAN Connection', 'Zamtel Services', 'PhoneBook', 'SMS', 'Settings', and 'Status'. The left sidebar has 'Network Select', 'Wi-Fi Setting', 'Firewall', and 'Advanced' (selected). The main content area shows a table for 'Statistics' with columns for Speed, Up, and Download. Below the table is a 'Clear' button and a note: 'Data usage is approximate only. For actual usage, please refer to your network operator.'

Speed	Up	Download
	0 Bytes	0 Bytes

	Connected Time	Downloaded	Uploaded	total traffic
Current	00:00:00	0 Bytes	0 Bytes	0 Bytes
Total	00:00:00	0 Bytes	0 Bytes	0 Bytes

Flow Remind

Select **Settings > Advanced > Flow Remind** to disable or enable the flow remind function.

The screenshot shows the 'Flow Remind Settings' page in the device's settings. The top navigation bar includes 'Operation Mode', 'WAN Connection', 'Zamtel Services', 'PhoneBook', 'SMS', 'Settings', and 'Status'. The left sidebar has 'Network Select', 'Wi-Fi Setting', 'Firewall', and 'Advanced' (selected). The main content area shows 'Flow Remind' settings with radio buttons for 'Disable' and 'Enable' (selected). There are also radio buttons for 'Data' and 'Time' (selected). Below are input fields for 'First Data' and 'Second Data', both set to '(1)-1024MB'. An 'Apply' button is at the bottom.

Status

Basic Status

Select **Status > Basic Status** to view the 3G information and system information.

The screenshot shows the 'Basic Status' page in the device's settings. The top navigation bar includes 'Operation Mode', 'WAN Connection', 'Zamtel Services', 'PhoneBook', 'SMS', 'Settings', and 'Status'. The left sidebar has 'Basic Status' (selected) and 'Network Status'. The main content area shows '3G Information' and 'System Info'. The '3G Information' section includes: Network Provider: China Unicom, Network Type: UMTS, Roam: OFF, and Domain: CS_ONLY. The 'System Info' section includes: Wireless access module software version: BD_JEMF250A/V1.0.0B01, Control and route module software version: CR_ZAMTEL_ZM_MF29A/V1.0.0B02, Hardware version: PCBMF29A/V1.0.0, IMEI: 863767010003192, and System Up Time: 10 min, 26 sec. A 'Refresh' button is at the bottom.

Network Status

Select **Status > Network Status** to view the WAN information and WLAN information.

The screenshot shows the 'Network Status' page in the device's settings. The top navigation bar includes 'Operation Mode', 'WAN Connection', 'Zamtel Services', 'PhoneBook', 'SMS', 'Settings', and 'Status'. The left sidebar has 'Basic Status' and 'Network Status' (selected). The main content area shows 'WAN Information' and 'WLAN Information'. The 'WAN Information' section includes: Connection Status: Disconnected, IP Address: 0.0.0.0, Primary DNS: 0.0.0.0, Secondary DNS: 0.0.0.0, RSSI: -85 dBm, RSCP: -84 dBm, Echo: -2.5 dB, Cell ID: 35144, and LAC Code: 47872. The 'WLAN Information' section includes: SSID: CPE_CCF5BF, Channel: Auto, Security Level: WPA-PSK/WPA2-PSK, IP Address: 192.168.0.1, Subnet Mask: 255.255.255.0, and Default Gateway: 192.168.0.1. A 'DHCP Server: Enable' option is also visible.

Usage of WPS

If your client device supports WPS, you need not to input the password manually after WPS has been available. Please do the following:


1. Start up your device.
2. Launch the client device connected to your device.
3. Enable the WPS function of your device.
4. Enable the WPS function of the client.

Note:

For the detailed operations about the client, please refer to the client's instruction.

U-Disk Master

1. Start up your device.
2. Launch the client device connected to your device.
3. Connect the storage devices (i.e.USB disk) to the USB port of the device.
4. Select **Start > Run** of the computer.
5. Input \\192.168.0.1\, in the open field and press OK.

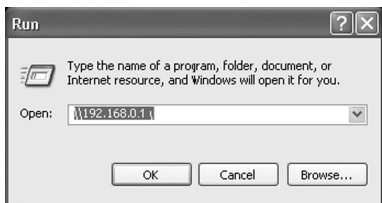

6. Input User Name and Password. The default User Name is admin, Password is admin. Then you can view storage devices.

Logout

Select **Logout**, a pop-up window will appear as the following figure shown:



Click **OK** to logout the web page.

Troubleshooting

Voice Related Problems

Symptoms	Possible Problems/ Solutions
No Dial Tone.	Please wait for 1~2 minutes after the router is turned on. If 3G LED light is blinking, you have no good RF reception. Change the location of the router.
There is a prompt/ phone alert/ announcement as soon as I lift the phone off the hook.	Make sure your (U)SIM card is inserted correctly and the PIN number has been entered. If the PIN number has been entered incorrectly then you will need to enter the PUK code when prompted.
The line is noisy/ distorted when I lift the phone off the hook.	Remove any electrical appliance which is too close to the phone or router. The cable or phone set might be faulty.
I hear a rapid engaged tone as soon as I lift the phone off the hook.	Put the phone on hook and try again. If you are connected to the internet using the 2G (GSM) network, please disconnect this first.
After dialing the last digit I hear nothing /silence.	When you have finished dialing you can press the # key or wait 4-8 seconds to connect the call.

I can't make or receive a call when I am surfing on the net.	If you are connected using the 2G (GSM) network then you cannot surf the net and make a phone call simultaneously. Please disconnect the internet and wait 30 seconds to 1 minute before making a call.
--	---

Internet Related Problems

Symptoms	Possible Problems/ Solutions
I cannot access the internet at all.	Please check your configuration settings. Please wait 1~ 2 minutes for the router to initialize. Check your service indicator LED's.
The download or upload speeds are very slow.	The speed is dependent on signal strength. Check your signal strength and network type.

Others

Symptoms	Possible Problems/ Solutions
The RSSI signal indicator is always blinking or does not light.	This indicates poor reception. Try moving the router to another location near the window. Check the ANT button to see whether you have prompted up this button but did not connect the external antenna.

Technical Parameters

Network & Frequency Band

EDGE/GPRS/GSM: 850/900/1800/1900MHz

HSPA+/HSUPA/HSDPA/UMTS: 2100MHz

Power Adapter

Input: 100V~240V(AC), 50/60Hz

Output: +12V (DC), 1.5A

Data Service

HSUPA 5.76Mbps UL

HSPA+ 21Mbps DL

Dimensions (W×H×D)

202mm×160mm×30.5mm

Weight

About 550g

Glossary

- AC: Alternating Current
- APN: Access Point Name
- DC: Direct Current
- DHCP: Dynamic Host Control Protocol
- DNS: Domain Name System (or Service or Server)
- DoS: Denial of Service
- EDGE: Enhanced Data GSM Evolution
- ESSID: Expanded Service Set Identifier
- Ethernet: A frame-based computer networking technology for local area networks (LANs)
- GSM: Global System for Mobile Communications
- GPRS: General Packet Radio Service
- HSDPA: High Speed Downlink Packet Access
- HSUPA: High Speed Uplink Packet Access
- IP: Internet Protocol
- LAN: Local Area Network
- LED: Light - emitting Diode
- MHz: Megahertz
- MTU: Maximum Transmission Unit
- PDP: Packet Data Protocol
- PIN: Personal Identification Number
- PPP: Point to Point Protocol
- PSTN: Public Switched Telephony Network
- PUK: PIN Unlocking Key
- RSSI: Radio Signal Strength Indicator
- RF: Radio Frequency
- SIP: Session Initiated Protocol
- UPnP: Universal Plug and Play
- (U)SIM: Subscriber Identification Module
- WCDMA: Wideband CDMA (Code-Division Multiple Access)
- WEP: Wired Equivalent Privacy
- WLAN: Wireless LAN
- WPA-PSK: Wi-Fi Protected Access–PreShared Key