

The information in this manual is subject to change without notice. Every effort has been made in the preparation of this manual to ensure accuracy of the contents, but all statements, information, and recommendations in this manual do not constitute a warranty of any kind, expressed or implied. Please read the safety precautions carefully to ensure the correct and safe use of your mobile phone. For detailed information, refer to the section "Safety Precautions".

Notice

ZTE and the ZTE logos are trademarks of ZTE CORPORATION.

Trademarks

Your mobile phone is made by ZTE CORPORATION. No part of this manual may be reproduced or transmitted in any form or by any means without prior written consent of ZTE CORPORATION.

All rights reserved.

Copyright © 2010 ZTE CORPORATION.

LEGAL INFORMATION

ZTE

GSM

 
ZTE-G
S510/S512

English

User Manual

Getting Started


Phone Overview

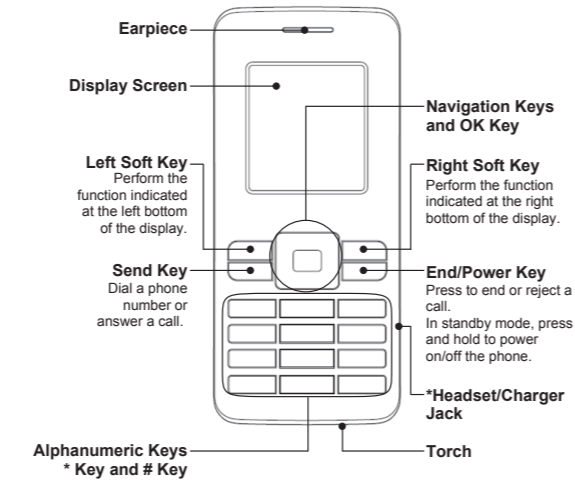

3. Push down on the upper section of the battery until it clicks into place.
4. Replace the back cover.

Removing the Battery

 1. Make sure that your mobile phone is switched off.
2. Remove the back cover.
3. Pull the battery up and remove it from the mobile phone.

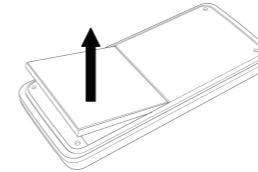

Charging the Battery

Use the battery up completely before charging the battery for the first time with the procedure indicated below.

Caution:

Do not charge the battery out of the temperature range of 0°C to 45°C.

1. Connect your adapter to the side of your mobile phone as shown in the picture. Ensure that the adapter is inserted with the correct orientation. Do not force the connector into the charger jack.

Powering On/Off

1. Make sure that your SIM card is inserted and the battery is charged.
2. Press and hold **End Key** to power on/off the phone.

Note: You may need to enter the Personal Identification Number (PIN) or phone code if you have enabled PIN lock or phone lock feature.

Keypad Lock

To lock the keypad, press and hold *** Key** in standby mode. To unlock the keypad, press **OK Key** and then press *** Key**.

Indicators

Indicator	What it means
	GSM signal strength
	New message
	Missed voice call
	Alarm clock
	Battery status
	Meeting mode
	Outdoor mode
	Silent mode

 
***Note:** The headset is only available for certain models. Your phone may not support the headset.

Note: The pictures and icons presented in this manual are meant for illustrative purposes only and may not accurately represent the actual phone or the icons found on the phone. Your phone contains the most up to date information.


Battery

Installing the Battery

1. Hook the edge of the back cover and lift it up to remove it, as shown in the picture.

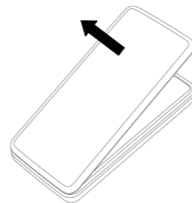

 2. Insert the battery by aligning the gold contacts on the battery with the gold contacts in the battery compartment on the phone.

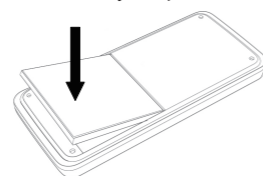

2. Connect the other end of the adapter to the mains socket. Remove the charger from both the mains socket and the phone once the charging is completed.

Installing and Removing the SIM Card

1. Make sure that the phone is switched off and the charger is disconnected from the phone.
2. Turn the phone over and remove the back cover.
3. If the battery is already inside, remove it.
4. Insert the SIM card into the card slot with its metal contacts facing the phone, as shown in the following picture.



5. Replace the battery first.
 6. Replace the back cover.
- To remove the SIM card, slide it out of the card slot.

	* Headset mode
	Roaming

*** Note:** The headset mode is only available for certain models.

Entering Text

- Change input mode: Press **# Key** to change the input mode (word predictive mode, standard alphabetic mode, lowercase alphabetic mode, uppercase alphabetic mode and numeric mode).
- Input Letters: In alphabetic mode, press **2-9 Key** repeatedly till the desired letter appears. In standard alphabetic mode, the first letter of a new sentence will be capitalized automatically.
- Input Words: In word predictive mode, you can input text quickly with a built-in dictionary. Press each key only once for a single letter. The word changes after each key press. Press **Navigation Keys** to select the desired word and press **OK Key** to confirm.
- Input Numbers: In numeric mode, press **0-9 Key** to enter numbers. Letters and spaces cannot be entered in this mode.
- Input Symbols: Press *** Key** to select a symbol. In word predictive and alphabetic modes, press **1 Key** to enter commonly used symbols.
- Input Space: Press **0 Key** to input space. It does not work in numeric mode.
- Delete Character: Press **Right Soft Key** to delete a character. Press and hold **Right Soft Key** to delete all characters.

Note: The available input modes on your phone depend on your country and region. They may not be exactly the same as illustrated in this manual.

Making and Answering a Call

Making a Call

1. Enter a phone number in standby mode. You can also select a contact in the contact list.
2. Press **Send Key** to make a call.
3. Press **Right Soft Key** to cancel the call, or press **End Key** to end the call.

Answering a Call

When there is an incoming call, you can press **Send Key** to answer it, or press **End Key** to reject it.

Speed Dial Call

In standby mode, press and hold the number key (1~9) corresponding to the phone number in the speed dial list to make a call.

Note: The 1 Key is reserved for your voicemail number. Press and hold 1 Key in standby mode to dial the voicemail number quickly.

Composing and Sending a Message

You can use your phone to send and receive text messages.

1. Enter the new message composing interface.
2. Enter the message in the text field.
3. Select **Options** and choose Send to option. You can enter the recipient's number or add the recipient(s) from the contact list.
4. Select **Send** to send the message.

- 7 -

Torchlight

You can access the torchlight menu to turn on or off the torch on the phone or press and hold **0 Key** in standby mode to turn on or off the torch quickly.

Setting up Your Phone

You can adjust various settings of your phone.

- Setting the profile: You can activate or personalize a profile.
Tip: Press and hold **# Key** in standby mode to activate or deactivate the silent profile.
- Setting the phone: Select the phone language, set shortcut functions of the navigation keys and turn on or off the auto keypad lock function.
- Setting the display: You can set the wallpaper, home screen, the display screen contrast and brightness, and the backlight duration of the display screen.
- Setting the clock: You can set the date and time and select the display format.
- Setting the security: Security setting feature protects you from the illegal use of your phone and SIM card. You can activate/deactivate the PIN1 code or phone lock code.

Note: You need to input the phone lock code to enter into the security settings menu. The default phone code is 1234.

Warning: If you enter a wrong PIN1 code for three times consecutively, the SIM card will be locked. Please contact the service provider to get the PIN Unlock Key (PUK) to unlock the card.

- 9 -

Precautions for Medical Devices and Facilities

- When using your phone near pacemakers, please always keep the phone more than eight inches (about twenty centimeters) from the pacemaker when the phone is switched on. Do not carry the phone in the breast pocket. Use the ear opposite the pacemaker to minimize the potential for interference. Switch off the phone immediately if necessary.
- Some phones may interfere with some hearing aids. In the event of such interference, you may consult your hearing aids manufacturer to discuss alternatives.
- If you use any other personal medical device, please consult the manufacturer of your device to determine if it is adequately shielded from RF energy.
- In those facilities with special demand, such as hospital or health care facilities, please pay attention to the restriction on the use of mobile phone. Switch off your phone if required.

Mobile Phone

- Please use original accessories or accessories approved by the phone manufacturer. Using any unauthorized accessories may affect your mobile phone's performance, damage your phone or even cause danger to your body and violate related local regulations about telecom terminals.
- Turn off your phone before you clean it. Use a damp or anti-static cloth to clean the phone. Do not use a dry cloth or electrostatically charged cloth. Do not use chemical or abrasive cleaners as these could damage the phone.
- As your mobile phone can produce electromagnetic field, do not place it near magnetic items such as computer disks.
- Using the phone near electrical appliances such as TV, telephone, radio and personal computer can cause interference.

- 11 -

Safety and General Use in Vehicles

- Safety airbag, brake, speed control system and oil eject system shouldn't be affected by wireless transmission. If you do meet problems above, please contact your automobile provider. Do not place your phone in the area over an airbag or in the airbag deployment area. Airbags inflate with great force. If a phone is placed in the airbag deployment area and the airbag inflates, the phone may be propelled with great force and cause serious injury to occupants of the vehicle.
- Please turn off your mobile phone at a refueling point, and the same to the place where the use of two-way radio is prohibited.

Aircraft Safety

- Please turn off your mobile phone before the airplane takes off. In order to protect airplane's communication system from interference, it is forbidden to use mobile phone in flight. Safety regulations require you to have permission from a crew member to use your phone while the plane is on the ground.
- If the mobile phone has the function of automatic timing power-on, please check your alarm setting to make sure that your phone will not be automatically turned on during flight.

Battery Use

- Do not short-circuit the battery, as this can cause the unit to overheat or ignite.
- Do not store battery in hot areas or throw it into fire. Otherwise, it will cause explosion.
- Do not disassemble or refit the battery. Otherwise, it will cause liquid leakage, overheating, explosion and ignition of the battery.
- Please store the battery in a cool dry place if you don't use it for a long period.

- 13 -

Creating a Contact

1. Enter the Contacts menu.
2. Select **Options** and choose to add new contact.
3. Select Phone or SIM card as the contact save location.
4. Enter the contact information. You can edit the contact name, phone numbers and group for the contact saved in the phone, or add a name and a phone number for the contact saved in the SIM card.
5. Select **Options** and choose to save the new contact.

In the contact list, select **Options** and you can choose to call a contact, delete a contact, send message to a contact, add a contact to the speed dial list, etc.

Tip: To search for a contact, you can open the contact list and type the desired contact name in the search field at the bottom of the screen. The phone will automatically scroll to the contact name that matches your input most closely.

*FM Radio

With the FM radio, you can search for radio channels, listen to them, and save them on your device. Note that the quality of the radio broadcast depends on the coverage of the radio station in that particular area.

You can search radio channels automatically or manually or set a channel by inputting a valid frequency.

You can also save your desired channels to the channel list and manage the channel list.

Press Up/Down Key to adjust the volume.

* **Note:** FM radio is only available for certain models. Your phone may not support FM radio.

- 8 -

Safety Precautions

This section includes some important information on safe and efficient operation. Please read this information before using the phone.

Operational Precautions

- Please use your phone properly. When making or receiving a call, please hold your phone as holding a wireline telephone. Make sure that the phone is at least one inch (about two point five centimeters) from your body when transmitting.
- Do not touch the antenna when the phone is in use. Touching the antenna area affects call quality and may cause the phone to operate at a higher power level than needed.
- Some people may be susceptible to epileptic seizures or blackouts when exposed to flashing lights, such as when watching television or playing video games. If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult your doctor before playing the games on your phone or enabling a flashing-light feature on your phone. (The flashing-light feature is not available on all products.)
- Keep the phone out of the reach of small children. The phone may cause injury if used as a toy.

Precautions While Driving

- Please pay attention to the traffic safety. Check the laws and regulations on the use of your phone in the area where you drive. Always obey them.
- Use hands-free function of the phone, if available.
- Pull off the road and park before making or answering a call if conditions require.

- 10 -

- Do not expose your mobile phone to direct sunlight or store it in hot areas. High temperatures can shorten the life of electronic devices.
- Keep your phone dry. Any liquid may damage your phone.
- Do not drop, knock or harshly treat the phone. Rough handling can break internal circuit boards.
- Do not connect the phone with any incompatible enhancement.
- Do not attempt to disassemble the mobile phone or battery.
- Do not store the phone with flammable or explosive articles.
- Do not charge the mobile phone without battery.

Precautions for Potentially Explosive Atmospheres

- Switch off your phone prior to entering any area with potentially explosive atmospheres, such as fueling areas, fuel or chemical transfer or storage facilities.
- Do not remove, install, or charge batteries in such areas. Spark in a potentially explosive atmosphere can cause an explosion or fire resulting in bodily injury or even death.
- To avoid possible interference with blasting operations, switch off your phone when you are near electrical blasting caps, in a blasting area, or in areas posted "Turn off electronic devices." Obey all signs and instructions.

Precautions for Electronic Devices

- Some electronic devices are susceptible to electromagnetic interference sent by mobile phone if inadequately shielded, such as electronic system of vehicles. Please consult the manufacturer of the device before using the phone if necessary.

- 12 -

- The battery can be recharged for hundreds of times, but it will eventually wear out. When the operating time (talk time and standby time) is noticeably shorter than normal, it is time to replace it with a new one.
- Please stop using the charger and battery when they are damaged or show evidence of aging.
- Return the worn-out battery to the provider or dispose of it in accordance with environment regulations. Do not dispose of it in household rubbish.
- Please use original batteries or batteries approved by the phone manufacturer. Using any unauthorized battery may affect your handset performance or may cause danger of explosion, etc.

Warning: If the battery is damaged, do not discharge it. If the leakage does come into contact with the eyes or skin, wash thoroughly in clean water and consult a doctor.

Limitation of Liability

ZTE shall not be liable for any loss of profits or indirect, special, incidental or consequential damages resulting from or arising out of or in connection with using this product, whether or not ZTE had been advised, knew or should have known the possibility of such damages.

- 14 -