the right to make modifications on print errors or update

microfilm, without the prior written permission of ZTE

electronic or mechanical, including photocopying and

No part of this publication may be excerpted, reproduced,

translated or utilized in any form or by any means,

Copyright © 2011 ZTE CORPORATION.

LEGAL INFORMATION

The manual is published by ZTE Corporation. We reserve

sbecilications without prior notice.

All rights reserved.

Security

- To protect your mobile phone from illegal use, take the
- security measures as follows: > Set PIN codes of the SIM card.
- > Set handset lock code. Set call restrictions.

Safety Precautions

This section includes some important information on safe and efficient operation. Please read this information before using the phone.

Operational Precautions

- Please use your phone properly. When making or receiving a call, please hold your phone as holding a wireline telephone. Make sure that the phone is at least one inch (about two point five centimeters) from your body when transmitting.
- Do not touch the antenna when the phone is in use. Touching the antenna area affects call quality and may cause the phone to operate at a higher power level than needed.
- Some people may be susceptible to epileptic seizures or blackouts when exposed to flashing lights, such as

Precautions for Potentially Explosive Some phones may interfere with some hearing Atmospheres aids. In the event of such interference, you may

- Switch off your phone prior to entering any area consult your hearing aids manufacturer to discuss with potentially explosive atmospheres, such as fueling areas, fuel or chemical transfer or storage ■ If you use any other personal medical device, please
 - Do not remove, install, or charge batteries in such areas. Spark in a potentially explosive atmosphere can cause an explosion or fire resulting in bodily injury or even death.
 - To avoid possible interference with blasting operations, switch off your phone when you are near electrical blasting caps, in a blasting area, or in areas posted "Turn off electronic devices." Obey all signs and instructions.

Precautions for Electronic Devices

Some electronic devices are susceptible to electromagnetic interference sent by mobile phone if inadequately shielded, such as electronic system of vehicles. Please consult the manufacturer of the device before using the phone if necessary.

turned on during flight.

- Do not short-circuit the battery, as this can cause the unit to overheat or ignite.
- Do not store battery in hot areas or throw it into fire. Otherwise, it will cause explosion
- Do not disassemble or refit the battery. Otherwise, it will cause liquid leakage, overheating, explosion and ignition of the battery.
- Please store the battery in a cool dry place if you don't use it for a long period.
- The battery can be recharged for hundreds of times, but it will eventually wear out. When the operating time (talk time and standby time) is noticeably shorter than normal, it is time to replace it with a new one.
- Please stop using the charger and battery when they are damaged or show evidence of aging.
- Return the worn-out battery to the provider or dispose of it in accordance with environment regulations. Do not dispose of it in household rubbish.
- Please use original batteries or batteries approved by the phone manufacturer. Using any unauthorized battery may affect your handset performance or may cause danger of explosion, etc.

Locking and Unlocking the In the standby mode, press the **Left soft key** and then press the * key within two seconds to lock the keypad. The unlock method is the same. Locking the keypad can prevent unintentional operations

and Center key

operation when the keypad is locked. Interface Icone

Interface Icons			
Yau	Signal strength		Battery status
G	GPRS	Q	Alarm clock set
	New SMS, message full when blinking	4	General
X ₂	New MMS	%	Silent
•	Missed call	(a)	Keypad locked
1	Call diverting	\cap	Headset

on it. You can answer an incoming call with the regular

ZTE中兴 **GSM**

English

when watching television or playing video games. If you have experienced seizures or blackouts. or if you have a family history of such occurrences, please consult your doctor before playing video games on your phone or enabling a flashing-light feature on your phone. (The flashing-light feature is not available on all products.)

Keep the phone out of the reach of small children. The phone may cause injury if used as a toy.

Precautions While Driving

- Please pay attention to the traffic safety. Check the laws and regulations on the use of your phone in the
- area where you drive. Always obey them. Use hands-free function of the phone, if available.
- Pull off the road and park before making or answering a call if conditions require.

Precautions for Medical Devices and Facilities

■ When using your phone near pacemakers, please always keep the phone more than eight inches (about twenty centimeters) from the pacemaker when the phone is switched on. Do not carry the phone in the breast pocket. Use the ear opposite the pacemaker to minimize the potential for interference. Switch off the phone immediately if

As your mobile phone can produce electromagnetic field, do not place it near magnetic items such as computer disks

damage the phone.

 Using the phone near electrical appliances such as TV, telephone, radio and personal computer can cause interference Do not expose your mobile phone to direct sunlight or

consult the manufacturer of your device to determine

if it is adequately shielded from RF(radio frequency)

hospital or health care facilities, please pay attention

to the restriction on the use of mobile phone. Switch

approved by the phone manufacturer. Using any

unauthorized accessories may affect your mobile

cause danger to your body and violate related local

damp or anti-static cloth to clean the phone. Do not

use a dry cloth or electrostatically charged cloth. Do

not use chemical or abrasive cleaners as these could

phone's performance, damage your phone or even

■ In those facilities with special demand, such as

Please use original accessories or accessories

regulations about telecom terminals.

Turn off your phone before you clean it. Use a

off your phone if required.

Mobile Phone

- store it in hot areas. High temperatures can shorten the life of electronic devices. ■ Keep your phone dry. Any liquid may damage your
- Do not drop, knock or harshly treat the phone. Rough handling can break internal circuit boards.
- Do not connect the phone with any incompatible
- Do not attempt to disassemble the mobile phone or
- Do not store the phone with flammable or explosive
- Do not charge the mobile phone without battery.

Safety and General Use in Vehicles

- Safety airbag, brake, speed control system and oil eject system shouldn't be affected by wireless transmission. If you do meet problems above, please contact your automobile provider. Do not place your phone in the area over an airbag or in the airbag deployment area. Airbags inflate with great force. If a phone is placed in the airbag deployment area and the airbag inflates, the phone may be propelled with great force and cause serious injury to occupants of the vehicle.
- Please turn off your mobile phone at a refueling point, and the same to the place where the use of two-way radio is prohibited.

- Please turn off your mobile phone before the airplane takes off. In order to protect airplane's communication system from interference, it is forbidden to use mobile phone in flight. Safety regulations require you to have permission from a crew member to use your phone while the plane is on the ground.
- If the mobile phone has the function of automatic timing power-on, please check your alarm setting to make sure that your phone will not be automatically

Warning: If the battery is damaged, do not discharge it. If the leakage does come into contact with the eves or skin. wash thoroughly in clean water and consult a doctor.

Limitation of Liability

ZTE shall not be liable for any loss of profits or indirect special, incidental or consequential damages resulting from or arising out of or in connection with using this product, whether or not ZTE had been advised, knew or should have known the possibility of such damages. The user should refer to the enclosed warranty card for full warranty and service information

Note: The pictures and icons shown in the manual are just schematic drawings for function demonstration. If they are inconsistent with your handset, please take your handset as the standard. If the inconsistency exits in the manual because of the handset function updating, please refer to the follow-up public information from ZTE CORPORATION.

Description Performs the function indicated at the left botton of the screen Performs the function indicated at the right bottom Press to confirm actions and make selections. hese kevs (UP, DOWN, LEFT and RIGHT) allow for navigation through menu options and quick access to some function menus. ress to dial a phone number or answer a call. or view the call history in the standby mode. Press to exit to the standby mode. Hold to switch on/off the phone. Alpha numeric | Press to enter characters 0-9 and the alphabets In the standby mode, hold the * key to turn on o

Key Functions

Left/Right soft

Send key

/headse

Note: In this User Manual, "press a key" means to press the key and release it immediately, while "hold a key" means to press the key for at least two seconds and then release it.

Battery

The lithium ion battery of the mobile phone can be immediately used after unpacking.

Installing the battery

- 1. Pull the battery cover from the notch on the bottom edge and remove the cover.
- 2. Insert the battery by aligning the gold-coloured contacts with the contacts in the battery slot.
- 3. Push down the upper section of the battery until it
- 4. Fix the battery cover till you hear the click sound.



Fix the battery cover till you hear the click sound

Removing the battery

- 1. Make sure that your mobile phone is switched off.
- 2. Remove the battery cover.
- 3. Pull the battery up and remove it from the mobile phone.





User Manual

Inserting the SIM Card Insert the SIM card as follows.

- 1. Make sure that the phone is switched off and the charger
- is disconnected from the phone.
- 3. Remove the battery if it is already installed. 4. Hold your SIM card with the cut corner oriented as shown and then slide it into the card holder with the gold-
- coloured contacts facing downward.
- Install your battery. 6. Fix the battery cover till you hear the click sound.



Insert the Memory card **Charging the Battery**

Your phone is powered by a rechargeable battery. For maximum battery performance, it is recommended that you first use up the battery power and then charge it completely. A new battery's full performance is achieved

only after three complete charge and discharge cycles. 1. Connect your travel adapter to the bottom of your mobile phone as shown in the diagram below.



2. Connect the other end of the travel adapter to the mains

Predictive text input is based on a built-in dictionary. When you have finished writing the word and it is correct, confirm it by pressing the Left soft key, Center **key** or **0 key**. If the word is incorrect, press the **Left/Right Navigation keys** to view other matching

- words found in the dictionary. Input digits: In 123 mode, press digit key once to input a digit. In eZi ABC/eZi abc mode, press the digit key, and select the number by pressing the **Navigation keys**. You cannot input 0 in eZi ABC/eZi abc mode. In ABC/abc mode,
- constantly press the digit key until the number appears. • Input symbol: Press the * key to enter symbol mode, select the required symbol (common symbols) by pressing the **Navigation keys** and then press the **Left** soft key or Center key to confirm it. In eZi ABC/eZi abc mode, press the 1 key, and select the required symbol (common symbols) by pressing the Navigation keys. In ABC/abc mode, constantly press the 1 key until the required symbol (common symbols) appears.
- Input space: Press the **0 key** to input space. It does not work in 123 mode.
- Delete Character: Press the **Right soft key** to clear a character. Hold the **Right soft key** to delete all characters and clear the display.

How to Make and Receive Calls

- The most basic way to make a call is to input the number in the standby mode and press the **Send key**. You can also make a call from the Phonebook list.
- To call someone: Go to Menu→Phonebook. Use the Up/Down Navigation keys to find the name of the person you want to call. You can also type in the first letter of the name of the person you want to call to find
- the right name and then press the **Send key**. To receive a call, press the Send key.
- To end a call, press the End/Power key.
- To reject a call, press the End/Power key. Make sure that you are in an area with sufficient signal is indicated on the Status Bar of the screen.

How to Send Messages

You can use your mobile phone to send and receive

- 1. Go to Menu→Messages→SMS/MMS→Write
- . Write your message. For more information on input method, see section 'Writing Text'. When you write an SMS, press **Options**→**Send to**, and edit the recipient.

When you write an MMS, you can edit To, Cc, Bcc,

Subject and content. In content field, you can select

send or save the message. When you finish writing an

MMS, press **Done** in MMS editing screen, and select to

Options and then select to add pictures, audio,

3. When you finish writing an SMS, select **Options** to

bookmark text, attachments and slides.

How to Set User Profiles Go to **Menu**→**User profiles**. You can select

Options -- Activate to activate a profile. Or you can select **Options**→**Customize** to edit a profile. Note: The Silent mode can be only selected On or Off. And the Headset mode can only be activated with the headset connected.

How to View Call History Go to Menu→Call center→Call history. Dialed calls, Received calls and Missed calls are saved in **Call history**. If the records are full, the earliest saved records will be deleted automatically.

How to Configure Call Settings

In Advanced settings, you can set blacklist, auto redial, call time display, call time reminder, auto quick end.

off the torch.

 Restore factory settings: Enter the phone lock code to restore to the factory settings. Some personal information might be lost if you use this function, so be

Connectivity: View connection activities and set data

Note: You may be required to input the phone lock code in some of the security setting interfaces. The default lock code is 1234. Go to Security settings→Change password → Phone password to change the phone lock

How to Set your Alarm

Go to **Menu→Organizer→Alarm**. You can view, and edit the alarms. By pressing **Edit**, you can set the corresponding features of the alarm according to

File Manager

Go to **Menu**→**File manager**. You can check all the folders in the phone or memory card, create new ones or rename, delete the folders, etc. The files you download from the internet will be stored in these folders. **Note**: When you select **Options**→**Format**, the data will be

How to Use Services

internet content. In Services you can use STK(SIM card Toolkit) and WAP.

services provided by your network provider. SIM card and network provider do not support the service, these functions can't be used.

Your phone supports Wireless Application Protocol (WAP). You can get access to this service through your network provider. WAP lets you get information about

- Settings→Profiles.
- Recent pages: Display the pages you've visited recently. Select an item and choose **Options**→**Go** to to visit the page again.



13

SIM (Subscriber Identity Module) card is a micro chip from a network provider that keeps the carrier details and customers information such as names and phone numbers. Your phone won't work without it. If you already have contacts on your SIM card, they can be transferred in most

Inserting the Memory Card

You can use a memory card to expand the storage of the phone. You can store or copy files such as music and so

transmitting or storing data, which may cause data loss or damage to the phone or the card. Insert the memory card as follows The memory card slot is on the left side of the SIM card

holder. Open the battery cover and remove the battery.

Do not take out the card or switch off the phone while

until it clicks to the right position.

Insert the card with the metal contacts facing downwards

- 3. When you charge the battery, the battery charging 4. When the battery is fully charged, disconnect the
- **Powering your Phone On/Off** Make sure that your SIM card is in your mobile phone

Hold the **End/Power key** to power on/off the phone. The phone will automatically search for the network.

and that the battery is charged.

Turning the Torch On/Off In the standby mode, hold the * key to turn on or off the

Writing Text

- (input modes: abc, 123, eZi ABC, eZi abc, ABC)
- Input letters: In ABC/abc mode, constantly press the corresponding letter key till the letter appears.
- Input words: In eZi ABC/eZi abc mode, input any letter with a single key press. Press each key only once for every letter. The word changes after each key stroke.

 Move cursor to left or right: Among the text, press the Left/Right Navigation keys to move the cursor to left or

Phonebook

- Go to Menu→Phonebook→Options→Add new
- 2. Select to save the number to SIM or phone.
- You can also save a number right after you've made or received a phone call or a message from someone who is not vet in your Phonebook list.
- To view the memory status and so on, select Options→Phonebook settings.

send or save. **How to Receive Messages** Upon receiving a message, the mobile phone will alert you

> 1. Press **Read** to open the new message. You can also go to Inbox to read the message. 2. Use **Up/Down Navigation keys** to view the message. 3. While the message is open, use **Options** to reply,

back the sender or save the sender's number.

with a ringtone, prompt, or a new message icon.

If you want to save the sender's number, first you should highlight the message in Inbox interface, then select Options→Save to Phonebook If you want to save the number which included in the

message content, first you should open the message and

delete, or forward the message. You can also call

GPRS counter in **Call history**. (Call cost function need network support.)

Go to Menu→Call center→Call settings. You can set call waiting, call divert and call barring.

21

You can adjust various settings of your phone. Go to Menu→Settings.

- on/off, select language, set prefered input method, display and Flight mode and so on.
- network. Set the preferred networks and GPRS connection mode. Security settings: Set security features to protect you from unauthorized use of your phone and SIM card. Note: You will be required to input PIN code. If SIM lock is currently set **Off**, select **On**, then input a PIN code to
- The PUK code is required to unlock the SIM card if you have incorrectly input the PIN code for three consecutive times. The PIN code and the PUK code may be supplied along with the SIM card. If not, contact

How to Play Music

Go to Menu → Multimedia → Audio player. You can play the audio files in your phone or the memory card. In **List**→**Options**, you can refresh your playlist and make

How to use FM radio

- the submenu.
- Manual input: Manually input a channel.
- Auto search: Automatically searches for channels.

clicks into place.



Go to **Menu**→**Services**. Services allows you to view

SIM card Toolkit (STK) services are value-added Your mobile phone supports STK service, but if your

- Homepage: Homepage is a WAP site you set in
- Bookmarks: Access your phone's preset websites. Select a bookmark and press **Options**→**Go to** to load the website.



Insert the SIM care

• Change input mode: Press the # key to change the input

How to Add Contact to the

There are some numbers that you may want to call again and again, so it makes sense to add these numbers to your Phonebook. You can then access these numbers

- 3. Edit the information and save it.
- To delete someone from your Phonebook list, first select the name, then select **Options**→**Delete**.

20

then select Options→Advanced→Use number.

How to Set Your Phone

• Phone settings: Set time and date and schedule power Note: In Flight mode, you can only use local program in your phone and all the wireless functions will be turned

Network settings: Set to automatically or manually select

turn it on. You need to input the correct PIN code to unlock your SIM card when you turn on your mobile phone next time.

the network provider.

lost, so please be careful with this function.

personal settings.

Go to Menu→Multimedia→FM radio. With the radio, you can search for radio channels and listen to them. Note that the quality of the radio broadcast depends on the coverage of the radio station in that particular area. In the FM radio interface, you can press the **Up/Down Navigation keys** to adjust volume, press the Left/Right Navigation keys to tune the frequency, and press the Center key to pause. Select Options to enter

- Channel list: Edit up to 9 channels.
- Settings: You can turn on/off Background play, and you can turn on Loudspeaker when headset is inserted.

- news, weather forecasts and more. You can perform the following operations:

♦ Input address: Input a URL and press

Options→**Done** to visit the site.

 Service inbox: Check the service information sent by your service provider. ♦ Settings: You can set Profiles, Browser options, Service message settings, Clear cache or Clear