

ZTE-G N285

**Mobile Phone
User Manual**

LEGAL INFORMATION

Copyright © 2011 by ZTE CORPORATION

All Rights Reserved.

No part of this publication may be excerpted, reproduced, translated or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation.

The manual is published by ZTE Corporation. We reserve the right to make modifications on print errors or update specifications without prior notice.

Version No. : R1.0

Edition Time : 06.30, 2011

Manual No. : 079584503204

Table of Contents

Security	5	Inserting the SIM card.....	19
Safety Precautions	5	Inserting the microSD card	21
Limitation of Liability	12	Writing text.....	23
Your phone.....	13	Phonebook.....	24
Turning On / Off or waking up your phone.....	14	Making and receiving calls.....	27
Locking / unlocking the keypad	14	Call center	28
Using the touchscreen	15	Sending and receiving messages	30
Status bar icons	15	Sending and receiving Email .	33
Adjusting the volume.....	16	Settings	34
Battery	17	Connectivity.....	38
		MTN Play	38

Organizer	38
File manager.....	40
Fun&Games.....	40
Multimedia	41
Camera.....	42
Services	45

Security

- To protect your mobile phone from illegal use, the following security measures can be taken:
 - Set PIN codes of the SIM card.
 - Set handset lock code.
 - Set calls restrictions.

Safety Precautions

This section includes some important information on safe and efficient operation. Please read this information before using the phone.

Operational Precautions

- Please use your phone properly. When making or receiving a call, please hold your phone as holding a wireline telephone. Make sure that the phone is at least one inch (about two point five centimeters) from your body when transmitting.

- Do not touch the antenna when the phone is in use. Touching the antenna area affects call quality and may cause the phone to operate at a higher power level than needed.
- Some people may be susceptible to epileptic seizures or blackouts when exposed to flashing lights, such as when watching television or playing video games.
- If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult your doctor before playing video games on your phone or enabling a flashing-light feature on your phone. (The flashing-light feature is not available on all products.)
- Keep the phone out of the reach of small children. The phone may cause injury if used as a toy.

Precautions While Driving

- Please pay attention to the traffic laws in your country. Check the laws and regulations on the use of your phone in the country where you live. Always obey them.
- Use hands-free function of the phone, if available.

- Pull off the road and park before making or answering a call if conditions require.

Precautions for Medical Devices and Facilities

- When using your phone near pacemakers, please always keep the phone more than eight inches (about twenty centimeters) from the pacemaker when the phone is switched on. Do not carry the phone in the breast pocket. Use the ear opposite the pacemaker to minimize the potential for interference. Switch off the phone immediately if necessary.
- Some phones may interfere with some hearing aids. In the event of such interference, you may consult your hearing aids manufacturer to discuss alternatives.
- If you use any other personal medical device, please consult the manufacturer of your device to determine if it is adequately shielded from RF (radio frequency) energy.
- In those facilities with special demand, such as hospital or health care facilities, please pay attention to the restriction on the use of mobile phones. Switch off your phone if required.

Mobile Phone

- Please use original accessories or accessories approved by the phone manufacturer. Using any unauthorized accessories may affect your mobile phone's performance, damage your phone or even cause danger to your body and violate related local regulations about telecom terminals.
- Turn off your phone before you clean it. Use a damp or anti-static cloth to clean the phone. Do not use a dry cloth or electrostatically charged cloth. Do not use chemical or abrasive cleaners as these could damage the phone.
- As your mobile phone can produce electromagnetic field, do not place it near magnetic items such as computer disks.
- Using the phone near electrical appliances such as TV, telephone, radio and personal computer can cause interference.
- Do not expose your mobile phone to direct sunlight or store it in hot areas. High temperatures can shorten the life of electronic devices.
- Keep your phone dry. Any liquid may damage your phone.

- Do not connect the phone with any incompatible enhancement.
- Do not attempt to disassemble the mobile phone or battery.
- Do not store the phone with flammable or explosive equipment.
- Do not charge the mobile phone without the battery.

Precautions for Potentially Explosive Atmospheres

- Switch off your phone prior to entering any area with potentially explosive atmospheres, such as fueling areas, fuel or chemical transfer or storage facilities.
- Do not remove, install, or charge batteries in such areas. Spark in a potentially explosive atmosphere can cause an explosion or fire resulting in bodily injury or even death.
- To avoid possible interference with blasting operations, switch off your phone when you are near electrical blasting caps, in a blasting area, or in areas posted “Turn off electronic devices.” Obey all signs and instructions.

Precautions for Electronic Devices

- Some electronic devices are susceptible to electromagnetic interference sent by mobile phone if inadequately shielded, such as electronic system of vehicles. Please consult the manufacturer of the device before using the phone if necessary.

Safety and General Use in Vehicles

- Safety airbag, brake, speed control system and oil eject system shouldn't be affected by wireless transmission. Do not place your phone in the area over an airbag or in the airbag deployment area.
- Please turn off your mobile phone at a refueling point, and the same to the place where the use of two-way radio is prohibited.

Aircraft Safety

- Please turn off your mobile phone before the airplane takes off. In order to protect airplane's communication system from interference, it is forbidden to use mobile phones in flight. Safety regulations require you to have permission from a crewmember to use your phone while the plane is on the ground.

- If the mobile phone has the function of automatic timing power-on, please check your alarm setting to make sure that your phone will not be automatically turned on during flight.

Battery Use

- Do not short-circuit the battery, as this can cause the unit to overheat or ignite.
- Do not store battery in hot areas or dispose of it in a fire. This may cause an explosion.
- Do not disassemble or refit the battery.
- Please store the battery in a cool dry place if not in use for long periods of time.
- The battery can be recharged for hundreds of times, but it will eventually wear out. When the operating time (talk time and standby time) is noticeably shorter than normal, it is time to replace it with a new one.
- Please stop using the charger and battery when they are damaged or show evidence of aging.

 
- Return the worn-out battery to the provider or dispose of it in accordance with environment regulations. Do not dispose of it with household refuse.
- Please use original batteries or batteries approved by the phone manufacturer. Using any unauthorized battery may affect your handset performance or may cause danger of explosion, etc.

Limitation of Liability

ZTE shall not be liable for any loss of profits or indirect, special, incidental or consequential damages resulting from or arising out of or in connection with using this product, whether or not ZTE had been advised, knew or should have known the possibility of such damages. The user should refer to the enclosed warranty card for full warranty and service information.

Note: The pictures and icons shown in the manual are just schematic drawings for function demonstration. If they are inconsistent with your handset, please take your handset as the standard. If the inconsistency exists in the manual because of the handset function updating, please refer to the follow-up public information from ZTE CORPORATION.

Your phone

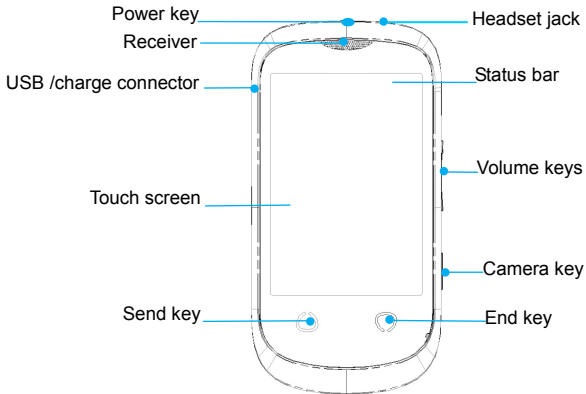

Turning On / Off or waking up your phone

Hold the **Power key** to turn your phone on or off.

Set the LCD back light:

In **Menu**→**Settings**→**Phone settings**→**Misc. settings**→**LCD backlight**,

Set the LCD backlight time. If the phone is not operated within this time, the screen will turn black.

Wake up your phone:

Press the **Power key**, **Volume keys** or **Camera key** to wake up your phone.

Note: The **Menu** icon is  in the standby mode.

Locking / unlocking the keypad

Set the keypad lock:

In **Menu**→**Settings**→**Security settings**→**Auto keypad lock**, set the auto keypad lock time. If the phone is not operated within this time in the

standby mode, the keypad will be locked. Or you can press the **Power key** to lock the keypad.

To unlock the keypad, drag the locked icon on the bottom left corner to the right.















Note: In this User Manual, “press a key” means to press the key and release it, while “hold a key” means to press the key for at least two seconds and then release it. Locking the keypad can prevent unintentional operations on it. You can answer an incoming call with the regular operation when the keypad is locked.

Using the touch screen

Your phone supports touch screen functionality.

- Tap any application to open it.
- Drag up or down to scroll.

Status bar icons

Indicator	What it means	Indicator	What it means
	Signal strength		New SMS, blinking when message box is full
	GPRS		New MMS
	Roaming		Missed call
	Silent		Call forward
	Ring		Alarm clock set
	Outdoor		Keypad unlocked
	Meeting		Battery status

Adjusting the volume

When you're on the phone or listening to songs, movies, or other media, the Volume keys on the right side of your phone adjust the audio volume.

 
Otherwise, the keys control the volume for the ringer, and other sound effects.

Battery

The lithium ion battery of the mobile phone can be immediately used after unpacking.


Installing the battery

1. Pull the battery cover from the notch on the bottom and remove the cover.
2. Insert the battery by aligning the gold-coloured contacts with the contacts in the battery slot.
3. Push down the upper section of the battery until it clicks into place.
4. Replace the battery cover and close it gently until you hear a click.

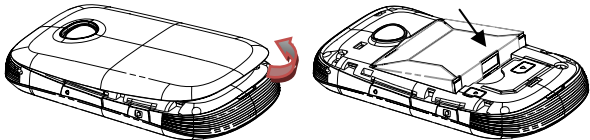

Removing the battery

 1. Make sure that your mobile phone is switched off.
2. Remove the battery cover.
3. Pull the battery up and remove it from the mobile phone.

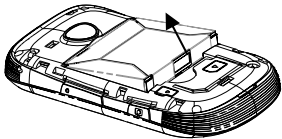


Charging the battery

A rechargeable battery powers your phone.. For maximum battery performance, it is recommended that you first use up the battery power and then charge it completely. A new battery's full performance is achieved only after three complete charge and discharge cycles.

1. Connect your travel adapter to the side of your mobile phone as

shown in the diagram.

 2. Connect the other end of the travel adapter to the mains socket.
3. When you charge the battery, the battery charging indicator appears.
4. When the battery is fully charged, disconnect the charger.

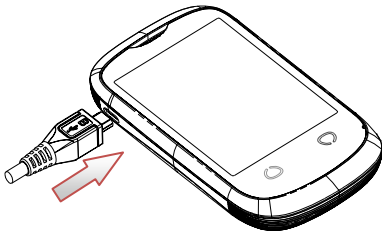


Inserting the SIM card

You want a mobile phone that is sophisticated yet easy to use and here it is in your hands! Naturally you are eager to start using it, but first you need to insert the SIM card.

Insert the SIM card as follows:

 1. Make sure that the phone is switched off and the charger is disconnected from the phone.
2. Turn the phone over and remove the battery cover.
3. Remove the battery if it is already installed.
4. Hold your SIM card with the cut corner oriented as shown and then slide it into the card holder with the gold-coloured contacts facing downward.
5. Replace the battery first.
6. Replace the battery cover.

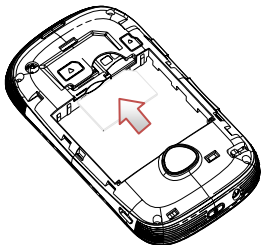

Every mobile phone has a SIM card (Subscriber Identity Module). This is a micro-chip that holds your personal information such as names and phone numbers. Your phone won't work without it. If you already have contacts on your SIM card, they can be transferred in most cases.

 
Inserting the microSD card

You can use a microSD card to expand the storage of the phone. You can store or copy files such as videos, photos, music, and so on.

Do not take out the card or switch off the phone while transmitting or storing data, which may cause data loss or damage to the phone or the card.

microSD Logo is a trademark. Insert the microSD card as follows:

The microSD card slot is on the side of the SIM card holder. Insert the card with the metal contacts facing down until it clicks to the right position.

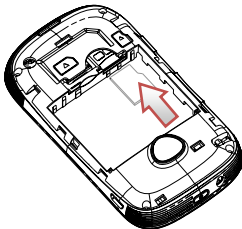








Note: microSD is a trademark of SD Card Association.

Writing text

Your phone provides two sets of on-screen keyboards. Tap a text field, such as in a note or new contact, to bring up the keyboard.



 




- Using the Full Keyboard

Notes: You cannot use predictive word input with the full keyboard.

- ◆ Tap  to select input method.
- ◆ Tap  to change to Condensed Keyboard.
- ◆ Tap  to select symbols and digits.
- ◆ Tap  to change to capital letter mode.
- ◆ Tap  to input a space.
- ◆ Tap  to delete text and  to start a new paragraph.

- Using the Condensed Keyboard

You can enter letters, words, numbers, symbols and emoticons with the condensed keyboard.

- ◆ Tap  to select input method.
- ◆ Tap  to change to Full Keyboard.
- ◆ Tap  to select symbols.
- ◆ Tap  to delete text.
- ◆ Tap  to change to capital letter mode and  to select digits.
- ◆ Tap  to input a space.

Phonebook

There are some numbers that you may want to call again and again, so it makes sense to add these numbers to your **Phonebook**. You can then access these numbers quickly and easily.

- Add new contact

Go to **Menu**→**Phonebook**→**Add new contact**. (Select a storage location if you have selected **Both** in **View storage**.) Edit the information and select **Options**→**Done** to save.

- Save number to Phonebook

You can also save a number right after you've made or received a phone call or a text message from someone who is not yet in your **Phonebook** list.

- Quick search

To quickly search for the contacts, tap the input box, and then enter the first letter of your desired contact on the screen.

- Add fixed dial number

Your phone supports fixed dial function, if this function is activated, the phone can only dial those numbers starting with the fixed dial number you set. Go to **Options**→**Phonebook settings**→**Extra numbers**→**Fixed dial**, select **On** to activate this function.

Note: You need to input the correct PIN2 code to turn it on/off. The PUK2 code is required to unlock the SIM card if you have incorrectly input the PIN2 code for three consecutive times. The PIN2 code and the PUK2 code may be supplied along with the SIM card. If not, contact the network provider.

Go to **Options**→**Fixed dial list**→**Add**, then edit name and number, select **Done**→**Yes**. If you set the fixed dial number to 139, then the phone can only dial numbers starting with 139.

- View fixed dial number

Go to **Phonebook**→**Options**→**Fixed dial list** to view fixed dial number.

- Delete one record

To delete someone from your **Phonebook** list, first select the name, then select **Options**→**Delete**.

- Copy or move records

You can copy or move the records to SIM or to phone. Select **Options**→**Copy** or **Move**.

- Set preferred storage

Select **Options**→**Phonebook settings**→**View storage** and then select **SIM**, **Phone** or **Both**.

Note: Your Phonebook will only show the contacts in **View storage**

that you have selected.

- View memory status

Select **Options**→**Phonebook settings**→**Memory status** to check the memory status of both phone and SIM.

Making and receiving calls

- Basic way to make a call

In the standby mode select Dialer icon. Tap the numeric buttons to input the number and press the **Send key** to dial.

- Dial from the Phonebook

Go to **Menu**→**Phonebook**. Find the name of the person you want to call, and press the **Send key**.

- Make an emergency call

You can make emergency calls without the SIM card inserted so long as you are in an area with network coverage.

- Answer a call

Press the **Send key**.

- End a call

Press the **End key**.

- Use call options

During a call, you can select **Options** to enter the call options.

You can use the speakerphone by tapping the **H-free** button.

You can put a call on hold, make a conference call, and use applications such as Messaging & Phonebook while you're on a call.

Call center

Go to **Menu**→**Call center**.

- Call history

Missed calls, Dialed calls and Received calls are saved in **Call history**. If the records are full, the earliest saved records will be deleted.

Also, you can view call timers, call cost, Text msg. counter and GPRS counter in **Call history**.

- Call settings
 - ◆ Caller ID: You can select to Set by network, Hide ID or Send ID.
 - ◆ Call waiting: After this function is activated, the system will inform you if there is another incoming call. Please contact your network provider for details.
 - ◆ Call divert: The call divert service enables you to divert an incoming call from a service to a specified telephone number in preset conditions. You can contact the network provider to activate this service. You can set the call divert service so that voice calls and data calls are diverted to a preset number under different conditions.
 - ◆ Call barring: You can bar outgoing and incoming calls.
 - ◆ Closed user group: You can create groups and numbers in one group can call each other, but can not call numbers in other groups.
 - ◆ Advance settings: You can set auto redial, call time display and call time reminder.

Sending and receiving messages

- Write a new message

You can use your mobile phone to send and receive messages.

1. Go to **Menu**→**Messaging**→**Write message**.
2. Write your message. For more information on input method, see section “Writing text”. The default message type is SMS.
3. If you want to change to MMS, you can press **Options** and select **Switch to MMS**; or you can press **Options** and select **Add picture**, **Add sound**, **Add video** or **Add subject** to directly insert multimedia contents to the message and it will be switched to MMS automatically.
4. You can select **Options**→**Slide options** to select to add a new slide. And you can select **Options**→**Advanced** to insert an attachment, contact number, contact name or bookmark.
5. When you finish writing, press **Options**→**Send to** to enter recipient or add from Phonebook. If you are writing an MMS, after adding recipients, then you can select **Options**→**Change to Cc** or

Change to Bcc to change the current contact to Cc or Bcc.

6. Select **Options**→**Send** to send the message out. If you want to save the MMS as a draft, select **Options**→**Save to Drafts**. If you are writing a SMS, select **Options**→ **Save**.
- View messages

Upon receiving a message, the mobile phone will alert you with a ringtone, prompt, or a new message icon.

1. Press **View** to view the message.
2. While the message is open, use **Options** to reply, delete, or forward the message. You can also call back the sender.

You can view the message boxes in the Messaging interface.

- ◆ Select **Inbox** to view received messages.
- ◆ Select **Drafts** to view unsent messages.
- ◆ Select **Outbox** to view messages that failed to send.
- ◆ Select **Sent messages** to view messages been successfully sent and saved.

- ◆ Select **Archive** to view archive messages.
- ◆ Select **Broadcast message** to view broadcast messages.
- ◆ Select **Templates** to view message templates.
- Messages settings

Go to **Menu**→**Messaging**→**Message settings**→**Text message**.

- ◆ Profile settings: This is automatically set by the service provider, but please contact us if this is not available.
- ◆ Common settings: You can set Delivery report and Reply path on or off. You can select to save sent messages or not.
- ◆ Memory status: View the SIM and phone memory status.
- ◆ Preferred storage: Set the preferred storage to SIM or Phone.
- ◆ Preferred connection: Set the preferred connection to GPRS, GSM or GSM only.

Go to **Menu**→**Messaging**→**Message settings**→**Multimedia message**.

- ◆ Profiles: You can activate a profile or add new ones.

- ◆ Common settings: In **Compose**, you can set Slide time, Creation mode, Picture resizing, Auto signature and Signature. In **Sending**, you can set Delivery report, Read report, Priority, Delivery time, and Send and save. In **Retrieval**, you can set Home network, Roaming, Filters, Read report and Delivery report. In **Preferred storage**, you can set the preferred storage to Phone or Memory card. In **Memory status**, you can view memory status.

Sending and receiving Email

- Set up accounts

First you have to setup your Email accounts. If the account is not properly set or activated, you cannot send or receive any Emails.

Go to **Menu**→**Messaging**→**Email**→**Email accounts**.

1. Select **Options**, and then select **New account**.
2. Select a mail server, then enter your email address, user name and password. Or you can select **Other Email accounts**, then enter your email address, protocol, data account, and server information, etc.

3. Activate your email account.

- Send an Email

Go to **Menu**→**Messaging**→**Email**→**Write Email** to edit your Email. When you finish writing, select to send and/or save the Email.

- Send and receive Emails

If you want to receive Emails, go to **Menu**→**Messaging**→**Email**. Press **Send and receive**, and the Emails in your mailbox will be downloaded to your phone and the Emails in the **Outbox** will be sent out. Go to **Inbox** to view your received Emails.

Settings

You can adjust various settings of your phone. Go to **Menu**→**Settings**.

- Calibration

If you feel that the contact point of your touch screen is not accurately positioned, you can fix it by this function.

Complete the calibration operation according to the system prompts. Tap the centre of the cross until the calibration is completed.

- User profiles

You can select your preferred profile in this menu. The profile options are: General, Meeting, Outdoor, Indoor, Silent and Headset. The default settings for each individual profile are preset at the factory. You can change them in the **Options**→**Customize** menu.

- ◆ Tone settings: Set the tone for various conditions.
- ◆ Volume: Set the Ringtone and Key tone.
- ◆ Alert type: Choose among four modes based on ring and vibration.
- ◆ Ring type: Choose among Single, Repeat and Ascending.
- ◆ Extra tone: Let the phone alert when Warning or Error.
- ◆ Answer mode: Select **Any key** to answer a call.

Note: The Headset mode can only be activated with the headset connected.

- Phone settings

- ◆ Time and date: You can set home city, time/date and format.
- ◆ Schedule power on/off: Set auto power on and off time.

- ◆ Language: You can set the language.
- ◆ Pref. Input methods: You can set the preferred input method.
- ◆ Display: You can set wallpaper.
- ◆ Flight mode: You can select to use flight mode. In flight mode, all wireless functions are disabled.
- ◆ Misc. settings: You can set the LCD backlight brightness and time.
- Network settings

In this menu, you can set **Network selection** to be **Automatic/Manual** to select the network service provider according to requests. If you have selected a service provider manually, you have to manually select again or return to the **Automatic** option to select the service provider when you switch to the SIM card of another network.

The GPRS Connection can be set to **When needed** or **Always**.

- Security settings
 - ◆ SIM lock: If SIM Lock is currently set **Off**, select **On**, then input a PIN code to turn it on. You need to input the correct PIN code to unlock

your SIM card when you turn on your mobile phone next time.

Note: The PUK code is required to unlock the SIM card if you have incorrectly input the PIN code for three consecutive times. The PIN code and the PUK code may be supplied along with the SIM card. If not, contact the network provider.

- ◆ Phone lock: Phone lock can prevent your mobile phone from unauthorized use. Select **On/Off** to enable or disable the handset lock protection.
- ◆ Auto keypad lock: Select a time for auto keypad lock, and the phone will automatically lock the keypad to prevent unintended touch.
- ◆ Change password: You can change the PIN, PIN2 and phone password here.

Note: You may be required to input the phone lock code in some of the security settings interfaces. The default lock code is 1234.

- Restore factory settings

You need to input the correct phone lock password, and press **OK**→**Yes** to restore factory settings.

Connectivity

Go to **Menu**→**Connectivity**.

You can add and view your GSM and GPRS data usage.

MTN Play

Go to **Menu**→**MTN Play**. View the preset website.

Organizer

Go to **Menu**→**Organizer**.

- Calendar

Enter **Calendar**, the calendar of the current month will be displayed on the screen and the current date will be marked by a background box in a special colour.

You can click the dates, browse the dates, and click the direction arrows on the screen to switch the year and month; the information on the screen will also change consequently.

- Tasks

You can add tasks.

- Alarm

You can view, and edit the alarm clocks settings. You can also enable or disable the alarms. By tapping **Edit**, you can set the corresponding features of the alarm according to instructions: repeat type, date, time, alert type, etc.

- World clock

You can view the time in different cities.

- Calculator

Enter **Calculator**, you can perform simple calculations. You can add, subtract, multiply or divide, and select M+, MR, and MC to perform relevant operations.

Note: This calculator has limited accuracy and rounding errors may occur especially in long division.

File manager

Go to **Menu**→**File manager**. You can check all the folders in the phone or microSD card, create new ones or rename, delete, or sort, etc. The files you download from the internet will be stored in these folders.

Note: When you select **Format**, the data will be lost, so please be careful with this function.

Fun&Games

Go to **Menu**→**Fun&Games**.

- Java

Java MIDlets are Java™-based applications that can run on your phones. It supports Java 2 Edition, J2ME™. Java allows you to download Java-based applications, such as games and tools that are specifically designed for mobile phones. Java gives you the flexibility of installing and managing additional J2ME applications from the Internet.

- Games

Your mobile phone has classic games pre-loaded. For further information on this, access the menu and view game Help.

Multimedia

Go to **Menu**→**Multimedia**.

- Image viewer

The images you want to view in Image viewer must be put in the **..\Photos** folder in the phone or microSD card, and in **Options**→**Storage**, the storage must be set to phone or card correspondingly.

You can select an image and view it.

Image viewer supports: jpeg, jpg, bmp, gif, png.

- Media player

You can play the audio and videos in your phone or the memory card.

To create a playlist, in **My playlists**, select **Options**→**New**, and then set the list name. select **Options**→**Open**→**Options**→**Add**, and select the file, then the file will be added into the playlist.

Media player supports: AMR, WAV, MP3, MIDI, Mpeg4, 3GP.

- FM Radio

With the radio, you can search for radio channels and listen to them. When you receive an incoming call while listening to the radio, the radio will switch off. In the FM radio interface, press the icon on the bottom left corner to enter the submenu.

- ◆ Channel list: Edit and save radio channels.
- ◆ Manual input: Manually input a channel.
- ◆ Auto search: Automatically searches for channels.
- ◆ Settings: You can turn on Loudspeaker and set Channel effect.

Note: The quality of the radio broadcast depends on the coverage of the radio station in that particular area. The wired headset works as an antenna, so always connect the headset when using the radio.

Camera

Go to **Menu**→**Camera**.

- Camera

1. Take a Photo

You can also press the **Camera key** in the standby mode. Aim the camera at the object and then tap the **Camera key** to take the shot.

Before capturing a photo, adjust brightness and zoom to the right size.

2. Configure your camera

Press the icon on the bottom left corner to configure your camera:

- ◆ Photos: Enter **Image viewer** to view the photos you've just taken.
- ◆ Camera settings: Set Shutter sound, EV, Night mode, Contrast, Anti-flicker, Delay timer and Cont. shot.
- ◆ Image settings: Set Image size and Image quality.
- ◆ White balance: Select Auto, Daylight, Tungsten, etc.
- ◆ Scene mode: Select Auto or Night.
- ◆ Effect settings: Select Normal, Grayscale, Sepia, etc.
- ◆ Storage: Select Phone or Memory card.
- ◆ Restore default: Restore to factory default settings.

- Video recorder

1. Take a video

Aim the camera at the object and then press the **Camera key** to start, press it again to pause, and tap the icon on the bottom right corner to finish recording.

Before recording a video, adjust brightness and zoom to the right size.

Note: You need to insert a microSD card before recording a video.

2. Configure your video recorder

Press the icon on the bottom left corner to configure your video recorder:

- ◆ Camcorder settings: Set EV, Night mode and Anti-flicker.
- ◆ Video settings: Set Video quality.
- ◆ White balance: Select Auto, Daylight, Tungsten, etc.
- ◆ Effect settings: Select Normal, Grayscale, Sepia, etc.
- ◆ Storage: Select Phone or Memory card.
- ◆ Restore default: Restore to default factory settings.

Services

Go to **Menu**→**Services**.

Services allows you to view internet content. In **Services**, you can use the STK and Internet service, and you can select **Licence manager** to manage the licences.

- **STK**

SIM card Toolkit (STK) services are value-added services provided by your network provider.

Your mobile phone supports STK service, but if your SIM card and network provider do not support the service, these functions can't be used.

- **Internet service**

Your phone supports Wireless Application Protocol (WAP). You can get access to this service through your network provider. **Internet service** lets you get information about news, weather forecasts and more.

Go to **Services**→**Internet service**. You can perform the following operations.

- ◆ Homepage: Homepage is a WAP site you set in **Settings**→**Profiles**.
- ◆ Bookmarks: Access your phone's preset websites. Select a bookmark and press **Options**→**Go to** to load the website.
- ◆ Input address: Input a URL and press **Options**→**Done** to visit the site.
- ◆ Recent pages: Display the pages you've visited recently. Select an item and choose **Options**→**Go to** to visit the page again.
- ◆ Settings: You can set Profiles, Browser options, Preferences or Security settings.
- Licence manager
 - ◆ Licence list: Display the list of Licences.
 - ◆ Status: Check the version and time.
 - ◆ Advance: Select Sweep to remove useless licences and reboot your phone.