 


YOUR CELL C TEXTER USER GUIDE



THE POWER IS IN YOUR HANDS

KEY FUNCTIONS

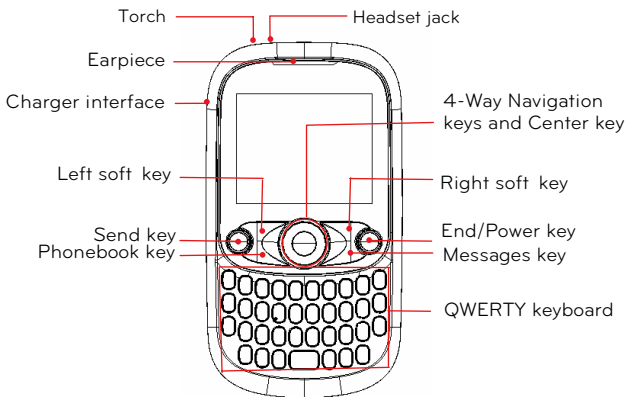

FUNCTION	DESCRIPTION
Left soft key	Performs the function indicated at the left bottom of the screen.
Righthsoft key	Performs the function indicated at the right bottom of the screen.
Center key	Press to confirm actions and make selections.

FUNCTION	DESCRIPTION
4-Way Navigation keys	These keys (UP, DOWN, LEFT and RIGHT) allow for navigation through menu options and quick access to some function menus.
Send key	Press to dial a phone number or answer a call. Press to view the call history in the standby mode.
End/Power key	Press to exit to the idle mode. Hold to switch on/off the cellphone.
QWERTY keyboard	Press to enter characters 0-9 and the alphabets from a-z .
Torch	Press Down Navigation key to turn on or off the torch in the standby mode.

NOTE: In this User Manual, “press a key” means to press the key and release it immediately, while “hold a key” means to press the key for at least two seconds and then release it.













LOCKING AND UNLOCKING THE KEYPAD

In idle screen, hold  key to lock the keypad.

To unlock the keypad, press **Left soft key** and then press  Key.

Locking the keypad can prevent unintentional operations on it. You can answer an incoming call with the regular operation when the keypad is locked.

STATUS BAR ICONS

INDICATOR	WHAT IT MEANS
	Signal strength
	GPRS
	Silent
	General
	Outdoor
	Meeting
	New SMS
	New MMS
	Calling or in call
	Roaming
	Battery status
	Alarm clock set

 
BATTERY

The lithium ion battery of the cellphone can be immediately used after unpacking.


INSTALLING THE BATTERY

1. Pull the battery cover from the notch on the bottom and remove the cover.
2. Insert the battery by aligning the gold-colored contacts with the contacts in the battery slot.

3. Push down the upper section of the battery until it clicks into place.
4. Replace the battery cover and close it gently until you hear a click.

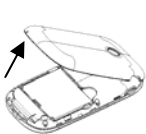

Remove the battery cover

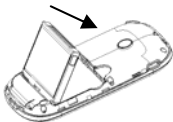 


Push down the battery




Replace the battery cover

REMOVING THE BATTERY

 1. Make sure that your cellphone is switched off.
2. Remove the battery cover.
3. Pull the battery up and remove it from the cellphone.



Remove the battery cover

 

Pull up the battery

CHARGING THE BATTERY

Your cellphone is powered by a rechargeable battery. For maximum battery performance, it is recommended that you first use up the battery power and then charge it completely. A new battery's full performance is achieved only after three complete charge and discharge cycles.

1. Connect your travel adapter to the left side of your cellphone as shown in the diagram.
2. Connect the other end of the travel adapter to the mains socket.
3. When the battery is being charged, the display will show the animation of a battery being filled up.
4. When the battery is fully charged, disconnect the charger.

 


INSERTING THE SIM CARD

Insert the SIM card as follows:

1. Make sure that the cellphone is switched off and the charger is disconnected from the cellphone.
2. Turn the cellphone over and remove the battery cover.
3. Remove the battery if it is already installed.

4. Hold your SIM card with the cut corner oriented as shown and then slide it into the card holder with the metal contacts facing downward.
5. Replace the battery first.
6. Replace the battery cover.



Insert the SIM card

SIM card (Subscriber Identity Module) is a micro-chip that holds your personal information such as names and phone numbers. Your cellphone won't work without it. If you already have contacts on your SIM card, they can be transferred in most cases.

 
INSERTING THE MEMORY CARD

You can use memory card to expand the storage of the cellphone. You can store or copy files such as photos, music, and so on.

Do not take out the card or switch off the cellphone while transmitting or storing data, which may cause data loss or damage to the cellphone or the card.

Insert the memory card as follows:

Open the battery cover and remove the battery. Insert the card with the metal contacts facing downward until it clicks to the right position.

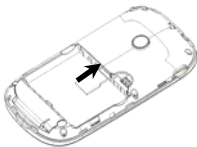

Insert the Memory card

SWITCHING YOUR CELLPHONE ON/OFF




Make sure that your SIM card is in your cellphone and that the battery is charged.

Hold **End/Power key** to power on/off the cellphone. The cellphone will automatically search for the network when the cellphone is turned on.

WRITING TEXT

- Input method

Your cellphone provides the following input methods: abc, Abc, ABC,123. The current input mode is displayed in the top left corner of the screen. You can press **Options**→**Input method** to select the input mode.

- **Alphabetic Mode**
 - ◆ Press A ~ Z to enter desired characters.
 - ◆ Press  to switch between uppercase and lowercase.
 - ◆ Press  to enter space.
 - ◆ Press  to delete characters.
- **Numeric Mode**

In numeric mode, use the numeric keys to enter numbers.

NOTE: Letters can not be entered in this mode.
- **Entering Symbols**

Go to **Options**→**Input method**→**Insert symbol**, then use **Navigation keys** to select desired symbol. You can also press the **Silent key** to switch to the symbol mode.

NOTE: The Silent key is in the last row of the keyboard which printed characters with “Sym”.

ADDING CONTACTS TO THE PHONEBOOK

There are some numbers that you may want to call again and again, so it makes sense to add these numbers to your **Phonebook**. You can then access these numbers quickly and easily.

1. Go to **Menu**→**Phonebook**→**Add new contact**.
2. Select SIM or cellphone to store the contact.
3. Edit the information and save it.

- You can also save a number right after you've made or received a phone call or a message from someone who is not yet in your **Phonebook** list.
- To delete someone from your **Phonebook** list, first select the name, then select **Options**→**Delete**.

MAKING AND RECEIVING CALLS

- Basic way to make a call
In idle screen, press **numeric keys** to input the number and press **Send key** to dial.
- Dial from the Phonebook
Go to **Menu**→**Phonebook**. Find the name of the person you want to call, and press **Send key**.
- Make an emergency call
You can make emergency calls without the SIM card inserted so long as you are in an area with network coverage.
- Answer a call
Press **Send key**.
- End a call
Press **End key**.
Make sure that you are in an area with sufficient coverage to make calls. The strength of the network signal is indicated on the Status Bar of the screen.

CALL LOGS

Missed calls, Dialed calls and Received calls are saved in **Call logs**. If the records are full, the earliest saved records will be deleted automatically.

Also, you can view call timers, call cost, SMS counter and GPRS counter in **Call logs**.(Call cost function need network support.)

SENDING AND RECEIVING MESSAGES

- Write message
 1. Go to **Menu**→**Messages**→**SMS/MMS**→**Write message**.
 2. Write your message. For more information on input method, see section 'Writing Text'. When you write SMS, press **Options**→**Send to**, and add the recipient. When you write MMS, you can edit To, Cc, Bcc, Subject and content. In content field, you can select **Options** and then select to add pictures, audio, bookmark texts, attachments and slides.
 3. When you finish writing SMS, select **Options** to send or save the message. When you finish writing MMS, press **Done** in the MMS editing screen, and select to send or save the message.

- View message

Upon receiving a message, the cellphone will alert you with a ringtone, prompt, or a new message icon.

1. Press **View** to open the message. You can also go to Inbox to read the message.
2. While the message is open, press **Options** to reply, delete or forward the message or call back the sender.

NOTE:

In SMS inbox interface, choose your desired number from the sender's number list and select **Options**→**Save to Phonebook** to save the sender's number.

In MMS mode, while the MMS is open, you can go to **Advanced**→**Use details** to save the sender's number.

Go to **Menu**→**Messages**→**SMS/MMS**. There are several menus you can choose.

- ◆ Select **Inbox** to view received messages.
 - ◆ Select **Drafts** to view unsent messages.
 - ◆ Select **Outbox** to view messages that you sent before. Outbox can also save the messages you want to send right away.
- Message settings
Go to **Menu**→**Messages**→**SMS**→**SMS settings**.

- ◆ Profile settings: This is automatically set by the service provider. You can consult your service provider for details.
- ◆ Common settings: You can set Delivery report and Reply path on or off. You can select to save sent message or not.
- ◆ Memory status: View the SIM and cellphone memory status.
- ◆ Preferred storage: Saving the SMS to your preferred position.
- ◆ Preferred connection: Set the preferred connection to GPRS, GSM or GSM only.

Go to **Menu**→**Messages**→**MMS**→**MMS settings**.

- ◆ Profiles: You can activate a profile or add new ones.
- ◆ Common settings: In **Compose**, you can set Creation mode, Picture resizing, Best page time, Auto signature and Signature. In **Send**, you can set Validity period, Delivery report, Read report, Priority, Slide time, Delivery time. In **Retrieve**, you can set Home network, Roaming, Read report and Delivery report. In **Filter**, you can allow or reject the anonymous and advertisement. In **Memory status**, you can view memory status.

In **Messages** interface, select **Broadcast message** to view broadcast messages. In **Voicemail server**, you can edit your voicemail server and call voicemail.

USER PROFILES

Go to **Menu**→**User profiles**.

You can select your preferred profile in this menu. The profile options are: General, Meeting, Outdoor, Silent, Headset. The default settings for each individual profile are preset at the factory. You can edit them in

Options→**Customize**.

NOTE:

- ◆ The Headset mode can only be activated when the headset is connected.
- ◆ In the standby mode, hold **Silent key** to switch to Silent mode. The **Silent key** is in the last row of the keyboard which printed characters with “Sym”.

SETTING YOUR CELLPHONE

You can adjust various settings of your cellphone. Go to **Menu**→**Settings**.

- Phone settings: Set time and date and schedule power on/off, set display and flight mode, etc.

NOTE: In Flight mode, you can only use local program in your cellphone and all the wireless functions will be turned off.

- Call settings
 - ◆ Call waiting: After this function is activated, the

system will inform you if there is another incoming call. This function need network support. Please contact your network provider for details.

- ◆ Call divert: The call divert service enables you to divert an incoming call from a service to a specified telephone number in preset conditions. You can contact the network provider to activate this service. You can set the call divert service so that voice calls and data calls are diverted to a preset number under different conditions.
- ◆ Call barring: You can bar outgoing and incoming calls.
- ◆ Advance settings: You can set blacklist, auto redial, call time display and call time reminder and so on.
- Licence manager
 - ◆ Licence list: Display the list of licences.
 - ◆ Status: Check the version and time.
 - ◆ Advance: Select **Sweep** to remove useless licences and reboot your cellphone.
- Network settings: Set to automatically or manually select network. Set preferred networks and GPRS connection mode.
- Security settings: Set security features to protect you from unauthorized use of your cellphone and SIM card. You will be required to input PIN code. If SIM lock is currently set **Off**, select **On**, then input a PIN code to turn it on. You need to input the correct PIN code to unlock your SIM card when you turn on your cellphone next time.

NOTE: The PUK code is required to unlock the SIM card if you have incorrectly input the PIN code for three consecutive times. The PIN code and the PUK code may be supplied along with the SIM card. If not, contact the network provider.

- **Connectivity**
Data account: You can set data account for GPRS.
- **Restore factory settings:** Enter the cellphone password to restore to the factory settings. Some personal information might be lost if you use this function, so be careful.

NOTE: You may be required to input the cellphone password in some of the security setting interfaces. The default cellphone password is 1234. Go to **Security settings**→**Change password**→**Phone password** to change the cellphone password.

ORGANIZER

Go to **Menu**→**Organizer**.

- **Calendar**

Enter **Calendar**, the calendar of the current month will be displayed on the screen and the current date will be marked by a background box in a special colour. You can go to **Options**→**Add event** to set event to some day and the cellphone will remind of you doing this event on that day.

- **Tasks**

You can add tasks.

- Alarm

You can view, and edit the alarm clocks settings. You can also enable or disable the alarms. By pressing **Edit**, you can set the corresponding features of the alarm according to the instructions.

- World clock

You can view the time in different cities.

FILE MANAGER

You can check all the folders in the cellphone or memory card, create new ones or rename, delete, or sort, etc. The files you download from the internet will be stored in these folders.

NOTE: When you select **Options**→**Format**, the data will be lost, so please be careful with this function.

EXTRA

- Calculator

You can perform simple calculation. You can use **Navigation keys** to choose add, subtract, multiply or divide calculation.

NOTE: This calculator has limited accuracy and rounding errors may occur especially in long division.

- Currency converter

Your cellphone provides you with basic functions of currency conversion. Input the rate, select **OK** and input a figure in the Local field, and then press **OK** to get the result.

- Stopwatch

Use it to record the time.

- Flashlight

Select to turn on or off the torch.

FUN&GAMES

Go to **Menu**→**Fun&Games** to play game.

MULTIMEDIA

Go to **Menu**→**Multimedia**.

- FM radio

With the radio, you can search for radio channels and listen to them. In the FM radio interface, you can press the **Up/Down Navigation keys** to adjust volume, press the **Left/Right Navigation keys** to tune the frequency, and press the **Center key** to pause. Select **Options** to enter the submenu.

NOTE: The wired headset may work as an antenna. In that case, always connect the headset when listening to the radio. The quality of the radio broadcast depends on the coverage of the radio station in that particular area.

- Camera

1. Take a photo

Aim the camera lens at the object and then press the **Center key** to take the shot.

You can press **Up Navigation key** to go to camera mode in the standby mode.

2. Configure your camera

Press the **Left soft key** to configure your camera.

- Image viewer

The images you want to view in **Image viewer** must be put in the **..\Photos** folder in the cellphone or memory card, and in **Options→Storage**, the storage must be set to cellphone or memory card correspondingly.

- Audio player

You can play the audio files in your cellphone or memory card.

Go to **List→Options→Add** to add your audio files. In **List→Options→Settings→Pre. playlist**, the storage must be set to cellphone or memory card correspondingly.

- Sound recorder

Go to **Options→New record** to record a sound clip.

Go to **Options**→**List** to view the sound clips you recorded.

Go to **Options**→**Settings** to set preferred storage, file format, etc.

STK

SIM card Toolkit (STK) services are value-added services provided by your network provider.

Your cellphone supports STK service, but if your SIM card and network provider do not support the service, these functions can't be used.

USING SERVICES

Go to **Menu**→**Services**.

Select **Homepage** to go into your homepage.

Select **Bookmarks** to view the list of saved website addresses.

Select **Recent pages** to view the list of pages you recently visited.

Select **Input address** to go to a page by directly inputting the address.

Go to **Service inbox** to view the service messages.

Go to **Settings**→**Profiles** to select a profile or add a new one.

Go to **Settings**→**Browser options**. Select **Timeout** to set timeout. If the timeout period elapsed prior to completion of the operation or the server is not responding, your cellphone will show “Connection Failed”. During the timeout period, it will keep trying to connect until expired. Select **Show images** to set whether or not to show the images. Select whether or not to enable **Cache** and **Cookies**.

Go to **Settings**→**Service message settings** to set options for receiving service messages.

Go to **Settings**→**Clear cache** to clear cache.

Go to **Settings**→**Clear cookies** to clear cookies.

SECURITY

- To protect your cellphone from illegal use, take the security measures as follows:
 - Set PIN codes of the SIM card.
 - Set handset password.
 - Set call restrictions.

SAFETY PRECAUTIONS

This section includes some important information on safe and efficient operation. Please read this information before using the cellphone.

OPERATIONAL PRECAUTIONS

- Please use your cellphone properly. When making or receiving a call, please hold your cellphone as holding a wireline telephone. Make sure that the cellphone is at least one inch (about two point five centimeters) from your body when transmitting.
- Do not touch the antenna when the cellphone is in use. Touching the antenna area affects call quality and may cause the cellphone to operate at a higher power level than needed.
- Some people may be susceptible to epileptic seizures or blackouts when exposed to flashing lights, such as when watching television or playing video games. If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult your doctor before playing video games on your cellphone or enabling a flashing-light feature on your cellphone. (Not all of the products have flashing-light feature.)
- Keep the cellphone out of the reach of small children. The cellphone may cause injury if used as a toy.

PRECAUTIONS WHILE DRIVING

- Please pay attention to the traffic safety. Check the laws and regulations on the use of your cellphone in the area where you drive. Always obey them.

- Use hands-free function of the cellphone, if available.
- Pull off the road and park before making or answering a call if conditions require.

PRECAUTIONS FOR MEDICAL DEVICES AND FACILITIES

- When using your cellphone near pacemakers, please always keep the cellphone more than eight inches (about twenty centimeters) from the pacemaker when the cellphone is switched on. Do not carry the cellphone in the breast pocket. Use the ear opposite the pacemaker to minimize the potential for interference. Switch off the cellphone immediately if necessary.
- Some cellphones may interfere with some hearing aids. In the event of such interference, you may consult your hearing aids manufacturer to discuss alternatives.
- If you use any other personal medical device, please consult the manufacturer of your device to determine if it is adequately shielded from RF(radio frequency) energy.
- In those facilities with special demand, such as hospital or health care facilities, please pay attention to the restriction on the use of cellphone. Switch off your cellphone if required.

CELLPHONE

- Please use original accessories or accessories approved by the cellphone manufacturer. Using any

unauthorized accessories may affect your cellphone's performance, damage your cellphone or even cause danger to your body and violate related local regulations about telecom terminals.

- Turn off your cellphone before you clean it. Use a damp or anti-static cloth to clean the cellphone. Do not use a dry cloth or electrostatically charged cloth. Do not use chemical or abrasive cleaners as these could damage the cellphone.
- As your cellphone can produce electromagnetic field, do not place it near magnetic items such as computer disks.
- radio and personal computer can cause interference.
- Do not expose your cellphone to direct sunlight or store it in hot areas. High temperatures can shorten the life of electronic devices.
- Keep your cellphone dry. Any liquid may damage your cellphone.
- Do not drop, knock or harshly treat the cellphone. Rough handling can break internal circuit boards.
- by cellphone if inadequately shielded. Please use cellphone at least 20 cm or as far away as you can from TV set, radio and other automated office equipment so as to avoid electromagnetic interference.
- Operating cellphone may interfere with medical devices like hearing aides and pacemakers, or other medical devices in hospital. Consult a physician or the manufacturer of the medical device before using cellphone.

- Be aware of the usage limitation when using cellphone at places such as oil warehouses, or chemical factories, where there are explosive gases or explosive products being processed, because even if your cellphone is in idle state, it still transmits radio frequency (RF) energy. Therefore, power off your cellphone if required.
- Do not touch the antenna while calling. Otherwise it will affect the quality of calling and waste battery energy. The damaged antenna will cause slight burn while touching your skin.
- Keep cellphone out of the reach of small children. Cellphone may cause injury if used as a toy.
- Do not put other things on the terminal to avoid overlaying radiator.
- Keep the antenna free from obstructions and position the antenna straight up. This will ensure best call quality.

PRECAUTIONS FOR POTENTIALLY EXPLOSIVE

ATMOSPHERES

- Switch off your cellphone prior to entering any area with potentially explosive atmospheres, such as fueling areas, fuel or chemical transfer or storage facilities.
- Do not remove, install, or charge batteries in such areas. Spark in a potentially explosive atmosphere can cause an explosion or fire resulting in bodily injury or even death.

- To avoid possible interference with blasting operations, switch off your cellphone when you are near electrical blasting caps, in a blasting area, or in areas posted “Turn off electronic devices.” Obey all signs and instructions.

PRECAUTIONS FOR ELECTRONIC DEVICES

- Some electronic devices are susceptible to electromagnetic interference sent by cellphone if inadequately shielded, such as electronic system of vehicles. Please consult the manufacturer of the device before using the phone if necessary.

SAFETY AND GENERAL USE IN VEHICLES

- Safety airbag, brake, speed control system and oil eject system shouldn't be affected by wireless transmission. If you do meet problems above, please contact your automobile provider. Do not place your cellphone in the area over an airbag or in the airbag deployment area.

Airbags inflate with great force. If a cellphone is placed in the airbag deployment area and the airbag inflates, the cellphone may be propelled with great force and cause serious injury to occupants of the vehicle.

- Please turn off your cellphone at a refueling point, and the same to the place where the use of two-way radio is prohibited.

AIRCRAFT SAFETY

- Please turn off your cellphone before the airplane takes off. In order to protect airplane's communication system from interference, it is forbidden to use cellphone in flight. Safety regulations require you to have permission from a crew member to use your cellphone while the plane is on the ground.
- If the cellphone has the function of automatic timing power-on, please check your alarm setting to make sure that your cellphone will not be automatically turned on during flight.

BATTERY USE

- Do not short-circuit the battery, as this can cause the unit to overheat or ignite.
- Do not store battery in hot areas or throw it into fire. Otherwise, it will cause explosion.
- Do not disassemble or refit the battery. Otherwise, it will cause liquid leakage, overheating, explosion and ignition of the battery.
- Please store the battery in a cool dry place if you don't use it for a long period.
- The battery can be recharged for hundreds of times, but it will eventually wear out. When the operating time (talk time and idle time) is noticeably shorter than normal, it is time

to replace it with a new one.

- Please stop using the charger and battery when they are damaged or show evidence of aging.
- Return the worn-out battery to the provider or dispose of it in accordance with environment regulations. Do not dispose of it in household rubbish.
- Please use original batteries or batteries approved by the cellphone manufacturer. Using any unauthorized battery may affect your handset performance or may cause danger of explosion, etc.

Warning: If the battery is damaged, do not discharge it. If the leakage does come into contact with the eyes or skin, wash thoroughly in clean water and consult a doctor.

LIMITATION OF LIABILITY

ZTE shall not be liable for any loss of profits or indirect, special, incidental or consequential damages resulting from or arising out of or in connection with using this product, whether or not ZTE had been advised, knew or should have known the possibility of such damages. The user should refer to the enclosed warranty card for full warranty and service information.

NOTE: The pictures and icons shown in the manual are just schematic drawings for function demonstration. If they are inconsistent with your handset, please take your handset as the standard. If the inconsistency exists in the manual because of the handset function updating, please refer to the follow-up public information from ZTE CORPORATION.

