

ZTE中兴



ZTE中兴

ZTE CORPORATION

NO. 55, Hi-tech Road South, ShenZhen, P.R.China

Postcode: 518057

<http://www.zte.com.cn> mobile@zte.com.cn

Service Hotline: +86-755-26779999

The information on the package is only for your reference. Images are for your reference only. Please check the product model before purchasing. ZTE reserves the rights to change specifications and parameters of the products without further notice.

English

User Manual

ZTE-G R250

Mobile Phone

User Manual

LEGAL INFORMATION

Copyright © 2012 ZTE CORPORATION.

All rights reserved.

No part of this publication may be excerpted, reproduced, translated or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation.

The manual is published by ZTE Corporation. We reserve the right to make modifications on print errors or update specifications without prior notice.

Version No. : R1.0

Edition Time : 2012.05.24

Manual No. : 079584504603

Table of Contents

SECURITY	5	POWERING YOUR PHONE	
SAFETY PRECAUTIONS	5	ON/OFF	28
RF EXPOSURE	15	TURNING THE TORCH ON/OFF	
LIMITATION OF LIABILITY ...	17	28
KEY FUNCTIONS.....	18	WRITING TEXT.....	28
LOCKING AND UNLOCKING		ADDING CONTACT TO THE	
THE KEYPAD	20	PHONEBOOK.....	30
INTERFACE ICONS	21	MAKING AND RECEIVING	
BATTERY.....	21	CALLS	31
INSERTING THE SIM CARD..	24	SENDING MESSAGES.....	32
INSERTING THE MEMORY		RECEIVING MESSAGES	33
CARD	25	SETTING USER PROFILES...	34
CHARGING THE BATTERY ...	27	VIEWING CALL HISTORY	34

CONFIGURING CALL	
SETTINGS	34
SETTING YOUR PHONE	35
SETTING YOUR ALARM	36
FILE MANAGER	36

MULTIMEDIA.....	36
ORGANISER	40
SERVICES.....	40
MTN PLAYER.....	42

Security

- To protect your mobile phone from illegal use, take the security measures as follows:
 - Set PIN codes of the SIM card.
 - Set handset password.
 - Set call restrictions.

Safety Precautions

This section includes some important information on safe and efficient operation. Please read this information before using the phone.

Operational Precautions

- Please use your phone properly. When making or receiving a call, please hold your phone as holding a wireline telephone. Make sure that the phone is at least one inch (about two point five centimeters) from your body when transmitting.

- Do not touch the antenna when the phone is in use. Touching the antenna area affects call quality and may cause the phone to operate at a higher power level than needed.
- Some people may be susceptible to epileptic seizures or blackouts when exposed to flashing lights, such as when watching television or playing video games. If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult your doctor before playing video games on your phone or enabling a flashing-light feature on your phone. (The flashing-light feature is not available on all products.)
- Keep the phone out of the reach of small children. The phone may cause injury if used as a toy.

Precautions While Driving

- Please pay attention to the traffic safety. Check the laws and regulations on the use of your phone in the area where you drive. Always obey them.

- Use hands-free function of the phone, if available.
- Pull off the road and park before making or answering a call if conditions require.

Precautions for Medical Devices and Facilities

- When using your phone near pacemakers, please always keep the phone more than eight inches (about twenty centimeters) from the pacemaker when the phone is switched on. Do not carry the phone in the breast pocket. Use the ear opposite the pacemaker to minimize the potential for interference. Switch off the phone immediately if necessary.
- Some phones may interfere with some hearing aids. In the event of such interference, you may consult your hearing aids manufacturer to discuss alternatives.
- If you use any other personal medical device, please consult the manufacturer of your device to determine if it is adequately shielded from RF(radio frequency) energy.

- In those facilities with special demand, such as hospital or health care facilities, please pay attention to the restriction on the use of mobile phone. Switch off your phone if required.

Mobile Phone

- Please use original accessories or accessories approved by the phone manufacturer. Using any unauthorized accessories may affect your mobile phone's performance, damage your phone or even cause danger to your body and violate related local regulations about telecom terminals.
- Turn off your phone before you clean it. Use a damp or anti-static cloth to clean the phone. Do not use a dry cloth or electrostatically charged cloth. Do not use chemical or abrasive cleaners as these could damage the phone.
- As your mobile phone can produce electromagnetic field, do not place it near magnetic items such as computer disks.
- Using the phone near electrical appliances such as TV, telephone, radio and personal computer can cause interference.

- Do not expose your mobile phone to direct sunlight or store it in hot areas. High temperatures can shorten the life of electronic devices.
- Keep your phone dry. Any liquid may damage your phone.
- Do not drop, knock or harshly treat the phone. Rough handling can break internal circuit boards.
- Do not connect the phone with any incompatible enhancement.
- Do not attempt to disassemble the mobile phone or battery.
- Do not store the phone with flammable or explosive articles.
- Do not charge the mobile phone without battery.
- Some electronic devices are susceptible to electromagnetic interference sent by phone if inadequately shielded. Please use phone at least 20 cm or as far away as you can from TV set, radio and other automated office equipment so as to avoid electromagnetic interference.
- Operating phone may interfere with medical devices like hearing aides and pacemakers, or other medical devices in hospital. Consult a physician or the manufacturer of the medical device before using phone.

- Be aware of the usage limitation when using phone at places such as oil warehouses, or chemical factories, where there are explosive gases or explosive products being processed, because even if your phone is in idle state, it still transmits radio frequency (RF) energy. Therefore, power off your phone if required.
- Do not touch the antenna while calling. Otherwise it will affect the quality of calling and waste battery energy. The damaged antenna will cause slight burn while touching your skin.
- Keep phone out of the reach of small children. Phone may cause injury if used as a toy.
- Do not put other things on the terminal to avoid overlaying radiator.
- Keep the antenna free from obstructions and position the antenna straight up. This will ensure best call quality.

Precautions for Potentially Explosive Atmospheres

- Switch off your phone prior to entering any area with potentially explosive atmospheres, such as fueling areas, fuel or chemical transfer or

storage facilities.

- Do not remove, install, or charge batteries in such areas. Spark in a potentially explosive atmosphere can cause an explosion or fire resulting in bodily injury or even death.
- To avoid possible interference with blasting operations, switch off your phone when you are near electrical blasting caps, in a blasting area, or in areas posted “Turn off electronic devices.” Obey all signs and instructions.

Precautions for Electronic Devices

- Some electronic devices are susceptible to electromagnetic interference sent by mobile phone if inadequately shielded, such as electronic system of vehicles. Please consult the manufacturer of the device before using the phone if necessary.

Safety and General Use in Vehicles

- Safety airbag, brake, speed control system and oil eject system

shouldn't be affected by wireless transmission. If you do meet problems above, please contact your automobile provider. Do not place your phone in the area over an airbag or in the airbag deployment area. Airbags inflate with great force. If a phone is placed in the airbag deployment area and the airbag inflates, the phone may be propelled with great force and cause serious injury to occupants of the vehicle.

- Please turn off your mobile phone at a refueling point, and the same to the place where the use of two-way radio is prohibited.

Aircraft Safety

- Please turn off your mobile phone before the airplane takes off. In order to protect airplane's communication system from interference, it is forbidden to use mobile phone in flight. Safety regulations require you to have permission from a crew member to use your phone while the plane is on the ground.
- If the mobile phone has the function of automatic timing power-on, please check your alarm setting to make sure that your phone will not be automatically turned on during flight.

Battery Use

- Do not short-circuit the battery, as this can cause the unit to overheat or ignite.
- Do not store battery in hot areas or throw it into fire. Otherwise, it will cause explosion.
- Do not disassemble or refit the battery. Otherwise, it will cause liquid leakage, overheating, explosion and ignition of the battery.
- Please store the battery in a cool dry place if you don't use it for a long period.
- The battery can be recharged for hundreds of times, but it will eventually wear out. When the operating time (talk time and standby time) is noticeably shorter than normal, it is time to replace it with a new one.
- Please stop using the charger and battery when they are damaged or show evidence of aging.
- Return the worn-out battery to the provider or dispose of it in accordance with environment regulations. Do not dispose of it in household rubbish.
- Please use original batteries or batteries approved by the phone

manufacturer. Using any unauthorized battery may affect your handset performance or may cause danger of explosion, etc.

Warning: If the battery is damaged, do not discharge it. If the leakage does come into contact with the eyes or skin, wash thoroughly in clean water and consult a doctor.

RF Exposure

Specific Absorption Rate (SAR)

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organisation ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The guidelines use a unit of measurement known as Specific Absorption Rate, or SAR. The SAR limit for mobile devices is 2.0 W/kg and the highest SAR value for this device when tested at the ear was 1.11 W/kg*. As mobile devices offer a range of functions, they can be used in other positions, such as on the body as described in this user guide.

As SAR is measured utilising the device's highest transmitting power, the actual SAR of this device while operating is typically below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum power required to communicate with the network.

* The tests are carried out in accordance with EN 62209-1.

Body Worn Operation

Important safety information regarding radio frequency(RF) radiation exposure.

To ensure compliance with RF exposure guidelines the phone must be used with a minimum of 15 mm separation from the body.

 
Failure to observe these instructions could result in your RF exposure exceeding the relevant guideline limits.

Limitation of Liability

ZTE shall not be liable for any loss of profits or indirect, special, incidental or consequential damages resulting from or arising out of or in connection with using this product, whether or not ZTE had been advised, knew or should have known the possibility of such damages. The user should refer to the enclosed warranty card for full warranty and service information.

Note: The pictures and icons shown in the manual are just schematic drawings for function demonstration. If they are inconsistent with your handset, please take your handset as the standard. If the inconsistency exist in the manual because of the handset function updating, please refer to the follow-up public information from ZTE CORPORATION.

Key Functions

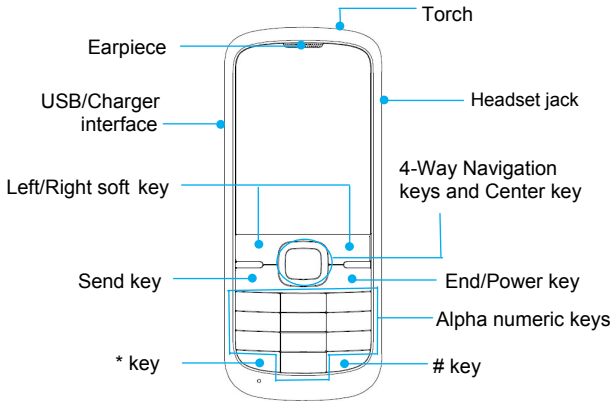

Function	Description
Left soft key	Performs the function indicated at the left bottom of the screen.
Right soft key	Performs the function indicated at the right bottom of the screen.
Center key	Press to confirm actions and make selections.
4-Way Navigation keys	These keys (UP, DOWN, LEFT and RIGHT) allow for navigation through menu options and quick access to some function menus.
Send key	Press to dial a phone number or answer a call, or view the call history in the standby mode.
End/Power key	Press to exit to the standby mode. Hold to switch on/off the phone.
Alpha numeric keys	Press to enter characters 0-9 and the alphabets from a-z.

Note: In this User Manual, “press a key” means to press the key and release it immediately, while “hold a key” means to press the key for at least two seconds and then release it.















Locking and Unlocking the Keypad

In the standby mode, press the **Left soft key** and then press the *** key** within two seconds to lock the keypad.

press **Left soft key** or **Center key** and then press the *** key** within two seconds to unlock the keypad.

Locking the keypad can prevent unintentional operations on it. You can answer an incoming call with the regular operation when the keypad is locked.

Interface icons

	Signal strength		New SMS, message full when blinking
	GPRS		MMS
	Keypad locked		Silent
	Battery status		General
	Alarm clock set		Headset
	Outdoor		Meeting
	Missed call		Call diverting

Battery

 
The lithium ion battery of the mobile phone can be immediately used after unpacking.

Installing the battery


1. Pull up the battery cover at the bottom of the phone.
2. Insert the battery by aligning the metal contacts with the contacts in the battery slot.
3. Push down the upper section of the battery until it clicks into place.
4. Replace the battery cover and close it gently until you hear a click.



Remove the battery cover

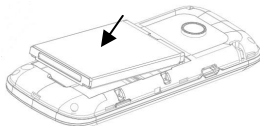

Push down the battery

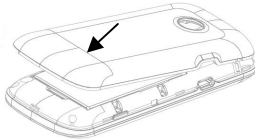 

Replace the battery cover

Removing the battery

1. Make sure that your mobile phone is switched off.
2. Remove the battery cover.
3. Pull the battery up and remove it from the mobile phone.



Remove the battery cover

 


Pull up the battery from here

Inserting the SIM card

Insert the SIM card as follows:

1. Make sure that the phone is switched off and the charger is disconnected from the phone.
2. Turn the phone over and remove the battery cover.
3. Remove the battery if it is already installed.
4. Hold your SIM card with the cut corner oriented as shown and then slide it into the card holder with the metal contacts facing downward.
5. Replace the battery first.
6. Replace the battery cover.

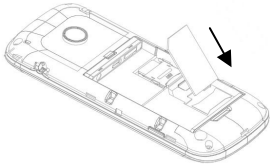

SIM card (Subscriber Identity Module) is a micro-chip that holds your personal information such as names and phone numbers. Your phone won't work without it. If you already have contacts on your SIM card, they can be transferred in most cases.

Inserting the Memory Card

You can use a memory card to expand the storage of the phone. You can store or copy files such as photos, music, and so on.

Do not take out the card or switch off the phone while transmitting or saving data, which may cause data loss or damage to the phone or the card.

 
Note: The memory card does not included in this box.

Insert the memory card as follows:


1. Open the battery cover and remove the battery.
2. Follow the OPEN arrow to push the metal slot, and flip it up.
3. Insert the card into the metal slot with the metal contacts facing

downward until it clicks to the right position.


4. Flip the metal slot back and follow the LOCK arrow to lock it.

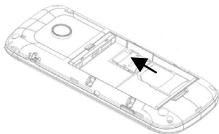


Push the metal slot

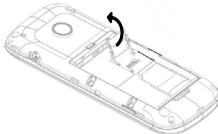 

Flip up the metal slot

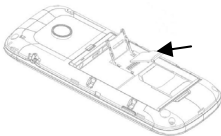 

Insert the memory card

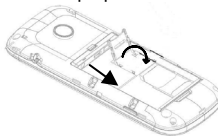 


Flip the metal slot back and lock it

Charging the battery

Your phone is powered by a rechargeable battery. For optimum battery performance, it is recommended that you first use up the battery power and then charge it completely. A new battery's full performance is achieved only after three complete charge and discharge cycles.

 1. Connect your travel adapter to the left of your mobile phone as shown in the diagram.
2. Connect the other end of the travel adapter to the mains socket.
3. When you charge the battery, the battery charging indicator appears.
4. When the battery is fully charged, disconnect the charger.

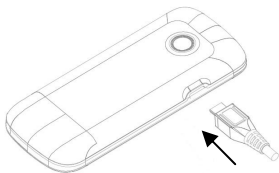

Powering your phone on/off

Make sure that your SIM card is in your mobile phone and that the battery is charged.

Hold the **End/Power key** to power on/off the phone. The phone will automatically search for the network.

Turning the torch on/off

In the standby mode, hold the **0 key** to turn on or off the torch. The torch is on the top of the phone.

Writing Text

- Change input mode: Press the **# key** to change the input mode (input modes: eZi ABC, eZi abc, ABC, abc, 123).
- Input letters: In ABC/abc mode, constantly press the corresponding letter key till the letter appears. In eZi ABC/eZi abc mode, press the corresponding letter key ,then choose the letter you want by

pressing **Navigation keys**, press the **Left soft key**, **Center key** or **0 key** to confirm it.

- Input words: In eZi ABC/eZi abc mode, input any letter with a single key press. Press each key only once for every letter. The word changes after each key stroke. Predictive text input is based on a built-in dictionary. When you have finished writing the word and it is correct, confirm it by pressing the **Left soft key**, **Center key** or **0 key**. If the word is incorrect, press the **Navigation keys** to view other matching words found in the dictionary.
- Input digits: In 123 mode, press digit key once to input a digit. In eZi ABC/eZi abc mode, press the digit key, and select the number by pressing the **Navigation keys**. You cannot input 0 in eZi ABC/eZi abc mode. In ABC/abc mode, constantly press the digit key until the number appears.
- Input symbol: Press the *** key** to enter symbol mode, select the required symbol (common symbols) by pressing the **Navigation keys** and then press the **Left soft key** or **Center key** to confirm it. In eZi ABC/eZi abc mode, press the **1 key**, and select the required symbol

(common symbols) by pressing the **Navigation keys**. In ABC/abc mode, constantly press the **1 key** until the required symbol (common symbols) appears.

- Input space: Press the **0 key** to input space. It does not work in 123 mode.
- Delete character: Press the **Right soft key** to clear a character. Hold the **Right soft key** to delete all characters and clear the display.
- Move cursor to left or right: Among the text, press the **Left/Right navigation keys** to move the cursor to left or right.

Adding contact to the Phonebook

There are some numbers that you may want to call again and again, so it makes sense to add these numbers to your Phonebook. You can then access these numbers quickly and easily.

1. Go to **Menu > Phonebook > Add new contact**.
2. Select to save the number to SIM or phone.
3. Edit the information and save it.

- You can also save a number right after you've made or received a phone call or a message from someone who is not yet in your Phonebook list.
- To delete someone from your Phonebook list, first select the name, and then select **Options > Delete**.

Making and receiving calls

The most basic way to make a call is to input the number in the standby mode and press the **Send key**. You can also make a call from the Phonebook list.

- To call someone: Go to **Menu > Phonebook**. Use the **Up/Down Navigation keys** to find the name of the person you want to call. You can also type in the first letter of the name of the person you want to call to find the right name, and press the **Send key**.
- To receive a call, press the **Send key**.
- To end a call, press the **End/Power key**.
- To reject a call, press the **End/Power key**.

Make sure that you are in an area with sufficient coverage to make calls. The strength of the network signal is indicated on the Status Bar of the screen.

Sending messages

You can use your mobile phone to send and receive messages.

1. Go to **Menu > Messaging > Write message > Text message** to write the Text message.
2. For more information on input method, see section 'Writing Text'.
3. Go to **Menu > Messaging > Write message > Multimedia message** to write the MMS. You can press **Options** and choose **Add picture**, **Add sound**, **Add video** or **Add subject** to directly insert multimedia contents to the message.
4. You can select **Options > Slide options** to add a new slide. And you can select **Options > Advanced** to insert a attachment or bookmark.
5. When you finish writing, press **Options > Send to** to enter recipient or add from Phonebook. If you are writing an MMS, after adding

recipients, then you can select **Options > Change to Cc** or **Change to Bcc** to change the current contact to Cc or Bcc.

6. Select **Options > Send** to send the message out. If you want to save the message as a draft, select **Options > Save to Drafts**.

Receiving messages

Upon receiving a message, the mobile phone will alert you with a ringtone, prompt, or a new message icon.

1. Press **View** to open the new message. You can also go to Inbox to view the message.
2. Use the **Up/Down Navigation keys** to view the message.
3. While the message is open, use **Options** to Reply, Delete, or Forward the message. You can also call back the sender or save the sender's number. You can select a message in Inbox interface and then go to **Options > Save to Phonebook** to save the sender's number.

Note: While reading messages, you can select **Options > Advanced > Use number** to save the number that contained in the message.

Setting User profiles

Go to **Menu > Settings > User profiles**. You can select **Options > Activate** or press the **Center key** to activate a profile. Or you can select **Options > Customize** to edit a profile.

Note: The Silent mode can not be customized.

Viewing Call History

Go to **Menu > Call Center > Call Center**.

Missed calls, Dialed calls and Received calls are saved in **Call Center**. If the records are full, the earliest saved records will be deleted automatically.

Configuring Call Settings

Go to **Menu > Call Center > Call settings**.

You can set Caller ID, Call waiting, Call divert and Call barring.

In **Advanced settings**, you can set Auto redial, Call time reminder, Answer mode and so on.

Setting Your Phone

You can adjust various settings of your phone. Go to **Menu > Settings**.

- Phone settings: set Time and date, Schedule power on/off, select Language, set Pref. input method, Display, Flight mode and LCD backlight. In Flight mode, all the wireless functions will be disabled.
- Network settings: Set to automatically or manually select network. Set preferred networks and GPRS connection.
- Security settings: Set security features to protect you from unauthorized use of your phone and SIM card. You can also set Auto keypad lock.
- Connectivity
Data account: Set differ profile.
- Restore factory settings: Enter the phone password to restore to the factory settings. Some personal information might be lost if you use this function, so be careful.

Note: You may be required to input the phone password in some of the security setting interfaces. The default password is 1234. Go to **Security settings > Phone security > Change password** to change the phone password.

Setting Your Alarm

Go to **Menu > Organiser > Alarm**. You can view, and edit the alarm clock settings. You can also enable or disable the alarms. By pressing **Edit**, you can set the corresponding features of the alarm according to instructions.

File Manager

Go to **Menu > File Manager**. You can check all the folders in the phone or memory card, create new ones or rename, delete the folders, etc.

Note: When you select **Options > Format memory**, the data will be lost, so please be careful with this function.

Multimedia

- **Facebook**

Go to **Menu > Multimedia > Facebook**. You can also press the Left Key to quickly access Facebook application from the standby mode.

Note: While using Facebook, the phone memory might be insufficient. You can install a TFlash card according to the actual situation. The memory card does not included in this box.

The News Feed function does not support auto-update.

To update, you need to follow the steps below,

1. From News Feed screen, press the Right SoftKey (Back) to return to the main menu.
2. Re-enter the News Feed function.

- **Camera**

Go to **Menu > Multimedia > Camera.**

➤ Take a Photo

Go to **Camera** to take a photo.

Aim the camera at the object and then press the **Center key** to take the shot.

➤ Configure your camera

Go to **Camera.** Press the **Left soft key** to configure your camera.

- **Image viewer**

Go to **Menu > Multimedia > Image viewer.**

The images you want to view in Image viewer must be put in the **..\ Photos** folder in the phone or memory card, and in **Options>Storage**, the storage must be set to phone or memory card correspondingly.

You can select an image and view it.

- **Video Player**

Go to **Menu > Multimedia > Video Player.**

You can play the video files in your phone or the memory card.

- **Audio player**

Go to **Menu > Multimedia > Audio player.** You can play the audio files in your phone or the memory card.

In **List > Options > Settings > Pre. playlist**, the storage must be set to phone or memory card correspondingly.

In **List > Options**, you can refresh your playlist, set storage, or make

personal settings.

- **FM radio**

Go to **Menu > Multimedia > FM radio**.

With the radio, you can search for radio channels, listen to them, and save them on your device. Note that the quality of the radio broadcast depends on the coverage of the radio station in that particular area. In the FM radio interface, you can press the **Up/Down Navigation keys** to adjust volume, press the **Left/Right Navigation keys** to tune the frequency, and press the **Center key** to pause.

Select **Options** to enter the submenu:

- Channel list: Edit up to 30 channels.
- Manual input: Manually input a channel.
- Auto search: Automatically searches for channels.
- Settings: You can turn on/off Background play.

- **Games**

Go to **Menu > Multimedia > Games**.

Organiser

Go to **Menu > Organiser**. In Organiser you can set **Alarm**, view the **Calendar**, **World clock** and use the **Calculator**, **Stopwatch**.

Services

Go to **Menu > Services**.

Services allows you to view internet content. In **Services**, you can use the STK and Internet service, and you can select **Licence manager** to manage the licences.

- Internet service

Your phone supports Wireless Application Protocol (WAP). You can get access to this service through your network provider. **Internet service** lets you get information about news, weather forecasts and more.

You can perform the following operations:

- Homepage: Homepage is a WAP site you set in **Settings >**

Homepage.

- Bookmarks: Access your phone's preset websites. Select a bookmark and press **Options** > **Go to** to load the website.
- Input address: Input a URL and press **Options** > **Done** to visit the site.
- Recent pages: Display the pages you've visited recently. Select an item and choose **Options** > **Go to** to visit the page again.
- Settings: You can set Homepage, Data account, Browser options and Preferences.
- Licence manager
 - Licence list: Display the list of licences.
 - Status: Check the version and time.
 - Advance: Select **Sweep** to remove useless licences and reboot your phone.
- STK

SIM card Toolkit (STK) services are value-added services provided by your network provider.

Your mobile phone supports STK service, but if your SIM card and network provider do not support the service, these functions can't be used.

MTN player

Go to **Menu > MTN player**.