

S620

CDMA 1X Digital Mobile Phone

User Manual

Copyright © 2011 by ZTE Corporation

All rights reserved.

No part of this publication may be excerpted, reproduced, translated or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation.

The manual is published by ZTE Corporation. We reserve the right to make modifications on print errors or update specifications without prior notice. The information on the package is only for your reference. Images are for you reference only. Please check the product model before purchasing.

ZTE中兴 ZTE Corporation

ZTE Plaza, Keji Road South, Hi-tech Industrial Park, Nanshan District, Shenzhen, P.R.China

Zip Code: 518057 [Http://www.zte.com.cn](http://www.zte.com.cn)

Service Hotline: +86-755-26779999

E-mail: mobile@zte.com.cn

Manual No.079584500xxx

Contents





Know your phone	1
Key Instruction	2
Interface icons	5
Insert and Extract UIM Card/T-Flash Card	6
Remove and Install the Battery	7
Remove the battery	7
Install the battery.....	7
Charge the battery	8
Power on/off your phone	9
Menu Tree	10
Common functions	11
Make and Answer a Call.....	11
Make a call	11
Answer a call	11
Voice Mail	11





Message.....	11
Phone Lock.....	12
PIN Code and PUK Code	12
Menu Functions.....	13
Text Input	17
Appendix	18
Warning and Maintenance	18
Warranty Terms.....	19
Limitation of Liability.....	20





Know your phone





















Key Instruction

Key	Function Description
	<p>Send key</p> <ul style="list-style-type: none">● Make or answer a call.● Press Send key in standby mode to enter all recent calls list.● Press Send key two times directly to redial the last number.
	<p>End key</p> <ul style="list-style-type: none">● Short press to end an active call or reject a call.● Long press to Power on/Power off.● Exit from any interface to standby mode.
	<p>Left soft key</p> <ul style="list-style-type: none">● Enter main Menu in standby mode.● Confirm the commands and options selected as OK key.● Switch to the options of left bottom submenu.
	<p>Right soft key</p> <ul style="list-style-type: none">● Erase character(s) while editing.● Cancel or stop operation, exit to previous window.

Key	Function Description
	<p>OK key</p> <ul style="list-style-type: none">● Press OK to confirm the commands and options selected.● Confirm the character chosen while character inputting.● Switch to Play and Pause in Audio/Video Player.
	<p>Up/Down Key</p> <ul style="list-style-type: none">● Scroll the cursor up and down.● Used as selection key up and down for keying in commands and selecting options shown on the display.● In standby mode, press Up/Down key to enter Dedicated key menu.
	<p>Left /Right key</p> <ul style="list-style-type: none">● Scroll the cursor left and right.● Used as selection key to scroll cursor left and right for keying in commands and selecting options shown on the display.● Used as direction key in games.
	<p>0~9 key</p> <ul style="list-style-type: none">● Key in numbers or characters.● Make a Speed Dial call (2-9) in standby mode if you set the speed dial call openly; and hold 1 key to enter Voice Mail defaultly.

 
Key	Function Description
	<p># key</p> <ul style="list-style-type: none"> ● Key in symbol or characters.
	<p>* key</p> <ul style="list-style-type: none"> ● * Key in symbol or characters.
	<p>SYM key</p> <ul style="list-style-type: none"> ● Enter the symbols selection interface when editing. ● Press SYM key in standby mode to switch the silent and general mode.
	<p>Lock key</p> <ul style="list-style-type: none"> ● Switch input method when editing ● Long press Lock key in standby mode to lock phone's keypad.

Interface icons

Icons	Descriptions	Icons	Descriptions
	Signal strength		Earphone in use
	Keypad locked		Electric quantity indicator
	New message		Unread alarm
	Unread schedule		Missed calls indicator
	Ring for incoming call		Ring before vibration for incoming call
	Ring & Vibration for incoming call		Vibration for incoming call
	Silence for incoming call		Music & FM background
	Alarm		USB mode
	Push message		T-flash Card inserted

Insert and Extract UIM Card/T-Flash Card

1. Power off the phone, remove the battery and other external power.
2. Insert UIM card into UIM card slot in the phone, or remove UIM card out of slot, as shown in picture.

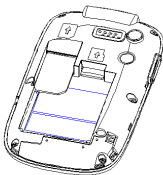


Remove and Install the Battery

The attached Li-ion battery along with the phone can be used after unpacking. For the first three times, please use up the power and charge it fully for a new battery to perform well.


Remove the battery

 1. Put finger on the top finger grip in back-cover, and then slide the back-cover of the phone down to release and remove.
2. Put finger on the finger grip, and then lift up the battery to remove the battery.

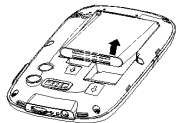

Install the battery

 1. Replace the battery into the battery slot, to be noted that the lower end of the battery firstly inserted.
2. Put the back-cover of the phone flatly upon the body of phone. Push the back-cover of the phone to lock the cover into its place.

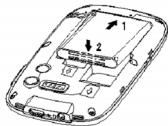

Charge the battery

1. Plug out rubber away from the jack on the top of the handset and connect the lead from the charger to the socket on the top of the phone.
2. Connect the charger to a standard wall AC socket.
3. When the charging animation on the screen stops, the charging is completed. The charging takes usually up to 3 hours. During charging, it is a normal phenomenon that the battery, phone and charger may get hot.
4. After the completion of charging, disconnect the charger from the phone and AC socket.



Note:

The top with arrow should be upright while connecting.

Power on/off your phone

Please hold **End key** to power on/off the phone. The phone will automatically search for the network.

Besides sending and receiving calls in standby mode, you can also do:

- ◆ Press **Left soft key** to enter main Menu.
- ◆ Press **Right soft key** to enter contacts menu.
- ◆ Press **UP key** and **Down key** to enter Dedicated key menu
- ◆ Press **Send key** to enter Call history list.
- ◆ Hold **Lock key** to lock/Unlock the keypad.
- ◆ Hold **SYM key** to switch the silent and general mode.



Note:

*To “press” key in this manual means to press the key and release it.
To “hold” key means to keep pressing the key for two seconds or more.*

Menu Tree

1. Multimedia

- 1.1 Video Player
- 1.2 Audio Player
- 1.3 FM
- 1.4 Voice Recorder
- 1.5 Camera

2. Call History

- 2.1 Missed Calls
- 2.2 Received Calls
- 2.3 Dialed Calls
- 2.4 Delete Log
- 2.5 Call Time

3. File Manager

- 3.1 Card
- 3.2 Music
- 3.3 Picture
- 3.4 Video
- 3.5 Other

4. Games

- 4.1 Snake
- 4.2 Russia Block

5. UTK

6. Camera

- 6.1 Mode Select
- 6.2 Base Option
- 6.3 Photo Browse
- 6.4 Frame Options
- 6.5 Default Config
- 6.6 Switch to Camcorder

7. Settings

- 7.1 Phone Setup
- 7.2 Display Setup
- 7.3 Call Setup
- 7.4 Security Setup
- 7.5 Restore Factory Settings
- 7.6 Connect Settings

8. Phonebook

- 8.1 All Contacts
- 8.2 Search Entry
- 8.3 Add New Entry
- 8.4 Copy All
- 8.5 Move All

8.6 Delete All

8.7 Caller Group

8.8 Memory Status

9. User Profiles

- 9.1 General
- 9.2 Meeting
- 9.3 Outdoors
- 9.4 Indoors
- 9.5 Silence

10. Internet Explorer

11. Messages

11.1 SMS

12. Tools

- 12.1 Alarm
- 12.2 Calculator
- 12.3 Stopwatch
- 12.4 World time
- 12.5 Calendar
- 12.6 Notepad

Common functions

Make and Answer a Call

Make a call

Enter the phone number in standby mode.

- Press **Send key** to make the call.
- Press **End key** to end the call.

Answer a call

- Press **Send key** to answer the call.
- Press **End key** to end the call.

Voice Mail

Before using **Voice Mail** box, please consult with service provider to confirm that the voice mailbox has been activated.

- The system automatically sends a message to your phone informing a new voice message. Select **Connect to Voice** to read the message and then dial voice mail box number to listen to your voice message.
- Select **Edit Number** to set the voice mail number.

Message

1. Select **Messages** in Main Menu.
2. Select **Write Message** to write and edit message text.

3. Select **Option** and press **OK key** to Send message or Save message in Draft box. The maximum of receivers not exceed 10 persons.
4. Select **Inbox** to view messages received.
5. Select **Outbox** to view the sent and saved messages.
6. Select **Settings** to set the messages' functions.

Phone Lock

Phone lock could prevent your phone from illegal use. The default handset password is 1234. Please change it to your own phone password as soon as possible.

PIN Code and PUK Code

- **PIN code:** PIN code could prevent your UIM card from illegal use. When PIN lock is on, you should enter the PIN code when opening the handset again.
- **PUK code:** Consecutive inputting wrong PIN code for three times can cause locking of UIM card. To unlock, you need PUK code.

Note:

PIN code and PUK code may be offered together with the UIM card. If not, please contact with network operator. Please change default PIN code to your own as soon as possible.

Menu Functions

Hereinafter are brief instructions on menu functions of the phone.

Function	Description	Operation
Send message	Send SMS to other mobile phones' number. The message could be send to multi-receivers.	Menu → Messages → Write Message
Read message	Read messages in Inbox/Outbox/. Sent inbox/Draftbox	Menu → Messages → Inbox/Outbox/Sent inbox/Draftbox
Voice mail	Set the voice mail No. and dialing voice mail number, you could listen to voice message.	Menu → Messages → Voice Mail
Message Setting	Set SMS save position, report status, storage, expire, message priority and view memory status.	Menu → Messages → Setting
Templates message	Some common used messages preformatted in phone.	Menu → Messages → Templates
Add contact	Add a new entry in phonebook in phone or UIM card.	Menu → Phonebook → Add new entry
Find contact	Search for a phonebook entry.	Menu → Phonebook → Search entry
View record	View the corresponding records in all lists.	Menu → Phonebook → All Contacts
Edit group	Rename the group name and select the ringer for the group.	Menu → Phonebook → Caller Group

Function	Description	Operation
Copy/move/Delete	Copy, move, delete contact in (between) phone's memory or UIM card	Menu → Phonebook → Copy All/moveAll/Delete
Memory status	Number of entries saved and maximum number of entries capacity in phone and UIM card.	Menu → Phonebook → Memory Status
Call history	View and dial recent calls.	Menu → Call History → Missed /Received/ Dialed Calls
Call time	View and reset call duration of calls	Menu → Call History → Call time
Ring volume	Set phone's ring/earpiece/key beep volume	Menu → User profiles → option → Volume Setup
Ring tone	Set the phone's ring tone for incoming Caller Ring/Alarm/Power on/Power off/SMS/Key	Menu → User profiles → option → Tone Setup
Alert type	Set alert type of the phone.	Menu → User profiles → option → Alert type
Wall Paper set	Set wall papers as background in idle state.	Menu → Settings → Display Setup → Wallpaper
Backlight	Set backlight duration.	Menu → Settings → Display Setup → LCD Backlight
Brightness	Adjust Brightness.	Menu → Settings → Display Setup → Brightness
Themes	Set Themes in idle state	Menu → Settings → Display Setup → Themes
Speed Dial	View the speed dial list. In standby mode, key in speed dial number and send, or hold the number key to dial the corresponding call.	Menu → Settings → Phone Setup → Speed Dial

Function	Description	Operation
Greeting	Set greeting.	Menu → Settings → Phone Setup → Greeting
Dedicated Key	Set Dedicated Key function.	Menu → Settings → Phone Setup → Dedicated Key
Shortcuts	Set functions in shortcuts menu.	Menu → Settings → Phone Setup → Shortcuts
IP dial	Set IP number, you can select IP dial when make a call.	Menu → Settings → Call Setup → IP dial
Time Reminder	Phone alert for optional time reminding.	Menu → Settings → Call Setup → Time Reminder
Call Forwarding	Forward an incoming call to a designated number.	Menu → Settings → Call Setup → Call Divert
Call restriction	Restrict calls in list.	Menu → Settings → Call Setup → Black List
UIM Lock	Set or change the UIM lock.	Menu → Settings → Security Setup → UIM Lock
Phone Lock	Set or change the handset lock.	Menu → Settings → Security Setup → Phone Lock
Keypad Lock	Set or change the keypad lock.	Menu → Settings → Security Setup → Keypad Lock
Call History Lock	Set or change the call history lock.	Menu → Settings → Security Setup → Call History Lock

Function	Description	Operation
Change Password	Change new Password for Phone Lock/UIM/ Call History Lock	Menu → Settings → Security Setup → Change Password
Restore factory settings	Restore factory default.	Menu → Settings → Restore Factory Settings
USB Connection	Enable the USB connection when USB is connected with PC.	Menu → Settings → Connect Setting → Startup USB Connection
Calendar	View calendar and make schedule events.	Menu → Tools → Calendar
Alarm clock	Set alarm alert time.	Menu → Tools → Alarm
Calculator	Execute basic math calculation.	Menu → Tools → Calculator
World Time	View world time.	Menu → Tools → World Time
Notepad	View/edit/delete notepad.	Menu → Tools → Notepad
Stopwatch	Stopwatch timing.	Menu → Tools → Stopwatch

Text Input

Your phone offers text input modes: Multitap Input (**Abc/abc/ABC**), Numbers Input (**123**), eHiText Input (**Eng**), and Symbol Input (**Symbols**).

Input Letters

Multitap Input—“**Abc/abc/ABC**”, press corresponding letter key till the letter appears.

Input Words

Word Input—“**Eng**”, press any key once to key in any word.

Input Digits

Numbers Input—“**123**”, press digit key once.

Input Symbol

Symbols Input —Press **SYM key** to enter the symbols mode and press corresponding digit key.

Input Space

Press “**_**” **key**, except for being in numbers mode.(one, except for entering the call numbers. Two, it can accomplish this function in numbers mode)

Erase Character

Press **Right soft key**.

Move cursor left or right

Press **Left/Right key**.

Move cursor up or down

Press **Up/Down key**.

Change input mode

Press **Lock key** to select another text mode.

Capitalization

Press **Lock key** to switch between capitalization and lowercase.

Appendix

Warning and Maintenance

- Keep the phone out of the reach of little children. The phone may cause injury if used as a toy.
- Please use original accessories or accessories that are authorized by the manufacturer.
- Please keep the phone dry and store in shady and cool place.
- Do not expose your mobile phone to direct sunlight or store it in hot areas. High temperatures can shorten the life of electronic devices.
- Prevent liquid from seeping into your phone.
- Do not drop or harshly treat the phone. Rough handling can break internal circuit boards.
- Do not connect the phone with other unauthorized peripheral equipments. Do not attempt to dismantle the mobile phone and battery by yourself.
- Power off your phone before you clean the phone. Please use clean fabric that is anti-static to clean your phone.
- As your mobile phone can produce electromagnetic field, do not use the phone near electrical appliances.
- Do not charge the mobile phone without battery.
- Beware of the usage limitation when using a mobile phone at places such as oil warehouses or chemical factories.
- The user is cautioned that changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

Warranty Terms

The warranty does not apply to defects or errors in the product caused by:

- Reasonable abrasion.
- Misuse including mishandling, physical damage, improper installation, unauthorized disassembly of the product.
- Water or any other liquid damage.
- Any unauthorized repair or modification.
- Power surges, lightning damage, fire, flood or other events outside ZTE's reasonable control.
- Use of the product with any unauthorized third party products such as generic chargers.
- Any other cause beyond the range of normal usage for products.

End user shall have no right to reject, return, or receive a refund for any product from ZTE under the above-mentioned situations.

This warranty is end user's sole remedy and ZTE's sole liability for defective or nonconforming items, and is in lieu of all other warranties, expressed, implied or statutory, including but not limited to the implied warranties of merchantability and fitness for a particular purpose, unless otherwise required under the mandatory provisions of the law.

Limitation of Liability

ZTE shall not be liable for any loss of profits or indirect, special, incidental or consequential damages resulting from or arising out of or in connection with using this product, whether or not ZTE had been advised, knew or should have known the possibility of such damages.