

**F107**

**UMTS/GSM/GPRS Mobile Phone**

User Manual

## **LEGAL INFORMATION**

**Copyright © 2010 ZTE CORPORATION.**

**All rights reserved.**

No part of this publication may be excerpted, reproduced, translated or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation.

The manual is published by ZTE Corporation. We reserve the right to make modifications on print errors or update specifications without prior notice.

**Version No. : R1.0.0**

**Edition Time : 20100121**

**Manual No. : 079584501051**

# Contents

<b>For Your Safety .....</b>	<b>7</b>
General Care .....	7
Aircraft Safety .....	11
Hospital Safety.....	11
General Guidelines .....	12
Road Safety .....	14
Vehicles Equipped with an Airbag .....	16
Third Party Equipment .....	16
Emergency Services .....	16
Information on Privacy .....	18
Copyright Notice .....	18
<b>Getting Started .....</b>	<b>19</b>
Your F107 .....	19
Technical Parameters .....	22
Starting Up .....	23
Indicators .....	29
Standby Mode.....	32
Entering Text.....	33

Basic Operations .....	35
<b>Using the Phone.....</b>	<b>39</b>
Making a Call.....	39
Answering a Call .....	43
In-call Options .....	43
Call History .....	44
Using USIM Card Services (STK) .....	45
<b>Messaging.....</b>	<b>46</b>
Writing and Sending a Message .....	46
Deleting Messages.....	47
Moving and Copying Messages.....	47
Configuring Message Settings .....	48
<b>Personal Information .....</b>	<b>50</b>
Contacts .....	50
Calendar .....	52
<b>Experiencing Multimedia.....</b>	<b>55</b>
Camera and Video Camera.....	55
Media Player .....	56
Voice Recorder.....	58

Slide Show .....	59
Streaming URL .....	60
<b>Getting Connected .....</b>	<b>61</b>
Connecting to the Internet .....	61
Web Browser .....	62
Bluetooth.....	64
<b>Setting up Your Phone .....</b>	<b>66</b>
Screen Settings.....	66
Handset Settings.....	67
Profiles .....	69
Security Settings .....	70
Call Settings.....	71
<b>Other Functions .....</b>	<b>72</b>
Managing Files.....	72
Setting Alarms.....	72
Stopwatch .....	73
World Time.....	73
Calculator.....	74
Converting Currencies .....	74

Java Games and Applications.....	75
<b>Questions &amp; Answers .....</b>	<b>76</b>
<b>Declaration of RoHS Compliance.....</b>	<b>85</b>
<b>Disposal of Your Old Appliance .....</b>	<b>86</b>

# For Your Safety

## General Care

Your handset contains delicate electronic circuitry, magnets and battery systems. You should treat it with care and give particular attention to the following points:

- Do not allow the handset, battery or accessories to come into contact with liquids or moisture at any time. Do not immerse the handset in any liquid.
- Do not place the handset alongside computer disks, credit cards, travel cards and other magnetic media. The information contained on disks or cards may be affected by the handset.
- Do not paint the handset.
- Do not leave the handset or the battery in places where the temperature could exceed 60°C, e.g. on a car dashboard or a windowsill, behind glass in direct sunlight, etc.

- Do not remove the handset's battery while the handset is switched on.
- Take care not to allow metal objects, such as coins or key rings to contact or short-circuit the battery terminals.
- Do not dispose of battery in a fire. The handset's Li-ION batteries may be safely disposed of at a Li-ION recycling point. Follow local requirements for recycling.
- Do not put the handset's battery in your mouth, as battery electrolytes may be poisonous if swallowed.
- Do not attempt to dismantle the handset or any of its accessories.
- Do not put a battery into a microwave oven, dryer, or high-pressure container.
- Do not contact battery directly to an electric outlet or cigarette lighter charger. Use only approved charger units.
- Do not pierce battery with a sharp object such as a needle.



- Do not disassemble or modify the battery.
- Do not use a damaged or deformed battery.
- Do not drop, throw, or subject the handset to rough treatment.
- Do not solder the battery directly.
- Stop using the battery if abnormal heat, odor, discoloration, deformation, or abnormal condition is detected during use, charge, or storage.
- Remove the battery whose life cycle has expired from equipment immediately.
- This equipment is fitted with an internal battery. Take it to a qualified service engineer when the replacement of the battery is required.
- The earpiece may become warm during normal use. Also, the handset itself may become warm while the battery is being charged.
- When a handset is in vibration mode, the vibration can sometimes cause the handset to move.

- Be careful not to place the handset near heat sources (such as a heater) or too close to the edge of the table.
- Power off your phone before you clean it. Use a damp or anti-static cloth to clean the handset. Do not use an ordinary dry cloth or electrostatic cloth. Do not use chemical or abrasive cleaners as these could damage the casing.
- Remember to make backup copies of all important data on your handset.
- Remember to recycle: the cardboard packing supplied with this handset is ideal for recycling.

 **Warning:**

In the unlikely event of a battery leak, take care to keep the battery discharge away from your eyes or skin. If the leakage does come into contact with the eyes or skin, please flush thoroughly in clean water and consult with a doctor.

## **Aircraft Safety**

- Power off your phone before the airplane takes off. In order to protect airplane's communication system from interference, it is prohibited to use mobile phone in flight. If you want to use mobile phone before the airplane takes off, you should get aircrew's permission according to safety regulations.
- If the mobile phone has the function of automatic timing power-on, please check your alarm setting to ensure that your phone will not be automatically powered on during the flight.

## **Hospital Safety**

- Power off your phone and remove the battery in areas where the use of handsets is prohibited.
- Follow the instructions given by the respective medical facility regarding the use of handsets on their premises.

## **General Guidelines**

- In some countries, national law prohibits private copying of copyrighted material. Please check the national legislation of the applicable country concerning the use of such material.
- Many jurisdictions have laws and regulations about taking pictures in public or private areas and regarding the processing and further use of such pictures. The manufacturer encourages its customers to obey all laws and to respect the personal rights of others.
- Please check roaming agreement availability with your service provider.
- The use of mobile phones is not allowed in some radiation sensitive areas, such as hospitals, research centers and airplanes. The user is responsible to power-off the device. If there is any uncertainty, you should remove the battery from the handset.

- Observe any signs that indicate powering off handsets, such as those near gas stations, or explosives, and power off the handset/device immediately.
- If you have a heart condition, be careful with the settings of call vibration or tone volume.
- Do not allow children to play with the handset, charger or batteries.
- Do not use the handset where blasting is in progress.
- Do not try to make a call or conversation while the temperature of charging battery is above 50°C.
- Take care not to put your handset in the back pocket of your trousers or skirt and then sit on it. Also, do not put your phone at the bottom of bag where it may subject to excessive weight or pressure. Doing so may damage the LCD and camera lens and cause them malfunction.

- The operation of some medical electronic devices, such as hearing aids and pacemakers, may be affected if a handset is used next to them. Observe any caution signs and the manufacturer's recommendations.
- Do not leave the handset discharged or without a battery for a long time, otherwise some data may be erased.
- Your phone contains metal, which may cause you an itch, a rash or eczema depending on your physical condition.

## **Road Safety**

- You must exercise proper control of your vehicle at all times. Give your full attention to driving.
- Observe all of the recommendations contained in your local traffic safety documentation.
- Pull off the road and park before making or answering a call, if driving conditions require so. Check if local laws and/or regulations restrict the use of handsets while driving.

- You **MUST NOT** stop on the hard shoulder of a motorway to answer or make a call, except in an emergency.
- Power off your handset at a refueling point, such as a gas station, even if you are not refueling your own car.
- Do not store or carry flammable or explosive materials in the same compartment as the handset.
- Electronic systems in vehicle, such as anti-lock brakes, speed control and fuel injection systems are not normally affected by radio transmissions. The manufacturer of such equipment can advise if it is adequately shielded from radio transmissions. If you suspect vehicle problems caused by radio transmissions, consult your dealer and do not power on the handset until it has been checked by a qualified technician.

## **Vehicles Equipped with an Airbag**

An airbag inflates with great force. Do not place objects, including either installed or portable wireless equipment, in the area over the airbag or in the airbag deployment area. If in-vehicle wireless equipment is improperly installed and the airbag inflates, serious injury could result.

## **Third Party Equipment**

The use of third party equipment, cables or accessories, not made or authorized by ZTE, may invalidate the warranty of your handset and also adversely affect the phone's safety/operation.

## **Emergency Services**

To make an emergency call in any country:

1. Ensure that your handset is on and in service.



2. Press **End Key** as many times as needed to clear the display and ready the device for calls.
3. Enter the official emergency number for your present location, for example, 112 (the international emergency number).
4. Press **Send Key** to dial the number. Follow instructions received and do not end the call until told to do so.

When the USIM card is not inserted, press **Right Soft Key [SOS]** and then enter the official emergency number for your present location. Press **Send Key** or **OK Key [Call]** to dial the number. If the keypad lock is on, enter the emergency number directly and press **Send Key**.

**Notes:**

- Tell the operator which service you require: Police, Ambulance, Fire Brigade, Coastguard or Mountain Rescue Service. Tell them where you are and remain stationary to maintain contact if possible.

- Due to the nature of the cellular system, the connection of emergency calls cannot be guaranteed. You should never rely solely on any wireless device for essential communications like medical emergencies.

## **Information on Privacy**

Camera usage and photo/audio/video recordings carried out with the handset can offend the confidentiality of the subjects. The user therefore is held to respect legislation in confidentiality matter and remains the only responsible subject in case of eventual violations of the enforced norm.

## **Copyright Notice**

The video/audio recordings you make/download are protected by copyright laws. They are for personal use only and must not be otherwise used without the permission of the copyright owner.

# Getting Started

## Your F107

The F107 described in this manual is approved for use on the HSDPA/HSPA/HSPA+/UMTS/GSM/GPRS networks and achieves seamless handover between them.

Empowered by the 3G technology, F107 converges real-life experiences with real-time connectivity. Enjoy the feature of high-speed, broadband-quality connectivity wherever you go.

The F107 supports operations on the PC. When you connect the phone to your Windows or Mac computer, the PC tool software will be installed. You can manage your contacts, messages and files with the software on your computer, or use the phone as a modem for the PC and surf the Internet.

When using this device, obey all laws, respect the privacy and legitimate rights of others, including copyrights.





## Technical Parameters

Type	F107
Dimensions	105.7 mm (L) × 46 mm (W)× 12.6 mm (H)
Display	2.0 inches 240*320 TFT
Weight	90 g
Battery	1000 mAh Li-ion battery
Continuous standby time	GSM: 220 hours; WCDMA: 360 hours
Continuous talk time	GSM: 210 minutes; WCDMA: 270 minutes
Continuous video talk time	180 minutes

\* The phone's talk and standby times are based on ideal working environments. The use of extended backlight, browser, and network conditions can reduce battery life and talk/standby time.

 
## Starting Up

### Battery


The lithium ion rechargeable battery of the mobile phone can be immediately used after unpacking. A new battery performs best after performing a full charge/discharge 3 times. When not using the battery for a long period, remove it from the phone and store it in a cool dry place.

### Installing the Battery

1. Hook the edge of the back cover and lift it up to remove it, as shown in the picture.

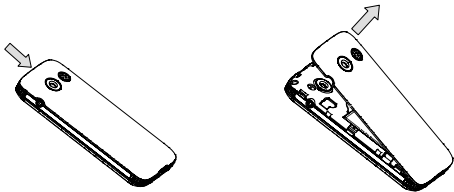

 2. Insert the battery by aligning the gold contacts on the battery with the gold contacts in the battery compartment on the phone.

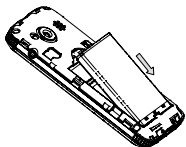


3. Push down on the upper section of the battery until it clicks into place.
4. Replace the back cover.

## **Removing the Battery**

 1. Make sure that your mobile phone is switched off.
2. Remove the back cover.
3. Pull the battery up and remove it from the mobile phone.



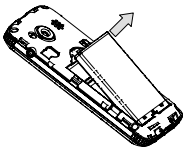


## Charging the Battery

Use the battery up completely before charging the battery for the first time with the procedure indicated below.

 **Caution:**

Do not charge the battery out of the temperature range of 0°C to 45°C.

 1. Connect your adapter to the bottom of your mobile phone as shown in the picture.

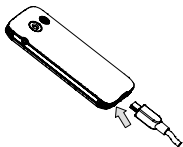

2. Connect the other end of the adapter to the mains socket.

Remove the charger from both the mains socket and the phone once the charging completed.

## **Installing and Removing the USIM Card**

1. Make sure that the phone is switched off and the charger is disconnected from the phone.
2. Turn the phone over and remove the back cover.
3. If the battery is already inside, remove it.
4. Hold your USIM card with the cut corner oriented as shown above the USIM card slot and then slide it into the slot.



5. Replace the battery first.
6. Replace the back cover.

 **Caution:**

Do not bend, scratch the SIM card, or unnecessarily touch its metal surface. It may damage the information stored.

To remove the USIM card, slide it out of the card slot.

## **Inserting and Removing the microSD Card**

Your phone supports microSD cards with capacity up to 8GB, giving you a very large memory capacity to save images, photos, audio and video files.

## Notes:

The microSD logo  is a trademark.

1. Open the cover of the memory card slot on the left side of the phone.
2. Insert the memory card carefully with the metal contacts facing upwards until it clicks into the right position.



To remove the card, press and release the card so it clicks out. Then, remove it carefully from the slot.

## Powering On/Off

1. Make sure that your SIM card is inserted and the battery is charged.
2. Hold **End Key** for about 2 seconds to power on/off





the phone. The phone will automatically search for the network.















### Notes:
















You may need to enter the Personal Identification Number (PIN) or phone password if you have enabled phone lock or PIN lock. (See *Setting up Your Phone — Security Settings.*)









## Indicators

Your phone comes with two sets of indicators for two preinstalled themes. Please refer to *Setting up Your Phone — Screen Settings.*

Indicator (Blue Theme)	Indicator (Orange Theme)	What it means
		Indicates the 3G signal strength.
		Indicates the 2.5G signal strength.

Indicator (Blue Theme)	Indicator (Orange Theme)	What it means
		Indicates you have new text messages.
		Indicates you have new multimedia messages.
		Indicates you have new WAP PUSH messages.
		Indicates your message space is full.
		Indicates the data communication in progress.
		Indicates call divert (Always) is active.
		Indicates you have missed voice calls.

Indicator (Blue Theme)	Indicator (Orange Theme)	What it means
		Indicates you have missed video calls.
		Indicates the alarm clock has been set.
		Indicates the amount of charge in your battery.
		Indicates low battery.
		Indicates Bluetooth is active.
		Indicates Bluetooth earphone is connected.
		Indicates your earphone is inserted.
		Earphone and vibrate mode.

Indicator (Blue Theme)	Indicator (Orange Theme)	What it means
		Indicates the vibration mode is activated.
		Indicates the ringtone is shut off.
		Indicates the meeting mode is activated
		Roaming

## Standby Mode

When you turn on the phone, it enters the standby mode. You can find the following information:

- Indicator icons.
- Network name and the operator logo.
- Date and time.
- Functions of **Left Soft Key**, **OK Key** and **Right Soft Key**.



You can return to the standby mode from any interface by pressing **End Key**.

## Entering Text

### Input Modes

Your mobile phone provides the following input methods: word predictive text mode (**En**), lowercase alphabetic (**abc**) mode, uppercase alphabetic (**ABC**) mode and numeric (**123**) mode. The current input mode is displayed on the screen above the input field. You can press **# Key** to change the input mode.

### Word Predictive Text Mode

Word predictive text mode is based on a built-in dictionary. It gives word choices for you from the combination of letters you have pressed.

- Press only once each key associated with the letter you want to enter. The letters you have entered appear on the display. The candidate words change with each key you press. When the candidate word you need is displayed, press **Up Key** or **Down Key** to highlight the word and press **OK Key** to confirm.
- You can also select **Spell word?** to spell a new word and select **Add**. The new word will be added to the phone dictionary.
- Press **0 Key** to insert space.
- Press **C Key** to delete letters left of the cursor.

## Alphabetic Modes

Press 2~9 repeatedly until the desired character appears. Press once to input the first letter on the key; press twice quickly to input the second letter, and so on.

Press **0 Key** to enter a space; press it twice quickly to enter 0.

Press **C Key** to delete letters left of the cursor.

## Numeric Mode

In numeric mode, use the alphanumeric keys to enter numbers. Letters and spaces cannot be entered in this mode.

## Symbols

Press \* **Key** to select the symbol you need and press **OK Key** to insert the selected symbol into the text. In word predictive text mode and alphabetic modes, you can also press **1 Key** to enter commonly used symbols.

## Basic Operations

### Menu Navigation

You can access the phone's functions through menus and submenus.

First press **OK Key** in standby mode to open the main menu. Scroll up, down, left or right to select an item, and press **OK Key** to open the item or submenu until you find the item you need.

You can also open the items in the main menu by pressing the alphanumeric keys, \* **Key** or # **Key**. For instance, press **1 Key** to open **Tools**, **2 Key** to open **Browser**, and # **Key** to open **Camera**.

In most submenus, there is a number before each menu item. You can press the number on the keypad to open the corresponding item.

## Notes:

In this user manual, the steps needed to reach a menu are shown in a condensed form, for example: **Menu > Settings > Handset > Keyguard > 10s auto keylock**.

## Shortcuts in Standby Mode

You can press the four **Navigation Keys** to access functions or menus from the standby mode.

- **Up Key**: Access to **Calls**.
- **Down Key**: Access to **Contacts**.
- **Left Key**: Access to **Messages**.


- **Right Key:** Access to **Multimedia**.

**Notes:**

You can customize the shortcuts in **Settings > Handset > Shortcut keys**.

## Keypad Lock

You can use the keypad lock to prevent the keys from being accidentally pressed.

In standby mode, hold \* **Key** and then press **Right Soft Key** to lock the keypad. The icon  will be on the display after you lock the keypad.

To unlock the keypad, press \* **Key** and then press **Right Soft Key**.

## Multitasking

Multiple applications can run at the same time on your F107.

Press **Switch Key** in any interface to launch **Task Manager**. With **Task Manager**, you can check new system events (for instance, new messages and missed calls), view applications that are running currently, or launch new applications.

To view active applications, select **Active apps** screen by pressing **Left/Right Key**. Select an application and press **OK Key** to resume its interface. You can also choose to end the selected application or end all running applications.

To launch a new application, select **Shortcuts** screen. Use the shortcuts to launch designated applications, or select **Main Menu** to launch other applications. You can also press **End Key** in **Task Manager** and go to standby mode.

# Using the Phone

## Making a Call

### Making a Voice Call

1. Enter a phone number in the standby mode.
2. Press **Send Key** or select **Call > Voice call**.

#### **Tips:**

You can also select **Save** to save the number, or **Send** to send a message.

3. Press **Right Soft Key** to cancel the call.
4. Press **End Key** to end the call.

### Making a Video Call

The called party as well as the network has to be capable of handling video calls. Otherwise, the phone will prompt you to make a voice call.

1. Enter a phone number in the standby mode.

2. Select **Call > Video call**.
3. Press **Right Soft Key** to cancel the call.
4. Press **End Key** to end the call.

## International Call

1. Press \* **Key** twice to enter “+”.
2. Enter the country code, area code and the phone number.
3. Press **Send Key**.

## Calling an Extension

Enter the phone number first and then, before entering the extension number, press \* **Key** three times consecutively to enter “P”.

For example, to call 123456 ext. 765, press 123456\*\*\*765.

## Making a Call from Contacts

1. In standby mode, select **Menu > Contacts** or press



### **Down Key.**

2. Select a contact and then press **Send Key** or select **Options > Call > Voice call/ Video call**.

## **Making a Call from Call Log**

1. Select **Menu > Calls** in the standby mode to open call history.
2. Select a call type and the number you need.
3. Press **Send Key** to make a voice call, or select **Options > Call > Video call**.

## **Making a Call from Messages**

1. Open a message that you have received.
2. Use **Up/Down Key** to highlight the sender, or the numbers in the message. The highlighted number is displayed in orange.
3. Select **Options > Use highlighted object > Voice call/Video call**.

## Making a Speed Dial Call

In the standby mode, hold the numeric key (1~9) corresponding to the phone number in the speed dial list to make a call.

### Notes:

The number key 1 and 2 are reserved for your voicemail number and videomail number.

### Set speed dial

1. In the standby mode, select **Menu > Contacts** and highlight a contact.
2. Select **Options > Set speed dial**.
3. Select a number between 3 and 9.
4. Press **OK Key [Setup]**.
5. Press **End Key** or **C/Back Key** to exit.

To cancel a speed dial setting, select the speed dial number and press **Cancel**.

## Answering a Call

When there is an incoming call, you can press **Send Key** to answer it or **Right Soft Key** to reject it. You can also select **Options** to mute the ringtone or reject and call and send a message to the caller, explaining why you cannot answer.

 **Caution:**

Adjust the volume of the earpiece to a moderate level to avoid injury to your ear.

## In-call Options

After you have answered the call, the following options are available.

- Press **Right Soft Key** to mute the call. The microphone will be turned off and the opposite party cannot hear your voice. To turn on the microphone, select **Unmute**.

- Press **OK Key [Loudsp.]** to turn on the speaker. To turn off the speaker, select **HF off**.
- Press **Left Soft Key** for more options.
  - **Hold/Active**: Put the current call on hold or retrieve the call.
  - **End call**: End the call.
  - **Record**: Record the conversation.
  - **DTMF off/DTMF on**: Enable or disable sending DTMF tone.
  - **Message**: Switch to **Messages** submenu during the call.
  - **Contacts**: Switch to **Contacts** interface during the call.
  - **Browser**: Switch to **Browser** submenu while on the phone.

## Call History

In standby mode, select **Menu > Calls** to check recent calls and duration.

You can check missed calls, received calls, dialled calls or all calls history in **Call log**, or find the durations for the last call and all calls in **Calls info**.

In **Call log**, select a call record and press **OK Key** to view its details, including the name of the opposite party, the phone number, the time and date of the call and call duration.

Highlight a record and select **Options** to save or call the number, send a message, or delete the history.

## **Using USIM Card Services (STK)**

To use the USIM card services, insert your USIM card into the phone first. USIM card services rely on 3 networks.

Select **Menu > Tools > STK**. The displayed name on the STK Service depends on the service provider.

## **Messaging**

Select **Menu > Messages** to access your text messages (SMS) and multimedia messages (MMS).

The messages are sorted in different folders. **USIM box** is used to save text messages on the USIM card.

## **Writing and Sending a Message**

In standby mode, select **Menu > Messages > New message > Text message/ Multimedia message**.

Enter the recipients' numbers or press **OK Key** to choose from contacts.

For an SMS, press **Down Key** to move the cursor to the text field and enter the message. You can select **Options** to insert message templates or **My words**, or save the message to **Drafts**. Press **OK Key** to send the message.

For an MMS, press **Down Key** to enter message subject. Press the key again to start entering message text. You can also select **Options** to insert message

templates or **My words**, or save the message to **Drafts**. To insert multimedia files to the message, press **OK Key**. You can insert images, videos and audios, or add other files as attachments. The message can be in a slide show. Press **Options** to add/delete a slide page, go to the next/previous page, or preview the whole slide.

Select **Options > Send** when the message is finished.

## Deleting Messages

You can delete any message in any folder.

1. Highlight the message or open it.
2. Press **C/Back Key** and select **Yes**, or press **Options > Delete**.

## Moving and Copying Messages

You can move messages from the phone's **Inbox** to **User folders**, or copy/move text messages between **Inbox** and **USIM box**.

1. Select or open the message in **Inbox** or **USIM box**.
2. Press **Options** and select **Move to user folders**, **Move to USIM**, **Copy to USIM**, **Move to phone** or **Copy to phone**.

## Configuring Message Settings

### Mult. msg. settings

- **Retrieval settings:** Select how you want to retrieve the multimedia messages. You can retrieve them automatically, manually or manually when on a roaming network.
- **Delivery mode:** Send the messages immediately or defer it for a period of time specified in **Delivery time**.
- **Time per page:** Set the time limit for each slide page.
- **Delivery report:** If you enable delivery report, you will receive a popup message informing you when the message is delivered to the recipients.
- **Validity:** Set the validity period of outgoing messages.



- **Anonymous msg./PUSH Message:** Accept or reject anonymous or PUSH messages.
- **Connections:** Select a connection to use. Please consult the 3 for detailed information.

## Text msg. settings

- **SMS center number:** You need the correct message center number to send and receive SMS normally. Your service provider may have set the number for you. Contact your service provider if you need more information.
- **Expired time:** Set the time that the message center will attempt to deliver the message until it is received.
- **Status report:** Turn on/off the report that informs you if the message is delivered to the recipient.

## Template Settings

There are 10 text templates for SMS/MMS in your phone. You can press **Left Soft Key** to edit and **OK Key** to view them.

# Personal Information

## Contacts

Select **Menu > Contacts**. You can create a new contact with a name and a phone number in the USIM card, or a contact with more information on the phone. The phone can store 500 records. The capacity of the USIM card may vary.

In **Contacts**, press **Left/Right Key** to switch between all contacts, USIM contacts, and phone contacts in groups (**Friends**, **Family** and **Work**).

## Creating a Contact

1. Select a contact category from **All**, **USIM**, **Friends**, **Family** and **Work**.
2. Press **Options > Create new**, or, if the current category is empty, press **OK Key**.

### Notes:

- If you have selected the **USIM** category, the

new contact will be saved in your USIM card.

- If you have selected **Friends**, **Family** or **Work**, the new contact will be saved in the phone and classified in the respective group.
  - Under **All** contacts, the save location of the new contact depends on the default memory setting, which you can change by pressing **Options > Default Memory**.
3. Enter information for the new contact. You can press **Left Soft Key** to add more numbers, E-mails, the address, or customize a ringtone or photo avatar for the contact.
  4. Press **OK Key** to save and exit.

## Groups

In the three preloaded groups, **Friends**, **Family** and **Work**, only contacts classified in that group are displayed. Press **Options > Manage contact > Group**. Select a group and you can customize voice/video call ringtone or photo avatars for all contacts in the group.

## Other Options

Select a contact and press **OK Key** to view the contact. To edit the contact, press **OK Key** again or select **Options > Edit** from the contact list.

Press **Left Soft Key** for more options. You can call the selected contact, delete it, send a message to the contact, send the contact information to others as an electronic business card, copy contacts between phone and USIM card, check your service dial numbers, set speed dial, or check speed dial or memory information.

## Calendar

Select **Menu > Calendar** or **Menu > Tools > Calendar**. You can use the function to arrange and remind you of your schedules.

### Notes:

On a date for which you have arranged schedule, a red triangle is shown on the lower right corner of the date in the **Month view**.

## Adding New Events

1. Initially, the cursor appears on today's date. Press Navigation Keys to select a date, or press **Options > Go to date** and enter the date you want.
2. Select **Right Soft Key [Add] > Meeting/Memo/Anniversary**.
3. Press **Save** when you are done adding the new event.

## Viewing and Editing Events

Press **Options > Week view/Month view** to see your schedules in two modes.

Open the date to see all events in that day. Press **OK Key** to view detail of the selected event. You can press **OK Key** to edit it, or **Right Soft Key** to delete it.

## Sending Events

You can send your events as SMS, MMS, or via Bluetooth.

1. Select or open an event.
2. Press **Left Soft Key [Options] > Send**.

## **Calendar Settings**

When you are in **Month view** or **Week view** mode, select **Options > Settings** to select ringtone for calendar alarms, default view mode, or the day that each week starts on.

You can also select **Options > Memory info** to check the space status for calendar events.

# Experiencing Multimedia

## Camera and Video Camera

### Capturing a Photo or Recording a Video Clip

Select **Menu > Multimedia > Camera/Video camera**. The photos are stored in jpg format, and videos in 3gp or mp4 depending on the setting. You can switch between the photo and video camera by pressing **Left/Right Key**.

Press **OK Key** to capture a photo or starting to record a video clip. You can pause the recording or stop it.

Select **Save** to save the photo or video, **Discard** to delete it. Press **Options** to send the photo or set it as the wallpaper. Press **Send** to send the video clip.

## Setting the Cameras

Press **Up/Down Key** to zoom in or out. Before taking photos or recording videos, press **Left Soft Key** to set up the camera. You can choose the size, quality, brightness, contrast, effect, sound and save to location of the photo/video, or switch between photo and video camera. You can also select the format for the video file.

## Media Player

**Media player** plays slideshows, video (3gp or MP4 files) and audio files in your phone or connects to a Streaming URL.

## Playing audios and videos

From standby mode, select **Menu > Multimedia > Media player**. Press **Options > Open** and choose a file, playlist, slide show or a streaming URL.



**Notes:**

Press **Options > Recent play** to view recently played items. Press **Options > Network settings** to set the parameters for streaming media. Please contact 3 for detailed information.

## Using the Playlist

Use **Playlist** to play multiple audio files in the order you prefer.

Select **Menu > Multimedia > Playlist**.

To create a new playlist, press **Options > New playlist** or, if there is no playlist, press **OK Key**. Then enter the playlist name and select audio files. Add files into the playlist by highlighting them and selecting **Options > Mark/Mark all files**.

To play a playlist, open it from **Media player** or select an item in **Playlist** and press **Play**.

In **Playlist**, press **Left Soft Key** to manage the playlists. You can edit, rename or delete them, or check the information of all playlists.

## Copyright and Protected Files

Some media files (pictures, audio and video files) have associated licenses that protect them from being unlawfully distributed or shared.

Your phone supports OMA DRM 1.0. The protected files have .dcf extension name. You can download and play/view this type of media files, but you may not be able to copy, modify or transfer them.

## Voice Recorder

Use **Voice recorder** to record voice memos.

Before recording, press **Left Soft Key** to set time limit and save location.

## Adding a Record

1. Press **OK Key** to start. You can press the key again to pause or continue.
2. Press **Right Soft Key** to stop.

You can save or discard the memo, or press **Left Soft Key** to send or replay it.

## Playing a Record

1. Open **Voice recorder** and press **Right Soft Key [My auds]**.
2. In **My Audio** folder, select a voice memo and press **OK Key**.

## Slide Show

You can organize the image files on your phone and your memory card into a slide show, and play the slides with **Media player**.

Go to **Menu > Multimedia > Slide show** to make new slides. Press **Options** to edit, rename or delete existing slides, check slide information, or create new slides. If there is no slide yet, press **OK Key** to create the first one.

To create a new slide, enter the name of the slide first. Then select picture files. Mark the files you need and press **OK Key**.

## Streaming URL

**Streaming URL** is like bookmarks for playing streaming media. Select a URL to open the streaming media directly.

The availability of the streaming content depends on your service provider.

To create a new URL, press **Options > New bookmark** or, if there is no URL yet, press **OK Key**.

You can edit, delete the URL bookmarks, check bookmark information, or send them as messages.

# Getting Connected

## Connecting to the Internet

### Access Point and Connect

You need the correct network access point and connect settings to browse the Internet, watch stream media or to send and receive MMS. If the setting is not preset on your phone, obtain the settings information from the service provider. Also, check with them if a user name and password are required.

#### To set up a new Network Access Point

Select **Menu > Settings > Handset > Access point settings**. You can press **OK Key** to view existing settings. Press **Left Soft Key** and select **New** to enter the access point name (**APN**) you have obtained.

Select other items and enter the appropriate information in these areas, if required. Press **OK** to save the new setting.

### To set up a new connect setting

Select **Menu > Settings > Handset > Connect**. Press **Add** and enter the parameters you have obtained. Select **OK** to save the new setting.

## Web Browser

In standby mode, select **Menu > Browser** to launch the preinstalled Internet browser. You can also press **Left/Right Soft Key** in standby mode to visit designated web sites.

### Setting the Browser

The browser must be correctly set before you can access the Internet.

Go to **Menu > Browser > Settings**. Open **Connection settings** to select connection profile (see *Getting Connected — Connecting to the Internet — Access Point and Connect*).

Open **Advanced settings** to set up **Display pic, Display Animation, Browser Mode, SmartFit Mode, Background Music, Cache mode, Cookie mode, Autofill Mode, Script** and **Refresh Limit**.

You can also clear cache, cookies, input histories, or view certificates provided in the browser.

## Linking to a Web Page

In the browser, you can open a web page in the following ways:

- Select **Home** to open home page set in the connection profile (see Getting Connected — Connecting to the Internet — Access Point and Connect).
- Select **New Link**. Enter the address directly and press **OK Key**.
- Open **Bookmark**. Choose a bookmark and open the web site.
- Open **History**. Select a record to open the web page you have visited.

## **Web Page Options**

Open a web page and press **Options**. You can refresh the page, enter new link, forward to the next page, go to home page/bookmarked pages/history pages/saved pages, save the page to bookmark, or save the page as an off-line file.

You can also use images, the background music and the URL of the web page, choose the encoding, or view properties of the page. The URL can be sent as a text or multimedia message.

Select **Settings** to set up the browser, or **Exit** to end the application.

## **Bluetooth**

Bluetooth is a short-range wireless communications technology. When paired, devices with Bluetooth capabilities can exchange information within a distance of about 10 meters without any physical connection.



Your phone supports OPP, FTP, HSP, HFP, A2DP, AVRCP, DUNP Bluetooth profiles. You can connect your phone to a Bluetooth headset, transfer files with other Bluetooth devices, use your phone as a Bluetooth modem for your PC, or browse the files on remote devices.

Go to **Menu > Tools > Bluetooth > Help** to see how to set up and use Bluetooth.

# Setting up Your Phone

## Screen Settings

Configure screen display options.

- **Set wallpaper:** You can select your favorite wallpaper to display in standby mode.
- **Theme manage:** Select from the two interface themes that are preinstalled on your phone.
- **Set backlight duration:** You can set the duration of backlight.
- **Set brightness:** You can press **Up/Down key** to adjust the brightness of the main screen and then press **OK Key** to confirm.
- **Keyboard backlight:** You can set the keyboard light duration and period.
- **Set owner name:** You can set the owner name of the phone.

- **Set phone greeting:** You can set a message displayed when powering on the phone.

## Handset Settings

- **Language:** You can set the current display language.
- **Time & date:** You can set the time and date.
- **Missed Call(s) Tone:** You can set the ringtone notification for missed calls.
- **Shortcut keys:** You can assign the **Navigation keys** as shortcuts to important functions.
- **Keyguard:** You can set the keypad locking automatically in specified time. Also you can select **No auto keylock** and lock the keypad manually.
- **Own phone number:** You can set your own phone number to distinguish which USIM card you are using.
- **Download location:** You can select **Handset** or **Micro SD** as the default save location for downloaded files.

- **Network settings:** When outside the coverage of your regular network, you can manually select the local network.
  - **Preferred mode:** Select the preferred type of network.
  - **Preferred selection:**
    - \_ **Automatic:** The phone will scan for the available network when you are outside the home network.
    - \_ **Manual:** The phone lists all networks for you to choose from.
- **Access point settings:** Set up network access point for the data connection. See *Getting Connected — Connecting to the Internet — Access Point and Connect*.
- **Modem setting:** Set up your phone as a modem. Please contact your service provider for details.
- **Connect:** You can create or edit connection profiles for data access. For more details, please contact your service provider.

- **PC Connection:** You can connect your phone to PC via provided USB data cable or Bluetooth adapter.
- **Restore default settings:** Restore to original factory settings. You need to enter the handset lock code. The default code is 0000.

## Profiles

Your phone provides several predefined user profiles. You can choose a certain profile according to your surroundings.

Supported profiles are: **General**, **Meeting**, **Outdoor** and **Silent**.

### Customizing a profile

1. Press the **Right Soft Key** to edit the selected profile.
2. Select an item from the list to change its setting. You can modify voice/video call ring tone, ring volume, ring type, message tone, key tones, warning tone, power on/off sound and earpiece volume.

## Security Settings

Security features help to prevent the phone from unauthorized use. Keep the confidential numbers in a safe place where you can access them again if required.

PIN code and PIN2 code are passwords provided by your service provider and go with your USIM card. If you activate PIN code, you must enter the code every time you turn on the phone. PIN2 code is needed for some settings. Proceed as with PIN code.

Handset code is a security code on the phone side. The default code for an inactivated phone is 0000.

### **Warning:**

If you enter a wrong PIN code for three times consecutively, the USIM card will be locked. Please contact the service provider to get the PIN Unlock Key (PUK) to unlock the card.

You can activate the PIN code and the handset code, change the PIN code, PIN2 code and handset code.

You can enter the PIN2 code and define a list of numbers in **FDN list**. This information is saved in the USIM card. Turn on the **Fixed dial numbers** function, and you cannot dial numbers out of **FDN list**.

## Call Settings

You can enable call diverting, call waiting and call barring services. Select a service and choose **Activate** to use the service, or choose **Erase** to disable the service. Select **Check status** to check current service status.

**Send my number** allows you to send or hide your number when making calls. You can also select **Set by network**, and then the network will make the choice to show/hide the phone number. This function needs network support.

## **Other Functions**

### **Managing Files**

In standby mode, select **Menu > File manager** to manage files on your phone and your memory card. Press **OK Key** to open a file or a folder.

Press **Left Soft Key** in **Photos, Audio, Videos** and **Others** folders on the phone, and the **Micro SD** folder. You can search for files, create new folders, send/delete/rename/move/copy selected files, check file or space information.

Select an image or an audio file and press **Left Soft Key**. You can set it as wallpaper/ringtone, or add it to a slide/playlist.

### **Setting Alarms**

Select **Menu > Tools > Alarm** to set up alarms. You can set five alarms. The alarms can be one-time, for weekend or for workday.



To set an alarm, select an alarm and press **Add**. When finished editing, press **Save**.

Press **Left Soft Key** to edit alarms, set rest days or delete alarms.

## Stopwatch

You can measure time, for example, in different sports.

1. Press **OK Key** to start timing.
2. Press **OK Key** to stop the timing during the operation and view the duration of time.
3. Press **OK Key** to continue timing, or press **Right Soft Key** to reset.

## World Time

You need to set the date and time on the phone in order to use this function correctly. Select **Menu > Tools > World Time**.

Press **Left/Right Key** to choose the city. If you want to set the date and time of the current city as your local date and time, press **OK Key**.

## **Calculator**

Select **Menu > Tools > Calculator** for simple calculation.

### **Notes:**

This calculator has limited accuracy. Rounding errors may occur especially in long division.

## **Converting Currencies**

Select **Menu > Tools > Currency Conversion**.

Select **Exchange rate** field to enter the exchange rate, and **Foreign amount** or **Local amount** field to enter the amount of one currency. Use **Left Soft Key** for decimal point. The amount of the other currency will be displayed automatically.

Press **OK Key** to reset all the input.

## Java Games and Applications

Select **Menu > Games & Apps** to access the Java games and applications installed on the phone. Launch a game or application by pressing **OK Key**. You can also choose **Install Application** and press **OK Key** to download from the Internet.

Select an application and press **Left Soft Key** to view the detailed information of the Java application, remove/update the application, set application permissions, or check space information.

### Notes:

Since F107 is a phone capable of running multiple applications at the same time, the running applications are displayed in red. And when you press **Left Soft Key**, you can bring the selected application to the foreground or end it.

## Questions & Answers

If you encounter problems while using the phone, or if it performs abnormally, you can refer to the chart below. If your particular problem cannot be resolved using the information in the chart, contact the dealer where you purchased the phone.

<b>Problem</b>	<b>Possible causes</b>	<b>Possible solution</b>
Poor reception	The network signal is too weak at your current location, for example, in a basement or near a tall building, because wireless transmissions can not effectively reach it.	Move to a location where the network signal can be properly received.

<b>Problem</b>	<b>Possible causes</b>	<b>Possible solution</b>
	The network is busy at the current time (for example, during peak times, there may be too much network traffic to handle additional calls).	Avoid using the phone at such times, or try again after waiting a short time.
	You are too far away from a base station for your service provider.	You can request a service area map from your service provider.
Echo or noise	Poor network trunk quality on the part of your service provider.	Press <b>End Key</b> and dial again. You may be switched to a better-quality network trunk or phone line.

<b>Problem</b>	<b>Possible causes</b>	<b>Possible solution</b>
	Poor local telephone line quality.	Press <b>End Key</b> and dial again. You may be switched to a better-quality network trunk or phone line.
Unable to select certain features	Your service provider does not support these features, or you have not applied for services that provide these features.	Contact your service provider.
Battery not charge	The battery or battery charger is damaged.	Contact the dealer.

<b>Problem</b>	<b>Possible causes</b>	<b>Possible solution</b>
	The phone's temperature is below 0°C or higher than 45 °C.	Adjust the battery charging environment to avoid extremes of temperature.
	Poor contact between the battery and charger.	Check all connectors to make sure all connections have been properly made.
Shortened standby time	The battery is depleted. In high-temperature environments, battery life will be shortened.	Use a new battery.

<b>Problem</b>	<b>Possible causes</b>	<b>Possible solution</b>
	The standby time is related to your service provider system configuration. The same phone used with different service providers' systems will not provide exactly the same length of standby time.	If you are located in an area where signaling is weak, temporarily power off the phone.
	If you are not able to connect to the network, the phone will continue to send out signals as it attempts to locate	Change your location to one where the network is accessible, or temporarily turn off your phone.



<b>Problem</b>	<b>Possible causes</b>	<b>Possible solution</b>
	a base station. Doing so consumes battery power and will consequently shorten standby time.	
Cannot switch your phone on	Battery power has been depleted.	Recharge the phone's battery.
USIM card error	USIM card malfunction or damage.	Take the USIM card to your service provider for testing.
	USIM card inserted improperly.	Insert the USIM card properly.

<b>Problem</b>	<b>Possible causes</b>	<b>Possible solution</b>
	Debris on the USIM card contacts.	Use a soft, dry cloth to clean the USIM card contacts.
Unable to connect to the network	USIM card invalid.	Contact your service provider.
	You are not within the network's service area.	Check the service area with your service provider.
	Poor signal.	Move to an open space, or if you are inside a building, move closer to a window.

<b>Problem</b>	<b>Possible causes</b>	<b>Possible solution</b>
Cannot answer incoming calls	You have activated the <b>Call barring</b> feature.	Go to <b>Settings &gt; Call &gt; Call barring</b> , and then select <b>Cancel all call barring</b> .
You cannot make outgoing calls.	You have activated the <b>Call barring</b> feature.	Go to <b>Settings &gt; Call &gt; Call barring</b> , and then select <b>Cancel all call barring</b> .
	You have activated the <b>Fixed dial numbers</b> feature.	Go to <b>Settings &gt; Security &gt; Fixed dial numbers</b> and select <b>Off</b> .

<b>Problem</b>	<b>Possible causes</b>	<b>Possible solution</b>
PIN Code blocked	You have entered an incorrect PIN code three consecutive times.	Contact your service provider. If the service provider provides the USIM card's PUK code, use the PUK code to unlock the USIM card.
Unable to enter information into the phone book	The phone book's memory is already full.	Delete unnecessary data from the contacts.

# **Declaration of RoHS Compliance**

To minimize the environmental impacts and take more responsibilities to the earth we live on, this document shall serve as a formal declaration that the F107 manufactured by ZTE CORPORATION is in compliance with the Directive 2002/95/EC of the European Parliament - RoHS (Restriction of Hazardous Substances) with respect to the following substances:

1. Lead (Pb)
2. Mercury (Hg)
3. Cadmium (Cd)
4. Hexavalent Chromium (Cr (VI))
5. Polybrominated biphenyls (PBBs)
6. Polybrominated diphenyl ethers (PBDEs)

The F107 manufactured by ZTE CORPORATION, meets the requirements of EU 2002/95/EC.

## Disposal of Your Old Appliance



1. When this crossed-out wheeled bin symbol is attached to a product, it means the product is covered by the European Directive 2002/96/EC.
2. All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
3. The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.

For this product's Recycling Manual based on WEEE directive, please send an e-mail to [weee@zte.com.cn](mailto:weee@zte.com.cn), or visit the website below to download the document:

<http://ensupport.zte.com.cn>

## EC Declaration of Conformity

It is hereby declared that the following designated product:

Product Type: WCDMA/GSM(GPRS) Dual-Mode Digital  
Mobile Phone

---

Model No.: ZTE F107

---

**complies with** the essential protection requirements of the Radio and Telecommunication Terminal Equipment Directive (EC Directive 1999/05/EC) and their amendments.

This declaration applies to all specimens manufactured identical to the samples submitted for testing/evaluation.

Assessment of compliance of the product with the requirements relating to the Radio and Telecommunication Terminal Equipment Directive (EC Directive 1999/05/EC) was performed by American TCB (Notified Body No.1588), based on the following standards:

Safety	EN60950-1:2006
EMC	EN 301 489-1 V1.8.1; EN 301 489-7 V1.3.1; EN 301 489-17 V1.3.2; EN 301 489-24 V1.4.1
Radio	EN 301 511 V9.0.2; EN 301 908-1 V3.2.1; EN 301 908-2 V3.2.1; EN 300 328 V1.7.1
Health	EN 50360:2001; EN 62209-1:2006; IEC 62209-2:2008; EN 50332-1 2000; EN 50332-2 2003

This declaration is the responsibility of the manufacturer:

ZTE Corporation

ZTE Plaza, Keji Road South, Hi-Tech Industrial  
Park, Nanshan District, Shenzhen, Guangdong,  
518057, P. R. China

Authorized person signing for the company:

Xu Feng      Quality Director of ZTE Corporation

*Name in block letters & position in the company*

Shenzhen, 18<sup>th</sup> January 2010



**Place & date**

**Legally valid signature**