

Blade S6

Quick Start Guide

LEGAL INFORMATION

Copyright © 2014 ZTE CORPORATION.

All rights reserved.

No part of this publication may be quoted, reproduced, translated or used in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation.

ZTE Corporation reserves the right to make modifications on print errors or update specifications in this guide without prior notice.

Trademarks

ZTE and the ZTE logos are trademarks of the ZTE Corporation. Google and Android are trademarks of Google, Inc. The *Bluetooth*® trademark and logos are owned by the Bluetooth SIG, Inc. and any use of such trademarks by ZTE Corporation is under license.

Other trademarks and trade names are the property of their respective owners.











We offer self-service for our smart terminal device users. Please visit the ZTE official website (at www.ztedevice.com) for more information on self-service and supported product models. Information on the website takes precedence.








Visit <http://www.ztedevice.com> to download the user manual. Just click **Support > Manuals** from the home page and then select your location, product type, and name to search for related support information.

Disclaimer

 
ZTE Corporation expressly disclaims any liability for faults and damages caused by unauthorized modifications of the software.

Product Safety Information

	Do not use hand-held while driving
	Do not use while re-fuelling
	For body-worn operation maintain a separation of 15 mm
	This device may produce a bright or flashing light
	Small parts may cause a choking hazard
	Do not dispose of it in a fire
	This device may produce a loud sound
	To prevent possible hearing damage, do not listen at high volume levels for long periods.
	Avoid contact with magnetic media
	Avoid Extreme Temperatures

	Keep away from pacemakers and other personal medical devices
	Avoid any contact with liquid, keep it dry
	Switch off when instructed in hospitals and medical facilities
	Do not attempt to disassemble
	Switch off when instructed in aircrafts and airports
	Only use approved accessories
	Switch off in explosive environments
	Do not rely on this device for emergency communications

Getting to Know Your Phone

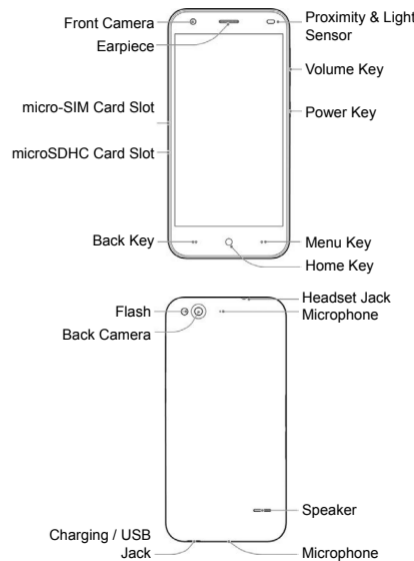

Power Key

- Press and hold to turn on or off airplane mode, enable silent mode, vibration mode or sound, reboot, or to power off.
- Press to switch your phone to sleep mode or wake it up.

Volume Key

- Press and hold to turn the volume up or down.

Home Key

- Touch to return to the home screen from any application or screen.
- Touch and hold to start Google Search.

Back Key

Touch to go to the previous screen.

Menu Key

 
- Touch to open launcher menu.
- Touch and hold to see recently used applications.

Before Getting Started


Installing the micro-SIM Card

Switch off your phone before installing the micro-SIM card.

1. Using the thimble take out the card holder.

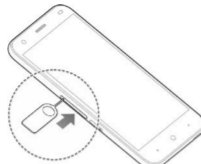

 
2. Hold the micro-SIM card with the cut corner oriented as shown and slip it into the card holder.

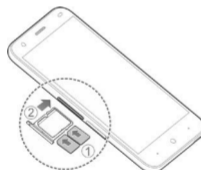


CAUTION: To avoid damage to the phone, please do not use other kinds of SIM cards, and do not use a non-standard micro-SIM card cut from a SIM card. You can get the standard micro-SIM card from your service provider.

Installing the microSDHC Card

 1. Using the thimble take out the card holder.

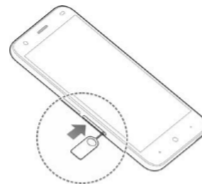

 2. Hold the microSDHC card with the cut corner oriented as shown and slip it into the card holder.

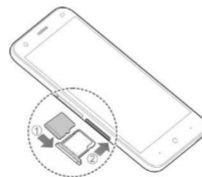

Charging the Battery



When you first get your new phone you'll need to charge the battery like this:

1. Connect the adapter to the charging jack.
2. Connect the charger to a standard AC power outlet.
3. Disconnect the charger when the battery is fully charged.

WARNING! Use only ZTE-approved chargers and cables. The use of unapproved accessories could damage your phone or cause the battery to explode.

CAUTION: Do not change the built-in rechargeable battery in your phone by yourself. The battery can only be changed by ZTE or ZTE authorised service provider.

NOTE: If the battery is extremely low, you may be unable to power on the phone even when it is being charged. In this case, try again after charging the phone for at least 10 minutes. Contact customer service if you still cannot power on the phone after prolonged charging.

Powering On/Off Your Phone

Make sure the battery is charged before powering on.

- Press and hold the **Power Key** to turn on your phone.
- To turn it off, press and hold the **Power Key** to open the options menu. Touch **Power off**.

Waking Up Your Phone

1. Press the **Power Key** to activate your screen display.
2. Swipe from the bottom to up to unlock.

NOTE:

If you have set an 'unlock pattern', or a PIN/password for your phone, you'll need to draw the pattern or enter the PIN/password to unlock your screen.

Using the Touch Screen

Your phone's touch screen lets you control actions through a variety of touch gestures.

- Touch
When you want to type using the onscreen keyboard, select items onscreen such as application and settings icons, or press onscreen buttons, simply touch them with your finger.

- Touch and Hold
To open the available options for an item (for example, a message or link in a Web page), touch and hold the item.
- Swipe or Slide
To swipe or slide means to quickly drag your finger vertically or horizontally across the screen.
- Drag
To drag, press and hold your finger with some pressure before you start to move your finger. While dragging, do not release your finger until you have reached the target position.
- Pinch
In some apps (such as Maps, Browser, and Gallery), you can zoom in and out by placing two fingers on the screen at once and pinching them together (to zoom out) or spreading them apart (to zoom in).
- Rotate the screen
For most screens, you can automatically change the screen orientation from portrait to landscape by turning the phone sideways.