



ZTE **AXON 10<sup>PRO</sup>**

**User Manual**

## About This Manual

Thank you for choosing this ZTE mobile device. In order to keep your device in its best condition, please read this manual and keep it for future reference.

### Copyright

**Copyright © 2019 ZTE CORPORATION**

**All rights reserved.**

No part of this publication may be quoted, reproduced, translated or used in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation.

### Notice

ZTE Corporation reserves the right to make modifications on print errors or update specifications in this guide without prior notice. This manual has been designed with the utmost care to ensure the accuracy of its content. However, all statements, information and recommendations contained therein do not constitute a warranty of any kind, either expressed or implied. Please refer to [\*For Your Safety\*](#) to be sure to use your phone properly and safely. We offer self-service for our smart terminal device users. Please visit the ZTE official website (at <http://www.ztedevices.com>) for more information on self-service and supported product models. Information on the website takes precedence.

## Disclaimer

ZTE Corporation expressly disclaims any liability for faults and damages caused by unauthorised modifications of the software.

Images and screenshots used in this manual may differ from the actual product. Content in this manual may differ from the actual product or software.

## Trademarks

ZTE and the ZTE logos are trademarks of ZTE Corporation.

Android™ is a trademark of Google LLC.

The *Bluetooth*® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by ZTE Corporation is under license.



microSDXC Logo is a trademark of SD-3C, LLC.



Qualcomm® Snapdragon™ is a product of Qualcomm Technologies, Inc. and/or its subsidiaries.

Qualcomm and Snapdragon are trademarks of Qualcomm Incorporated, registered in the United States and other countries.



Qualcomm® aptX™ is a product of Qualcomm Technologies, Inc. and/or its subsidiaries.

Qualcomm is a trademark of Qualcomm Incorporated, registered in the United States and other countries. aptX is a trademark of Qualcomm Technologies International, Ltd., registered in the United States and other countries.



For DTS patents, see <http://patents.dts.com>. Manufactured under license from DTS Licensing Limited. DTS, the Symbol, & DTS and the Symbol together, DTS:X, the DTS:X logo, and DTS:X Ultra are registered trademarks or trademarks of DTS, Inc. in the United States and/or other countries. © DTS, Inc. All Rights Reserved.

Other trademarks and trade names are those of their respective owners.

## Instructional Icons



### **NOTE**

Additional information, supplementary instruction or tips for the operation of the product.



### **CAUTION**

Safety information that, if ignored, may cause minor damage to the equipment or service interruption.



### **WARNING**

Safety information that, if ignored, may cause serious damage to the equipment or danger to personal safety.

**Version No.:** R1.0

**Edition Time:** April 8, 2019

# Contents

<b>Exciting New Features.....</b>	<b>12</b>
In-Screen Fingerprint Identification.....	12
Face Recognition .....	12
Camera Features .....	12
Private Space .....	13
Phone Switch .....	13
<b>Getting Started .....</b>	<b>14</b>
Getting to Know Your Phone .....	14
Knowing the Keys.....	16
Setting Up Your Phone .....	16
Charging the Phone.....	18
Powering On/Off.....	20
Setting Up for the First Time .....	20
Locking/Unlocking the Screen and Keys .....	21
Getting to Know the Home Screen .....	22
<b>Personalizing.....</b>	<b>24</b>
Setting the Navigation Style.....	24
Changing the System Language .....	27
Switching to Vibration or Silent Mode .....	27
Using Do Not Disturb Mode.....	28
Choosing Your Wallpaper .....	30
Using ZTE Locker.....	30
Enabling Display Optimization.....	31

Using Night Light .....	31
Using Read Mode .....	32
Using One-Handed Mode .....	32
<b>Knowing the Basics.....</b>	<b>34</b>
Phone Status Icons .....	34
Notification Icons .....	35
Using Quick Settings .....	35
Using App Shortcuts .....	36
Notification Dots.....	37
Opening and Switching Apps.....	38
Using Split-Screen Mode .....	39
<b>Security .....</b>	<b>41</b>
Protecting Your Phone With Screen Locks .....	41
Using Your Fingerprint .....	42
Using Face Recognition.....	43
Protecting Your Phone With Screen Pinning.....	45
<b>Connecting to Networks .....</b>	<b>48</b>
Connecting to Mobile Networks .....	48
Connecting to Wi-Fi .....	50
<b>Connecting to Devices .....</b>	<b>51</b>
Connecting to Bluetooth Devices.....	51
Exchanging Data via NFC.....	52
Using Tap & Pay .....	52
Connecting to Your Computer via USB.....	54

Using USB On-The-Go (OTG).....	55
<b>Sharing Your Mobile Data Connection Through Tethering.....</b>	<b>56</b>
<b>Phone Calls .....</b>	<b>57</b>
Placing Calls.....	57
Answering or Rejecting Calls.....	58
Using Options During a Call .....	59
Managing Multi-Party Calls.....	60
<b>Contacts.....</b>	<b>62</b>
Adding a New Contact.....	62
Importing and Exporting Contacts .....	62
Setting a Ringtone for a Contact.....	64
Combining Contacts .....	65
Joining Duplicate Contacts .....	65
Separating Contact Information .....	66
Deleting or Sharing Multiple Contacts .....	66
Setting Call Blocking.....	66
<b>Messages.....</b>	<b>68</b>
Sending a Message.....	68
Message Options .....	69
<b>Web Browser.....</b>	<b>71</b>
Opening the Browser.....	71
Using Multiple Browser Tabs .....	71

Changing Chrome Settings.....	72
<b>Camera .....</b>	<b>73</b>
Capturing a Photo.....	73
Recording a Video .....	75
Using AI Camera Mode.....	76
Using Wide-Angle Camera Mode .....	77
Using PORTRAIT Mode.....	78
Using SPORT Mode .....	78
Using Manual Camera Mode .....	79
Using Other Camera Modes .....	80
<b>Photos .....</b>	<b>82</b>
Opening Photos .....	82
Sharing Your Photos or Videos .....	82
Deleting Unwanted Photos or Videos .....	82
Restoring a Photo or Video.....	83
<b>Music .....</b>	<b>84</b>
Viewing Your Music Library.....	84
Playing Music.....	84
Managing Playlists.....	84
<b>Voice Recorder.....</b>	<b>86</b>
Recording a Voice Memo.....	86
Playing a Voice Memo .....	86
Trimming a Voice Memo .....	87

<b>Game Assist</b> .....	<b>88</b>
<b>Phone Switch</b> .....	<b>89</b>
<b>Private Space</b> .....	<b>91</b>
Opening Private Space for the First Time .....	91
Encrypting Pictures/Videos/Files .....	92
Locking Apps .....	92
Using Password Book .....	93
Setting Private Space .....	93
<b>Speech Translator</b> .....	<b>95</b>
Translating the Conversation.....	95
Translating the Text .....	96
Translating the Content in Other Apps.....	96
<b>Settings</b> .....	<b>98</b>
Network & Internet.....	98
Connected Devices .....	100
Apps & Notifications .....	101
Battery .....	103
Features .....	103
Display.....	105
Sound .....	105
Storage .....	105
Security & Location.....	106
Accounts.....	108
Accessibility.....	109

Google .....	109
System.....	109
<b>For Your Safety .....</b>	<b>112</b>
General Safety.....	112
Radio Frequency (RF) Energy .....	114
Distractions.....	116
Product Handling .....	116
Electrical Safety .....	122
Radio Frequency Interference .....	123
Explosive Environments.....	124
<b>Disposal of Your Old Appliance.....</b>	<b>126</b>
<b>EU DECLARATION OF CONFORMITY .....</b>	<b>127</b>

# Exciting New Features

## In-Screen Fingerprint Identification

With the in-screen fingerprint sensor you can register up to 5 fingerprints and use them to unlock the phone or access Private Space.

## Face Recognition

You can use your face to unlock the screen or to open the apps locked by Private Space. Your phone can automatically turn on the screen and recognize your face to unlock the screen each time you raise your phone.

## Camera Features

- **Zoom control:** Use the zoom control to switch to 1x zoom, 3x zoom or the wide-angle camera.
- **AI camera:** AI camera can automatically adjust the colour and lighting settings to match the scene or subject. For example, if you are taking a picture of flowers, it will choose the best colour for flowers and the picture will be more vivid.
- **Wide-angle camera:** Take photos with a wider vision range. You can turn on distortion correction if necessary.
- **PORTRAIT mode:** Use PORTRAIT mode to focus on your subject with a depth effect and blur backgrounds. You can also select different lighting effects for your photo.

- **SPORT mode:** The camera can remain focused on a moving subject, or capture faces or typical poses automatically.

## Private Space


Private Space allows you to encrypt your files, lock your apps and manage your account passwords. To access Private Space, you need to draw a pattern, enter a PIN, or use your registered fingerprint.


## Phone Switch

You can use Phone Switch to easily transfer data such as contacts, messages, pictures, audio, videos, etc. from your old Android phone to the new one. You need to install Phone Switch on both phones first.

# Getting Started

## Getting to Know Your Phone

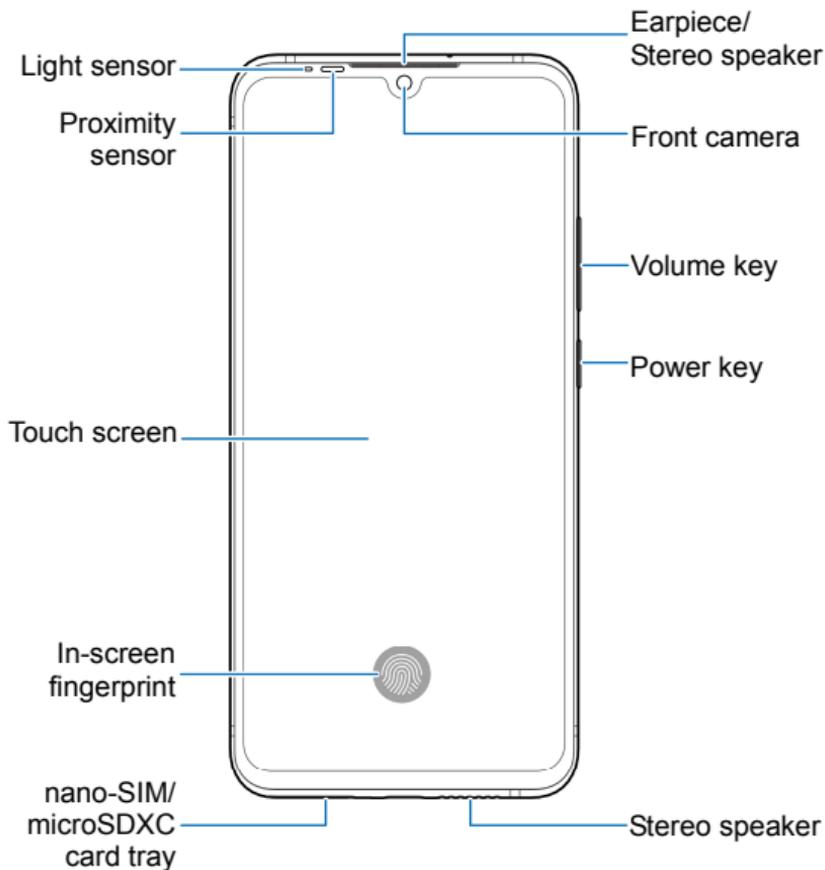

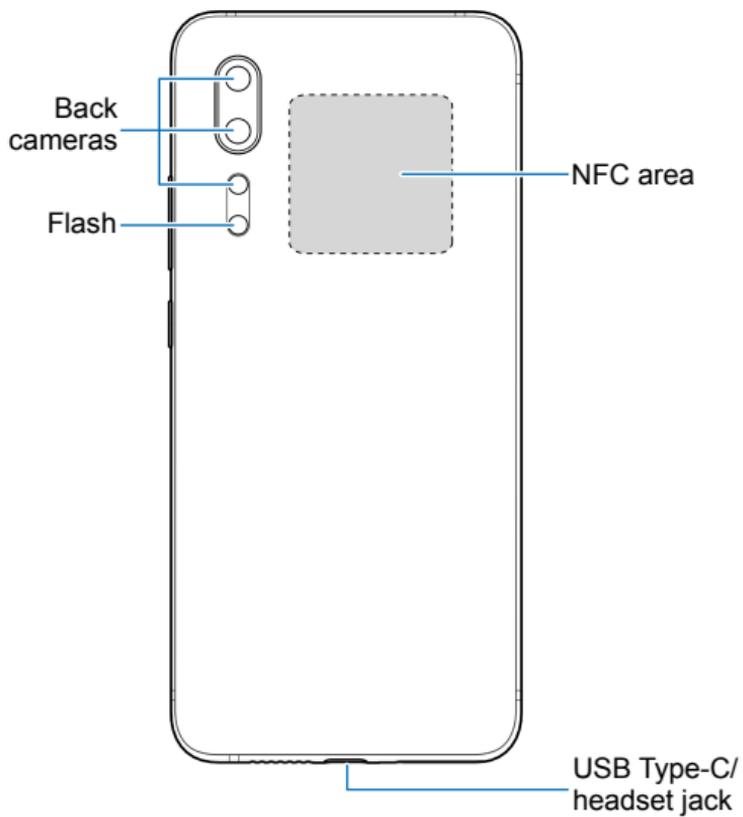

## Knowing the Keys

Key	Function
Power key	<ul style="list-style-type: none"><li>• Press and hold to turn on or off aeroplane mode, turn on or off vibration or sound, restart, or power off.</li><li>• Press to turn off or on the screen display.</li></ul>
Volume key	Press or hold either end of the key to turn the volume up or down.



### NOTE:

You can use virtual keys or gestures to navigate your phone, and three navigation styles are available. See [Setting the Navigation Style](#).

## Setting Up Your Phone


The nano-SIM card(s) can be installed or removed while the phone is turned on.




### WARNING!

To avoid damage to the phone, do not use any other kind of SIM cards, or any non-standard nano-SIM card cut from a SIM card. You can get a standard nano-SIM card from your service provider.

1. Insert the tip of the tray eject tool into the hole on the card tray.

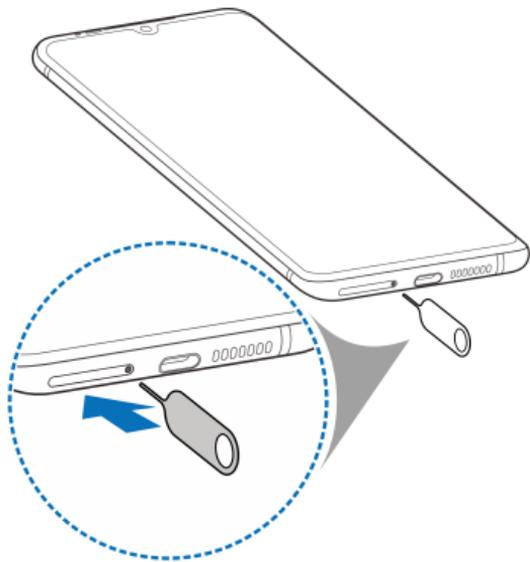

2. Pull out the card tray. You can place a nano-SIM card on the card slot 1, and place a nano-SIM card or a microSDXC card (optional) on the card slot 2, as shown. Carefully slide the tray back into place.

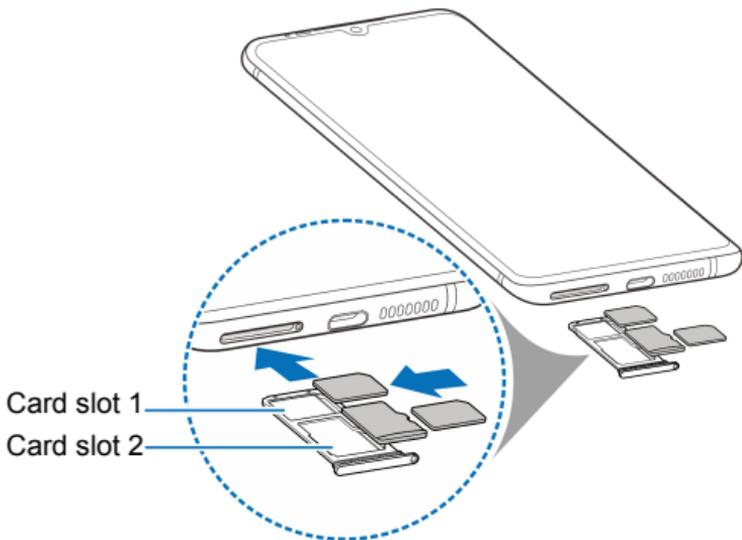**NOTE:**

The two card slots support 4G/3G/2G networks.

## Charging the Phone

Your phone's battery should have enough power for the phone to turn on, find a signal, and make a few calls. You should fully charge the battery as soon as possible.

**WARNING!**

Use only ZTE-approved chargers and USB Type-C cables. The use of unapproved accessories could damage your phone or cause the battery to explode.


**NOTES:**

- Use the charger that comes in-box with your phone to charge the battery. It's specially built to support Quick Charge.
- Your phone is also compatible with wireless charging devices approved by ZTE, which are sold separately.

**WARNING!**

**Do not remove the back cover. The battery is not removable. Removal may cause fire or explosion.**

1. Connect the adapter to the USB Type-C jack. Do not force the connector into the jack.

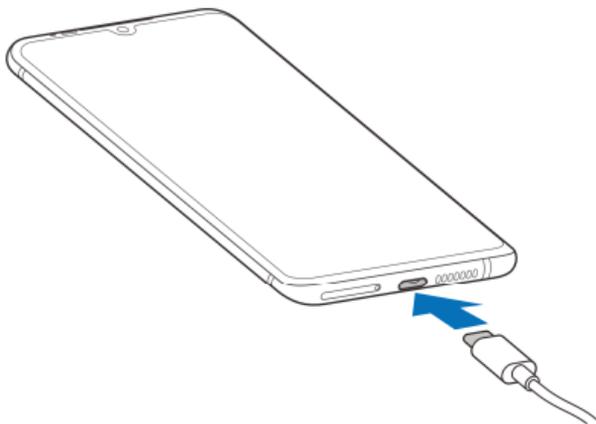

2. Connect the charger to a standard AC power outlet. If the phone is on, you'll see a charging icon, such as  or , appear on the status bar.
3. Disconnect the charger when the battery is fully charged.

**NOTE:**

If the battery is extremely low, you may be unable to power on the phone even when it is being charged. In this case, try again after charging the phone for at least 30 minutes. Contact the customer service if you still cannot power on the phone after prolonged charging.

## Powering On/Off

- Press and hold the **Power** key to turn on your phone.
- To power off, press and hold the **Power** key to open the options menu, and touch  > .

**NOTE:**

If the screen freezes or takes too long to respond, try pressing and holding the **Power** key for over 10 seconds to restart the phone.

## Setting Up for the First Time

When you first power on your phone after you purchase it or reset it to factory settings, you need to do some settings before using it.

Select the language field and follow the on-screen prompts to set up your phone.

## Locking/Unlocking the Screen and Keys

Your phone allows you to quickly lock the screen and keys (put the phone to sleep mode) when not in use and to turn the screen back on and unlock it when you need it.

### To lock the screen and keys:

To quickly turn the screen off and lock the keys, press the **Power** key.

#### **NOTE:**

To save battery power, the phone automatically turns off the screen after some time of inactivity. You will still be able to receive messages and calls while the phone screen is off.

### To unlock the screen and keys:

1. Press the **Power** key to turn the screen on.

2. Swipe up on the screen.

- or -

Touch a notification twice consecutively to open the related app.

#### **NOTE:**

If you have set a face verification, a fingerprint, an unlock pattern, a PIN or a password for your phone (see [Using Face Recognition](#),

[Using Your Fingerprint](#) and [Protecting Your Phone With Screen Locks](#)), you'll need to use your face or fingerprint, draw the pattern, or enter the PIN/password to unlock your screen.

 **NOTE:**

You can swipe up on  to use the flash and voice recorder, or swipe up on  to open the camera.

## Getting to Know the Home Screen

Your home screen is extendable, providing more space for shortcuts, widgets, or folders. Simply swipe right to left on the home screen to see the extended panels. You can also add, remove or move home screen panels.

### To add a new home screen panel:

1. Touch and hold an empty area of the home screen.
2. Swipe left through the home screen thumbnails until you see . Touch  to create a new home screen panel.

### To delete a home screen panel:

1. Touch and hold an empty area of the home screen. You can slide left or right to view the home screen thumbnails.
2. Touch  on the top right corner of a thumbnail.
3. Touch **OK** if prompted. The items on the panel will also be removed.

### **To move a home screen panel:**

1. Touch and hold an empty area of the home screen. You can slide left or right to view the home screen thumbnails.
2. Touch and hold a thumbnail and drag it left or right to the place you need.



#### **NOTE:**

Touch  at the top of a home screen thumbnail to set it as the main home screen.

# Personalizing

## Setting the Navigation Style

You can set the navigation style as virtual navigation, swipe navigation or gestures navigation.

### Use Virtual Navigation

To enable virtual navigation:

1. From the home screen, touch **Settings > Features > System navigation**.
2. Select **Virtual navigation**.

#### **NOTE:**

Touch  beside **Virtual navigation** to change the navigation key layout, or turn on or off the concealable navigation bar. To hide the navigation bar, switch off **Always show navigation bar** and touch  on the navigation bar. To display the navigation bar again, swipe up from the bottom of the screen.

To use virtual navigation:

- Touch  (the **Home** key) to return to the home screen from any application or screen.
- Touch and hold  to use the Google Assistant.
- Touch  (the **Back** key) to go to the previous screen.
- Touch  (the **Recent apps** key) to see recently used apps.

- Touch  twice to switch to the most recent application.
- Swipe up on the home screen to open the app list.

## Use Swipe Navigation

To enable swipe navigation:

1. From the home screen, touch **Settings > Features > System navigation**.
2. Select **Swipe navigation**.

### **NOTE:**

Touch  beside **Swipe navigation** to change the navigation key layout.

To use swipe navigation:

- Touch  (the **Home** key) to return to the home screen from any application or screen.
- Touch and hold  (the **Home** key) to use the Google Assistant.
- Touch  (the **Back** key) to go to the previous screen.
- Swipe up from the bottom of your screen to the top to open the app list.
- Swipe up from the bottom of your screen to the middle to see recently used apps.
- Swipe right along the navigation bar at the bottom of the screen to view recent apps. Then slide left and right to scroll the app cards and release to switch to the central app.

## Use Gestures Navigation

To enable gestures navigation:

1. From the home screen, touch **Settings > Features > System navigation**.
2. Select **Gestures**.



### NOTES:

- Touch  beside **Gestures** to enable or disable visual feedback and the Google Assistant for gestures navigation.
- The screen pinning feature and one-handed mode are not available for gestures navigation.

To use gestures navigation:

- Swipe up from the bottom of your screen to return to the home screen from any application or screen.
- Swipe up from the bottom of your screen to the middle and hold to see recently used apps.
- Swipe inside from the left or right edge of your screen to go to the previous screen.
- Swipe up from the bottom of your screen to the top to open the app list.
- Swipe up from the bottom left or bottom right of your screen to activate the Google Assistant.

## Changing the System Language

1. Open the app list and touch **Settings > System > Languages & input > Languages**. The first language in the list is the default system language.
2. Touch **Add a language** and then the language you need. Select the regional variant of the language if prompted.
3. Touch and hold a language and move it to the top to switch to that language.



### NOTE:

To remove languages from the list, touch **:** > **Remove** and select the languages you want to delete.

## Switching to Vibration or Silent Mode

You can set the phone to vibration or silent mode by using one of the following methods.

- Press the **Volume** key up or down and then touch the icon above the slider to switch the phone to vibration or silent mode or turn on the sound.
- Press the **Volume up** key and the **Power** key at the same time to switch to vibration mode.
- Swipe down from the status bar to open the notification panel and drag the panel downwards. Touch **Ring, Vibrate**, or **Silent** to switch the phone to vibration or silent mode or turn on the sound.

- Open the app list and touch **Settings > Sound > Sound mode** and select **Vibrate** or **Silent** to switch to vibration or silent mode.

## Using Do Not Disturb Mode

You can limit interruptions with Do not disturb mode. This mode can mute sound, stop vibration, and block visual disturbances. You can pick what you block and what you allow.

### Turn On or Off Do Not Disturb Mode

1. Swipe down from the top of the screen with two fingers to access the Quick Settings.
2. Touch **Do not disturb**.



#### **NOTE:**

You can also open the app list and touch **Settings > Sound > Do not disturb > Turn on now** to turn Do not disturb mode on or off.

### Set What to Block or Allow

1. Swipe down from the top of the screen with two fingers to access the Quick Settings.
2. Touch and hold **Do not disturb** to open the Do not disturb setting screen.
3. Under the Behaviour section, choose what to block or allow.
  - ▶ **Sound & vibration:** Block or allow alarms, media, or touch sounds.

- ▶ **Notifications:** Have no sounds from notifications, or no sounds and no visuals. Or set custom restrictions.

## Set the Exceptions for Do Not Disturb Mode

1. Swipe down from the top of the screen with two fingers to access the Quick Settings.
2. Touch and hold **Do not disturb**.
3. Under the Exceptions section, touch **Calls** or **Messages, events & reminders** and choose what to allow.

## Set How Long Do Not Disturb Mode Lasts

1. Swipe down from the top of the screen with two fingers to access the Quick Settings.
2. Touch and hold **Do not disturb**.
3. Touch **Duration** and set how long Do not disturb mode will stay on when you turn it on.

## Set an Automatic Rule

You can set automatic rules to activate Do not disturb mode for specific times or events.

1. Swipe down from the top of the screen with two fingers to access the Quick Settings.
2. Touch and hold **Do not disturb**.
3. Touch **Turn on automatically**.
4. Touch an existing rule to set it, or touch **Add rule** to create new rules.
5. At the top, check that your rule is turned on.

## Choosing Your Wallpaper

You can set the wallpaper for the home screen or lock screen.

1. Touch and hold an empty place on the home screen and then touch **WALLPAPERS**.
2. Swipe left or right on the wallpaper panel along the bottom of the screen to select a wallpaper, or touch **My photos** to select a picture and pan and zoom on it to select the area for the wallpaper.
3. Touch **SET WALLPAPER** and choose where the wallpaper should be used.



### NOTES:

- Alternatively, you can open the app list and touch **Settings > Display > Wallpaper** to set the wallpaper.
- You can also use ZTE Locker to switch the lock screen wallpapers automatically. See [Using ZTE Locker](#).

## Using ZTE Locker

ZTE Locker allows you to switch the lock screen wallpapers automatically.

1. Open the app list and touch **Settings > Display > ZTE Locker**.
2. Turn on the switch to enable ZTE Locker.
3. If necessary, touch **LOCK SCREEN SETTINGS** to update the lock screen wallpapers, add more pictures from Gallery as the wallpapers, and edit text on the wallpapers.

## Enabling Display Optimization

The display optimization feature can automatically adjust screen contrast, sharpness, and saturation in order to enhance display quality and improve visual effect.

1. Open the app list and touch **Settings > Display > Display optimization**.
2. Turn on the switch to enable the display optimization feature.

## Using Night Light

You can enable Night Light to tint the screen amber and reduce the intensity of bright colours for eye protection, or set a schedule when Night Light will be turned on.

1. Open the app list and touch **Settings > Display > Night Light**.
2. Switch on **Turn on now** to enable Night Light.  
- or -

If you want to set a schedule when Night Light will be turned on automatically, touch **Turn on automatically** to enable automatic Night Light and select an option.

3. Drag the sliders below **Intensity of filter** to adjust the eye protection effect when Night Light is on.

## Using Read Mode

When Read mode is enabled, your phone will automatically adjust screen colour, which makes it easier to look at your screen or read on the phone. You can add apps to this mode.

To enable Read mode for the entire phone:

1. Open the app list and touch **Settings > Display > Read mode**.
2. Switch on **For entire device**.

To enable Read mode for certain apps:

1. Open the app list and touch **Settings > Display > Read mode**.
2. Switch on **Custom apps** and ensure that **For entire device** is turned off.
3. Touch **Add apps to this mode**.
4. Select the apps you want to use in Read mode and touch **ADD**.

## Using One-Handed Mode

You can enable one-handed mode to comfortably operate your phone with one hand.

1. Open the app list and touch **Settings > Features > One-handed mode** and turn on the switch.
2. Touch and hold  to enter one-handed mode. You can do the following.

- ▶ Touch  or  to move the small screen to the right or left.
- ▶ Touch and hold  or  at the top corner of the small screen and drag it to resize the screen.
- ▶ Touch the empty area outside the small screen to exit one-handed mode.



**NOTE:**

One-handed mode is not available for gestures navigation.

# Knowing the Basics

## Phone Status Icons

The status bar at the top of the home screen provides phone and service status icons on the right side. Below are some of the icons you may see.

	3G connected		No signal
	LTE connected		Signal strength
	Mobile data in use		Aeroplane mode
	Vibration on		Connected to a Wi-Fi® network
	Silent mode on		Location service active
	Do not disturb mode on		Wired headset connected
	Battery extremely low		NFC on
	Battery low		Alarm set
	Battery full		Battery charging

## Notification Icons

The status bar at the top of the home screen provides notification icons on the left. Below are some of the icons you may see.

 / 	New message(s) from the Messages app		New Wi-Fi network detected
 / 	New message(s) from the Gmail™ app		Downloading data
	Missed call		Sending data
 / 	Song playing		USB tethering on
	microSDXC card mounted		

## Using Quick Settings

The Quick Settings make it convenient to view or change the most common settings for your phone.

Swipe down from the status bar and drag the notification panel downwards to open the Quick Settings panel.

### To turn on or off settings quickly:

1. Open the Quick Settings panel.
2. To turn on or off a setting, touch its tile. Touch and hold certain tiles to access more setting options. For example, touch and hold the Wi-Fi tile to open Wi-Fi settings.

## To customise the Quick Settings panel:

You can add, remove or rearrange the tiles on the Quick Settings panel.

1. Open the Quick Settings panel.
2. Touch  at the bottom and do one of the following.
  - ▶ Touch and hold a tile and drag it to the position you want.
  - ▶ Touch and hold a tile and drag it to the section below to hide it.
  - ▶ In the **Hold and drag to add tiles** section, drag a tile up to show it in the Quick Settings panel.


## Using App Shortcuts

The app shortcuts feature allows you to quickly access common app functions from the home screen and the app list screen.

### **NOTE:**

Not all apps support the app shortcuts feature.

1. Touch and hold an app icon on the home screen or the app list screen.
2. From the displayed menu, touch the function you want to use in the app.

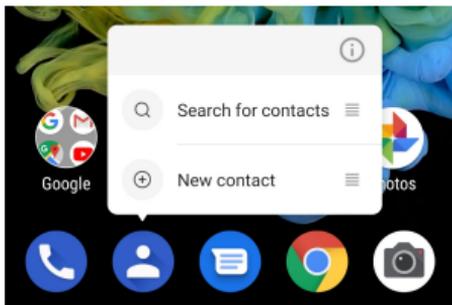

## NOTES:

- You can also touch and hold a function from the displayed menu, and drag it to a home screen panel to create a shortcut of the function.
- To disable the app shortcuts feature, touch and hold an empty area of the home screen, touch **HOME SETTINGS** and then switch off **Long press app for menu options**.

## Notification Dots

Some apps will display a dot when they have notifications. The notification dots appear on the app icons on both the home screen and the app list screen.



Touch and hold an app icon with a dot to preview its notifications. You can swipe a notification left or right to dismiss it.

### To turn on/off notification dots for all apps:

1. Open the app list and touch **Settings > Apps & notifications > Notifications**.
2. Touch the **Allow notification dots** switch to turn it on or off.

### To turn on/off notification dots for specific apps:

1. Open the app list and touch **Settings > Apps & notifications > Notifications**.
2. Switch on **Allow notification dots**.
3. Touch  at the top left and then touch **See all [number] apps**.
4. Touch the app you want to customize.
5. Touch **Notifications** and touch the **Allow notification dot** switch.

## Opening and Switching Apps

### Open an App

1. Open the app list to view apps.
2. Slide up or down on the screen and touch an app to open it.



#### **NOTE:**

Drag the slider on the right side of the screen to the initial letter of the app you need, or touch the search box at the top to search for apps.

## Switch Between Recently Opened Apps

1. Open the recent apps list. The apps you've used recently are displayed in a series of cards. Slide left and right to see all the cards.



### NOTE:

To view how to see recently used apps in different navigation styles, see [Setting the Navigation Style](#).

2. Touch a card to open that app.



### NOTE:

You can swipe a card up to remove it from the screen, which will free up running memory on the phone.

## Using Split-Screen Mode

You can work with two apps at the same time in split-screen mode.



### NOTE:

Some apps may not support split-screen mode.

1. Open the first app you want to use and then open the recent apps list.
2. Touch the app icon at the top of the central card and select **Split screen**.
3. Swipe the rest of the cards and touch the second app you want to use. If the app is not among the cards, open the app list to select the app.

 **NOTE:**

To view how to open the app list in different navigation styles, see [Setting the Navigation Style](#).

To exit split-screen mode, drag the border separating the two apps to the top or bottom of the screen.

# Security

## Protecting Your Phone With Screen Locks

You can protect your phone by creating a screen lock. When it is enabled, you need to swipe up on the screen, draw a pattern or enter a numeric PIN or password to unlock the phone's screen and keys.

1. Open the app list and touch **Settings > Security & location > Screen lock**.
2. Touch **None, Swipe, Pattern, PIN** or **Complex password**.
  - ▶ Touch **None** to disable the screen lock.
  - ▶ Touch **Swipe** to enable screen lock and allow unlocking with a “swipe” gesture. You can unlock the screen by touching the display and sliding up.
  - ▶ Touch **Pattern** to create a pattern that you must draw to unlock the screen.
  - ▶ Touch **PIN** or **Complex password** to set a numeric PIN or a password that you must enter to unlock the screen.



### NOTE:

Remember the pattern, PIN or password you set. Otherwise, you will have to contact the customer service to refresh the phone software.

## Using Your Fingerprint

With the in-screen fingerprint sensor you can register up to 5 fingerprints and use them to unlock the phone or access Private Space.



### NOTES:

- The fingerprint feature is usable only when a screen lock (**Pattern**, **PIN**, or **Complex password**) is enabled. When the screen lock is reset to **None** or **Swipe**, all registered fingerprints are erased.
- If you restart your phone, you need to enter the screen lock pattern, PIN or password you set to unlock the screen for the first time.

## Register a Fingerprint

1. Open the app list and touch **Settings > Security & location > Fingerprint**.
2. Enter the screen lock pattern, PIN or password you set. If you haven't set a screen lock, follow the prompts to set it.
3. Touch **REGISTER** or **Add fingerprint**.
4. Follow the prompts to record the centre and the edges of a finger.
5. Touch **OK**.



### NOTE:

Touch an existing fingerprint record to change its name or delete it.

## Set Fingerprint Functions

1. Open the app list and touch **Settings > Security & location > Fingerprint**.
2. Enter the screen lock pattern, PIN or password you set.
3. You can set the following options.
  - ▶ **Unlock your phone:** Unlock the phone with a registered fingerprint.
  - ▶ **Show fingerprint icon:** Show a fingerprint icon on the screen if you lift your phone while the screen is off.
  - ▶ **Fingerprint animation style:** Select the animation style you like for fingerprint unlocking.
  - ▶ **Access Private Space:** When this feature is enabled, you can access Private Space with a registered fingerprint. See [Private Space](#).

## Using Face Recognition

You can use face recognition to unlock the screen or open the apps locked by Private Space.



### NOTES:

- The security strength of face recognition is lower than that of password, pattern or fingerprint.
- If you restart your phone, you need to enter the screen lock pattern, PIN or password you set to unlock the screen for the first time.

## Create a Face

1. Open the app list and touch **Settings > Security & location > Face verify**.
2. Enter the screen lock pattern, PIN or password you set. If you have not set a screen lock, choose one backup screen lock method to set the screen lock pattern, PIN or password.
3. Read the disclaimer for face recognition and touch **ACCEPT**.
4. Check or uncheck **Turn on Raise to wake to improve user experience of face unlock**. If this option is enabled, your phone will turn on the screen and recognize your face to unlock the screen automatically each time you raise your phone and hold it to your face.
5. Touch **CREATE NOW** and follow the prompts to register your face.

## Use Face Recognition to Unlock the Screen

After creating your face, you can unlock the screen with face recognition.

1. Press the **Power** key to turn on the screen display if the screen is off.



### NOTE:

You can also pick up your phone to turn on the screen. To enable this feature, open the app list, touch **Settings > Features > Gesture & motion** and switch on **Raise to wake**.

2. Put your face in front of the screen. If the face recognition fails, double-tap or swipe up on the screen to try again.

3. Depending on your setting, you may need to swipe up on the screen to unlock the phone.

## Set Face Recognition Options

You can set what face recognition can do on your phone.

1. Open the app list and touch **Settings > Security & location > Face verify**.
2. Enter the screen lock pattern, PIN or password you set.
3. You can set the following options.
  - ▶ **Unlock screen:** Select how the screen is unlocked with your face.
  - ▶ **Access App Lock:** If this option is enabled, you can use face recognition to open the apps locked by Private Space. See [Private Space](#).
  - ▶ **Bright display:** If this option is enabled, the phone will increase screen brightness automatically in a dim light to help verify your face.
  - ▶ **Delete face data:** Delete your recorded face data.

## Protecting Your Phone With Screen Pinning

You can use the screen pinning feature to keep an app in view, so others cannot switch to other apps or access your personal information.

## Turn On Screen Pinning

1. Open the app list and touch **Settings > Security & location > Screen pinning**.
2. Touch the **On/Off** switch.
3. To add security for unpinning, switch on **Lock device when unpinning** and set up a screen lock with or without fingerprint as prompted, or switch on **Ask for unlock pattern/PIN/password before unpinning** if you've set a screen lock already.

## Pin a Screen

1. Ensure that screen pinning is turned on.
2. Open the recent apps list. If the app you want to keep in view is not in recent apps, open it first.
3. Swipe left and right to find the app card. Then touch the app icon at the top of the card and select **Pin**.

## Unpin the Screen

1. To unpin the screen and return to normal use, touch and hold both  and  for virtual navigation; touch and hold both  and  for swipe navigation.
2. If screen lock is enabled for screen pinning, swipe up on the lock screen and draw the pattern or enter the PIN/password. You can also unlock the screen with your fingerprint or face if you have registered it on the phone.

 **NOTE:**

The screen pinning feature is not available for gestures navigation.

# Connecting to Networks

## Connecting to Mobile Networks

### Manage the nano-SIM Cards

When two nano-SIM cards are installed, you can turn off one of them, or choose the default card for calling and data.

#### To turn on or off a card:

1. Open the app list and touch **Settings > Network & Internet > SIM cards**.
2. Touch the on/off switch next to a card.



#### NOTE:

You can touch a card name to edit it and view the operator and number of the card.

#### To set the default card for calling and data connection:

1. Open the app list and touch **Settings > Network & Internet > SIM cards**.
2. Touch **[card name] Mobile data** or **Default SIM for calling** below **Data/Call settings** to select a card as the default.



#### NOTES:

- When two nano-SIM cards are installed, you can allow the non-data SIM card to temporarily use mobile data as it is connected to a VoLTE call. Switch on **Allow network access while in call** to enable this feature. VoLTE support depends on your mobile service provider.

- When placing a call from the call history or the missed call notification, you can use the card for the most recent call of this number no matter which card is set as the default for calling. Switch on **Smart callback** to enable this feature.

## Control Mobile Data Use

1. Open the app list and touch **Settings > Network & Internet > Data usage**.
2. Touch the **Mobile data** switch to enable or disable mobile data use.

## Select Network Mode

1. Open the app list and touch **Settings > Network & Internet > SIM cards > Network mode**.
2. Touch the nano-SIM card name and select network mode for the card.

## Set Access Point Names

To connect to the Internet, you can use the default Access Point Names (APN). And if you want to add a new APN, please contact the service provider to get the necessary information.

1. Open the app list and touch **Settings > Network & Internet > SIM cards > Mobile network**.
2. Touch a card tab at the top if two nano-SIM cards are installed.
3. Touch **Access point names** and then touch .

4. Touch each item to enter the information you get from your service provider.
5. Touch  > **Save** to complete.

 **NOTE:**

To set the APN to default settings, touch  > **Reset to default**.

## Connecting to Wi-Fi

Wi-Fi is a wireless networking technology that can provide Internet access at distances of up to 100 meters, depending on the Wi-Fi router and your surroundings.

To turn Wi-Fi on and connect to a Wi-Fi network:

1. Open the app list and touch **Settings > Network & Internet > Wi-Fi**.
2. Slide the switch to the on position to turn on Wi-Fi.
3. Touch a Wi-Fi network name to connect to it.
4. If the network is secured, enter the password and touch **CONNECT**.

 **NOTES:**

- Your phone automatically connects to previously used Wi-Fi networks when they are in range.
- Your phone can automatically use mobile data network when the Wi-Fi signal is weak. To use this feature, touch **Wi-Fi preferences** in the Wi-Fi screen and switch on **Auto-switch to mobile network**. Additional charges may occur.

# Connecting to Devices

## Connecting to Bluetooth Devices

Bluetooth is a short-range wireless communication technology. Phones or other devices with Bluetooth capabilities can exchange information wirelessly within a distance of about 10 meters. The Bluetooth devices must be paired before the communication is performed.

1. Open the app list and touch **Settings > Connected devices > Connection preferences > Bluetooth**.
2. Slide the switch to the **On** position if Bluetooth is off.
3. Touch **Pair new device**. Your phone automatically scans for and displays the IDs of all available Bluetooth devices in range.
4. Touch the device you want to pair with.
5. If necessary, confirm that the Bluetooth passkeys are the same between the two devices and touch **PAIR**. Alternatively, enter a Bluetooth passkey and touch **PAIR**.

Pairing is successfully completed when the other device accepts the connection or the same passkey is entered.



### **NOTE:**

The Bluetooth passkey may be fixed for certain devices, such as headsets and hands-free car kits. You can try entering 0000 or 1234 (the most common passkeys), or refer to the documents for that device.

## Exchanging Data via NFC

Near Field Communication (NFC) allows your phone to exchange data with another NFC-enabled device when they touch each other or in close proximity.

Depending on the applications that you have installed on your phone, you might be able to use your phone as a transit pass or as an access pass. To use this feature, tap the back of your phone against an NFC-enabled access point, subject to applicable terms and conditions from the particular vendor.

To turn on and use NFC:

1. Open the app list and touch **Settings > Connected devices > Connection preferences**.
2. Slide the **NFC** switch to the on position.
3. If you want to share web pages, contact information, YouTube videos or other content on your phone to another NFC-capable device, touch **Android Beam** and slide the switch to the **On** position.



### **NOTE:**

If two nano-SIM cards which support NFC contactless payments are installed, touch **Dual-SIM NFC settings** to select one for contactless payments. For detailed information, please contact your service provider.

## Using Tap & Pay

You can use tap & pay with your phone to pay for purchases at merchants that accept contactless payments.

## Turn On NFC

To use tap & pay, you must turn on NFC on your phone first.

1. Open the app list and touch **Settings > Connected devices > Connection preferences**.
2. Switch on **NFC**.

## Manage Apps That Use Tap & Pay

Many payment apps let you tap & pay. You can find payment apps in the Play Store app. If you have more than one app that uses tap & pay, you can pick which one to use by default. To show in Settings, your payment apps must work with tap & pay.

To set your default payment app:

1. Open the payment app and turn on tap & pay.
2. Open the app list and touch **Settings > Connected devices > Connection preferences > Tap & pay**.
3. Select your default payment app.

## Turn Off Tap & Pay

You can turn off tap & pay in two ways:

- In your payment app, turn off tap & pay. Not all payment apps support this option.
- Turn off NFC on your phone. Open the app list and touch **Settings > Connected devices > Connection preferences** and then switch off **NFC**. This also turns off Android Beam and other NFC features.

## Connecting to Your Computer via USB

You can connect your phone to a computer with a USB cable and transfer music, pictures, and other files in both directions. Your phone stores these files in the phone storage or on a removable microSDXC card.

If you are using USB tethering, you must turn that off before you can use USB to transfer files between your phone and computer.

### Connect Your Phone to a Computer via USB

1. Connect your phone to the computer with a USB cable.
2. The **Use USB for** options menu will automatically open, and you can choose one of the following options.
  - ▶ **Charge only:** Charge your phone via USB.
  - ▶ **Install driver:** Install the driver needed for some USB connection modes (such as MTP). You only need to install the driver on the same PC once.

 **NOTE:**

You can also install the driver on PC by running the executable file in the new CD-ROM drive.

- ▶ **Media device MTP:** Transfer files on Windows® PC or Mac®.

 **NOTE:**

For Windows XP, please install Media Player 11 (or later version) when you use MTP.

- ▶ **Camera PTP:** Transfer photos or files if MTP is not supported by your computer.

## Disconnect Your Phone From the Computer

To disconnect the phone from the computer, simply unplug the USB cable when you're finished.

## Using USB On-The-Go (OTG)

Your phone supports USB On-The-Go. You can connect the phone and a USB peripheral device (such as a USB flash drive, a USB mouse, or a USB keyboard) with an OTG adapter cable.

For example, when you connect the phone with a USB flash drive, you can browse the files on the flash drive; connect the phone with a USB mouse and you can navigate the phone with the mouse.

You can also connect your phone to another device with a USB cable to charge that device. This feature works only with the devices that support USB charging.

### **NOTE:**

To safely remove a connected USB storage device (such as a USB flash drive), open the app list and touch **Settings > Storage** and find the name of the device. Then touch  next to it.

# Sharing Your Mobile Data Connection Through Tethering

You can use tethering to share your phone's Internet connection with a computer that connects to your phone via USB cable or by Bluetooth.



## NOTE:

You cannot transfer files between your phone and the computer when the phone is USB tethered.

1. Open the app list and touch **Settings > Network & Internet > Hotspot & tethering**.
2. Switch on **USB tethering** or **Bluetooth tethering**.
  - ▶ For USB tethering, connect your phone to the computer with the supplied USB cable before touching **USB tethering**.
  - ▶ For Bluetooth tethering, pair your phone with the computer via Bluetooth and set the computer to obtain its network connection via Bluetooth.



## NOTE:

To stop sharing your data connection, switch off **USB tethering** or **Bluetooth tethering**.

# Phone Calls

## Placing Calls

### Place a Call by Dialing

1. From the home screen, touch .
2. Touch  if necessary to open the dialer and enter the phone number or the contact name with the dialpad. Touch  to delete incorrect digits.

**NOTE:**

As you enter the phone number or the contact name, your phone searches for matching information in your contacts. If you see the number and contact you want to call, touch it to place the call immediately.

3. Touch  below the keypad to dial. Or if two nano-SIM cards are installed, select the one you need to dial.

**NOTE:**

To make an international call, touch and hold the **0** key to enter the plus (+) symbol. Next, enter the country code, followed by the city/area code and then the phone number.

## Place a Call From the Call History

The call history is a list of all the calls you've placed, received, missed or rejected. It provides a convenient way to redial a number, return a call, or add a number to your contacts.

1. From the home screen, touch .
2. Touch  to hide the dialer if necessary to find all calling records.
3. Touch a listing to call back.

### **NOTE:**

Touch  at the top left to filter the records by call type.

## Call Your Contacts

1. From the home screen, touch  > the **CONTACTS** tab to view all your contacts.
2. Touch a contact and then touch its number to make a call.

## Answering or Rejecting Calls

### Answer a Call

When you receive a phone call, slide  down to answer the call.

- or -

If the screen is unlocked, touch .

 **NOTE:**

To silence the ringer before answering the call, press either end of the **Volume** key.

## Reject a Call

When you receive a phone call, slide  up to reject the call; touch  at the bottom left to reject the call and select a preset text message or edit one to send to the caller.

- or -

If the screen is unlocked, touch  to reject the call, or touch  to reject the call and select a preset text message or edit one to send to the caller.

## Using Options During a Call

During a call, you will see a number of on-screen options. Touch an option to select it.

- Touch  or  to turn on or off the speaker.
- Touch  or  to mute or unmute your microphone.
- Touch  to switch to the keypad when you need to enter a code (for example, the PIN for your voicemail or bank account) during the call.

- Touch  to put the call on hold.
- Touch  to make another call separately from the first call, which is put on hold.
- Touch  to go to **Contacts**.
- Touch  to send a message to the caller.
- Touch  to go to **Calendar**.
- Touch  to merge the separate calls into a single conference call.
- Touch  to put the caller you are speaking to on hold, and switch to the other call that has been put on hold.
- Touch  to end the current call.

 **WARNING!**

Because of higher volume levels, do not place the phone near your ear during speakerphone use.

## Managing Multi-Party Calls

When the call waiting and three-way call features are available, you can switch between two calls or set up a conference call.

 **NOTE:**

The call waiting and three-way call features need network support and may result in additional charges. Please contact your service provider for more information.

## Switch Between Current Calls

When you're on a call and another call comes in, your phone screen informs you and displays the caller ID.

### To respond to an incoming call while you're on a call:

- Touch  to answer the call. This puts the first caller on hold and answers the second call.
- Touch  to reject the second call.
- Touch  to reject the second call and select a preset text message or edit one to send to the caller.

### To switch between two calls:

Touch .

## Set Up a Conference Call

With this feature, you can talk to two people at the same time.

1. Place the first call.
2. Once you have established the connection, touch  and dial the second number. This puts the first caller on hold.
3. When you're connected to the second party, touch .

If one of the people you called hangs up during the call, you and the remaining caller stay connected. If you initiated the call and are the first to hang up, all callers are disconnected.

To end the conference call, touch .

# Contacts

You can add contacts on your phone and synchronize them with the contacts in your Google account or other accounts that support contact syncing.

To see your contacts, open the app list and touch **Contacts**.

## Adding a New Contact

1. Open **Contacts**.
2. Touch  to add a new contact.
3. Touch the account field above the name field to choose where to save the contact. If a sync account is selected, the contacts will be synced automatically with your account online.
4. Enter the contact name, phone numbers, email addresses, and other information. Touch **ADD ANOTHER FIELD** if necessary.
5. Touch .

## Importing and Exporting Contacts

You can import/export contacts from/to your nano-SIM card, the phone storage or an installed microSDXC card. This is especially useful when you need to transfer contacts between different devices.

## Import Contacts From the nano-SIM Card

1. Open **Contacts**.
2. Touch  > **Import/Export contacts** > **Import from [nano-SIM card name]**.
3. Check the contacts you need and then touch **IMPORT**.

## Import Contacts From the Phone Storage or the microSDXC Card

1. Open **Contacts**.
2. Touch  > **Import/Export contacts** > **Import from storage**. The vCard file(s) on the phone storage and microSDXC card will be listed.
3. Select the vCard file(s) you need and touch **IMPORT** to import contacts.

## Export Contacts to the nano-SIM Card

1. Open **Contacts**.
2. Touch  > **Import/Export contacts** > **Export to [nano-SIM card name]**.
3. Check the contacts you need and then touch **EXPORT**.

## Export Contacts to the Phone Storage or the microSDXC Card

1. Open **Contacts**.
2. Touch  > **Import/Export contacts**.
3. Touch **Export to phone storage** or touch **Export to storage** if a microSDXC card is installed.
4. Select the account(s) you need and touch **OK**.
5. Touch **EXPORT** to create the file.

## Setting a Ringtone for a Contact

Assign a special ringtone to a contact, so you know who is calling when you hear the ringtone.

1. Open **Contacts**.
2. Touch a contact you want to set a ringtone for and then touch .
3. Touch **ADD ANOTHER FIELD > Ringtone**.



### **NOTE:**

The contact must be saved on the phone, not the nano-SIM card.

4. Touch **Default ringtone**, select a ringtone you like and touch **OK**.
5. Touch .

## Combining Contacts

As your phone synchronizes with multiple online accounts, you may see duplicate entries for the same contact. You can merge all the separate information of a contact into one entry in the Contacts list.

1. Open **Contacts**.
2. Touch  > **Manage contacts** > **Combine duplicate contacts**.
3. Touch **START** if prompted.
4. Duplicate contacts will be identified. The fully duplicate contacts will be combined automatically. You can check the partially duplicate contacts you want to combine.
5. Touch **COMBINE** to combine the selected contacts.

## Joining Duplicate Contacts

You can join duplicate contacts in the Contacts list one by one.

1. Open **Contacts**.
2. Touch a contact and then touch  > **JOIN OTHERS**.
3. Touch the contact whose information you want to join with the first entry.

The information from the second contact is added to the first contact, and the second contact is no longer displayed in the contacts list.

4. To join another contact to the main contact, touch **JOIN OTHERS** and select a contact.

## Separating Contact Information

If contact information from different sources was joined in error, you can separate the information back into individual contacts on your phone.

1. Open **Contacts**.
2. Touch a joint contact you want to separate.
3. Touch  > **SEPARATE**.
4. Touch **OK** to confirm.

## Deleting or Sharing Multiple Contacts

1. Open **Contacts**.
2. Touch  > **Manage contacts** > **Delete multiple / Share multiple**.
3. Check the contacts you want to delete or share.
4. Touch **DELETE** or **SHARE**.

## Setting Call Blocking

The call blocking feature allows you to block calls and messages from certain numbers.

1. Open **Contacts**.
2. Touch  > **Blocked numbers**.
3. Touch .
4. Enter a phone number and touch **BLOCK**.

 **NOTE:**

To unblock a number, touch and hold the number and touch **Delete > OK**.

# Messages

You can use Messages to exchange text messages (SMS), multimedia messages (MMS), and chat messages.

## Sending a Message

1. Open the app list and touch **Messages**.
2. Touch **Start chat**.
3. Add recipients by one of the following ways.
  - ▶ Manually enter the recipient's number or contact name. (You can touch  to enter numbers with a dialpad.) If the phone presents a few suggestions, touch the one you want to add.
  - ▶ Select a recipient from your contact list.
  - ▶ To add more recipients for a group conversation, touch  to add more recipients and then touch .
4. Touch the text box and enter the message text.
5. If you want to send a multimedia message, touch  to add pictures, videos, voice recordings, or location information to the message.
6. Touch . If two nano-SIM cards are installed, you can touch and hold  and choose the nano-SIM card you need.



## NOTES:

- If you add two or more recipients, the message may be sent as a group MMS where everyone can reply and see each other's messages. For group message setting, touch  > **Settings > Advanced > Group messaging** from the Messages screen, or touch  > **Settings > [nano-SIM card name] > Group messaging** if two nano-SIM cards are installed.
- You can also include email addresses as recipients for a multimedia message.
- Do not add any attachment if you want to send a text message. Otherwise you may be charged for a multimedia message.

## Message Options

On the Messages screen, touch and hold a thread and the following options are available.

- Touch  to archive the thread. You can touch  > **Archived** from the Messages screen to find all archived messages.
- Touch  > **Delete** to delete the thread.
- Touch  to add the new number in the thread to your contacts.
- Touch  > **OK** to block the contact or number in the thread, and the thread will be archived. You can touch  >

**Blocked contacts** from the Messages screen to find all blocked numbers.



**NOTE:**

You can touch and hold a thread and touch more to select them, and then choose to archive or delete them.

# Web Browser

## Opening the Browser

Open the app list and touch **Chrome** to launch the web browser. Chrome also opens when you touch a web link - for example, in an email or a text message.

To open a web page or search the web:

1. Open the **Chrome** app.
2. Touch the address box at the top of the web page.
3. Enter the address (URL) of a web page or enter terms you want to search for. You can also touch  to search by voice.
4. Touch a URL or search suggestion or touch the enter key on the keyboard to open the web page or search results.

 **NOTE:**

Touch  >  if you want to stop opening the page.

## Using Multiple Browser Tabs

You can open several web pages at the same time (one page in each tab) and switch between them freely.

### To open a new browser tab:

Touch  > **New tab**. A new browser tab opens.

### To switch between tabs:

1. Touch  (the number shows how many tabs you have opened).
2. Swipe vertically to scroll through the list of opened tabs.
3. Touch the thumbnail of the tab you want to open.



#### **NOTE:**

Swipe a thumbnail horizontally or touch its **X** to close the tab.

## Changing Chrome Settings

You can configure a number of settings to customise the way you browse the web, including several that you can use to control your privacy.

To open the Chrome settings screen, touch  > **Settings**.

# Camera

## Capturing a Photo


1. Open the app list and touch **Camera**.



### NOTE:

You can quickly open the camera or take a snapshot by pressing the **Power** key twice quickly. To use this feature, touch  on the camera screen and touch **Double Tap power key**.

2. Aim the camera at the subject and make any necessary adjustments. PHOTO (auto camera) mode is used by default.

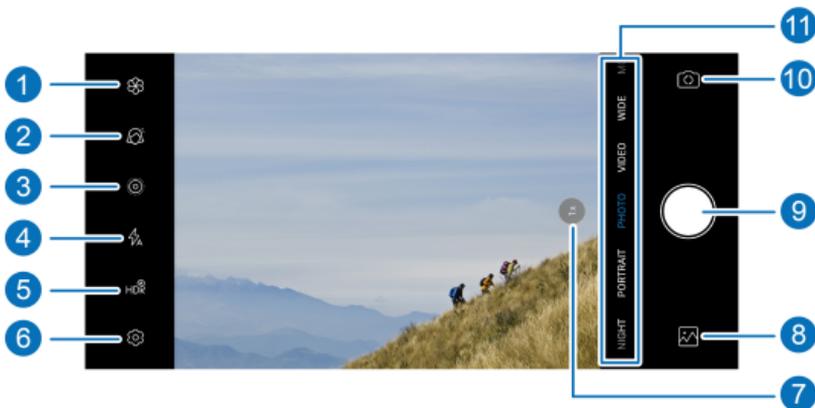

Number	Function
1	Use the filter or add a watermark.
2	Use auto-beauty mode or customise the personal options to beautify faces in the picture.
3	Enable LIVE photo mode. You can shoot LIVE photos, which include a still image and a short video clip.
4	Change the flash setting.
5	Change the HDR setting.
6	Change the camera settings.
7	Zoom control: Touch to switch to 1x zoom, 3x zoom or the wide-angle camera; touch and hold the zoom control and then slide left or right to zoom in or out.
8	View pictures and videos you have taken.
9	Capture a picture.
10	Switch between the front and back cameras.
11	Swipe left or right to switch among the default PHOTO mode, BOKEH mode, NIGHT mode, PORTRAIT mode, VIDEO mode, and WIDE (wide-angle camera) mode. Touch <b>MORE</b> to use other special photo or video camera modes: SPORT, MANUAL, PANORAMA, MONO, MAGIC SHUTTER, TIMELAPSE, and SLOW MOTION.

 **WARNING!**

Keep a safe distance when using the flash. Do not point the flash towards the eyes of people or animals.

 **NOTE:**

You can spread or pinch on the screen to zoom in or out before taking pictures.

The zoom control is not available when the picture resolution is set to 48 MP (8000 x 6000).

3. Touch the area where you want the camera to focus, or leave the camera to autofocus on the centre of the image.

 **NOTE:**

You cannot touch the viewfinder screen to focus when the wide-angle camera is in use.

 **NOTE:**

In PHOTO (auto camera) mode, when you touch the screen to focus and the exposure bar appears beside the focus point, you can drag  up or down to adjust the exposure.

4. Lightly touch .

## Recording a Video

You can record normal-speed video clips. The back camera also allows you to record slow motion or time lapse video.

1. Open the app list and touch **Camera**.
2. Touch **VIDEO**.
3. Aim the camera at the subject and make any necessary adjustments. You can touch any area on the screen that you want the camcorder to focus on before and during recording.
4. Touch  to start recording. You can touch  or  to pause or resume recording, or touch  to save the frame as a photo.
5. Touch  to stop recording.



#### **NOTES:**

- You can spread or pinch on the screen to zoom in or out before and during recording.
- When you touch the screen to focus, the exposure bar appears beside the focus point. You can drag  up or down to adjust the exposure. Touch and hold the focus point to lock the focus.
- To capture slow motion or time lapse videos with the back camera, touch **MORE > SLOW MOTION** or **TIMELAPSE**.

## Using AI Camera Mode

AI camera can automatically adjust the colour and lighting settings to match the scene or subject. For example, if you are taking a picture of flowers, it will choose the best colour for

flowers and the picture will be more vivid.

1. Open the app list and touch **Camera**.
2. Touch **PHOTO**.
3. Touch  on the camera screen and switch on **AI camera**.
4. Aim the camera at the subject. A scene icon will appear in the top corner depending on the subject detected.
5. Touch  to take the photo.

 **NOTE:**

AI camera mode is only available in PHOTO (auto camera) mode.

## Using Wide-Angle Camera Mode

You can use the wide-angle camera to take photos with a wider vision range.

1. Open the app list and touch **Camera**.
2. Touch **WIDE**.
3. Touch  to turn on distortion correction if necessary.
4. Touch  to take the photo.

 **NOTE:**

You cannot touch the viewfinder screen to focus in this mode.

## Using PORTRAIT Mode

You can use PORTRAIT mode to focus on your subject with a depth effect and blur backgrounds.

1. Open the app list and touch **Camera**.
2. Touch **PORTRAIT**.
3. Aim the camera at the subject and you can make the following adjustments.
  - ▶ Swipe the different lighting effects at the bottom of the viewfinder screen to select one for your photo.
  - ▶ Touch  to enable auto AI framing and follow the on-screen instructions to help the camera focus on the subject.
  - ▶ Touch  to enable auto-beauty mode.
4. Touch  to take the photo.

### **NOTE:**

You can change the lighting effect of a picture taken in PORTRAIT mode. Just open the picture in full screen, touch  > **Portrait lighting**, and then select a lighting effect.

## Using SPORT Mode

In SPORT mode, you can make the camera remain focused on a moving subject, or capture faces or typical poses automatically.

### To focus on a moving subject and take a photo:

1. Open the app list and touch **Camera**.
2. Touch **MORE > SPORT**.
3. Touch the icon  to change it to . Then touch a subject in motion for auto-focus tracking in the viewfinder screen.
4. Touch  to take the photo.

### To capture a face or a typical pose automatically:

1. Open the app list and touch **Camera**.
2. Touch **SPORT**.
3. Touch the icon  to change it to . The phone will take a photo automatically when it detects a moving face or a typical pose.

#### **NOTE:**

Touch  at the bottom corner to view the typical poses which can be detected by the camera.

## Using Manual Camera Mode

You can use manual camera mode to adjust more camera options for your photo such as ISO, white balance, exposure, etc.

1. Open the app list and touch **Camera**.
2. Touch **MORE > MANUAL**.

3. Aim the camera at the subject and you can make the following adjustments.
  - ▶ Drag the blue square to any area on the screen that you want to focus on. Touch and hold it to lock or unlock the focus.
  - ▶ Drag the yellow circle to any area on the screen where you want the camera to meter exposure so as to adjust the photo brightness. Touch and hold the circle to lock or unlock exposure.
  - ▶ Touch the camera option icons and use the slider to adjust them, including shutter speed, ISO, overall exposure, white balance, interval for time lapse pictures, and focus.
4. Touch  to take the photo.

## Using Other Camera Modes

Your camera app offers other powerful and interesting camera modes.

- **BOKEH:** Take a photo with the subject in focus and the background blurred. You can adjust the slider to change the shutter aperture.



### **NOTE:**

For a picture taken in BOKEH mode, you can open it in full screen, touch  > **Bokeh Refocus**, and then touch anywhere on the picture to refocus or adjust the blurriness.

- **NIGHT:** Capture pictures in low-light environment.
- **PANORAMA:** Capture panoramic photos both horizontally and vertically.
- **MONO:** Take a photo with only one colour visible. Touch a colour option, and then use the range slider to adjust the colour selection to achieve the desired effect.
- **MAGIC SHUTTER:** Capture water flow, star trail, or car trail.
- **TIMELAPSE:** Set the time interval between each frame when you shot time lapse videos.
- **SLOW MOTION:** Capture slow motion video clips.



**NOTE:**

These camera modes are only available for the back camera.

# Photos

## Opening Photos

Open the app list and touch **Photos**. You'll see all the photos and videos on your phone and, if you turned on “back up & sync,” anything else synced to your Google Photos library.



### NOTE:

You can touch  > **Help** to get detailed help information about Google Photos.

## Sharing Your Photos or Videos

1. Open the app list and touch **Photos**.
2. Touch and hold a photo or video to select it.
3. Touch more items that you want to share.
4. Touch  and select how you want to share the items.

## Deleting Unwanted Photos or Videos

1. Open the app list and touch **Photos**.
2. Touch and hold a photo or video to select it.
3. Touch more items that you want to move to bin.
4. Touch  > **Move to Bin**.



## NOTE:

Items in the bin will be removed after 60 days.

## Restoring a Photo or Video

1. Open the app list and touch **Photos**.
2. Touch  > **Bin**.
3. Touch and hold the photo or video you want to restore and touch **Restore**.

# Music

Open the app list and touch **Music** to play audio files stored on your phone. Music supports a wide variety of audio formats, so it can play music you purchase from online stores, music you copy from your CD collection, and so on

## Viewing Your Music Library

Open **Music** and touch **All songs** to view all your audio files or by categorised lists of artists, albums, and genres. You can also touch **Favourites**, **Recently played** or **Folders** to find songs, or view all your playlists in the **My playlists** section.

## Playing Music

Touch a song in the music library to listen to it. Touch the summary information at the bottom to open the playback screen and control the playing.

## Managing Playlists

Create playlists to organise your music files into sets of songs, so that you can play the songs you like in the order you prefer.

- From any music library category, touch  > **Add to** next to a song to add it to a playlist or create a new playlist.

- In the **My playlists** section, touch a playlist to view its content. You can then touch  at the top right and select to add more songs to the playlist, rename or delete the playlist; touch  > **Remove** next to the song to remove it from the playlist.

# Voice Recorder

**Voice Recorder** enables you to record and listen to voice memos.

## Recording a Voice Memo

1. Open the app list and touch **Voice Recorder**.
2. Touch  to select the audio format of the recording.
3. Touch  to start recording. During recording, you can do the following:
  - ▶ Touch  or  to pause or continue the recording.
  - ▶ Touch  or  to add a time tag or photo tag to the recording.
  - ▶ Touch an added time tag to attach a picture or add text.
4. Touch **Done** to stop recording.
5. Edit the file name and touch **SAVE** to save the recording. If you don't want to save the memo after recording it, touch **DELETE > DELETE** to delete it.

## Playing a Voice Memo

1. Touch  at the top right of the screen to see all recordings.

2. Touch the title of a memo to play it. During the playing, you can touch **View tag** to view all tags, touch  or  to add a time tag or photo tag, or touch and hold a tag to delete it.

## Trimming a Voice Memo

1. While playing a recording, touch **EDIT** to open the editing screen.
2. Drag  or  to trim the recording. You can touch  to preview the trimmed recording.
3. Touch **TRIM**.
4. Edit the new file name and touch **SAVE**.

# Game Assist

Game Assist allows you to turn on Game mode and optimise the options for game apps added in Game Assist.

To use Game Assist:

1. Open the app list and touch **Game Assist**.
2. You can do the following:
  - ▶ Touch the switch to turn on or off Game mode.
  - ▶ When Game mode is on, touch  to optimise the options for the game apps added in Game Assist.
  - ▶ Touch **+** to add your game apps to Game Assist. You can also touch and hold an added app to edit apps, which allows you to rearrange apps or remove them from Game Assist.
  - ▶ When Game mode is on, touch an added app to run it in Game mode.

# Phone Switch

You can use Phone Switch to easily transfer data such as contacts, messages, pictures, audio, videos, etc. from your old Android phone to the new one. You need to install Phone Switch on both phones first.

 **NOTE:**

For detailed help information, open **Phone Switch** and touch  **> Help**.

**To install the Phone Switch app on another phone:**

1. Open the app list and touch **Phone Switch**.
2. Touch **Help another to install the app**.
3. Turn on Bluetooth on another phone.
4. Touch **BLUETOOTH SHARE** and then touch the phone name in the list to send the app installation file to that phone.
5. Install the Phone Switch app on that phone after the installation file has been received.

**To transfer data from the old phone to the new one:**

1. Turn off the mobile data connection on both the new and old phones.
2. Open the Phone Switch app on the new phone and touch **NEW**. A QR code will display on the screen.

3. Open the Phone Switch app on the old phone and touch **OLD**.
4. Use the old phone to scan the QR code on the new phone's screen to connect the two phones via Wi-Fi.



**NOTE:**

If the connection fails, touch **Connection failed?** and follow the on-screen instructions to try again.

5. Check the data you need to transfer on the old phone and touch **START**.
6. Wait until the data has been transferred and imported to the new phone. Touch **DONE**.

# Private Space

Private Space allows you to encrypt your files, lock your apps and manage your account passwords. To access Private Space, you need to draw a pattern, enter a PIN, or use your registered fingerprint.

## Opening Private Space for the First Time

When you use Private Space for the first time, you need to set a new lock pattern or PIN for Private Space.

1. Open the app list and touch **Private Space**.
2. Touch **SETUP PASSWORD**.
3. Draw and redraw a pattern that you must draw to access Private Space, or touch **Or set PIN** to set a PIN that you must enter to access Private Space.



### **NOTE:**

The pattern and PIN are different from the screen lock pattern and PIN.

4. Select the security question and enter your answer, and then touch **DONE**.



### **NOTE:**

If you forget the pattern or PIN you set, you can reset it by entering the answer of the security question.

5. If you have registered a fingerprint in your phone, the phone will prompt you to use your fingerprint to access Private Space. Touch **OK** to confirm.

## Encrypting Pictures/Videos/Files

After the pictures, videos, and files are encrypted, they can be accessed only in Private Space.

1. Open the app list and touch **Private Space**.
2. Enter the lock pattern, PIN or fingerprint you set.
3. Touch **Pictures**, **Videos** or **Files**.
4. Touch  to add pictures, videos, or files from your phone storage or the microSDXC card. You can also take pictures or videos and encrypt them directly.

The added items will be moved into Private Space.



### **NOTE:**

To decrypt pictures, videos, or files, touch and hold an item and touch more to select them, and then touch  > **OK**.

## Locking Apps

After an app is locked, you need to enter the lock pattern, PIN or fingerprint you set before using that app. You can also use face recognition to open the locked apps. See [Set Face Recognition Options](#).

1. Open the app list and touch **Private Space**.
2. Enter the lock pattern, PIN or fingerprint you set.
3. Touch **App lock**.
4. Turn on the switches beside the apps you want to lock.

 **NOTE:**

Touch  on the App lock screen and touch **App lock** to turn on or off this feature, or touch **Lock mode** to set when the locked apps will be locked again after you lock the screen or finish using them.

## Using Password Book

1. Open the app list and touch **Private Space**.
2. Enter the lock pattern, PIN or fingerprint you set.
3. Touch **Password book**. You can add and manage your account description, user name, password and note in the password book.

## Setting Private Space

1. Open the app list and touch **Private Space**.
2. Enter the lock pattern, PIN or fingerprint you set.
3. Touch  and set the following options.

▶ **Security:**

- **Login type:** Select pattern or PIN as the login type to access Private Space and the locked apps.
- **Security question:** Edit your security question and answer.



**NOTE:**

If you forget the lock pattern or PIN, you can touch **Forgot password** on the screen and enter your answer to reset the pattern or PIN.

- **Pattern settings:** Set whether the phone vibrates or whether the pattern is visible when you draw the lock pattern.
  - **Fingerprint access Private Space:** Set whether to use the fingerprint you set to access Private Space and the locked apps.
- ▶ **Private Space backup:** Back up Private Space data. If you forget the pattern or PIN of Private Space, you cannot restore the data.
- ▶ **Private Space restore:** Restore Private Space data.
- ▶ **Backup reminder notification:** Set whether to be notified to back up regularly when Private Space has new data.

# Speech Translator

You can use this app to translate your conversation with other people or the text you input. Open the app list and touch **Speech Translator** to use it.

## Translating the Conversation

1. Open **Speech Translator** and touch **CONVERSATION**.
2. Select the languages at the top for your conversation.



### NOTE:

The translated language can be automatically switched to the local language when you travel to other countries. To enable this feature, touch **MORE > Settings** and switch on **Travel mode**.

3. Touch and hold the microphone button at the bottom to speak. The conversation content will be translated on the screen. You can also touch  beside the content on the screen to listen to it.



### NOTE:

Touch  to divide the conversation screen into two parts. Then you and the other person can speak to each other and read the translation face to face.

## Translating the Text

1. Open **Speech Translator** and touch **TEXT**.
2. Select the languages you need at the top.
3. Enter the text on the screen, or touch the microphone button to input by voice.
4. Touch  to translate.

### **NOTE:**

Touch  beside the translation to listen to it.

## Translating the Content in Other Apps

When the Copy to translate feature is enabled, you can copy the content in other apps and view the translation in a floating window.

To enable and use Copy to translate:

1. Open **Speech Translator** and touch **MORE > Settings**.
2. Switch on **Copy to translate**.
3. If prompted, switch on **Allow display over other apps**.
4. Open the app you need.
5. Touch and hold the text and select the part you want to translate if necessary.
6. Touch the copy icon or option and the icon  will display.

7. Touch  to view the translation of the copied text.

# Settings

Open the app list and touch **Settings**. The **Settings** app contains most of the tools for customising and configuring your phone.

## Network & Internet

### Wi-Fi

Open **Settings** and touch **Network & Internet > Wi-Fi**. You can turn Wi-Fi on or off and configure your Wi-Fi connection. See [\*Connecting to Wi-Fi\*](#).

### Data Usage

Open **Settings** and touch **Network & Internet > Data usage** to check and manage mobile data use. You can view Wi-Fi data usage as well. Touch **Data Saver** to enable or disable it, which prevents apps from using data connection in the background. Apps you're currently using can access data, but may do so less frequently when Data Saver is enabled. You can touch **Unrestricted data** to allow some apps to always have data connection access, even when Data Saver is enabled.



#### **NOTE:**

The data usage is measured by your phone, and your carrier's data usage accounting may differ.

## SIM Cards

Open **Settings** and touch **Network & Internet > SIM cards**. Manage your installed nano-SIM cards, and set the default nano-SIM card for making calls and mobile data. You can also select network mode, control mobile data roaming, and set access point names and other network options. See [Connecting to Mobile Networks](#).

## Hotspot & Tethering

Open **Settings** and touch **Network & Internet > Hotspot & tethering** to share your phone's mobile data connection with PCs or other devices via USB or Bluetooth. See [Sharing Your Mobile Data Connection Through Tethering](#).

## VPN

Open **Settings** and touch **Network & Internet > VPN** to set up and connect to virtual private networks.

## Aeroplane Mode

Open **Settings** and touch **Network & Internet > Aeroplane mode** to turn aeroplane mode on or off. All the phone's radios that transmit voice or data are turned off when aeroplane mode is on.

## Private DNS

To get information from a website, your phone first asks where the website is. Private DNS is a way to help secure these

questions and answers.

By default, your phone uses Private DNS with all networks that can use Private DNS. We recommend keeping Private DNS turned on.

Open **Settings** and touch **Network & Internet > Private DNS** to turn Private DNS on or off, or change its settings.

## Connected Devices

### Bluetooth

Open **Settings** and touch **Connected devices > Connection preferences > Bluetooth**. You can turn Bluetooth on or off and configure your Bluetooth connections. See [Connecting to Bluetooth Devices](#).

### NFC and Android Beam

Open **Settings** and touch **Connected devices > Connection preferences**. You can switch on **NFC** to exchange data with another NFC-enabled device when they touch each other or in close proximity. Touch **Android Beam** and turn it on if you want to share web pages, contact information, YouTube videos or other content on your phone to another NFC-capable device. See [Exchanging Data via NFC](#).

## Tap & Pay

Open **Settings** and touch **Connected devices > Connection preferences > Tap & pay**. You can tap & pay with your phone at the merchants that accept contactless payments. See [Using Tap & Pay](#).

## Printing

Open **Settings** and touch **Connected devices > Connection preferences > Printing** to use the default printing service or other printer plug-ins installed from the Google Play Store or your printer manufacturer.

## Apps & Notifications

### App Info

Open **Settings** and touch **Apps & notifications** to see recently opened apps or all apps installed on your phone and manage them. Touch an app to see its information and configure the available options.

### Notifications

Open **Settings** and touch **Apps & notifications > Notifications** to manage app notifications and status bar options.

## Default Apps

Open **Settings** and touch **Apps & notifications > Default apps** to select the default app for phone calling, messaging, web browsing, etc.

## App Permissions

Open **Settings** and touch **Apps & notifications > App permissions** to check what apps have been allowed to access certain permissions. You can also change the app permissions.

### **WARNING!**

Changing the app permissions may result in the app not working correctly or as originally intended.

## Assist & Voice Input

Open **Settings** and touch **Apps & notifications > Assist & voice input** to select the default assist app, and set the app's related options.

## Opening Links

Open **Settings** and touch **Apps & notifications > Opening links** to set Instant apps options, or touch an installed app to check its supported links and set whether to open the links in the app, and clear the app's defaults.

## Special App Access

Open **Settings** and touch **Apps & notifications > Special app access** to set special access options of apps.

## Battery

Open **Settings** and touch **Battery** to view the battery level, check what has been using the battery, enable different battery saving modes, or manually optimise apps to improve battery life.

## Features

Open **Settings** and touch **Features**. The following features are available.

- **System navigation:** Set the navigation style as virtual navigation, swipe navigation or gestures navigation. See [Setting the Navigation Style](#).
- **One-handed mode:** Enable or disable one-handed mode. See [Using One-Handed Mode](#).
- **Record screen:** Set the video quality and the touch interaction option for screen recording.



### NOTE:

To record the screen and save it as a video, swipe down the status bar with two fingers and touch **Record screen** in the Quick Settings panel, touch  or  to mute or unmute

the recording, and then touch  to start recording and  or  to pause or stop.

- **Gesture & motion:** You can control the phone with special finger gestures or by moving the phone in different ways. Touch the switches to enable each function; touch each function to view how to use it or try it out.



**NOTE:**

The use of phone cover/case may stop certain functions from working.

- **Change phone:** Use Phone Switch to easily transfer data such as contacts, messages, pictures, audio, videos, etc. from your old Android phone to the new one. See [Phone Switch](#).
- **Scheduled power on/off:** Set the day and time when the phone automatically powers on or off. You can also touch the switches on the right to turn the features on or off.
- **Z-POP:** While Z-POP is on, a floating bubble appears on the edge of the screen. You can drag the bubble to reveal navigation operations. Touch **Custom button** to customize the default and expanded buttons.
- **Smart cover:** Turn on the switch to enable the Smart cover feature. When you put the phone in an optional case, you can open or close the case cover to turn on or off the screen display.



**NOTE:**

The case is sold separately.

## Display

Open **Settings** and touch **Display** to configure the display options, including brightness level, Night Light, Display optimization, Read mode, ZTE Locker, wallpaper, screen sleep time, auto-rotate screen, font size, etc.

## Sound

Open **Settings** and touch **Sound**. Adjust different types of volume, toggle sound mode (see [Switching to Vibration or Silent Mode](#)), set Do not disturb options (see [Using Do Not Disturb Mode](#)), set up ringtone and notification sound, use Headset Hi-Fi, set DTS sound effects, and set other sounds and vibration.

## Storage

Open **Settings** and touch **Storage** to view the memory information of the internal phone storage and the microSDXC card (if one is installed).

- **Saving location setting:** When a microSDXC card is installed, you can select **Phone** or **SD card** as the default location for new data, such as captured photos and recorded audio.
- **Device storage:** Touch **Internal shared storage** to get a detailed breakdown of space usage by type.

- **Portable storage:** Safely mount, unmount (eject), and format your microSDXC card. If you need to store large applications, games, and their data in your microSDXC card, you can format the card and use it as part of the device storage.

When you connect a USB storage device (such as a USB flash) to your phone with an OTG adapter cable, you can view its storage status, unmount it, or erase all data on it. See [Using USB On-The-Go \(OTG\)](#).

## Security & Location

Open **Settings** and touch **Security & location** to configure options that help keep your phone and data safe, and manage location services, which help your phone and apps determine your location.

- **Google Play Protect:** Google Play Protect regularly checks your apps and phone for harmful behaviour and warns you about any detected potential harm.
- **Find My Device:** Use Find My Device to locate, lock, or wipe your lost device remotely. The lost device must be signed in to a Google account.
- **Security update:** Check for security update of your system.
- **Screen lock:** Disable the screen lock or enable it with swipe, pattern, PIN, or password. See [Protecting Your Phone With Screen Locks](#).

Touch  beside **Screen lock** to set its options.

- **Lock screen preferences:** Choose how notifications show, allow pulling down from the status bar or adding users from the lock screen, set whether to have a message on your lock screen, and show the lockdown option.
- **Fingerprint:** Set up to 5 fingerprints and enable them to unlock the phone or access Private Space. See [Using Your Fingerprint](#).
- **Face verify:** Use face recognition to unlock the screen or open the apps locked by Private Space. See [Using Face Recognition](#).
- **Smart Lock:** Keep the phone unlocked when connected to trusted devices, in trusted places, or unlocked when your phone is being carried on the body.



**NOTE:**

You need to sign in to your Google account on the phone to use all the **Smart Lock** features.

- **Location:** Manage location services, which help your phone and apps determine your location. To use location-related applications, such as finding your location on Google Maps, you must have location services enabled on your phone.
- **Show passwords:** Display passwords as you enter them.
- **Device admin apps:** View or deactivate apps you have authorised to be device administrators.

- **SIM card lock:**
  - ▶ **Lock SIM card:** Activate or deactivate the PIN lock to require PIN before accessing the nano-SIM card.
  - ▶ **Change SIM PIN:** Change the PIN used to access the nano-SIM card.



#### **NOTE:**

Put all your confidential passwords in a safe place for future use. If you enter the wrong SIM PIN more times than allowed, your nano-SIM card will be locked and you cannot access the mobile phone network. Contact your operator for a PIN Unlock Key (PUK) to restore the nano-SIM card.

- **Encryption & credentials:** Check the encryption status of your phone and set the credential storage options.
- **Trust agents:** View or deactivate trust agents.
- **Screen pinning:** Keep a screen of your choice in view, so that others cannot switch to other apps and access your personal information. See [Protecting Your Phone With Screen Pinning](#).

## Accounts

Open **Settings** and touch **Accounts** to manage your accounts and synchronisation. Touch **Add account** to sign in to or create accounts on your phone. Touch an account you have added to adjust its settings.

## Accessibility

Open **Settings** and touch **Accessibility** to configure accessibility plug-ins and services on your phone, such as using **Colour inversion** or **Display size** for users with sight problems.

## Google

Open **Settings** and touch **Google** to manage settings for Google apps and services.

## System

### About Phone

Open **Settings** and touch **System > About phone** to view phone name, status, legal information, and other information. You can also touch **Emergency information** to edit your medical information and emergency contacts for first responders to read from your lock screen.

### Languages & Input

Open **Settings** and touch **System > Languages & input** to configure options related to system language, input methods and assistance, speech input and output as well as mouse/trackpad input.

## System Update

Open **Settings** and touch **System > System update** to check for system updates and install them when they become available.

## Date & Time

Open **Settings** and touch **System > Date & time** to set date, time, time zone, and the time format. You can also use network-provided data.

## Backup

Open **Settings** and touch **System > Backup** to manage data backup options. To easily restore or switch phones at any time, you can enable automatic backup to Google Drive of important data. You need to sign in to your Google account to use this feature.

## Reset Options

Open **Settings** and touch **System > Reset options** to restore preset apps that are uninstalled, or reset network settings, app preferences, or the phone to factory default status.

## Multiple Users

Open **Settings** and touch **System > Multiple users** to manage the user accounts of your phone.

You can share your phone with other people by creating additional user accounts. Each user with a separate account has his/her own storage space, wallpaper, screen lock and so on. Users can also adjust phone settings like Wi-Fi that affect everyone and update apps for all other users.

By default, a Guest account is available for anyone who needs to use your phone temporarily. You can touch **Add user** to create more user accounts.

If you want users to add more users when the phone is locked, switch on **Add users from lock screen**. Anyone can then open the Quick Settings panel from the lock screen and touch  > **Add user** to create new user accounts.

 **NOTES:**

- Touch  next to an account to configure its options.
- When a guest user has finished using your phone, he/she can touch **Remove guest** in the **Multiple users** menu to delete all his/her data from your phone.

# For Your Safety

## General Safety

	Don't make or receive handheld calls while driving. Never text while driving.		Don't use at petrol stations.
	Keep your phone at least 5 mm away from your body while making calls.		Your phone may produce a bright or flashing light.
	Small parts may cause choking.		Don't dispose of your phone in fire.
	Your phone can produce a loud sound.		To prevent possible hearing damage, do not listen at high volume levels for long periods. Exercise caution when holding your phone near your ear while the loudspeaker is in use.

	<p>Avoid contact with anything magnetic.</p>		<p>Avoid extreme temperatures.</p>
	<p>Keep away from pacemakers and other electronic medical devices.</p>		<p>Avoid contact with liquids. Keep your phone dry.</p>
	<p>Turn off when asked to in hospitals and medical facilities.</p>		<p>Do not attempt to disassemble your phone.</p>
	<p>Turn off when told to on aircraft and at airports.</p>		<p>Only use approved accessories.</p>
	<p>Turn off when near explosive materials or liquids.</p>		<p>Don't rely on your phone as a primary device for emergency communications.</p>
	<p>For pluggable equipment, the socket-outlet shall be installed near the equipment and shall be easily accessible.</p>		

# Radio Frequency (RF) Energy

## General Statement on RF Energy

Your phone contains a transmitter and a receiver. When it is ON, it receives and transmits RF energy. When you communicate with your phone, the system handling your call controls the power level at which your phone transmits.

## Specific Absorption Rate (SAR)

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The guidelines use a unit of measurement known as Specific Absorption Rate, or SAR. The SAR limit for mobile devices is 2 W/kg and the highest SAR value for this device when tested at the head was 0.882 W/kg\*, and when tested at the body was 1.233 W/kg\* with 5 mm distance. As mobile devices offer a range of functions, they can be used in other positions, such as on the body as described in this user manual\*\*.

As SAR is measured utilising the device's highest transmitting power, the actual SAR of this device while operating is typically below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum power required to communicate with the network.

\* The tests are carried out in accordance with EN 50360, EN 50566, EN 50663, EN 62209-1 and EN 62209-2.

\*\* Please see body worn operation.

## **Body Worn Operation**

Important safety information regarding radio frequency radiation (RF) exposure:

To ensure compliance with RF exposure guidelines the phone must be used with a minimum of 5 mm separation from the body.

Failure to observe these instructions could result in your RF exposure exceeding the relevant guideline limits.

## **Limiting Exposure to Radio Frequency (RF) Fields**

For individuals concerned about limiting their exposure to RF fields, the World Health Organisation (WHO) provides the following advice:

Precautionary measures: Present scientific information does not indicate the need for any special precautions for the use of mobile phones. If individuals are concerned, they might choose to limit their own or their children's RF exposure by limiting the length of calls, or using 'hands-free' devices to keep mobile phones away from the head and body.

Further information on this subject can be obtained from the WHO home page <http://www.who.int/peh-emf> (WHO Fact sheet 193: June 2000).

## **Distractions**

### **Driving**

Full attention must be given to driving at all times in order to reduce the risk of an accident. Using a phone while driving (even with a hands-free kit) can cause distraction and lead to an accident. You must comply with local laws and regulations restricting the use of wireless devices while driving.

### **Operating Machinery**

Full attention must be given to operating the machinery in order to reduce the risk of an accident.

## **Product Handling**

### **General Statement on Handling and Use**

You alone are responsible for how you use your phone and any consequences of its use.

You must always switch off your phone wherever the use of a phone is prohibited. Use of your phone is subject to safety measures designed to protect users and their environment.

- Always treat your phone and its accessories with care and keep them in a clean place.
- Keep the screen and camera lens clean. An unclean screen or camera lens may slow down the phone's reaction to your operations or interfere with the image quality.
- Clean your phone and its accessories with a soft material such as cleaning cloth for eyeglass lenses. Do not use alcohol or other corrosive substances for cleaning or allow them to get inside.
- Do not expose your phone or its accessories to open flames or lit tobacco products.
- Do not expose your phone or its accessories to liquid, moisture or high humidity.
- Do not drop, throw or try to bend your phone or its accessories.
- Do not use harsh chemicals, cleaning solvents, or aerosols to clean the phone or its accessories.
- Do not paint your phone or its accessories.
- Do not attempt to disassemble your phone or its accessories. Only authorized personnel can do so.
- Do not place your phone inside or near heating equipment or high-pressure containers, such as water heaters, microwave ovens, or hot cooking utensils. Otherwise, your phone may be damaged.

- Please check local regulations for disposal of electronic products.
- Do not carry your phone in your back pocket as it could break when you sit down.

## Battery Safety

- Using ZTE-unapproved or incompatible battery, charger or power adapter may damage your device, shorten its lifespan or cause a fire, explosion or other hazards.
- The recommended operating temperatures are 0 °C to 35 °C and the storage temperatures are -20 °C to +45 °C. Extreme temperatures can damage the device and reduce the charging capacity and lifespan of your device and battery.



### **WARNING!**

**Do not remove the back cover. The battery is not removable. Removal may cause fire or explosion.**

- Do not change or replace the built-in rechargeable battery in your device by yourself. The battery can only be changed or replaced by ZTE or ZTE authorized service provider.
- Do not place the device or the battery in or near heating equipment, such as microwave ovens, stoves or radiators. Keep the device and the battery away from excessive heat and direct sunlight. If not, the device or the battery may overheat and cause explosion or fire.
- Do not disassemble, squeeze or puncture the device, as this can cause explosion or fire.

- Do not throw the device into a fire to avoid explosion.
- Please disconnect the charger when the battery is fully charged. Overcharging may shorten the battery life.
- When not using the device for a long period, please charge the battery about half and then store the device in a cool dry place.
- If the battery damages or shows signs of swelling or leakage, please stop use immediately and contact ZTE or ZTE authorized service provider for replacement.

## **Small Children**

Do not leave your phone and its accessories within the reach of small children or allow them to play with it. They could hurt themselves or others, or could accidentally damage the phone.

Your phone contains small parts with sharp edges that may cause an injury or may become detached and create a choking hazard.

## **Demagnetization**

To avoid the risk of demagnetization, do not allow electronic devices or magnetic media close to your phone for a long time.

## **Electrostatic Discharge (ESD)**

Do not touch the metallic connectors of the nano-SIM card and the microSDXC card.

## **Antenna**

Do not touch the antenna unnecessarily.

## **Normal Use Position**

When placing or receiving a phone call, hold your phone to your ear, with the bottom towards your mouth.

## **Airbags**

Do not place a phone in the area over an airbag or in the airbag deployment area, as an airbag inflates with great force and serious injury could result. Store the phone in a safe and secure area before driving your vehicle.

## **Seizures/Blackouts**

Your phone can produce a bright or flashing light. A small percentage of people may be susceptible to blackouts or seizures (even if they have never had one before) when exposed to flashing lights or light patterns such as when playing games or watching videos. If you have experienced seizures or blackouts or have a family history of such occurrences, please consult a physician. To reduce the risk of blackouts or seizures, use your phone in a well-lit room and take frequent breaks.

## **Repetitive Strain Injuries**

To minimize the risk of Repetitive Strain Injury (RSI) when texting or playing games with your phone:

- Do not grip the phone too tightly.
- Press the buttons lightly.
- Use the special features which are designed to minimize the times of pressing buttons, such as Message Templates and Predictive Text.
- Take frequent breaks to stretch and relax.

## **Emergency Calls**

This phone, like any other wireless phone, operates using radio signals, which cannot guarantee connection in all conditions. Therefore, you must never rely solely on any wireless phone for emergency communications.

## **Loud Noise**

This phone is capable of producing loud noises, which may damage your hearing. Turn down the volume before using headphones, Bluetooth headsets or other audio devices.

## **Phone Heating**

Your phone may become warm during charging and during normal use.

## Electrical Safety

### Accessories

Use only approved accessories.

Do not connect with incompatible products or accessories.

Take care not to allow metal objects, such as coins or key rings, to contact or short-circuit the USB Type-C jack. Never puncture the surface of the phone with sharp objects.

### Connection to Vehicles

Seek professional advice when connecting a phone interface to the vehicle electrical system.

### Faulty and Damaged Products

Do not attempt to disassemble the phone or its accessories. Only qualified personnel can service or repair the phone or its accessories. If your phone (or its accessories) has been submerged in water, punctured, or subjected to a severe fall, do not use it until you have taken it to be checked at an authorized service center.

# Radio Frequency Interference

## General Statement on Interference

Care must be taken when using your phone in close proximity to personal medical devices, such as pacemakers and hearing aids.

Please consult your doctor and the device manufacturers to determine if the operation of your phone may interfere with the operation of your medical devices.

## Pacemakers

Pacemaker manufacturers recommend that a minimum separation of 15 cm be maintained between a mobile phone and a pacemaker to avoid potential interference with the pacemaker. To achieve this, use the phone on the opposite ear to your pacemaker and do not carry it in a breast pocket.

## Hearing Aids

People with hearing aids or other cochlear implants may experience interfering noises when using wireless devices or when one is nearby.

The level of interference depends on the type of the hearing device and the distance from the interference source. Increasing the separation between them may reduce the interference. You may also consult your hearing aid manufacturer to discuss alternatives.

## **Medical Equipment**

Switch off your wireless device when you are requested to do so in hospitals, clinics or healthcare facilities. These requests are designed to prevent possible interference with sensitive medical equipment.

## **Aircraft**

Switch off your wireless device whenever you are instructed to do so by airport or airline staff.

Consult the airline staff about the use of wireless devices onboard the aircraft and enable aeroplane mode of your phone when boarding an aircraft.

## **Interference in Vehicles**

Please note that because of possible interference with electronic equipment, some vehicle manufacturers forbid the use of mobile phones in their vehicles unless a hands-free kit with an external antenna is included in the installation.

## **Explosive Environments**

### **Petrol Stations and Explosive Atmospheres**

In locations with potentially explosive atmospheres, obey all posted signs to turn off wireless devices such as your phone or other radio equipment.

Areas with potentially explosive atmospheres include fuelling areas, below decks on boats, fuel or chemical transfer or storage facilities, and areas where the air contains chemicals or particles, such as grain, dust, or metal powders.

## **Blasting Caps and Areas**

Power off your mobile phone or wireless device when in a blasting area or in areas where signs are posted to power off “two-way radios” or “electronic devices” to avoid interfering with blasting operations.

## Disposal of Your Old Appliance



1. When this crossed-out wheeled bin symbol is attached to a product, it means the product is covered by the European Directive 2012/19/EU.
2. All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
3. The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.

For this product's recycling information based on WEEE directive, please send an e-mail to [weee@zte.com.cn](mailto:weee@zte.com.cn)

# EU DECLARATION OF CONFORMITY



Hereby, ZTE Corporation declares that the radio equipment type ZTE A2020G Pro is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following Internet address: <http://certification.ztedevices.com>

The device is restricted to indoor use only when operating in the 5150 to 5350 MHz frequency range.

	AT	BE	BG	HR	CY	CZ	DK
	EE	FI	FR	DE	EL	HU	IE
	IT	LV	LT	LU	MT	NL	PL
	PT	RO	SK	SI	ES	SE	UK