

# ZTE V817

## Quick Start Guide

1

**NOTE:** Your home screen extends beyond the initial screen, providing more space for shortcuts, widgets, and folders. Simply swipe left or right to see the extended home screens.

### Opening Applications

1. Touch  if the current screen is not the home screen.
2. Touch .
3. Slide left or right on the screen and touch an app to open it.

### Adding Shortcuts or Widgets

1. Touch the  > .
2. If you want to add a widget, touch **Widgets**.
3. Touch and hold a widget or an app icon and drag it to the home screen.

### Removing Shortcuts or Widgets

1. Touch and hold a widget or shortcut on the home screen.
2. Drag it to  to remove it.

### Organizing Shortcuts With Folders

1. Touch and hold a shortcut on the home screen.
2. Drag the shortcut icon to the  position at the top and release your finger. A new folder is created.

### LEGAL INFORMATION

Copyright © 2013 ZTE CORPORATION.  
All rights reserved.  
No part of this publication may be quoted, reproduced, translated or used in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation.  
**Notice**  
ZTE Corporation reserves the right to make modifications on print errors or update specifications in this guide without prior notice.  
We offer self-service for our smart terminal device users. Please visit the ZTE official website (at [www.zte.com.cn](http://www.zte.com.cn)) for more information on self-service and supported product models. Information on the website takes precedence.

### Disclaimer

ZTE Corporation expressly disclaims any liability for faults and damages caused by unauthorized modifications of the software.  
Images and screenshots used in this guide may differ from the actual product. Content in this guide may differ from the actual product or software.

### Trademarks

ZTE and the ZTE logos are trademarks of the ZTE Corporation.  
Google and Android are trademarks of Google, Inc.  
The **Bluetooth®** trademark and logos are owned by the Bluetooth SIG, Inc. and any use of such trademarks by ZTE Corporation is under license.  
The microSD logo  is a trademark of the SD Card Association.  
Other trademarks and trade names are the property of their respective owners.

Version No. : R1.1  
Edition Time : 20130614  
Manual No. :

3. If needed, drag more shortcuts and drop them into the folder.

### Applying New Wallpapers

You can set the wallpaper for the home screen or lock screen.

1. Touch  >  > **Settings** > **Display** > **Wallpaper**.
2. Select a wallpaper source from **Gallery**, **Live Wallpaper**, or **Wallpaper** and touch the image or animation you want to use as the wallpaper. Some cropping might be needed for the gallery pictures.
3. Touch **Set wallpaper**.

### Knowing the Navigation Bar and Mi-POP

The navigation bar is usually at the bottom of the screen. By touching , , and , you can get back to the previous screen, get back to Home, and view the recently used apps.  
Mi-POP offers an efficient way to use the device. When it is enabled, the navigation bar could be replaced, and larger screen area will be available. Meanwhile, you will see the float Mi-POP icon  on some part of the screen.

10

11

12


13

14

15

16

### Getting to Know Your Phone

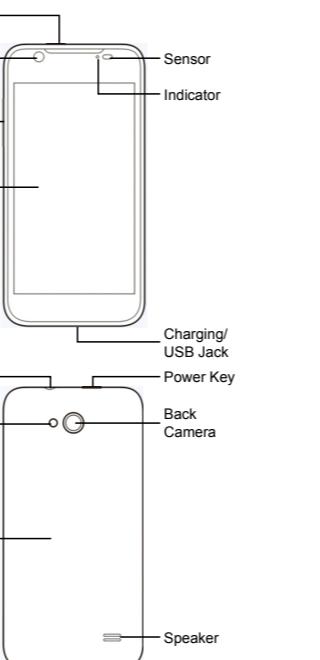

### Starting Up

Switch off your phone before installing or replacing the battery or the SIM card. The microSD card is optional and can be installed and removed while the phone is turned on. Unmount the microSD card before removing it.

1. Place your finger in the slot at the bottom of the back cover to lift and remove the cover.



2. Hold the SIM card with its cut corner oriented as shown and slip it into the card holder.



5



3. Hold your microSD card with the metal contacts facing down and slide it into the microSD card slot.



### Charging the Battery

1. Connect the adapter to the charging jack. Ensure that the adapter is inserted with the correct orientation. Do not force the connector into the charging jack.



5. Press the cover gently back into place until you hear a click.



### Adjusting Volumes

To adjust call volume, press the **Volume Keys** while on a call. To adjust other volumes, follow the steps below.

1. Touch  >  > **Settings** > **Sound** > **Volumes**.

The status bar at the top of the screen provides notification alerts with different icons on the left side. Below are some of the icons and their meanings.

 GPRS connected	 No signal
 3G connected	 Signal strength
 HSPA connected	 Mobile data in use
 Flight mode	 Bluetooth on
 Ringer off	 Connected to a Wi-Fi network
 Vibrate mode	 Wi-Fi in use
 Battery low	 Speaker on
 Battery partially drained	 Phone microphone off
 Battery full	 Alarm set
 Battery charging	 Wired headset connected

2. Drag the sliders to adjust the volume for music, video, games, and other media, the ringtone and notification volume, and the alarm volume.

The notifications depend on the apps installed and you can touch and drag the status bar down to see more information.

 New SMS	 microSD card unmounted
 New MMS	 Updates available
 New Email	 Upcoming event
 New Gmail message	 Call on hold
 New Google Talk instant message	 New Wi-Fi network detected
 Problem with SMS/MMS delivery	 Downloading data

3. Touch **OK** to save.

**TIP:** Press and hold the **Power Key** and then touch  to enable the silent mode, touch  to enable the vibration mode, or touch  to disable the silent mode.

4. Touch **OK**.

### Setting Ringtone and Sounds

#### Setting Ringtone or Notification Sound

1. Touch  >  > **Settings** > **Sound**.
2. Touch **Phone ringtone** or **Default notification**.
3. Select the ringtone you want to use.
4. Touch **OK**.

#### Setting System Sounds

1. Touch  >  > **Settings** > **Sound**.
2. Scroll to the **SYSTEM** section and check the sounds you want to hear or uncheck those you do not need.

1. Touch  >  > **Settings** > **Sound**.
2. Touch **Long press**, **Pattern**, **PIN** or **Password**.

### Setting a Screen Lock

You can protect your phone by creating a screen lock. When enabled, you need to touch and hold an icon, draw a pattern, or enter a numeric PIN or password to unlock the phone's screen and keys.

1. Touch  >  > **Settings** > **Security** > **Screen lock**.
2. Touch **Long press**, **Pattern**, **PIN** or **Password**.

### Power Key

- Press and hold to power on, reset, turn on/off airplane mode, or select phone modes.
- Press to turn off or on the screen display.

### Volume Keys

Press or hold to turn the volume up or down.

### Starting Up

Switch off your phone before installing or replacing the battery or the SIM card. The microSD card is optional and can be installed and removed while the phone is turned on. Unmount the microSD card before removing it.

1. Place your finger in the slot at the bottom of the back cover to lift and remove the cover.



2. Hold the SIM card with its cut corner oriented as shown and slip it into the card holder.



3. Hold your microSD card with the metal contacts facing down and slide it into the microSD card slot.



5



6. Press the cover gently back into place until you hear a click.



7. Press the power key to turn on the phone.



### Charging the Battery

1. Connect the adapter to the charging jack. Ensure that the adapter is inserted with the correct orientation. Do not force the connector into the charging jack.



2. Connect the charger to a standard AC power outlet.



3. Disconnect the charger when the battery is fully charged.



15

16

- Make sure the battery is charged before powering on.
- Press and hold the **Power Key** to turn on your phone.
- To turn it off, press and hold the **Power Key** to open the options menu. Touch **Power off** or **Power Off (Fast)** > **OK**.

### Getting to Know

## Importing Contacts in Batches

1. Touch > .
2. Touch > Import/export > Import from SIM card or Import from storage.
3. If prompted, select an account in which to save the contacts.
4. For importing from the SIM card, touch all the SIM contacts you want to import and touch OK.

For importing from the microSD card, select the vCard file(s) on the microSD card and touch OK to begin importing.

## Sending a Message

1. Touch > , then touch .
2. Enter the recipient(s) and message text. If you want to send an MMS, add subject and attachments.
3. Touch **SIM1 Send** or **SIM2 Send** to send the message.

17



## Setting Up Email Accounts


### Setting Up Gmail

1. Touch > > Gmail.
- NOTE:** If another Gmail account is already set up, touch > settings > ADD ACCOUNT.
2. Enter the email address and password.
3. Touch **Manual setup > Exchange**.
4. Enter **Domain\Username, Password**, and **Server** information.
5. Read the onscreen activation disclaimer and, if prompted, touch **Next**.
6. If prompted, touch **OK** to allow the server to remotely control some of your phone's security features.
7. Configure the settings on the screen, such as **Days to sync**, and then touch **Next**.
8. If prompted, touch **Activate** to activate the Email app as a device administrator.

18

## Playing Music

1. Touch > > Play Music.
2. Touch a category, such as Artists or Albums, to find the song you want to play.
3. Touch the song to play it.

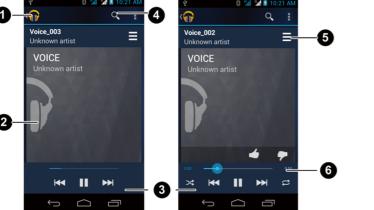

Number	Function
1	Touch to view the current playing list.
2	Album artwork.
3	Playback control. Skip songs, pause and resume playback, use shuffle or repeat. Drag the progress bar to jump to any part of the song.
4	Search for music.
5	Back to Now playing list.
6	Rate the song.

25

## Connecting to PC

To disconnect the device from the computer, simply unplug the USB cable when you're finished.

### Connecting to the Internet

#### Connecting via Wi-Fi

1. Touch > > Settings > Wi-Fi.
2. Slide the **ON/OFF** switch if Wi-Fi is off.
2. Touch .
3. Choose one of the following options:
  - **USB Mass Storage:** Transfer files between PC and your device.
  - **Connect to PC software:** Connect to PC to sync data and install apps.
  - **Media device (MTP):** Transfer media files on Windows, or using Android File Transfer on Mac.
  - **Camera (PTP):** Transfer photos using camera software, and transfer any files on computers that don't support MTP.
3. Touch a network name to connect to it. If the network is secured, enter a password or other credentials. (Ask your network administrator for details.)

- **Share mobile network:** Turn on USB tethering and share your phone's mobile data with the PC.
- **Install driver:** Install the driver needed for connecting your phone to your PC.

26

27

### Setting Up Email

#### Setting Up Email

1. Touch > > Email.
- NOTE:** If another email account is already set up, touch > Account settings > ADD ACCOUNT.
2. Enter the email address and password.
3. Touch **Next** and follow the onscreen instructions.

### Setting Up Corporate Exchange Email

1. Touch > > Email.
- NOTE:** If another email account is already set up, touch > settings > ADD ACCOUNT.

2. Enter the email address and password.
3. Touch **Manual setup > Exchange**.
4. Enter **Domain\Username, Password**, and **Server** information.
5. Read the onscreen activation disclaimer and, if prompted, touch **Next**.
6. If prompted, touch **OK** to allow the server to remotely control some of your phone's security features.
7. Configure the settings on the screen, such as **Days to sync**, and then touch **Next**.
8. If prompted, touch **Activate** to activate the Email app as a device administrator.

19

9. Identify your new account with a unique name and then touch **Next**.

Contact your server administrator for more help.

## Connecting With a Bluetooth Headset

1. Turn on the Bluetooth headset and switch it to pairing mode. Refer to the headset's user guide for more information.
2. Touch > > Settings > Bluetooth.

3. Slide the **ON/OFF** switch if Bluetooth is off. When Bluetooth is on, the icon appears in the status bar.
4. Touch the ID of the headset, or any other device you want to pair with your phone. Enter a passcode if prompted.

5. If necessary, touch the ID of the paired headset to connect with it.
6. Configure the settings on the screen, such as **Days to sync**, and then touch **Next**.
- TIP:** Touch next to the ID of the headset, and touch **Unpair** to end the connection.

20

## Installing Apps From the Google Play Store

There are tens of thousands of games and applications in the Google Play Store for you to download and install. You can send feedback or comments on an application.

Before you begin, make sure that you have signed in to your Google account.

**NOTE:** The content you can access in the Play Store depends on your region and your service provider.

1. Touch > > Play Store.
- NOTE:** The first time you launch Play Store, accept the Google Play Terms of Service.

2. Find the apps you need either by category or by touching .
3. Touch the app to see detailed description.
4. Touch **Install** (free apps) or the price (paid apps). If the app is not free, you need to sign in to your Google Wallet account and select a payment method.

21

**CAUTION:** Once installed, some apps can access many functions or a significant amount of your personal data. The Play Store will show you what the app can access. Touch **Accept & download** (free apps) or **Accept & buy** (paid apps) to proceed, or touch to cancel.


5. Wait for the app to be downloaded and installed automatically. Payment needs to be authorized before paid apps start downloading.

The app is successfully installed when the icon appears in the status bar. You can find the new app after touching > .

22

## Taking a Photo

1. Touch > .
2. Aim the camera at the subject and make any necessary adjustment.

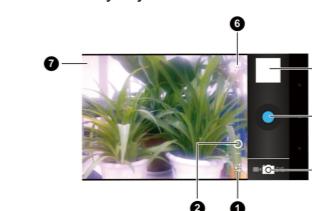


Number	Function
1	Change the camera settings.
2	Hold the circle and slide to zoom in or out.
3	Switch to the camcorder or panorama camera.
4	Capture a photo.
5	View photos and videos you have captured.
6	Switch between the front camera and the back camera.
7	Show the current flash mode.

3. Lightly touch the blue button .

23

## Recording a Video

1. Touch > .
2. Aim the camera at the subject and make any necessary adjustment.

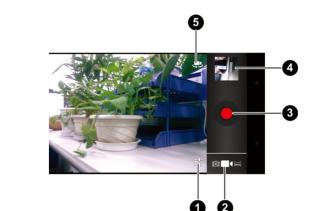

Number	Function
1	Change the camcorder settings.
2	Switch to the camera or panorama camera.
3	Start or stop recording a video.
4	View photos and videos you have captured.
5	Switch between the front camera and the back camera.

3. Touch to start and to stop recording.

24

	Avoid any contact with liquid, keep it dry
	Switch off when instructed in hospitals and medical facilities
	Do not attempt to disassemble
	Switch off when instructed in aircrafts and airports
	Only use approved accessories
	Switch off in explosive environments
	Do not rely on this device for emergency communications

32

## Managing the Phone Storage

### Deleting Old Messages

There are several things you can do to make your battery last longer.

- Turn on Wi-Fi, Bluetooth, GPS, mobile data, auto-sync only when you need to.
- Lower the screen brightness.

You phone automatically searches for Wi-Fi networks in range and displays their names and security settings. Your phone also connects to previously linked networks when they are in range.

1. Enable the device's Bluetooth and Bluetooth tethering capabilities. Make sure the device is 'visible'. Refer to the device's user guide for more information.

2. Touch > > Settings > Bluetooth.

3. Turn Bluetooth on and touch the device's ID to pair the phone with the device. Enter a passcode if prompted.

4. Touch the ID of the paired device to connect with it. As the icon in the status bar turns blue, your phone is able to use data connection shared by the device.

5. From the home screen, touch > Task Manager and close the apps you do not need but still run in the background.

6. From the home screen, touch > Settings > Sound and uncheck **Vibrate** on touch.

7. Touch > Settings > Sound and uncheck **Vibrate** on touch.

8. From the home screen, touch > Settings > Sound and uncheck **Vibrate** on touch.

9. From the home screen, touch > Settings > Sound and uncheck **Vibrate** on touch.

10. From the home screen, touch > Settings > Sound and uncheck **Vibrate** on touch.

11. From the home screen, touch > Settings > Sound and uncheck **Vibrate** on touch.

12. From the home screen, touch > Settings > Sound and uncheck **Vibrate** on touch.

13. From the home screen, touch > Settings > Sound and uncheck **Vibrate** on touch.

14. From the home screen, touch > Settings > Sound and uncheck **Vibrate** on touch.

15. From the home screen, touch > Settings > Sound and uncheck **Vibrate** on touch.

16. From the home screen, touch > Settings > Sound and uncheck **Vibrate** on touch.

17. From the home screen, touch > Settings > Sound and uncheck **Vibrate** on touch.

18. From the home screen, touch > Settings > Sound and uncheck **Vibrate** on touch.

19. From the home screen, touch > Settings > Sound and uncheck **Vibrate** on touch.

20. From the home screen, touch > Settings > Sound and uncheck **Vibrate** on touch.

21. From the home screen, touch > Settings > Sound and uncheck **Vibrate** on touch.

22. From the home screen, touch > Settings > Sound and uncheck **Vibrate** on touch.

23. From the home screen, touch > Settings > Sound and uncheck **Vibrate** on touch.

24. From the home screen, touch > Settings > Sound and uncheck **Vibrate** on touch.

25. From the home screen, touch > Settings > Sound and uncheck **Vibrate** on touch.

26. From the home screen, touch > Settings > Sound and uncheck **Vibrate** on touch.

27. From the home screen, touch > Settings > Sound and uncheck **Vibrate** on touch.

28. From the home screen, touch > Settings > Sound and uncheck **Vibrate** on touch.

29. From the home screen, touch > Settings > Sound and uncheck **Vibrate** on touch.