

**ZTE-G R222**  
**Mobile Phone**  
**User Manual**

## **LEGAL INFORMATION**

Copyright © 2012 ZTE CORPORATION.

All rights reserved.

No part of this publication may be excerpted, reproduced, translated or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation.

The manual is published by ZTE Corporation. We reserve the right to make modifications on print errors or update specifications without prior notice.

**Version No. :** R1.0

**Edition Time :** 2012.02.29

**Manual No. :**

## Table of Contents

SECURITY.....	5
SAFETY PRECAUTIONS .....	5
RF EXPOSURE.....	13
LIMITATION OF LIABILITY.....	14
KEY FUNCTIONS .....	16
LOCKING AND UNLOCKING THE KEYPAD .....	18
INTERFACE ICONS .....	19
BATTERY.....	19
REMOVING THE BATTERY.....	20
INSERTING THE SIM CARD .....	21
INSERTING THE MEMORY CARD.....	23
CHARGING THE BATTERY .....	25
POWERING YOUR PHONE ON/OFF .....	26
TURNING THE TORCH ON/OFF .....	26
WRITING TEXT.....	26
HOW TO ADD PEOPLE TO THE PHONEBOOK.....	28

<b>HOW TO MAKE AND RECEIVE CALLS</b> .....	<b>29</b>
<b>HOW TO SEND MESSAGES</b> .....	<b>29</b>
<b>HOW TO RECEIVE MESSAGES</b> .....	<b>30</b>
<b>HOW TO SET USER PROFILES</b> .....	<b>31</b>
<b>HOW TO VIEW CALL HISTORY</b> .....	<b>32</b>
<b>HOW TO CONFIGURE CALL SETTINGS</b> .....	<b>32</b>
<b>HOW TO SET YOUR PHONE</b> .....	<b>32</b>
<b>HOW TO SET YOUR ALARM</b> .....	<b>34</b>
<b>FILE MANAGER</b> .....	<b>34</b>
<b>CAMERA</b> .....	<b>35</b>
<b>VIEW IMAGE</b> .....	<b>35</b>
<b>HOW TO PLAY MUSIC</b> .....	<b>36</b>
<b>HOW TO LISTEN TO FM</b> .....	<b>36</b>
<b>HOW TO USE SERVICES</b> .....	<b>37</b>
<b>QUESTIONS &amp; ANSWERS</b> .....	<b>39</b>
<b>EC DECLARATION OF CONFORMITY</b> .....	<b>46</b>

## **Security**

- To protect your mobile phone from illegal use, take the security measures as follows:
  - Set PIN codes of the SIM card.
  - Set handset password.
  - Set call restrictions.

## **Safety Precautions**

This section includes some important information on safe and efficient operation. Please read this information before using the phone.

## **Operational Precautions**

- Please use your phone properly. When making or receiving a call, please hold your phone as holding a wireline telephone. Make sure that the phone is at least one inch (about two point five centimeters) from your body when transmitting.
- Do not touch the antenna when the phone is in use. Touching the antenna area affects call quality and may cause the phone to operate at a higher power level than needed.

- Some people may be susceptible to epileptic seizures or blackouts when exposed to flashing lights, such as when watching television or playing video games. If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult your doctor before playing video games on your phone or enabling a flashing-light feature on your phone. (The flashing-light feature is not available on all products.)
- Keep the phone out of the reach of small children. The phone may cause injury if used as a toy.

### **Precautions While Driving**

- Please pay attention to the traffic safety. Check the laws and regulations on the use of your phone in the area where you drive. Always obey them.
- Use hands-free function of the phone, if available.
- Pull off the road and park before making or answering a call if conditions require.

## **Precautions for Medical Devices and Facilities**

- When using your phone near pacemakers, please always keep the phone more than eight inches (about twenty centimeters) from the pacemaker when the phone is switched on. Do not carry the phone in the breast pocket. Use the ear opposite the pacemaker to minimize the potential for interference. Switch off the phone immediately if necessary.
- Some phones may interfere with some hearing aids. In the event of such interference, you may consult your hearing aids manufacturer to discuss alternatives.
- If you use any other personal medical device, please consult the manufacturer of your device to determine if it is adequately shielded from RF(radio frequency) energy.
- In those facilities with special demand, such as hospital or health care facilities, please pay attention to the restriction on the use of mobile phone. Switch off your phone if required.

## **Mobile Phone**

- Please use original accessories or accessories approved by the phone manufacturer. Using any unauthorized accessories may affect your mobile phone's performance, damage your phone or even cause danger to your body and violate related local regulations about telecom terminals.
- Turn off your phone before you clean it. Use a damp or anti-static cloth to clean the phone. Do not use a dry cloth or electrostatically charged cloth. Do not use chemical or abrasive cleaners as these could damage the phone.
- As your mobile phone can produce electromagnetic field, do not place it near magnetic items such as computer disks.
- Using the phone near electrical appliances such as TV, telephone, radio and personal computer can cause interference.
- Do not expose your mobile phone to direct sunlight or store it in hot areas. High temperatures can shorten the life of electronic devices.
- Keep your phone dry. Any liquid may damage your phone.
- Do not drop, knock or harshly treat the phone. Rough handling can break internal circuit boards.
- Do not connect the phone with any incompatible enhancement.

- Do not attempt to disassemble the mobile phone or battery.
- Do not store the phone with flammable or explosive articles.
- Do not charge the mobile phone without battery.

### **Precautions for Potentially Explosive Atmospheres**

- Switch off your phone prior to entering any area with potentially explosive atmospheres, such as fueling areas, fuel or chemical transfer or storage facilities.
- Do not remove, install, or charge batteries in such areas. Spark in a potentially explosive atmosphere can cause an explosion or fire resulting in bodily injury or even death.
- To avoid possible interference with blasting operations, switch off your phone when you are near electrical blasting caps, in a blasting area, or in areas posted “Turn off electronic devices.” Obey all signs and instructions.

## **Precautions for Electronic Devices**

- Some electronic devices are susceptible to electromagnetic interference sent by mobile phone if inadequately shielded, such as electronic system of vehicles. Please consult the manufacturer of the device before using the phone if necessary.

## **Safety and General Use in Vehicles**

- Safety airbag, brake, speed control system and oil eject system shouldn't be affected by wireless transmission. If you do meet problems above, please contact your automobile provider. Do not place your phone in the area over an airbag or in the airbag deployment area. Airbags inflate with great force. If a phone is placed in the airbag deployment area and the airbag inflates, the phone may be propelled with great force and cause serious injury to occupants of the vehicle.
- Please turn off your mobile phone at a refueling point, and the same to the place where the use of two-way radio is prohibited.

## **Aircraft Safety**

- Please turn off your mobile phone before the airplane takes off. In order to protect airplane's communication system from interference, it is forbidden to use mobile phone in flight. Safety regulations require you to have permission from a crew member to use your phone while the plane is on the ground.
- If the mobile phone has the function of automatic timing power-on, please check your alarm setting to make sure that your phone will not be automatically turned on during flight.

## **Battery Use**

- Do not short-circuit the battery, as this can cause the unit to overheat or ignite.
- Do not store battery in hot areas or throw it into fire. Otherwise, it will cause explosion.
- Do not disassemble or refit the battery. Otherwise, it will cause liquid leakage, overheating, explosion and ignition of the battery.
- Please store the battery in a cool dry place if you don't use it for a long period.

- The battery can be recharged for hundreds of times, but it will eventually wear out. When the operating time (talk time and standby time) is noticeably shorter than normal, it is time to replace it with a new one.
- Please stop using the charger and battery when they are damaged or show evidence of aging.
- Return the worn-out battery to the provider or dispose of it in accordance with environment regulations. Do not dispose of it in household rubbish.
- Please use original batteries or batteries approved by the phone manufacturer. Using any unauthorized battery may affect your handset performance or may cause danger of explosion, etc.

**Warning:** If the battery is damaged, do not discharge it. If the leakage does come into contact with the eyes or skin, wash thoroughly in clean water and consult a doctor.

## **RF Exposure**

### **Specific Absorption Rate (SAR)**

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organisation ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The guidelines use a unit of measurement known as Specific Absorption Rate, or SAR. The SAR limit for mobile devices is 2.0 W/kg and the highest SAR value for this device when tested at the ear was 1.030 W/kg\*. As mobile devices offer a range of functions, they can be used in other positions, such as on the body as described in this user guide.

As SAR is measured utilising the device's highest transmitting power, the actual SAR of this device while operating is typically below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum power required to communicate with the network.

\* The tests are carried out in accordance with EN 62209-1.

### **Body Worn Operation**

Important safety information regarding radio frequency(RF) radiation exposure.

To ensure compliance with RF exposure guidelines the phone must be used with a minimum of 15 mm separation from the body.


Failure to observe these instructions could result in your RF exposure exceeding the relevant guideline limits.

### **Limitation of Liability**

ZTE shall not be liable for any loss of profits or indirect, special, incidental or consequential damages resulting from or arising out of or in connection with using this product, whether or not ZTE had been advised, knew or should have known the possibility of such damages. The user should refer to the enclosed warranty card for full warranty and service information.

**Note:** The pictures and icons shown in the manual are just schematic drawings for function demonstration. If they are inconsistent with your handset, please take your handset as the standard. If the inconsistency exists in the manual because of the handset function updating, please refer to the follow-up public information from ZTE CORPORATION.

## Key Functions

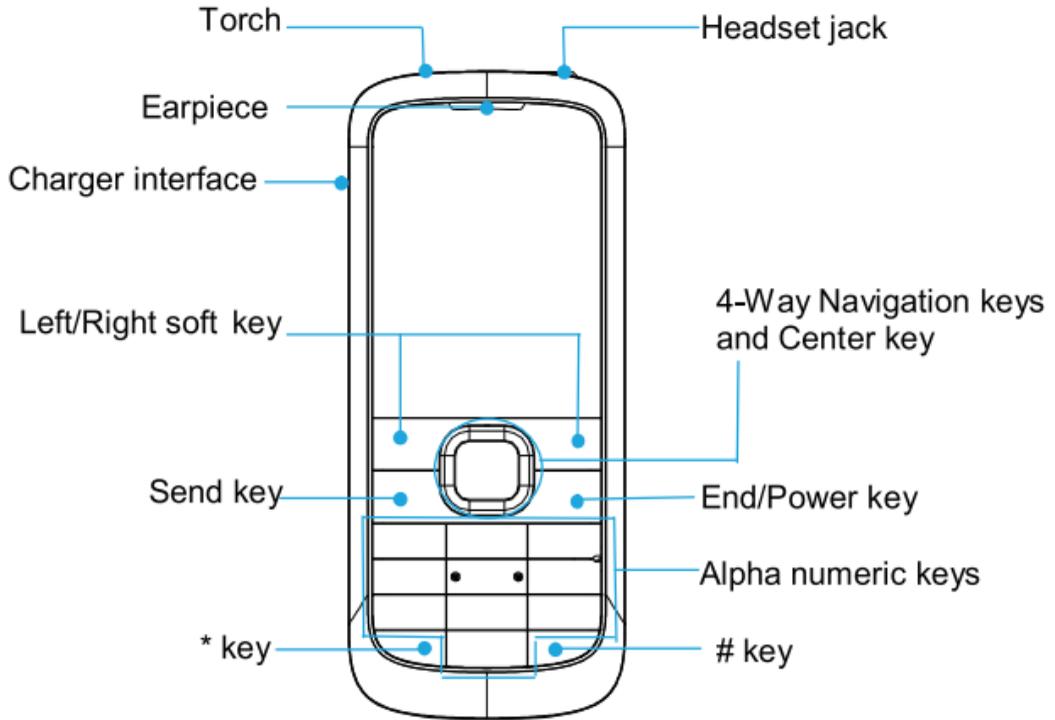

<b>Function</b>	<b>Description</b>
<b>Left soft key</b>	Performs the function indicated at the left bottom of the screen.
<b>Right soft key</b>	Performs the function indicated at the right bottom of the screen.
<b>Center key</b>	Press to confirm actions and make selections.
<b>4-Way Navigation keys</b>	These keys (UP, DOWN, LEFT and RIGHT) allow for navigation through menu options and quick accessing to some function menus.
<b>Send key</b>	Press to dial a phone number or answer a call. Press to view the call history in the standby mode.
<b>End/Power key</b>	Press to exit to the standby mode. Hold to switch on/off the phone.
<b>Alpha numeric keys</b>	Press to enter characters 0-9 and the alphabets from a-z.

**Note:** In this User Manual, “press a key” means to press the key and release it immediately, while “hold a key” means to press the key for at least two seconds and then release it.

### **Locking and Unlocking the Keypad**

In the standby mode, press the **Left soft key** or **Center key** and then press the **\* key** within two seconds to lock the keypad.

Press **Left soft key** and then press the **\* key** within two seconds to unlock the keypad.

Locking the keypad can prevent unintentional operations on it. You can answer an incoming call with the regular operation when the keypad is locked.

## Interface icons


	Signal strength		New SMS, message full when blinking
	Keypad locked		New MMS
	GPRS		Silent
	Battery status		General
	Alarm clock set		Headset
	Outdoor		Meeting
	Missed call		Call diverting

## Battery


The lithium ion battery of the mobile phone can be immediately used after unpacking.

## Installing the battery


1. Pull the battery cover downward and remove it.
2. Insert the battery by aligning the metal contacts with the contacts in the battery slot.
3. Push down the upper section of the battery until it clicks into place.
4. Replace the battery cover and close it gently until you hear a click.

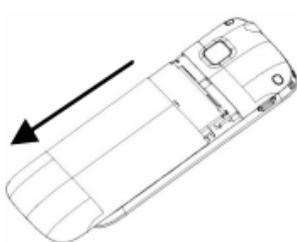

Remove the battery cover

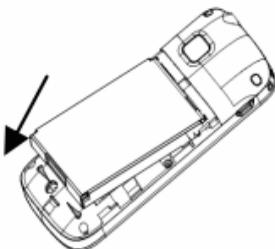


Push down the battery

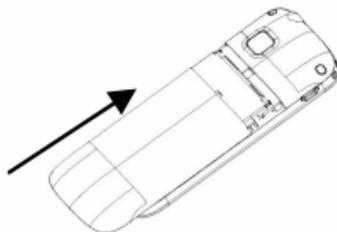


Replace the battery cover

## Removing the battery

1. Make sure that your mobile phone is switched off.
2. Remove the battery cover.
3. Pull the battery up and remove it from the mobile phone.

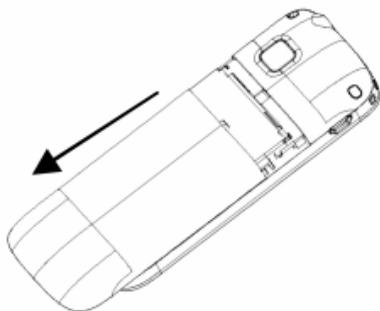

Remove the battery cover

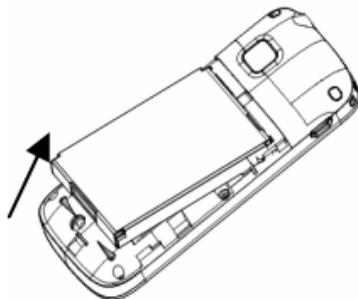


Pull up the battery from here

### **Inserting the SIM Card**

Insert the SIM card as follows:

1. Make sure that the phone is switched off and the charger is disconnected from the phone.
2. Turn the phone over and remove the battery cover.
3. Remove the battery if it is already installed.
4. Hold your SIM card with the cut corner oriented as shown and then slide it into the card holder with the metal contacts facing downward.

5. Replace the battery first.
6. Replace the battery cover.

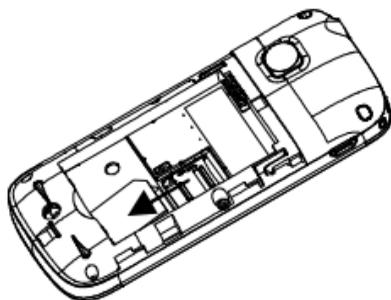

SIM card (Subscriber Identity Module) is a micro-chip that holds your personal information such as names and phone numbers. Your phone won't work without it. If you already have contacts on your SIM card, they can be transferred in most cases.


## **Inserting the Memory Card**

You can use a memory card to expand the storage of the phone. You can store or copy files such as photos, music, and so on.


Do not take out the card or switch off the phone while transmitting or storing data, which may cause data loss or damage to the phone or the card.

Insert the memory card as follows:


1. Open the battery cover and remove the battery.
2. Follow the OPEN arrow to push the metal slot, and flip it up.
3. Insert the card into the metal slot with the metal contacts facing downward until it clicks to the right position.
4. Flip the metal slot back and follow the LOCK arrow to lock it.

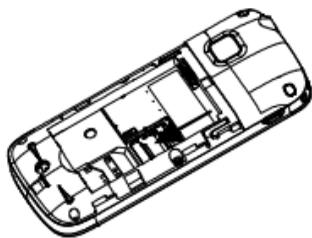


Push the metal slot

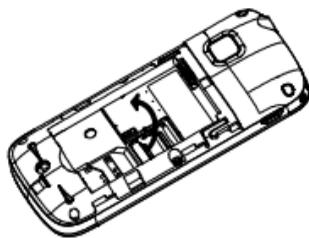

Flip up the metal slot

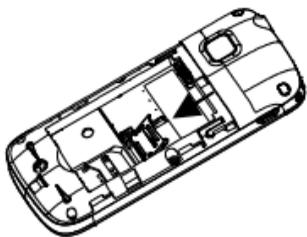

Insert the memory card

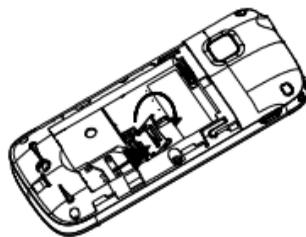

Flip the metal slot back and lock it

## Charging the Battery

Your phone is powered by a rechargeable battery. For maximum battery performance, it is recommended that you first use up the battery power and then charge it completely. A new battery's full performance is achieved only after three complete charge and discharge cycles.

1. Connect your travel adapter to the left side of your mobile phone as shown in the diagram.
2. Connect the other end of the travel adapter to the mains socket.
3. When you charge the battery, the battery charging indicator appears.
4. When the battery is fully charged, disconnect the charger.



## **Powering your Phone on/off**

Make sure that your SIM card is in your mobile phone and that the battery is charged.

Hold the **End/Power key** to power on/off the phone. The phone will automatically search for the network.

## **Turning the Torch on/off**

In the standby mode, hold the \* **key** to turn on or off the torch.

## **Writing Text**

- Change input mode: Press the **# key** to change the input mode (input modes: eZi ABC, eZi abc, ABC, abc, 123).
- Input letters: In ABC/abc mode, constantly press the corresponding letter key till the letter appears.

- Input words: In eZi ABC/eZi abc mode, input any letter with a single key press. Press each key only once for every letter. The word changes after each key stroke. Predictive text input is based on a built-in dictionary. When you have finished writing the word and it is correct, confirm it by pressing the **Center key**, **Left soft key** or the **0 key**. If the word is incorrect, press the **Left/Right Navigation keys** to view other matching words found in the dictionary.
- Input digits: In 123 mode, press digit key once to input a digit. In eZi ABC/eZi abc mode, press the digit key, and select the number by pressing the **Navigation keys**. You cannot input 0 in eZi ABC/eZi abc mode. In ABC/abc mode, constantly press the digit key until the number appears.
- Input symbol: Press the **\* key** to enter symbol mode, select the required symbol (common symbols) by pressing the **Navigation keys** and then press the **Left soft key** or **Center key** to confirm it. In eZi ABC/eZi abc mode, press the **1 key**, and select the required symbol (common symbols) by pressing the **Navigation keys**. In ABC/abc mode, constantly press the **1 key** until the required symbol (common symbols) appears.

- Input space: Press the **0 key** to input space. It does not work in 123 mode.
- Delete character: Press the **Right soft key** to clear a character. Hold the **Right soft key** to delete all characters and clear the display.
- Move cursor to left or right: Among the text, press the **Left/Right navigation keys** to move the cursor to left or right.

### **How to Add People to the Phonebook**

There are some numbers that you may want to call again and again, so it makes sense to add these numbers to your Phonebook. You can then access these numbers quickly and easily.

1. Go to **Menu > Phonebook > Add new contact > Select**.
  2. Select to save the number to SIM or phone.
  3. Edit the information and save it.
- You can also save a number right after you've made or received a phone call or a message from someone who is not yet in your Phonebook list.
  - To delete someone from your Phonebook list, first select the name, then select **Options > Delete**.

## How to Make and Receive Calls

The most basic way to make a call is to input the number in the standby mode and press the **Send key**. You can also make a call from the Phonebook list.

- To call someone: Go to **Menu > Phonebook**. Use the **Up/Down Navigation keys** to find the name of the person you want to call. You can also type in the first letter of the name of the person you want to call to find the right name, and press the **Send key**.
- To receive a call, press the **Send key**.
- To end a call, press the **End/Power key**.
- To reject a call, press the **End/Power key**.

Make sure that you are in an area with sufficient coverage to make calls. The strength of the network signal is indicated on the Status Bar of the screen.

## How to Send Messages

You can use your mobile phone to send and receive messages.

1. Go to **Menu > Messages > SMS/MMS > Write message**.

2. Write your message. For more information on input method, see section 'Writing Text'. When you write SMS, press **Options** > **Send to**, and edit the recipient. When you write MMS, you can edit To, Cc, Bcc, Subject and content. In content field, you can select **Options** and then select to add picture, audio, attachment, slide and bookmark text.
3. When you finish writing SMS, select **Options** and then select to send or save the message. When you finish writing MMS, in the MMS editing screen, press **Done**, and select to send or save the message.

### **How to Receive Messages**

Upon receiving a message, the mobile phone will alert you with a ringtone, prompt, or a new message icon.

1. Press **Read** to open the new message. You can also go to Inbox to read the message.
2. Use the **Up/Down Navigation keys** to view the message.

3. While the message is open, use **Options** to Reply, Delete, or Forward the message. You can also call back the sender or save the sender's number. In **Advanced**, you can copy or move all the messages from SIM to phone or phone to SIM.

**Note:** In the **Inbox** interface, Go to **Options > Save to Phonebook > Add new contact** to save the sender's number.

### **How to Set User Profiles**

Go to **Menu > User profiles**. The profile options are: General, Meeting, Outdoor, Silent and Headset. The default settings for each individual profile are preset at the factory. You can select **Options > Activate** to activate a profile. Or you can select **Options > Customize** to edit a profile.

**Note:** The Silent mode can be only selected **On** or **Off**. And the Headset mode can only be activated with the headset connected.

## **How to View Call history**

Go to **Menu > Call center > Call history**.

Missed calls, Dialed calls and Received calls are saved in **Call history**. If the records are full, the earliest saved records will be deleted automatically.

Also, you can view Call timers, Call cost, SMS counter, and GPRS counter in **Call history**.

## **How to Configure Call settings**

Go to **Menu > Call center > Call settings**.

You can set Call waiting, Call divert and Call barring.

In **Advance settings**, you can set Blacklist, Auto redial, Call time display, Call time reminder and Auto quick end.

## **How to Set Your Phone**

You can adjust various settings of your phone. Go to **Menu > Settings**.

- Phone settings: Set Time and date, Schedule power on/off, select Language, set Pref. input method, Display, Greeting text, Auto update of date and time, Flight mode, LCD backlight and Keypad Backlight.

**Note:** In Flight mode, you can only use local program in your phone and all the wireless functions will be turned off.

- Network settings: Set to automatically or manually select network. Set the preferred networks and GPRS connection mode.
- Security settings: Set security features to protect you from unauthorized use of your phone and SIM card. You will be required to input PIN code. If SIM lock is currently set **Off**, select **On**, then input a PIN code to turn it on. You need to input the correct PIN code to unlock your SIM card when you turn on your mobile phone next time.

**Note:** The PUK code is required to unlock the SIM card if you have incorrectly input the PIN code for three consecutive times. The PIN code and the PUK code may be supplied along with the SIM card. If not, contact the network provider.

- Connectivity: View Conn. management and set Data account.
- Restore factory settings: Enter the phone password to restore to the factory settings. Some personal information might be lost if you use this function, so be careful.

**Note:** You may be required to input the phone password in some of the security settings interfaces. The default password is 1234. Go to **Security settings > Change password > Phone password** to change the phone password.

### **How to Set Your Alarm**

Go to **Menu > Organizer > Alarm**. You can view and edit the alarm clocks settings. You can also enable or disable the alarms. By pressing **Edit**, you can set the corresponding features of the alarm according to instructions.

### **File manager**

Go to **Menu > File manager**. You can check all the folders in the phone or memory card, create new ones or rename, delete, or sort, etc. The files you download from the internet will be stored in these folders.

**Note:** When you select **Options > Format**, the data will be lost, so please be careful with this function.

## **Camera**

Go to **Menu > Multimedia > Camera**.

- Take a Photo

Go to **Camera** to take a photo.

Aim the camera at the object and then press the **Center key** to take the shot.

- Configure your camera

Go to **Camera**. Press the **Left soft key** to configure your camera.

## **View Image**

Go to **Menu > Multimedia > Image viewer**.

The images you want to view in Image viewer must be put in the **..\Photos** folder in the phone or memory card, and in **Options > Storage**, the storage must be set to phone or memory card correspondingly. You can select an image and view it.

Image viewer supports: jpeg, jpg, bmp, gif.

## **How to Play Music**

Go to **Menu > Multimedia > Audio player**.

The audio you want to play in Audio player must be put in the **..My Music** folder in the phone or memory card.

You can select an audio and play it.

In **List**, you can press **Options** to refresh list or make personal settings.

Audio player supports: AMR-NB, WAV, MP3, iMelody, MIDI.

## **How to Listen to FM**

Go to **Menu > Multimedia > FM radio**.

With the radio, you can search for radio channels, listen to them, and save them on your device. Note that the quality of the radio broadcast depends on the coverage of the radio station in that particular area. In the FM radio interface, you can press the **Up/Down Navigation keys** to adjust volume, press the **Left/Right Navigation keys** to tune the frequency, and press the **Center key** to pause. Select **Options** to enter the submenu.

## **How to Use Services**

Go to **Menu > Services**. Services allows you to view internet content. In Services you can use the STK(SIM card Toolkit) and WAP.

- **STK**

SIM card Toolkit (STK) services are value-added services provided by your network provider.

Your mobile phone supports STK service, but if your SIM card and network provider do not support the service, these functions can't be used.

- **WAP**

Select **Homepage** to go to your homepage.

Select **Bookmarks** to view the list of saved website addresses.

Select **Recent pages** to view the list of pages you recently visited.

Select **Input address** to go to a page by directly inputting the address.

Go to **Service inbox** to view the service messages.

Go to **Settings > Profiles** to select a profile or add a new one.

Go to **Settings > Browser options**. Select **Timeout** to set timeout. If the timeout period elapsed prior to completion of the operation or the server is not responding, it will show "Connection Failed". During the timeout period, it will keep trying to connect until expired. Select **Show images** to set whether or not to show the images. Select whether or not to enable **Cache** and **Cookies**.

Go to **Settings > Service message settings** to set the service message receiving.

Go to **Settings > Clear cache** to clear cache.

Go to **Settings > Clear cookies** to clear cookies.

## Questions & Answers

If you encounter problems while using the phone, or if it performs abnormally, you can refer to the chart below. If your particular problem cannot be resolved using the information in the chart, contact the dealer where you purchased the phone.

<b>Problem</b>	<b>Possible causes</b>	<b>Possible solution</b>
Poor reception	The network signal is too weak at your current location, for example, in a basement or near a tall building, because wireless transmissions can not effectively reach it.	Move to a location where the network signal can be properly received.
	The network is busy at the current time (for example, during peak times, there may be too much network traffic to handle additional calls).	Avoid using the phone at such times, or try again after waiting a short time.

Problem	Possible causes	Possible solution
	You are too far away from a base station for your service provider.	You can request a service area map from your service provider.
Echo or noise	Poor network trunk quality on the part of your service provider.	Press <b>End key</b> and dial again. You may be switched to a better-quality network trunk or phone line.
	Poor local telephone line quality.	Press <b>End key</b> and dial again. You may be switched to a better-quality network trunk or phone line.

<b>Problem</b>	<b>Possible causes</b>	<b>Possible solution</b>
Unable to select certain features	Your service provider does not support these features, or you have not applied for services that provide these features.	Contact your service provider.
Battery not charge	The battery or battery charger is damaged.	Contact the dealer.
	The phone's temperature is below 0°C or higher than 45 °C.	Adjust the battery charging environment to avoid extremes of temperature.
	Poor contact between the battery and charger.	Check all connectors to make sure all connections have been properly made.

<b>Problem</b>	<b>Possible causes</b>	<b>Possible solution</b>
Shortened standby time	The standby time is related to your service provider system configuration. The same phone used with different service providers' systems will not provide exactly the same length of standby time.	If you are located in an area where signaling is weak, temporarily power off the phone.
	The battery is depleted. In high-temperature environments, battery life will be shortened.	Use a new battery.
	If you are not able to connect to the network, the phone will continue to send out signals as it attempts to locate a base station. Doing so	Change your location to one where the network is accessible, or temporarily turn off your phone.

<b>Problem</b>	<b>Possible causes</b>	<b>Possible solution</b>
	consumes battery power and will consequently shorten standby time.	
Cannot switch your phone on	Battery power has been depleted.	Recharge the phone's battery.
SIM card error	SIM card malfunction or damage.	Take the SIM card to your service provider for testing.
	SIM card inserted improperly.	Insert the SIM card properly.
	Debris on the SIM card contacts.	Use a soft, dry cloth to clean the SIM card contacts.

<b>Problem</b>	<b>Possible causes</b>	<b>Possible solution</b>
Unable to connect to the network	SIM card invalid.	Contact your service provider.
	You are not within the network's service area.	Check the service area with your service provider.
	Poor signal.	Move to an open space, or if you are inside a building, move closer to a window.
Cannot answer incoming calls	You have activated the <b>Call barring</b> feature.	Go to <b>Call center &gt; Call settings &gt; Call barring</b> , and then select <b>Cancel all</b> .

<b>Problem</b>	<b>Possible causes</b>	<b>Possible solution</b>
You cannot make outgoing calls.	You have activated the <b>Call barring</b> feature.	Go to <b>Call center &gt; Call settings &gt; Call barring</b> , and then select <b>Cancel all</b> .
	You have activated the <b>Fixed dial</b> feature.	Go to <b>Settings &gt; Security settings &gt; Fixed dial</b> and select <b>Off</b> .
PIN Code blocked	You have entered an incorrect PIN code three consecutive times.	Contact your service provider. If the service provider provides the SIM card's PUK code, use the PUK code to unlock the SIM card.
Unable to enter information into the Phonebook	The Phonebook's memory is already full.	Delete unnecessary data from the contacts.

## **EC Declaration of Conformity**

It is hereby declared that following designated product:

**C € 1588**

Product Type: GSM Dual-Band GPRS Digital Mobile Phone

---

Model No: ZTE-G R222

---

Complies with the essential protection requirements of the Radio and Telecommunication Terminal Equipment Directive (EC Directive 1999/5/EC) and the Electromagnetic Compatibility Directive(2004/108/EC).

This declaration applies to all specimens manufactured identical to the samples submitted for testing/evaluation.

Assessment of compliance of the product with the requirements relating to the Radio and Telecommunication Terminal Equipment Directive (EC Directive 1999/5/EC) was performed by American TCB(Notified Body No.1588), based on the following standards:

Safety	EN 60950-1:2006/A11:2009
EMC	EN 301 489-1 V1.8.1; EN 301 489-7 V1.3.1; EN 55013:20011/A2:2006; EN 55020:2007;
Radio	EN 301 511 V9.0.2; 3GPP TS51.010-1 V9.4.0
Health	EN 50360:2001; EN 62209-1:2006; EN 62209-2:2010; IEC 62209-2 Edition1.0(2010-03); EN 50332-1:2000; EN 50332-2:2003

This declaration is the responsibility of the manufacturer:

ZTE Corporation

ZTE Plaza, Keji Road South, Hi-Tech, Industrial Park,  
Nanshan District, Shenzhen, Guangdong, 518057, P.R.China

Authorised person signing for the company:

Xu feng Quality Director Of ZTE Corporation

*Name in block letters & position in the company*

Shenzhen, 15<sup>th</sup> Feb 2011

*Place & date*



*Legally valid signature*