

# ZTE



# T203

使用手冊

# 法律聲明

本資料著作權屬中興通訊股份有限公司所有。未經著作權人書面許可，任何單位或個人不得以任何方式摘錄、複製或翻譯。

侵權必究。

對本手冊中的印刷錯誤及與最新資料不符之處我們會及時改進。這些改動不再事先通知，但會編入新版手冊中，中興通訊保留最終解釋權。

Copyright © 2012 ZTE CORPORATION.

中興通訊股份有限公司

地址：深圳市科技南路55號

郵編：518057 電話：(+86) 755 26779999

技術支援網站：<http://www.zte.com.cn>

電子郵件：[mobile@zte.com.cn](mailto:mobile@zte.com.cn)

# 目錄

1	安全事項.....	5
1.1	安全須知.....	5
1.2	安全警告和注意事項.....	5
1.3	駕駛車輛時使用手機注意事項.....	6
1.4	醫用設備及公共醫療場所.....	6
1.5	日常使用.....	6
1.6	可能引起爆炸的地點及爆破區.....	7
1.7	電子設備.....	8
1.8	汽車安全.....	8
1.9	飛機上的注意事項.....	8
1.10	電池禁用.....	9
1.11	使用充電器的注意事項.....	9
1.12	清潔和維護.....	10
2	免責聲明.....	11
3	您的手機.....	12
3.1	簡述.....	12
3.2	手機概觀.....	12
3.3	按鍵及功能.....	13
4	使用入門.....	15
4.1	安裝電池和(U)SIM卡.....	15

4.2	為電池充電.....	16
4.3	安全密碼.....	17
4.3.1	手機密碼.....	17
4.3.2	PIN碼.....	18
4.3.3	PIN2碼.....	18
4.3.4	PUK碼.....	18
4.4	安全設定.....	19
5	基本使用.....	20
5.1	開機/關機.....	20
5.2	主要指示符號.....	20
5.3	主菜單.....	21
5.4	鍵盤鎖.....	22
5.5	撥打接聽電話.....	22
5.6	撥打緊急電話.....	23
5.6.1	緊急呼救設定.....	23
5.6.2	撥打緊急電話.....	24
5.7	設定快速撥號.....	24
5.8	通話設定.....	25
5.9	通話記錄.....	26
6	文本輸入.....	27
7	電話簿.....	28
7.1	新增名片.....	28
7.2	搜尋名片.....	28

7.3	其他操作選項 .....	29
8	簡訊 .....	30
8.1	發送簡訊 .....	30
8.2	簡訊設定 .....	30
9	其他功能 .....	31
9.1	生活备忘 .....	31
9.2	日曆 .....	31
9.3	計算機 .....	31
9.4	調頻收音機 .....	32
10	設定 .....	33
10.1	情景模式 .....	33
10.2	手機設定 .....	33
10.3	網路設定 .....	34
10.4	語音播報 .....	34
	10.4.1 新來電、簡訊語音播報 .....	35
	10.4.2 待機撥號語音播報 .....	35
11	簡單故障排除 .....	36
12	技術參數 .....	40

# 1 安全事項

## 1.1 安全須知

- 如果您的手機丟失或被竊，請按運營商相關規定掛失(U)SIM卡，這將使您免受他人冒打電話帶來的經濟損失。
- 爲使您的手機免受誤用，請採取防範措施，如：
  - 開啓(U)SIM卡的PIN碼。
  - 開啓手機密碼。
  - 儘量隨身攜帶。

## 1.2 安全警告和注意事項

- 請正確使用手機。撥打或接聽電話時，按照使用有線電話的方式手握手機，然後直接對著話筒講話，並確保手機與身體保持適當距離。
- 通話期間請勿觸摸或覆蓋天線區域（手機背部上方區域），以免影響通話效果、耗費更多電量，從而減少通話時間和待機時間。
- 有些人在閃爍的燈光下（如看電視），可能易於發作癲癇或眩暈。如果您有過類似的發病史，在玩手機遊戲或使用閃燈功能前請先向醫生諮詢。
- 請將手機放在兒童難以觸及的地方，以免兒童將其當成玩具，造成人身傷害。

## 1.3 駕駛車輛時使用手機注意事項

駕車時請遵照相關交通法規，注意交通安全。

## 1.4 醫用設備及公共醫療場所

- 在某些醫用設備如心臟起搏器旁使用手機時需注意：保持開著的手機與這些醫用設備之間至少20cm的距離；不要把手機放在胸前口袋中；應使用與佩戴起搏器的不同側的耳朵聽電話，以減少潛在干擾；必要時請關閉手機。如有其它問題請在使用之前向該醫用設備生產廠家諮詢瞭解。一些數字手機可能會對某些助聽器產生干擾，如果出現了這類干擾，請與助聽器製造商聯繫尋求解決辦法。
- 如果您還有其它個人醫用設備（如植入耳蝸等），請向這些設備製造廠家諮詢，以確定這些設備是否能夠遮罩周圍的射頻信號。
- 在醫院或休養院等有特殊要求的場所，請注意手機的使用限制。若有要求，請關閉手機。

## 1.5 日常使用

- 您只能使用原配的或經廠商認可的配件。使用任何未經認可的配件，都有可能影響手機的使用性能，違反本手機的保修條款以及國家關於通信終端產品的相關規定，甚至會導致人身危害。

- 清潔手機時請先關機，並使用微潮且乾淨的防靜電布。清潔手機表面時注意不要使用清洗劑等化學製劑。
- 您的手機會產生電磁場，請不要放置在磁存儲媒質附近，如電腦磁片等。
- 在電視、電話、收音機和個人電腦等電器設備附近使用手機可能會引起干擾。
- 請不要將您的手機暴露在強烈日光之下，以免過度受熱而損壞。
- 請避免各種液體進入手機內部，以免造成損壞。
- 請不要扔放、敲打手機，粗暴地對待手機會毀壞內部電路板。
- 請不要與其它不配套的設備連接。
- 請勿拆卸手機。
- 請不要將易燃、易爆物品與手機放在一起，以免發生危險。

## 1.6 可能引起爆炸的地點及爆破區

- 在進入因潛在因素可能引起爆炸的區域之前（如油料倉庫，化學工廠等有爆炸性生產過程的區域），如果手機不是專門為這種區域使用而設計的，請您先關閉手機。
- 在這類區域，請不要取出、安裝電池，也不要給手機充電，因為在這些環境中，火花可能引起爆炸或火災，造成人身傷害。



- 爲了避免干擾爆破作業，在爆炸區的電雷管附近，以及貼有關閉手機等類似標語指示的地方，請遵守相關規定關閉手機。

## 1.7 電子設備

使用包括手機在內的射頻設備可能會對一些遮罩性能不好的電子設備造成干擾，如機動車輛中的某些電子系統，必要時使用手機前請諮詢該設備製造商。

## 1.8 汽車安全

- 安全氣囊、剎車、速度控制系統與油料噴射系統應不受無線傳輸的影響，如您遇到如上問題，請與汽車經銷商聯繫。但請注意不要將手機放在安全氣囊上方或安全氣囊展開後能夠觸及到的區域，以免氣囊膨脹時產生的外力推動手機對車主造成傷害。
- 在加油時請關閉您的手機，同樣的情況也適用於禁止使用雙向無線設備的地方。

## 1.9 飛機上的注意事項

在飛機起飛前請關閉手機。爲防止對飛機通信系統的干擾，在飛行中禁止使用手機進行無線通訊。在飛機未起飛時使用手機應按照安全規定征得機組人員許可。

## 1.10 電池禁用

- 請不要將電池短路，以免損壞電池、產生熱量及引起火災。
- 禁止將電池放在高溫下或丟入火中，以免引起爆炸。
- 請勿試圖拆開電池。
- 如果一段時間內不使用電池，請將其放電並存放在乾燥、避光、涼爽的地方。
- 當電池和充電器已經損壞或明顯老化時請停止使用。
- 請將廢舊電池返還給供應商或是放在指定的回收點，而不能放在家庭垃圾中。

提示：

假如電池破損，應避免接觸裡面的物質，若被沾染到皮膚，應用大量的清水沖洗，必要時請尋求醫生的幫助。

## 1.11 使用充電器的注意事項

- 禁止短路充電器，否則會引起觸電、冒煙和充電器損壞。
- 請不要在電源線損壞的情況下使用充電器，否則可能會導致起火和觸電。
- 請及時清潔積在電源插座上的灰塵。
- 請不要把盛水的容器等放在充電器旁，以免水濺出造成充電器過熱、漏電和故障。

- 請不要拆卸或改裝充電器，否則會導致人身傷害、觸電、起火和充電器損壞。
- 請不要在浴室等高濕度的地方使用充電器，否則會導致觸電、起火或充電器損壞。
- 請不要用濕手接觸充電器、電線和電源插座，否則可能會導致觸電。
- 不要將重物放在電源線上或試圖改裝電源線，否則可能會造成觸電或起火。
- 在清潔和維護前請先將電源插頭從插座裡拔出。拔插頭時要抓住充電器，硬拉電源線會損壞電源線，可能引起觸電或起火。
- 請不要在下列地方充電：陽光過強溫度過高的地方；潮濕、多灰的地方或振動大的地方（容易引起故障）。

## 1.12 清潔和維護

- 請保持本產品的乾燥。雨水、濕氣和各種液體都可能腐蝕電子線路，造成產品的損壞。
- 請用柔軟的幹布清潔本產品。
- 請勿用酒精、稀釋劑或苯等溶液擦拭本產品。

## 2 免責聲明

- 對於超越我們責任能力範圍的自然災害（如：地震、水災等）而導致的損失，本公司不承擔任何責任。
- 在任何情況下，對於伴隨本產品的使用而帶來的任何損失（包括依照手冊說明使用而導致的損失），諸如：公司利潤的損失、信譽損失、營業中斷、或存儲資料的丟失/改變等，以及因此導致的任何特別的、意外的、連帶的或間接的損失，本公司不承擔任何責任。
- 對由於不當使用非本公司指定的通訊硬體或軟體而導致的損失，本公司不承擔任何責任。
- 對於通過使用本產品獲得的資訊、資料、檔或其他產品與服務，本公司不提供任何形式的保證與技術支援，且對於使用者對這些資訊、資料、檔或其他產品與服務的使用，不承擔任何責任。
- 對於通過本產品使用的協力廠商軟體，本公司不承擔任何形式的擔保與技術支持責任。
- 本手冊的內容按“現狀”提供。除非適用法律另有規定，否則本公司不對本文檔的準確性、可靠性和內容做出任何類型的、明確的或默許的保證。

## 3 您的手機

### 3.1 簡述

手機支援GSM 900/1800/1900, UMTS 900/2100 MHz網路，並且可在不同網路間無縫切換。

手機性能強大、功能豐富。借助於最新的3G技術帶來的高速寬頻連線，它可以將您的生活與他人即時分享。

### 3.2 手機概觀





### 3.3 按鍵及功能


<b>上鍵</b>	<ul style="list-style-type: none"> <li>待機介面，進入電話簿（所有清單）搜索介面。</li> <li>向上移動游標。</li> </ul>
<b>下鍵</b>	<ul style="list-style-type: none"> <li>待機介面進入主功能表。</li> <li>向下移動游標。</li> </ul>
<b>OK鍵（綠鍵）</b>	<ul style="list-style-type: none"> <li>撥打和接聽電話。</li> <li>待機介面，進入所有通話記錄。</li> <li>功能表選項確認。</li> <li>執行顯示幕左下方選項功能。</li> </ul>

<b>掛機鍵（紅鍵）</b>	<ul style="list-style-type: none"> <li>• 長按此鍵開機/關機。</li> <li>• 結束或拒絕來電。</li> <li>• 功能表介面，返回上一級功能表。</li> <li>• 在執行顯示幕右下方選項功能。</li> </ul>
<b>數字鍵</b>	<ul style="list-style-type: none"> <li>• 輸入數位或字元。</li> </ul>
<b>*鍵</b>	<ul style="list-style-type: none"> <li>• 待機介面，按一下輸入*，按兩下輸入+，按三下輸入W，按四下輸入P。</li> <li>• 編輯介面，調出符號欄。</li> </ul>
<b>#鍵</b>	<ul style="list-style-type: none"> <li>• 輸入#。</li> <li>• 編輯介面，進入輸入法選擇介面。</li> <li>• 待機介面，長按打開或關閉靜音模式。</li> </ul>
<b>音量鍵</b>	<ul style="list-style-type: none"> <li>• 待機介面，調節鈴音音量。</li> <li>• 通話過程中，調節聽筒音量。</li> </ul>
<b>收音機鍵</b>	打開/關閉收音機。
<b>照明燈開關</b>	打開/關閉照明燈。
<b>鍵盤鎖</b>	啓動/關閉鍵盤鎖。

## 4 使用入門

### 4.1 安裝電池和(U)SIM卡

1. 長按**掛機鍵**關機。
2. 如圖下推手機後蓋，然後向上打開。

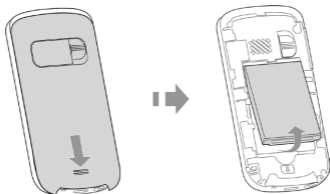

溫馨提示：


請勿使用蠻力將手機後蓋抬起，以免損壞手機後蓋。

3. 將(U)SIM卡的金屬接點朝下，如下圖所示方向，將(U)SIM卡插入卡槽向下推到底。





- 將電池向下推入，如下圖所示步驟，直到卡至定位為止。
- 裝上手機後蓋。

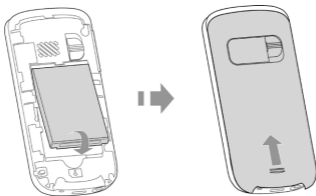

## 4.2 為電池充電

充電僅能在0°C至45°C的溫度範圍內進行。

- 電池在第一次拆封時並未完全充電，同時在第一次充電之前必須先將電力耗盡。為電池充電時，第一次要充電八小時，之後每次充電至少兩小時，以發揮電池的最佳效能。
  - 您可以使用隨附的充電器或USB傳輸線進行充電。
  - 充電時，確認電源線不會阻擋走道同時不會造成危險狀況。
- 當電池在手機內的情況下，將充電器的接線連接到手機的充電器插口中。如下圖所示。



2. 將充電器連接至標準的電源插座。

充電完全後，將充電器的插頭拔掉並取下手機。

溫馨提示：

如果包裝內充電器本體和資料線是分離的，充電前，請先連接資料線和充電器本體。

在不支援資料業務情況下，內裝資料線僅供充電使用。

## 4.3 安全密碼

手機及(U)SIM卡可受到多重安全密碼的保護，以防止被盜用。請妥善保管這些重要的密碼，以備不時之需。

### 4.3.1 手機密碼

如果啟動手機鎖定功能，當手機開機時，您需要輸入手機密碼。預設的密碼為**0000**。

手機在鎖定狀態下只能撥打緊急電話。

## 4.3.2 PIN碼

PIN碼是網路服務提供商提供的一組密碼，開啓PIN碼後，每次開機都需要輸入PIN碼。您可以停用此功能，但手機可能會有被他人使用的風險。某些網路服務提供商不允許您停用此功能。

溫馨提示：

如果您連續三次輸入錯誤的PIN碼，您的(U)SIM卡會被鎖定。您必須輸入PUK碼方可解鎖。要獲取PUK碼，請聯繫您的網路服務提供商。

## 4.3.3 PIN2碼

某些設置需要PIN2碼。操作方式與PIN碼相同。

## 4.3.4 PUK碼

PUK碼（8位數的個人解鎖碼）能夠解開鎖定的PIN碼。如果您連續十次輸入錯誤的PUK碼，(U)SIM卡將會失效。請聯繫您的網路服務提供商以取得新的(U)SIM卡。

## 4.4 安全設定

安全功能保護手機，防止未經授權的使用。

- **密碼開關**：您可以在此子選單中選擇開啓/關閉密碼保護。
  - **手機密碼**：設置為開或關（需要輸入當前手機密碼）。如果設置為開，開機時需要輸入手機密碼。
  - **PIN碼**：設置為開或關（需要輸入當前PIN碼）。如果設置為開，每次開機都需要輸入PIN碼。
- **密碼更改**：您可以變更手機密碼和PIN碼。

## 5 基本使用

### 5.1 開機/關機

1. 長按**掛機鍵**打開或關閉手機。
2. 開機後，手機會自動檢查(U)SIM卡是否可用，然後手機上會按順序出現以下提示：

輸入手機密碼：如果設置了手機密碼。

輸入PIN碼：如果設置了(U)SIM卡PIN碼。

溫馨提示：

PIN（個人識別碼）是由您的網路服務提供商提供的密碼。您需要這個密碼才能使用(U)SIM卡。

手機接受輸入的PIN碼或手機密碼後，便會自動搜尋指定的網路。

提示：

請勿在禁止使用手機的場所開機，以免造成干擾和危險。

### 5.2 主要指示符號

	電池電量		鍵盤鎖
	信號指示		耳機
	新簡訊		鬧鐘
	簡訊滿		靜音模式

	未接電話		漫遊
	來電轉接		

## 5.3 主菜单

在待機介面按下**鍵**進入主功能表。

### 1. 電話簿

- 1.1 搜尋
- 1.2 電話簿新增
- 1.3 刪除所有
- 1.4 複製全部
- 1.5 全部移動
- 1.6 本機號碼
- 1.7 空間資訊

### 2. 簡訊

- 2.1 新增簡訊
- 2.2 收件箱
- 2.3 寄件匣
- 2.4 草稿箱
- 2.5 已寄件匣
- 2.6 (U)SIM卡
- 2.7 設定
- 2.8 空間資訊

### 3. 通話記錄

- 3.1 未接來電
- 3.2 已撥電話
- 3.3 已接來電
- 3.4 刪除所有
- 3.5 通話時間

### 4. 設定

- 4.1 情景模式
- 4.2 手機設定
- 4.3 通話設定
- 4.4 網路設定
- 4.5 安全設定
- 4.6 緊急呼救
- 4.7 語音播報狀態

### 5. 個人助理

- 5.1 生活備忘
- 5.2 日曆
- 5.3 計算機

## 5.4 鍵盤鎖

- 使用鍵盤鎖功能可以防止鍵盤誤操作。
- 鍵盤鎖下推，啟動鍵盤鎖；鍵盤鎖上推，關閉鍵盤鎖。

溫馨提示：

- 要在鍵盤鎖定時接聽來電，請按**綠鍵**。當您結束通話或拒絕接聽來電時，鍵盤會自動重新鎖定。
- 當鍵盤鎖定時，仍能撥打在手機中固有的官方緊急電話號碼。
- 鍵盤鎖鎖定狀態下，上推SOS鍵，仍可撥打緊急電話。

## 5.5 撥打接聽電話

- 在待機介面下，輸入電話號碼，或者按**上鍵**從電話簿中查找電話號碼，按**綠鍵**撥出電話。
- 按兩次**\*鍵**，輸入國際撥號符“+”。
- 按三次**\*鍵**，輸入暫停符“W”，按四次**\*鍵**，輸入暫停符“P”。暫停符“P”、“W”用於撥打分機號碼，先輸入總機號碼，暫停符出現後，再輸入分機號碼。然後按**綠鍵**撥打電話。

輸入暫停符“W”時，手機先撥出前面的號碼，接通後，按**綠鍵**，手機自動播出後面的號碼。

輸入暫停符“P”時，手機會在接通前面的號碼後，自動撥出後面的號碼。

- 按**綠鍵**接聽電話。
- 接聽電話時，長按**0鍵**，將手機聽筒的音量調節到一鍵助聽的音量級別上（如果聽筒音量已經比一鍵助聽音量大，一鍵助聽音量無效）。一鍵助聽中的音量大小可以在**設定 > 情景模式 > 個性化設定 > 音量調節 > 一鍵助聽**中設置。
- 按**紅鍵**結束通話。

## 5.6 撥打緊急電話

### 5.6.1 緊急呼救設定

按下**鍵**4次進入設定介面，選擇**緊急呼救**，進入緊急呼救設置。

- **啓動設定**：打開或關閉緊急呼救功能。
- **音量**：設置緊急呼救警報聲的高低，也可關閉警報聲。
- **緊急號碼**：最多可設置5個緊急號碼。連絡人號碼可以從名片夾導入，也可以從介面上輸入。用戶可以對已設置的號碼進行編輯、刪除操作。緊急號碼中第1個號碼是緊急呼救號碼，第2~5個號碼為發送簡訊號碼。
- **緊急簡訊**：設置緊急呼救簡訊內容。



## 5.6.2 撥打緊急電話

- 如果您已啓動緊急呼救功能，在除了撥打/接聽電話外的任何介面下，上推手機背面的**SOS呼救鍵**，手機進入緊急狀態。
- 手機進入緊急狀態後，手機先發出警報聲，警報聲響起後，如果設定了緊急撥號的號碼，手機會先向您在緊急號碼中所設定的第2~5個號碼發送簡訊，發送簡訊完閉後，向緊急號碼中的第1個號碼撥打求助電話。
- 在啓動SOS向您所設定的緊急號碼發送簡訊中以及撥打緊急號碼過程中，手機中斷緊急呼叫。
- 撥打求助電話接通後，手機自動處於免提狀態。
- 電話掛斷後，手機返回緊急狀態，發出警報聲。
- 在任何情況下，推下**SOS呼救鍵**，手機返回進入緊急狀態前的介面。
- 鎖鍵盤狀態下，推上**SOS呼救鍵**也會啓動緊急呼叫。

## 5.7 設定快速撥號

1. 按四次**下鍵**進入設定介面。選擇**通話設定 > 快速撥號**，進入快速撥號介面。
2. 選擇**狀態 > 開**，打開快速撥號功能。
3. 選擇**速撥列表**，選擇一個**空**位置，按**綠鍵**將這個位置分配給電話簿中記錄。

4. 選擇一個記錄，按兩次**綠鍵**保存設置。

在待機狀態下，長按快速撥號號碼對應的數字鍵直接撥打對應的電話號碼。

## 5.8 通話設定

- **來電轉接**：您可以指定在收到何種來電類型時，要轉移到另一個號碼。具體請諮詢網路服務提供商。

無條件呼叫前轉	無條件轉移所有來電
遇忙呼叫前轉	忙線時轉移來電
遇無應答呼叫前轉	無人接聽時轉移來電
用戶不可及呼叫前轉	手機關機或手機不在服務網路涵蓋範圍時轉移來電
取消所有轉移	取消所有轉移服務

- **呼叫等待**：您可以選擇**登記/取消**，啓用或取消呼叫等待功能。也可以查詢目前狀態。啓動此功能後，在進行通話時，網路可以通知您有新的來電。
- **呼叫限制**：限制某些電話的撥打或接聽。若要啓動或取消通話限制，您必須輸入網路服務提供商提供的網路密碼。具體請諮詢網路服務提供商。

禁撥所有電話	禁止撥打任何電話
禁撥國際長途	禁止撥打國際長途電話
禁止所有來電	無法接收任何來電

漫遊時除歸屬國外禁撥國際長途	在國外時只能撥打所在國家的電話，及網路服務提供商所在地的本國電話
國際漫遊時禁止來電	在本地網路服務提供商服務範圍以外使用手機時將無法接收來電
取消所有限制	取消所有限制設定
更改服務密碼	變更密碼

- **發送本機號碼**：此功能允許用戶在撥打電話時發送或隱藏電話號碼。您也可以選擇**網路設定**，讓網路進行選擇。

溫馨提示：

呼叫前轉，呼叫等待，呼叫限制，發送本機號碼業務需要網路支援，具體請諮詢網路服務提供商。

- **通話時間提醒**：設置通話時週期提醒或關閉通話提醒功能。
- **快速撥號**：開啓了快速撥號功能後，在待機狀態下，長按數位鍵即可撥打所設定的相對應的號碼。
- **免持**：打開或關閉免提功能。

## 5.9 通話記錄

在待機介面下，按**綠鍵**可查看所有通話記錄。或者按3次**下鍵**選擇**通話記錄**選擇查看歷史記錄或時間資訊。

## 6 文本輸入

您的手機提供以下的輸入方法：注音輸入、筆劃輸入、abc/Abc/ABC輸入、數位(123)輸入。

操作	方法
更改輸入法	按 <b>#</b> 鍵更改輸入法。
輸入漢字	在 <b>注音</b> 輸入法下，按數位鍵顯示對應的字元，按 <b>*</b> 鍵進入文字區域，按 <b>上下</b> 鍵選擇漢字，按 <b>綠</b> 鍵確認輸入對應漢字。 在 <b>筆劃</b> 輸入法下，依次按筆劃對應的數位鍵輸入筆劃組合，按 <b>上、下</b> 鍵選擇文字，按 <b>綠</b> 鍵選擇您想要的漢字。
輸入字母	在abc/Abc/ABC輸入法下，重複按下 <b>數字</b> 鍵2~9鍵直到需要的字母出現。按一次即可輸入按鍵的第一個字母，按兩次輸入第二個字母，以此類推。
	待游標移動後，再輸入下一個字元。
輸入數位	在123輸入法下，按相應的數字鍵。
輸入符號	按 <b>*</b> 鍵切換到符號輸入法。
輸入空格	按 <b>0</b> 鍵（注音輸入法，數字輸入法除外）。
刪除字元	按 <b>紅</b> 鍵。
移動游標	按 <b>上、下</b> 鍵。

## 7 電話簿

在待機介面下，按下**鍵** > **電話簿**進入電話簿介面。

電話簿用於保存和管理連絡人資料。您可以添加和編輯新連絡人或按名稱搜索連絡人。此手機最多可以儲存500個記錄，(U)SIM卡的電話簿容量需視網路服務提供商所提供的(U)SIM卡的類型而定。

### 7.1 新增名片

1. 在待機介面下，按下**鍵** > **電話簿** > **電話簿新增**進入新增電話簿介面。
2. 選擇**到手機/到(U)SIM卡**，將名片保存在手機中或(U)SIM卡中。
3. 按**上下鍵**移動游標，選擇**編輯**，輸入姓名、號碼等資訊。
4. 選擇**完成**，完成編輯，選擇**是**，保存記錄。

### 7.2 搜尋名片

1. 在待機介面下，按下**鍵** > **電話簿** > **搜尋**或者直接按**上鍵**，進入電話簿搜尋介面。
2. 手機中顯示所有電話簿記錄清單，輸入記錄的首字母，手機將自動列出所匹配的名片。
3. 選擇所需記錄。

## 7.3 其他操作選項

**刪除所有**：刪除手機或(U)SIM卡中的全部連絡人。

**複製全部/全部移動**：從(U)SIM卡到手機或從手機到SIM卡對電話簿進行複製或移動。

**空間資訊**：查看(U)SIM卡和本機的儲存狀態。

**本機號碼**：編輯本機號碼。

## 8 簡訊

在待機介面下，按**兩次下鍵** > **簡訊**進入簡訊介面。

### 8.1 發送簡訊

1. 選擇**新增簡訊**。
2. 進入編輯簡訊介面，輸入簡訊內容。編輯完成後，選擇**選項** > **儲存**，簡訊保存到草稿箱；選擇**選項** > **僅發送/發送並儲存**，發送簡訊。
3. 輸入接收人的電話號碼，或者選擇**搜尋**，從電話簿中搜索寄件者。
4. 按**綠鍵**發送簡訊。

### 8.2 簡訊設定

您可以查看或更改簡訊設定。一般採用默認設定，如需修改，請聯繫網路服務提供商。如果您的設定和網路服務提供商不一致，可能會導致無法正確收發簡訊。

選擇**簡訊** > **設定**，設置簡訊有效時間，簡訊中心號碼、狀態報告和社區名顯示。

## 9 其他功能

### 9.1 生活备忘

1. 選擇**個人助理 > 生活備忘**，進入生活備忘介面。
2. 選擇**生日、重要日子、吃藥、起床、娛樂、倒數計時或其它**。您可以新建或者編輯主題，您的手機會根據相應的設置到時提醒您。

### 9.2 日曆

提供以月的方式流覽的日曆，並可顯示農曆。

### 9.3 計算機

此手機提供加減乘除等簡單的計算功能。

- 按**數位鍵**輸入數位，按**#鍵**輸入小數點。
- 按**下鍵**選取+、-、×、÷。
- 按**紅鍵**清除前一位數或結果。
- 按**綠鍵**即可計算，按**紅鍵**退出計算器。

溫馨提示：

本計算器精度有限，有可能產生舍入誤差。



## 9.4 調頻收音機

待機介面，上推**收音機鍵**，收聽廣播。

進入收音機，選擇**選項 > 自動搜尋**開始自動搜尋廣播頻道。

當收聽廣播時，按**上、下鍵**更換頻道，按**選項**即可顯示更多選項：

退出	退出收音機
頻道清單	顯示所有頻道
設定頻道	指定一個廣播頻道
自動搜尋	自動搜尋廣播頻道
揚聲器播放	當插入耳機時，使用揚聲器收聽收音機。

提示：

收聽廣播時請選用中等適度音量。持續使用過高音量可能損害您的聽力。因為揚聲器的音量可能很大，所以請勿在使用揚聲器時將手機置於耳邊。

## 10 設定

待機介面，按下**鍵**四次，進入設定介面，對手機進行設定。

### 10.1 情景模式

您可以將手機設為靜音，或進行個性化設計。

- **靜音**：打開或關閉靜音。
- **個性化設定**：可以設定手機鈴音，音量調節或選擇提示音類型。

鈴音設定	選擇語音電話鈴聲、鬧鐘/提醒、簡訊提示音鈴聲； 打開或關閉開機、關機、告警音鈴聲； 設定按鍵及撥號聲類型。
音量調節	設置鈴音音量、按鍵音音量、聽筒音量和一鍵助聽音量。
提示音類型	設置提示音類型為鈴聲、振動、振動加鈴聲、先振動後響鈴或僅燈光。

### 10.2 手機設定

- **時間設定**：打開網路時間或自己設定時間。
- **世界時間**：當關閉網路時間時，選擇城市，手機根據該城市時區資訊調整系統時間日期資訊。

- **自動開機/關機**：設置自動開關機時間。
- **語言選擇**：設定當前顯示的語言。
- **背光時間**：設定背光的時間週期。
- **背光亮度**：調整螢幕的亮度。
- **聽力輔助**：輔助增強接聽。
- **恢復出廠設定**：恢復到原來的出廠設定。您需要輸入手機密碼。預設密碼為0000。

## 10.3 網路設定

- **網路類型**：選擇網路類型為自動、GSM網路或UMTS網路。
- **搜尋網路方式**：設置搜尋信號模式為自動或手動。

## 10.4 語音播報

使用手機過程中，新來電、簡訊或待機狀態下鍵盤輸入電話號碼時，手機通過發出人聲讀出來電、簡訊或按鍵撥號的內容。

溫馨提示：

- 選擇**設定 > 情景模式 > 靜音**，手機啟動靜音狀態時關閉語音播報功能。
- 手機設定語言為繁體中文時語音播報音為粵語，設定語言為英文時語音播報音為英文。

## 10.4.1 新來電、簡訊語音播報

1. 在待機介面下，按四次**下鍵** > **設定**進入設定介面。
2. 選擇**語音播報狀態**。
3. 進入語音播報設定介面，選擇開啓/關閉語音播報功能，調節語音播報音量大小。
  - **來電設置**：來電語音播報功能。
  - **新短信**：開啓/關閉新簡訊語音播報功能。
  - **自動短信播報**：開啓/關閉收件箱中簡訊的語音播報功能。

## 10.4.2 待機撥號語音播報

1. 在待機介面下，按四次**下鍵** > **設定**進入設定介面。
2. 選擇**情景模式** > **個性化設定** > **鈴聲設定** > **撥號按鍵音類型** > **人聲音調**，手機啓動待機狀態下按鍵撥號語音播報功能。

## 11 簡單故障排除

使用本手機時如果遇到問題，或是操作有不正常時，您可以參閱本圖表中的資訊。如果圖表中的資訊無法解決您的特定問題，請聯繫您購買手機的經銷商。

問題	可能原因	可能的解決方式
信號接收不良	您目前所在位置的網路信號比較弱 (例如地下室或靠近大廈)，使得無線電波無法有效傳達。	請移動到可以正確接收網路訊號的位置。
	目前網路占線 (例如，高峰時段網路的流量可能過高，造成無法通話)。	請避免在類似時段使用手機，或稍待片刻再試。
	您與基站的距離過遠。	請向您的網路服務提供商索取服務地區地圖。

問題	可能原因	可能的解決方式
回音或雜訊	可能與您當前佔用的網路中繼線品質不良有關。	請按下 <b>掛機鍵</b> 並重新撥號。也許可以切換到品質比較好的網路中繼線或電話線。
	當地電話線路品質不良。	請按下 <b>掛機鍵</b> 並重新撥號。也許可以切換到品質比較好的網路中繼線或電話線。
無法選取特定的功能	您的網路服務提供商不支援這些功能，或您尚未申請提供這些功能的服務。	請諮詢您的網路服務提供商。
電池無法充電	電池或電池充電器已經損壞。	請聯絡經銷商。
	手機溫度低於-10 °C或高於45 °C。	請注意電池充電時的環境，避免溫度過高或過低。
	電池與充電器之間接觸不良。	請檢查所有接頭，確定所有線路皆正確連接。

問題	可能原因	可能的解決方式
待機時間縮短	待機時間與網路服務提供商的系統設定有關。相同的手機在不同網路服務提供商系統下的待機時間不盡相同。	如果您位於信號微弱的區域，請暫時將手機關機。
	電池耗盡。在高溫環境下，電池壽命將會縮短。	請更換新電池。
	如果無法連接到網路，手機將會持續發射搜尋基站訊號。如此一來，便會持續消耗電池電量，造成待機時間縮短。	請移動到能夠訪問網路的地方，或暫時將手機關機。
無法開機	電池電量已經耗盡。	請儘快將手機的電池充電。
(U)SIM卡錯誤	(U)SIM卡故障或損壞。	請將(U)SIM卡交由網路服務提供商測試。
	(U)SIM卡未正確插入。	請正確插入(U)SIM卡。
	(U)SIM卡接點髒汙。	請使用柔軟的幹布擦拭(U)SIM卡接點。

問題	可能原因	可能的解決方式
無法连接到網路	(U)SIM卡無效。	請聯絡您的網路服務提供商。
	您不在網路服務區域內。	請向網路服務提供商詢問服務區域。
	收訊不良。	請移動到空曠的地方；如果您正在建築物內，請移動到靠近窗戶的地方。
PIN碼被鎖定	您連續三次輸入錯誤的PIN碼。	請聯絡您的網路服務提供商。如果網路服務提供商提供您(U)SIM卡的PUK碼，請使用PUK碼解除鎖定(U)SIM卡。
無法在電話簿中輸入資訊	電話簿記憶體已滿。	請從聯絡人中刪除不必要的資料。



## 12 技術參數

手機規格	GSM 900/1800/1900, UMTS 900/2100 MHz
尺寸	109 mm*50.8 mm*13.5 mm
重量	約86.1 g (包括標準電池)
顯示幕	1.8 英寸 26 萬色 TFT屏
電池規格	鋰離子電池
持續待機時間	約400 小時
持續通話時間	約4 小時
持續FM(收音機)時間	約15 小時
充電時間	約3-4 小時

### 溫馨提示：

上述標注的時間通常為在優化網路環境下所能達到的通話時間和待機時間，實際通話時間和待機時間可能因(U)SIM卡、網路、使用設置、使用情況和環境等不同而有所不同，從而顯著地短於上述標注的時間。使用調頻收音機和內置免提功能也會影響手機的通話時間和待機時間。

# ZTE



# T203

## User manual

## **LEGAL INFORMATION**

Copyright © 2012 ZTE CORPORATION.

All rights reserved.

No part of this publication may be excerpted, reproduced, translated or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation.

The manual is published by ZTE Corporation. We reserve the right to make modifications on print errors or update specifications without prior notice.

## **ZTE CORPORATION**

Address: NO. 55, Hi-tech Road South, Shenzhen, P.R.China

Postcode: 518057

Service Hotline: (+86) 755 26779999

Website: <http://www.zte.com.cn>

Email: [mobile@zte.com.cn](mailto:mobile@zte.com.cn)

# Index

<b>1</b>	<b>Introduction .....</b>	<b>4</b>
1.1	General Precautions .....	4
1.2	Precautions While Driving .....	5
1.3	Aircraft Safety .....	6
1.4	Precautions for Medical Devices and Facilities .....	6
1.5	Precautions for Potentially Explosive Atmospheres .....	7
1.6	Battery Safety .....	7
1.7	Limitation of Liability .....	8
<b>2</b>	<b>Getting Started .....</b>	<b>9</b>
2.1	Insert the SIM Card .....	9
2.2	Insert the battery .....	9
2.3	Charging the battery .....	10
2.4	Battery level indicator .....	11
2.5	Switch your phone On .....	11
<b>3</b>	<b>Get to know your phone .....</b>	<b>12</b>
3.1	Your phone .....	12
3.2	Display Icons .....	13
3.3	Key functions .....	13
3.4	Menu Map .....	15

<b>4</b>	<b>Step by step guide.....</b>	<b>17</b>
4.1	Switch Setting .....	17
4.2	Make and receive a call .....	18
4.3	Add a Contact to your Phone Book .....	19
4.4	Make a call from the Phone Book.....	19
4.5	Messages .....	20
4.6	Text Input methods .....	21
4.7	Phone Book.....	22
4.8	Speed Dial.....	22
4.9	Call History .....	23
4.10	Audio Settings .....	23
4.12	Call Settings.....	25
4.13	Settings > Network Settings.....	26
4.14	Settings > Security Code.....	26
4.15	Voice Broadcasting.....	27
4.16	Organiser > Alarms / Reminders .....	30
4.17	Organiser > Calendar .....	31
4.18	Organiser > Calculator .....	31
4.19	Torch .....	31
4.20	Keylock Switch .....	31
4.21	FM Radio Switch .....	32
4.22	Technical Specifications.....	33
4.23	Warranty Information .....	34
4.24	Network Locked Device .....	34

# 1 Introduction

This section includes some important information on safety and efficient operation. Please read this section before using the phone.

## 1.1 General Precautions

- The antenna is located in the top portion of the handset, behind the display. When you are using the handset try to avoid shielding the antenna area with your hand. Hold the handset between your thumb and fingers towards the base of the handset. This will leave the antenna area clear to transmit and receive signals. Touching the antenna area affects call quality and may cause the phone to operate at a higher power level than needed.
- Keep the phone out of the reach of small children. The phone may cause injury or be damaged.
- Protect the handset from liquids. Only use a soft dry cloth to clean the handset.
- The handset will be damaged by liquid ingress. The handset contains a liquid detection sticker which changes colour when exposed to liquids. Liquid ingress is not covered by warranty under any circumstances.
- Do not expose the handset to solvents, chemicals or abrasive cleaning products.

- Do not expose the handset or battery to prolonged direct sunlight or temperatures exceeding 50° C. This may damage the battery and high temperatures can shorten the life of electronic devices.
- Please use original accessories only. Damage caused by non-genuine accessories may not be covered by your warranty terms and conditions.
- As your mobile phone can produce electromagnetic field, do not place it near magnetic items such as computer disks or bank cards. Do not expose to metal filings which can stick to the speaker area.
- Using the phone near electrical appliances such as TV, telephone, radio and personal computer may cause interference.
- Do not drop or throw your handset. Rough handling can cause physical damage.
- Do not attempt to disassemble the handset or battery.

## **1.2 Precautions While Driving**

- Obey all safety regulations and do not use your phone while driving.
- Do not place your phone on an airbag or in the airbag deployment area. If a phone is in the airbag deployment area it may be propelled with great force and cause injury to occupants of the vehicle.

- Please turn off your mobile phone at service stations as recommended.

### **1.3 Aircraft Safety**

- Please turn off your mobile phone before boarding as instructed by the airline personnel.
- Disable your alarms to make sure that the phone does not turn on during the flight.

### **1.4 Precautions for Medical Devices and Facilities**

- If you use a pacemaker please keep the phone at least twenty centimetres from the pacemaker when the phone is switched on. Do not carry the phone in your breast pocket. Use the ear opposite the pacemaker to minimize the potential for interference. Switch off the phone immediately if necessary.
- Some phones may interfere with hearing aids. In the event of such interference consult your hearing aid manufacturer to discuss alternatives.
- If you use any other personal medical device, please consult the manufacturer of your device to determine if it is adequately shielded from RF energy.
- Obey the restrictions on the use of mobile phones at prescribed places such as hospitals, airports, service stations, refineries, chemical works etc. Switch off your phone as required.



## 1.5 Precautions for Potentially Explosive Atmospheres

- Switch off your phone prior to entering any area with potentially explosive atmospheres, such as fuel or chemical transfer or storage facilities.
- Do not remove, install, or charge batteries in such areas. Spark in a potentially explosive atmosphere can cause explosion or fire.
- To avoid possible interference with blasting operations switch off your phone when you are near electrical blasting caps, in a blasting area, or in areas posted “Turn off electronic devices.” Obey all signs and instructions.
- Do not store the phone with flammable or explosive articles.

## 1.6 Battery Safety

- Do not short-circuit the battery terminals. Do not carry the battery in your pocket in case of accidental short circuits.
- Do not store battery in hot areas or dispose of the battery in a fire.
- Do not disassemble, pierce or modify the battery in any way.
- Please store the battery in a cool dry place if you are not using it.
- The battery is rechargeable but eventually it will wear out. When the operating time (talk time and standby time) is reduced you should replace your battery.

- Please stop using the charger and battery if they are damaged.
- Return the worn-out battery to your service provider or dispose of it in accordance with environmental regulations. Do not dispose of it in household rubbish.

## 1.7 Limitation of Liability

ZTE shall not be liable for any loss of profits or indirect, special, incidental or consequential damages resulting from or arising out of or in connection with using this product, whether or not ZTE had been advised, knew or should have known the possibility of such damages. The user should refer to the enclosed warranty card for full warranty and service information.

### **Notes**

The pictures and icons shown in the manual are for reference only. The manufacturer reserves the right to update the product at any time.


### **Warning:**

If the battery is damaged do not recharge it. In the unlikely event of battery leakage avoid contact with your skin and wash the affected area thoroughly in water.

## 2 Getting Started


### 2.1 Insert the SIM Card

Remove the battery cover by pressing down on the back cover and sliding the cover down. Insert the SIM card with the metal contacts facing down and the notch on the bottom left corner as shown:

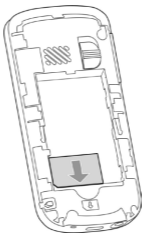

### 2.2 Insert the battery


1. Insert the battery carefully with the contacts located against the gold springs - the battery will only fit one way.
2. Replace the battery cover. Make sure that the cover closes completely.

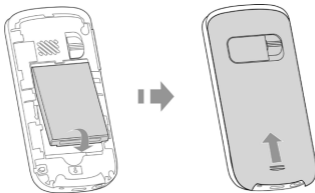


## 2.3 Charging the battery

The phone can be charged in the On or Off state. Make sure that the battery is inserted before charging.

The charger lead is keyed and will only fit one way. Insert the lead carefully observing the correct alignment of the plug and socket.

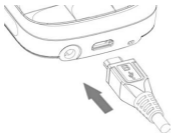


## 2.4 Battery level indicator

Charging	Charged
	

The phone will give an audible alert when battery is low and display a low battery message on screen. Please recharge the battery promptly to maintain service.

## 2.5 Switch your phone On

Press and hold the **Red key**  for 2 seconds to switch the phone on. Enter the PIN code supplied with your SIM card. Press the green key (OK) to enter.

**Warning:** If you enter the wrong code three times your SIM card will be locked. The phone will request you to enter the PUK code. Contact your service provider to obtain the PUK code if required.












If your handset displays:	
PIN:	Enter the PIN supplied with your SIM card.
Emergency	Invalid SIM. Emergency Calls Only.
Enter PUK code	Contact your Service Provider.

## 3 Get to know your phone


### 3.1 Your phone




## 3.2 Display Icons

	Battery level		Keypad locked
	Network signal level		Headset inserted
	New SMS message		Alarm enabled
	SMS memory is full		Silent Mode enabled
	Missed call		Roaming
	Call Forwarding active		

## 3.3 Key functions

Function	Description
<b>Call key</b> <b>(Green Key)</b> 	<ul style="list-style-type: none"><li>• Press to make a call. Press to answer an incoming call.</li><li>• From the idle screen, press to enter the call history list.</li><li>• Press to confirm the function you choose.</li></ul>

<p><b>End key (Red Key)</b></p> 	<ul style="list-style-type: none"> <li>• Long press to power on or off.</li> <li>• Press to go back to previous menu.</li> <li>• Clear text and numbers</li> </ul>
<p><b>Up key</b></p>	<ul style="list-style-type: none"> <li>• From the idle screen, press to enter the Phone Book (Quick Search).</li> <li>• Press to move cursor up.</li> </ul>
<p><b>Down key</b></p>	<ul style="list-style-type: none"> <li>• From the idle screen, press to access the Main Menu.</li> <li>• Press to move cursor down.</li> </ul>
<p><b># key</b></p>	<ul style="list-style-type: none"> <li>• Press to input '#'. Switch text input mode – (Predictive).</li> <li>• Hold down to engage / disengage Silent mode.</li> </ul>
<p><b>* key</b></p>	<ul style="list-style-type: none"> <li>• From the idle screen, press to enter '*', '+', 'W', or 'P'.</li> <li>• Use + for the international dialling prefix.</li> <li>• 'W' will wait until the next number is entered into the dialling sequence.</li> <li>• 'P' inserts a 3 second pause into the dialling sequence.</li> <li>• In SMS mode press to access common symbols.</li> </ul>
<p><b>Numeric keys</b></p>	<ul style="list-style-type: none"> <li>• Enter numbers 0-9 and characters A-Z.</li> </ul>



<b>Switch</b>	<ul style="list-style-type: none"> <li>• Activate your Switch Call and SMS (see Switch Setting).</li> </ul>
<b>Volume keys</b>	<ul style="list-style-type: none"> <li>• Adjust the volume up and down.</li> </ul>
<b>Torch switch</b>	<ul style="list-style-type: none"> <li>• Turn the torch on or off.</li> </ul>
<b>FM radio key</b>	<ul style="list-style-type: none"> <li>• Turn the FM radio on or off.</li> </ul>
<b>Lock switch</b>	<ul style="list-style-type: none"> <li>• Lock and unlock keypad.</li> </ul>

### 3.4 Menu Map

In standby mode, press the Down Arrow Key [Menu] to enter main menu.

<b>Phone Book</b>	<b>Messages</b>	<b>Call History</b>
1.Quick Search	1.Write Message	1.Missed Calls
2.Add New Contact	2.Inbox	2.Dialled Calls
3.Delete All	3.Outbox	3.Received Calls
4.Copy All	4.Drafts	4.Delete All Call Logs
5.Move All	5.Sent	5. Call Time
6. My Number	6. (U)SIM	
7.Memory Status	7. Message Settings	
	8.Memory Status	

<p><b>Settings</b></p> <p><b>A Audio Profiles</b></p> <ol style="list-style-type: none"> <li>1.Silent</li> <li>2.Personalise <ul style="list-style-type: none"> <li>• Tone Setup</li> <li>• Volume</li> <li>• Alert Type</li> </ul> </li> </ol>	<p><b>Settings</b></p> <p><b>B Phone Setup</b></p> <ol style="list-style-type: none"> <li>1.Set Time</li> <li>2.Set Home City</li> <li>3.Schedule Power On/Off</li> <li>4.Language</li> <li>5.LCD Backlight</li> <li>6.Brightness</li> <li>7. T-mode</li> <li>8.Master Reset</li> </ol>	<p><b>Settings</b></p> <p><b>C Call Setup</b></p> <ol style="list-style-type: none"> <li>1.Call Forwarding</li> <li>2.Call Waiting</li> <li>3.Call Barring</li> <li>4.Send My Number</li> <li>5.Call Time Reminder</li> <li>6.Speed Dial</li> <li>7.Handsfree</li> </ol>
-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

<p><b>Settings</b></p> <p><b>D Network Settings</b></p> <ol style="list-style-type: none"> <li>1.Preferred Mode</li> <li>2. Preferred Selection</li> </ol>	<p><b>Settings</b></p> <p><b>E Security Code</b></p> <ol style="list-style-type: none"> <li>1.Activate Security Codes <ul style="list-style-type: none"> <li>• Handset Code</li> <li>• PIN Code</li> </ul> </li> <li>2.Change Security Codes <ul style="list-style-type: none"> <li>• Handset Code</li> <li>• PIN Code</li> </ul> </li> </ol>	<p><b>Settings</b></p> <p><b>F Switch Setup</b></p> <ol style="list-style-type: none"> <li>1.Switch</li> <li>2.Volume</li> <li>3.Switch Number</li> <li>4.Switch SMS</li> </ol>
------------------------------------------------------------------------------------------------------------------------------------------------------------	-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

<p><b>Settings</b></p> <p><b>G Voice Broadcast</b></p> <ol style="list-style-type: none"> <li>1.New Call</li> <li>2.New SMS</li> <li>3.Auto SMS Broadcast</li> </ol>	<p><b>Organiser</b></p> <ol style="list-style-type: none"> <li>1.Alarms/Reminders</li> <li>2.Calendar</li> <li>3.Calculator</li> </ol>
----------------------------------------------------------------------------------------------------------------------------------------------------------------------	----------------------------------------------------------------------------------------------------------------------------------------

## 4 Step by step guide



### 4.1 Switch Setting

The Switch on the back of the handset can be programmed to make a call and/or send an SMS to friends or relatives simultaneously.

- Press **Down > Down > Down > Down** to get to the **Settings Menu**.
- Go to **Settings > Switch Setup > Switch** to enable this feature. The switch is **Off** by default.
- Go to **Settings > Switch Setup > Switch Number** to program your phone numbers:
  1. The first location will define the voice call number.
  2. Location 2-5 defines the SMS numbers.
- Go to **Settings > Switch Setup > Switch SMS**: To send an automated text message you **must** enter a message in this field.
- When enabled and programmed, pushing the Switch Key will send an SMS message to numbers 2-5 and initiate a call to the first defined number.
- The Alert tone (when enabled) will continue after the call until the Switch Key is pushed back to the down position.
- When the call is connected the handset automatically enables Handsfree (speaker-phone) mode.

- The alert tone volume can be adjusted to Off, Low, Medium or Loud.
- In any state, push the Switch key down to return the phone to standby mode.
- Switch Dialling is still activated when the keypad is locked.

## 4.2 Make and receive a call

- Enter the phone number using the number keys and press the **Green key**  to dial. If you enter a wrong digit use the **Red Key**  to delete the mistake. Long press the **Red key** to clear all the characters and return to the idle screen.
- Press the \* **key** twice to enter '+' for international dialling.
- Press the \* **key** three times for the Wait symbol 'W' which will hold dialling until the next key is pressed.
- Press the \* **key** four times for the Pause symbol 'P' which adds a 3 second delay into the dialled number.
- Press the **Green key** to answer an incoming call, press **Option > HF on** to enable speaker mode (Handsfree). Press the **Red key** to end or reject the call.
- If you have set speed dial numbers, long press the numeric keys (1 to 9) to dial the corresponding contact.
- Press the **Volume keys** to adjust volume during the call.

- Press and hold the 0 key to select the **In Call** volume level which you can pre-define. Eg. If your normal ear-piece volume is 3, you can set the **In Call** volume setting to 5 which you can use in noisy environments to give a quick volume boost to the earpiece if required. See Audio Settings for more information.
- Press the **Red key** to hang-up (End) the call.

### 4.3 Add a Contact to your Phone Book

**Menu > Phone Book > Add New Contact > To Phone, To SIM > Name > Edit**

Type in the Name using the keypad letter keys, (eg press the key once for the first letter, twice for the second letter etc.), press OK when finished.

Press the # key to change text input modes (eZiEng, abc, Abc, ABC, 123) if required.

**Menu > Phone Book > Add New Contact > To Phone, To SIM > Number > Edit**



Enter the number using the number keys, press OK when finished. Press **Done** and then **Yes** to Save when prompted.

### 4.4 Make a call from the Phone Book

- Press the **Up Arrow Key** to open the **Phone Book Search** view.
- Press the letter keys shown on the keypad to search for the name of your Phone Book contact.

- Eg. Press 5 to search for John. Press 5 twice to search for Karen.
- Use the up and down arrows to scan your Phone Book contacts.
- When you have selected the required contact press **Option** > **Dial** to make a call to that contact. Select the correct number where multiple numbers are stored.

## 4.5 Messages

- The envelope icon  indicates a new message.
- Press the **Green key** to read the message. Press the **Red key** to exit.
- The double envelope icon  indicates the mail box is full. Please delete some SMS messages.
- From the idle screen press **Down** > **Down** to access **Messages** > **Write Message** to start a new message. Press the **Green key** for the option to save and send the SMS.
- Press the **# key** to switch text input methods (eZiEng, abc, Abc, ABC, 123).
- The **Inbox** shows all your received messages. Press **OK** to view the message. Press **Options** to **Reply, Delete, Text To Speech, Forward, Delete All, Use Number, Move to (U)SIM, Copy to (U)SIM**.
- The **Outbox** shows messages that failed to send. **Sent** shows sent messages.

- **Drafts** shows all your saved messages which have not been sent.
- Select **Message Settings** for Valid Time, SMS Centre Number, Delivery Report and Cell Name Display options.

## 4.6 Text Input methods

1. When editing text, press the **# key** to change between eZiEng, abc, Abc, ABC and 123.
2. Input Letters: In **abc** modes, press the letter keys until the correct letter appears.
3. Input Words: In **eZiEng** mode, input each letter with a single key press. The word updates as you enter more letters. Predictive text is based on a built-in dictionary. When you have finished writing the word confirm by pressing the **Green key**. If the word is incorrect, press the **Up/Down key** to view other words in the dictionary or enter using **abc** modes (multi-tap).
4. In **123** mode, press the key to enter a digit. In **eZiEng** mode hold the key until the number appears.
5. Press the **\* key** to open the symbols list. Press the **Up/Down keys** to select a symbol. In **eZiEng** mode press the **1 key** for common symbols and use the **Up/Down keys** to highlight the required character.
6. Press the **0 key** to input space (not available in 123 mode).

7. Press the **Red key** to clear a character. Hold the **Red key** to delete all characters.
8. Press the **Up/Down keys** to move the cursor to left or right.

## 4.7 Phone Book

You can save names and numbers to the phone memory and the SIM card.

- Select **Phone Book > Add New Contact** to add a new contact to the SIM or phone.
- Select **Phone Book > Quick Search** to view the phone book. Input the first letters of the name, the phone will list the corresponding records.
- Select **Phone Book > Delete All** to delete all contacts from the phone or SIM. Or select **Option > Delete** in phone book list to delete the contacts one by one.
- Select **Phone Book > Copy All** or **Move All** to copy or move all from SIM to phone or phone to SIM.
- Select **Phone Book > Memory Status** to view SIM card and phone memory status.

## 4.8 Speed Dial

- Once you have saved some Contacts you can assign speed dial keys to your favourite contacts.



- Select **Settings > Call Setup > Speed Dial > Set Number**. Program speed dial keys. Once saved, long press the key to activate **Speed Dial** to the preset number.
- Press and hold the programmed number key to quickly call your assigned Contact.
- Go to **Settings > Call Setup > Speed Dial > Status** to enable or disable the feature.

## 4.9 Call History

- From the stand by state, press the **Green key** to check your call history.

## 4.10 Audio Settings

Select **Settings > Audio Profiles > Personalise** to set the following:

### a) Tone Setup

1. Incoming Call	5. Message Tone
2. Alarms / Reminders	6. Keypad Tone
3. Power On	7. Alert Tone
4. Power Off	

- The Power On / Off tones are played when the phone is switched on or off.
- The volume level for the Power On and Off tone is linked to the Ring Tone volume.

## b) Volume

1. Ring Tone	3. Earphone
2. Key Tone	4. In Call Volume *

- \* **Settings > Audio Profile > Personalise > Volume > In Call Volume** sets a preferred second volume setting to quick change the standard earpiece volume. This is activated by long pressing the 0 key during a call.

## c) Alert Type

Ring Only	Vibrate then Ring
Vibrate Only	Light Only
Vibrate and Ring	

## 4.11 Phone Settings

- Select **Settings > Phone Setup > Set Time** to set time (24hrs only) and date. **Network Time** is enabled by default and will automatically update the time from the network. Switch off **Network Time** to set the time and date manually.
- Select **Settings > Phone Setup > Set Home City** if required.
- Select **Settings > Phone Setup > Schedule Power On/Off** to set automatic power on/off time.
- Select **Settings > Phone Setup > Language**. Select from English or Chinese.

- Select **Settings > Phone Setup > LCD Backlight** to set the back-light timeout.
- Select **Settings > Phone Setup > Brightness**.
- Select **Settings > Phone Setup > T-mode** – Enable T-mode support for hearing aids.
- Select **Settings > Phone Setup > Master Reset** – Restore factory settings. The default phone lock code is 0000.

## 4.12 Call Settings

- Select **Settings > Call Setup > Call Forwarding**. Enables your calls to be diverted to another number always, or when your phone is busy, no reply, or unreachable.
- Select **Settings > Call Setup > Call Waiting**. If you are on a call you will be notified of another incoming call. Press **Options - Swap** to switch between the two calls.
- Select **Settings > Call Setup > Call Barring** to bar your handset from making outgoing calls in various circumstances. This feature requires the net password which is available from your service provider.
- Select **Settings > Call Setup > Send My Number**. By default your number is displayed to the other party. You can disable this if preferred.

- Select **Settings > Call Setup > Call Time Reminder > Periodic** (set your required time from 1-3000 seconds) .You hear a beep during an active call to remind you of the current call duration.
- Select **Settings > Call Setup > Speed Dial > Set Number**. Program speed dial keys. Once saved, long press the key to activate **Speed Dial** to the preset number. Speed dial numbers can only be set to numbers already in your **Contacts**.
- Select **Settings > Call Setup > Handsfree**. When switched on, all calls are automatically presented in Handsfree (speakerphone) mode.

#### 4.13 Settings > Network Settings

There is no need to change any of these settings. The handset will automatically choose the best available network.

#### 4.14 Settings > Security Code

Select **Settings > Security Code** to Activate or Change PIN code/ Handset Code.

The **Handset Code** is shown on power on and protects the handset from wrong use.

The **PIN Code** is stored on the SIM card and protects the SIM (account) from misuse.

## 4.15 Voice Broadcasting

Select **Settings > Voice Broadcast**. Your handset supports SMS/call broadcast feature for the new, inbox messages, incoming call or call for dial.

**Note:** Select **Settings > Audio Profiles > Silent** to ensure the handset not in silent mode.

### a) New Message Broadcasting

- Select **Menu > Settings > Voice Broadcast > New SMS** to enable new message broadcast together with prompt words on the screen.

#### **Note:**

- The handset broadcasts only once for the new message.
- The handset alerts to remind only not broadcasts for the new message during incoming call or conversation.
- The handset alerts to remind only not broadcasts for the new message during alarm or agenda ring.
- The handset stops the first message to broadcast the second one when another new message coming during the broadcasting for the former one.

### b) Inbox Message Broadcasting

- Select **Menu > Settings > Voice Broadcast > Auto SMS Broadcast** to enable inbox message broadcast together with prompt characters on the screen.

- View a message in inbox and select **Option > Text to Speech** to broadcast, select **Stop** to terminate the broadcasting.

**Note:**

- The handset broadcasts only once for the message.
- For an incoming call during message broadcasting, the handset stops message broadcasting and broadcasts or alerts to remind only as preset in **Settings > Voice Broadcast > New Call**.
- For alarm or agenda ring during message broadcasting, the handset stops message broadcasting and alerts to remind as preset in **Organiser > Alarms/Reminders**.
- Press the volume button on the side of handset to adjust volume.

**c) Incoming Call Broadcasting**

- Select **Menu > Settings > Voice Broadcast > New Call** to enable incoming call broadcast together with prompt characters on the screen.

**Note:** The handset only alerts to remind for alarm or agenda after the call.

**d) Standby Call Broadcasting**

- Select **Settings > Audio Profiles > Personalise > Tone Setup > Keypad Tone > Spoken Tones** to enable call broadcast in standby mode.

**Note:**

- In standby mode, the handset broadcasts the numbers and characters (0-9, \*, #).
- For alarm or agenda ring during standby call broadcasting, the handset alerts to remind instead of standby call broadcasting.

**e) Broadcast Settings**

- Select **Menu > Settings > Voice Broadcast > New Call/ New SMS/Auto SMS Broadcast to set broadcast** for new incoming call, new SMS, message in inbox, etc. The status of all the broadcast is **On** by default.
- **New Call:** Activate/deactivate broadcasting new incoming call.
- **New SMS:** Activate/deactivate broadcasting new message.
- **Auto SMS Broadcast:** Activate/deactivate broadcasting message in inbox.

**Note:**

- In case of **Auto SMS Broadcast**, you can select **Volume Broadcast** to adjust volume. Also you can press Volume Key to adjust volume during broadcasting.
- In case of no broadcast activated, the alert tone and volume for incoming call, new message prompt are as per profile setting.

## 4.16 Organiser > Alarms / Reminders

Select **Organiser > Alarms/Reminders** (see the table below...).

- Select the required Alarm or Reminder function from the available options.
- Select **Add > Edit** to enter a name (optional).
- Press the down arrow to select the **time field** (hh:mm), press **Change** to enter the alarm time.
- Press the down arrow to select the **date field** (dd.mm – when applicable), press **Change** to enter the required date.
- Press **Done** to save the alarm when finished.
- If the phone is switched off, the alarm function will power on the phone.

<b>Alarm Name</b>	<b>Required Fields</b>	<b>Alarm Type</b>
<b>Birthdays</b>	Set the Name, Time and Date	Annual
<b>Important Dates</b>	Set the Name, Time and Date	Annual
<b>Medication Reminder</b>	Set the Name, Time	Daily
<b>Getting Up</b>	Set the Name, Time and Ring Tone	Daily
<b>Entertainment</b>	Set the Name, Time	Daily
<b>Count Down</b>	Set the Name, Countdown time	Once
<b>Others</b>	Set the Name, Time, date, repeat	Set by the user



## 4.17 Organiser > Calendar

- Go to **Organiser > Calendar** to view the calendar.

## 4.18 Organiser > Calculator

- Go to **Organiser > Calculator**. Press Up/Down keys to highlight the required functions +, -, \*, /, and press the **Green key** for **Equals**.
- Press the **Red key** to clear input information and to exit the calculator.

## 4.19 Torch

Switch the torch on or off using the side switch. The torch works whether the handset is on or off, or in the locked or unlocked state so be careful not to activate the torch while the handset is in your pocket.

## 4.20 Keylock Switch

Slide the **Keylock switch** down to lock the keypad. If you get an incoming call, you can press the **Green key** to answer or the **Red key** to reject the call. You can also dial emergency numbers when the keypad is locked.

## 4.21 FM Radio Switch

- Slide the **FM key switch** up to turn the radio on.
- Press the **Up / Down** arrow keys to manually tune to the required frequency.
- Use the side volume keys to adjust the volume.
- Select **Option > Channel List > Option > Edit** to enter a new channel directly. Enter the required frequency, use the \* key to enter the decimal point.
- Select **Option > Channel List > Option > Play** to play the selected channel.
- Select **Option > Manual Input** to manually input a channel.
- Select **Option > Preset Auto Search** to preset the playlist with available channels.
- Reception is improved by adding a charger lead or earphone lead.
- When an earphone is inserted you can select **Option > Loud Speaker** to enable speaker mode.

## 4.22 Technical Specifications

<b>Network</b>	GSM 900/1800/1900, UMTS 900/2100 MHz
<b>Dimensions L×W×H</b>	Approx 109mm x 50.8mm x 13.5mm
<b>Weight</b>	Approx 86.1g (including standard battery)
<b>Features</b>	UMTS / GSM Handset with SMS, FM Radio, 3.5mm headset jack, LED torch and Programmable Switch Call function.
<b>Battery</b>	1000mA hours, Lithium ion (Li-ion)
<b>Screen</b>	128 x 160 pixels, 1.8" colour LCD
<b>Continuous idle time*</b>	Up to 400 hours (+/- 20%)
<b>Continuous talk time*</b>	Up to 4 hours talk time (+/- 20%)
<b>Continuous FM Radio time*</b>	Up to 15 hours (+/- 20%)
<b>Charge time</b>	Approximately 3-4 hours
<b>Battery Life</b>	Approximately 400 charge cycles

## 4.23 Warranty Information

**The warranty does not apply to defects or errors in the product caused by:**

- (a) Reasonable abrasion.
- (b) Misuse including mishandling, physical damage, improper installation, unauthorized disassembly of the product.
- (c) Water, exposure to solvents or any other liquid damage.
- (d) Any unauthorized repair or modification.
- (e) Power surges, lightning damage, fire, flood or other events outside ZTE's reasonable control.
- (f) Use of the product with any unauthorized third party products such as generic chargers.
- (g) Any other cause beyond the range of normal usage for products.

The End User shall have no right to reject, return, or receive a refund for any product from ZTE under the above-mentioned situations. Your statutory rights are not affected.

**Note: Consult the warranty card for full information**

## 4.24 Network Locked Device

This device is network locked to your service provider. If you wish to use another carrier's SIM card please contact your service provider to obtain the network unlocking code.