

Olo Wireless Internet USB MODEM
QUICK USER GUIDE



1

Introduction


Thank you for choosing Olo USB MODEM (hereinafter referred to as Modem). It is next generation mobile Internet that is designed to work as fast around town as it does at home.

To guarantee your Modem always work in its best condition, please read this guide carefully and keep it for future use. The pictures, symbols and contents in this guide are just for your reference. They might not be completely identical with your Modem.

Getting to know your device

The following figure shows the appearance of AX326. It is only for your reference. The actual product may be different.

2

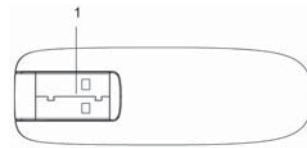

1. USB connector: Connect your Modem to the laptop or desktop computer.

Connecting the Modem to PC

- Rotate the USB connector
- Insert the Modem into your computer's USB port and ensure that it is tightly inserted.
- When you insert the Modem into computer for the first time, your system will detect the new hardware automatically.

Software installation guide

On different operating systems, the software installation procedures may be different. Please follow the general guide below and the system prompts during installation.

For Windows XP, Vista and Windows 7

When you connect the modem to your PC correctly, the system automatically recognizes it as a CD-ROM and starts the software installation wizard. If the system does not launch the installation wizard automatically, please start it by running the executable file in the new CD-ROM directory.

3

How to use your Modem

When you launch Modem Connection Manager, the CM interface will be displayed as below:

Status	View signal indicator, modem status. Click to connect/disconnect network or wake up the Modem.
Settings	Configure the Modem settings.
About	Update the software, view help information and select the language of the interface.

4

FAQs

When you meet the following problems in service, please refer to the following answers to solve them. If the problems still exist, please contact with your suppliers.

Problem Description	Possible Causes	Problem Solving
The system can not run the installation program automatically.	The system configuration is not suitable for the auto-run.	Open the disc of the Modem program and start the *.exe. If you have installed the other version of installation program please uninstall it firstly.
After re-started the computer, there is no signal all the time.	1. You are in the place where no net-work covered such as underground parking lot, tunnel etc. 2. The Modem isn't connected well.	Move to the place that has good signal. Pull out and insert the Modem safely again.

5

When the Modem is being inserted, the notebook computer cannot find it.	1. The installation programs of the Modem haven't been installed properly. 2. The Modem isn't connected well.	1. Run the installation program first and then connect the Modem. If you use the Windows XP operating system, install the drivers according to the Windows indication information to operate. 2. Restart the computer, or connect the Modem again.
Data connection failed.	1. You are in the place where no net-work covered, such as underground parking lot, tunnel etc. 2. The network is busy now. 3. The manual authentication setting is error.	Move to regions with strong signal. Try again later. Please contact your operator
The CM interface shows incompletely.	The computer property settings are not correct.	Right-click the blank space on the desktop, access Properties → Settings → Advanced → General interface , in the DPI settings selection select Normal size .

6

Safety Warning and Notice

To the user

- Some electronic devices are susceptible to electromagnetic interference sent by Modem if inadequately shielded, such as electronic system of vehicles. Please consult the manufacturer of the device before using the Modem if necessary.
- Operating laptop and Modem may interfere with medical devices like hearing aids and pacemakers. Please always keep the Modem more than 20 centimeters away from such medical devices when they are in using. Power off Modem if it is necessary. Consult a physician or the manufacturer of the medical device before using the Modem.
- Be aware of the usage limitation when using a Modem at places such as oil warehouses or chemical factories, where there are explosive gases or explosive products being processed. Do not use Modem if necessary.
- Do not use Modem at gas station.
- The Modem contains sensitive electronic circuitry. Do not expose the Modem to any liquids, high temperatures or shock.
- Store the Modem out of the reach of small children. The Modem may cause injury if used as a toy.
- Only use original accessories or accessories that are authorized by the manufacturer. Using unauthorized accessories may affect your Modem's performance, damage your Modem and violate related national regulations.

7

- There are no user serviceable parts inside the Modem. Unauthorized dismantling or repair of the Modem will void the warranty.
- This Modem generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

Modem

- Avoid using the Modem near metallic structure device or establishment that can emit electromagnetic wave. Otherwise it may influence receiving of signals.
- Don't use the Modem immediately after a sudden temperature change e.g. from an air conditioned environment to high temperature and humidity outside. In such cases there could be condensing moisture inside the Modem which can cause internal damage. Unplug the Modem and leave it for 30 minutes before use.
- Take the Modem carefully. Don't drop, bend, knock or harshly treat it to avoid destructive damage.
- Do not attempt to disassemble the Modem by yourself. Changes and modifications made to the Modem without the approval of manufacturer could void your authority to operate this Modem.

In Aircraft

- Please power off the Modem before the airplane takes off. In order to protect airplane's communication system from interference, it is never allowed to use the Modem when it is in flight. Using it before the airplane taking off should get aircrew's permission according to safety regulations.

8

Cleaning and Maintenance

- The Modem is non-waterproof, please keep it dry and store in shady and cool place.
- Do not use or store the device in dusty or dirty areas, since its moving parts and electronic components can be damaged in such environment.
- If you want to clean your Modem, please use clean fabric that is a bit wet or anti-static. Do not use harsh chemical cleaning solvents or strong detergents to clean your Modem, such as alcohol, dilution agent and benzene. Power-off your Modem before you clean it.

Limited Warranty

The warranty does not apply to defects or errors in the product caused by:

- Reasonable abrasion.
- Misuse including mishandling, physical damage, improper installation, unauthorized disassembly of the product.
- Water or any other liquid damage.
- Any unauthorized repair or modification.
- Power surges, lightning damage, fire, flood or other events outside Olo's reasonable control.
- Use of the product with any unauthorized third party products such as generic chargers.
- Any other cause beyond the range of normal usage for products.

End User shall have no right to reject, return, or receive a refund for any product from olo under the above-mentioned situations.

9

This warranty is end user's sole remedy and Olo's sole liability for defective or nonconforming items, and is in lieu of all other warranties, expressed, implied or statutory, including but not limited to the implied warranties of merchantability and fitness for a particular purpose, unless otherwise required under the mandatory provisions of the law.

Limitation of Liability

Olo shall not be liable for any loss of profits or indirect, special, incidental or consequential damages resulting from or arising out of or in connection with using this product, whether or not Olo has been advised, knew or should have known the possibility of such damages.

This guide can not be copied, reproduced or translated without the permission of Olo.



10